

ALL-11 Universal Programmer
Cross Reference

8748-series	8741A	WMPU2.EXE
8748-series	8741AH	WMPU2.EXE
8748-series	8742	WMPU2.EXE
8748-series	8742AH	WMPU2.EXE
8748-series	8742H	WMPU2.EXE
8748-series	8748	WMPU2.EXE
8748-series	8748AH	WMPU2.EXE
8748-series	8748H	WMPU2.EXE
8748-series	8749AH	WMPU2.EXE
8748-series	8749H	WMPU2.EXE
8748-series	8750H	WMPU2.EXE
8748-series	87C42	WMPU2.EXE
ACTRANS	AC29LV004B-E	WA28F.EXE ADP-29F008-TS
ACTRANS	AC29LV004T-E	WA28F.EXE ADP-29F008-TS
ACTRANS	AC29LV400B	WA28F.EXE ADP-49F800-
TS/TSV2		
ACTRANS	AC29LV400T	WA28F.EXE ADP-49F800-
TS/TSV2		
ACTRANS	AC39LV010	WMEM1.EXE
ACTRANS	AC39LV020	WMEM1.EXE
ACTRANS	AC39LV040	WMEM1.EXE
ACTRANS	AC39LV080	WA28F.EXE ADP-29F008-TS
ACTRANS	AC39LV088	WA28F.EXE ADP-49F800-
TS/TSV2		
ACTRANS	AC39LV512	WMEM1.EXE
ACTRANS	AC39LV800	WA28F.EXE ADP-49F800-
TS/TSV2		
ACTRANS	AC25LV010	WSPROM.EXE
ACTRANS	AC25LV512	WSPROM.EXE
AKM	AK6002A	WSPROM.EXE
AKM	AK6004A	WSPROM.EXE
AKM	AK6008A	WSPROM.EXE
AKM	AK6420A	WSPROM.EXE
AKM	AK6440A	WSPROM.EXE
AKM	AK6480A	WSPROM.EXE
AKM	AK93C45	WSPROM.EXE
AKM	AK93C46	WSPROM.EXE
AKM	AK93C57	WSPROM.EXE
AKM	AK93C65A	WSPROM.EXE
AKM	AK93C67	WSPROM.EXE
AKM	AK93C75A	WSPROM.EXE
AKM	AK93C95AF	WSPROM.EXE
ALI	M8720	WMEM1.EXE
ALI	M6759	WPGM51.EXE
ALLIANCE	AS29F002T	WMEM1.EXE
ALLIANCE	AS29F010	WMEM1.EXE
ALLIANCE	AS29F011	WMEM1.EXE
ALLIANCE	AS29F040	WMEM1.EXE
ALLIANCE	AS29F200B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
ALLIANCE	AS29F200B*	WA28F.EXE ADP-49F800-
TS/TSV2		
ALLIANCE	AS29F200T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
ALLIANCE	AS29F200T*	WA28F.EXE ADP-49F800-
TS/TSV2		
ALLIANCE	AS29LV400B	WA28F.EXE ADP-29F800-
TS/TSV2		
ALLIANCE	AS29LV400B*	WA28F.EXE ADP-49F800-
TS/TSV2		
ALLIANCE	AS29LV400T	WA28F.EXE ADP-29F800-

TS/TSV2		
ALLIANCE	AS29LV400T*	WA28F.EXE ADP-49F800-
TS/TSV2		
ALLIANCE	AS29LV800B	WA28F.EXE ADP-49F800-
PS/TS/TSV2		
ALLIANCE	AS29LV800T	WA28F.EXE ADP-49F800-
PS/TS/TSV2		
ALTERA	EP1800	WA1810.EXE ADP-1810PLCC/PGA
ALTERA	EP1800I	WA1810.EXE ADP-1810PLCC/PGA
ALTERA	EP1810	WA1810.EXE ADP-1810PLCC/PGA
ALTERA	EP1810-XXT	WA1810.EXE ADP-1810PLCC/PGA
ALTERA	EP1830	WA1810.EXE ADP-1810PLCC/PGA
ALTERA	EP220	WEPLD1.EXE
ALTERA	EP224	WEPLD1.EXE
ALTERA	EP22V10ELC/EPC	WPLD1.EXE
ALTERA	EP22V10LC/PC	WPLD1.EXE
ALTERA	EP310/-2/-3	WEPLD1.EXE
ALTERA	EP310I	WEPLD1.EXE
ALTERA	EP312	WEPLD1.EXE
ALTERA	EP320DC/-1/-2	WEPLD1.EXE
ALTERA	EP320IDC	WEPLD1.EXE
ALTERA	EP320IPC	WEPLD1.EXE
ALTERA	EP320PC/-1/-2	WEPLD1.EXE
ALTERA	EP324	WEPLD1.EXE
ALTERA	EP330/-12/-15	WEPLD1.EXE
ALTERA	EP600	WEPLD1.EXE
ALTERA	EP600I	WEPLD1.EXE
ALTERA	EP610	WEPLD1.EXE
ALTERA	EP610-XXT	WEPLD1.EXE
ALTERA	EP610I	WEPLD1.EXE
ALTERA	EP630	WEPLD1.EXE
ALTERA	EP630-XXT	WEPLD1.EXE
ALTERA	EP630I	WEPLD1.EXE
ALTERA	EP900I	WEPLD1.EXE
ALTERA	EP910	WEPLD1.EXE
ALTERA	EP910-XXT	WEPLD1.EXE
ALTERA	EP910A	WEPLD1.EXE
ALTERA	EP910I	WEPLD1.EXE
ALTERA	EPC1	WEPC.EXE CNV-DIP-EPC
ALTERA	EPC1 (EPC1064.POF)	WEPC.EXE CNV-DIP-EPC
ALTERA	EPC1 (EPC1213.POF)	WEPC.EXE CNV-DIP-EPC
ALTERA	EPC1064 (OLD)	WEPC.EXE
ALTERA	EPC1064 (date code after 99)	WEPC.EXE CNV-DIP-EPC
ALTERA	EPC1064V	WEPC.EXE
ALTERA	EPC1213 (OLD)	WEPC.EXE
ALTERA	EPC1213 (date code after 99)	WEPC.EXE CNV-DIP-EPC
ALTERA	EPC1441	WEPC.EXE CNV-DIP-EPC
ALTERA	EPC1441 (EPC1064.POF)	WEPC.EXE CNV-DIP-EPC
ALTERA	EPC1441 (EPC1213.POF)	WEPC.EXE CNV-DIP-EPC
ALTERA	EPC2	WEPC.EXE
ALTERA	EPCS1	WEPC.EXE CNV-SOP-
NDIP16/E/F/G		
ALTERA	EPCS4	WEPC.EXE CNV-SOP-
NDIP16/E/F/G		
ALTERA	EPM3032ALC44	WA70XE.EXE ADP-7064AE-PL44
ALTERA	EPM3032ATC44	WA70XE.EXE ADP-7064AE-TQ
ALTERA	EPM3064ALC44	WA70XE.EXE ADP-7064AE-PL44
ALTERA	EPM3064ATC100	WA70XE.EXE ADP-3064A-TQ100
ALTERA	EPM3064ATC44	WA70XE.EXE ADP-7064AE-TQ
ALTERA	EPM3128ATC100	WA70XE.EXE ADP-3064A-TQ100
ALTERA	EPM3128ATC144	WA70XE.EXE ADP-3128A-TQ144
ALTERA	EPM3256ATC144	WA70XE.EXE ADP-3128A-TQ144
ALTERA	EPM5016	WMAX.EXE
ALTERA	EPM5032	WMAX.EXE

ALTERA	EPM5064	WAMAX.EXE	ADP-MAX50B
ALTERA	EPM5064 (PLCC44 NEW ID)	WAMAX.EXE	ADP-EPM5064-PL44
ALTERA	EPM5128	WAMAX.EXE	ADP-MAX50C/-PG
ALTERA	EPM5128A	WAMAX.EXE	ADP-EPM5128A-
PL/PG			
ALTERA	EPM5130 (PGA100)	WAMAX.EXE	ADP-EPM5130-PG
ALTERA	EPM5130 (PLCC84 NEW ID)	WAMAX.EXE	ADP-EPM5130A-PL
ALTERA	EPM5130 (PLCC84)	WAMAX.EXE	ADP-EPM5130-PL
ALTERA	EPM5192	WAMAX.EXE	ADP-
MAX50E/EPM5192-PG			
ALTERA	EPM5192 (NEW ID)	WAMAX.EXE	ADP-EPM5192A-PL
ALTERA	EPM7032AELC44	WA70XE.EXE	ADP-EPM7032
ALTERA	EPM7032AETC44	WA70XE.EXE	ADP-EPM7032-Q
ALTERA	EPM7032LC44 (OLD DIE)	WA70XE.EXE	ADP-EPM7032
ALTERA	EPM7032LI44 (OLD DIE)	WA70XE.EXE	ADP-EPM7032
ALTERA	EPM7032SLC44	WA70XE.EXE	ADP-EPM7032
ALTERA	EPM7032SLI44	WA70XE.EXE	ADP-EPM7032
ALTERA	EPM7032STC44	WA70XE.EXE	ADP-EPM7032-Q
ALTERA	EPM7032STI44	WA70XE.EXE	ADP-EPM7032-Q
ALTERA	EPM7032TC44 (OLD DIE)	WA70XE.EXE	ADP-EPM7032-Q
ALTERA	EPM7032VLC44	WA70XE.EXE	ADP-EPM7032
ALTERA	EPM7064AELC44	WA70XE.EXE	ADP-7064AE-PL44
ALTERA	EPM7064AETC44	WA70XE.EXE	ADP-7064AE-TQ
ALTERA	EPM7064LC44	WA70XE.EXE	ADP-7064S-PL44
ALTERA	EPM7064LC68	WA70XE.EXE	ADP-7064S-PL68
ALTERA	EPM7064LC84	WA70XE.EXE	ADP-7064S-PL84
ALTERA	EPM7064QC100	WA70XE.EXE	ADP-7064S-PQ100
ALTERA	EPM7064SLC44	WA70XE.EXE	ADP-7064S-PL44
ALTERA	EPM7064SLC68	WA70XE.EXE	ADP-7064S-PL68
ALTERA	EPM7064SLC84	WA70XE.EXE	ADP-7064S-PL84
ALTERA	EPM7064SQC100	WA70XE.EXE	ADP-7064S-PQ100
ALTERA	EPM7064STC100	WA70XE.EXE	ADP-7064S-TQ100
ALTERA	EPM7064STC44	WA70XE.EXE	ADP-7064S-TQ44
ALTERA	EPM7064TC44	WA70XE.EXE	ADP-7064S-TQ44
ALTERA	EPM7096LC68	WA70XE.EXE	ADP-EPM7096-PL68
ALTERA	EPM7096LC84	WA70XE.EXE	ADP-EPM7096-PL84
ALTERA	EPM7096QC100	WA70XE.EXE	ADP-EPM7096-QA
ALTERA	EPM7128AELC84	WA70XE.EXE	ADP-EPM7128AE-
PL84			
ALTERA	EPM7128AETC100	WA70XE.EXE	ADP-3064A-TQ100
ALTERA	EPM7128AETC144	WA70XE.EXE	ADP-3128A-TQ144
ALTERA	EPM7128ALC84	WA70XE.EXE	ADP-EPM7128E-PL
ALTERA	EPM7128ATC100	WA70XE.EXE	ADP-EPM7128E-TQ
ALTERA	EPM7128ATC144	WA70XE.EXE	ADP-EPM7128-
TQ144			
ALTERA	EPM7128ELC84 (C)	WA70XE.EXE	ADP-EPM7128E-PL
ALTERA	EPM7128ELC84 (E)	WA70XE.EXE	ADP-EPM7128E-PL
ALTERA	EPM7128EQC100 (C)	WA70XE.EXE	ADP-EPM7128E-
QA/-Q			
ALTERA	EPM7128EQC100 (E)	WA70XE.EXE	ADP-EPM7128E-
QA/-Q			
ALTERA	EPM7128LC84	WA70XE.EXE	ADP-EPM7128-PL
ALTERA	EPM7128SLC84	WA70XE.EXE	ADP-EPM7128E-PL
ALTERA	EPM7128SQC100	WA70XE.EXE	ADP-EPM7128E-
QA/-Q			
ALTERA	EPM7128STC100	WA70XE.EXE	ADP-EPM7128E-TQ
ALTERA	EPM7160ELC84 (C)	WA70XE.EXE	ADP-EPM7160E-PL
ALTERA	EPM7160ELC84 (E)	WA70XE.EXE	ADP-EPM7160E-PL
ALTERA	EPM7160EQC100 (E)	WA70XE.EXE	ADP-EPM7160E-QA
ALTERA	EPM7160EQC160 (C)	WA70XE.EXE	ADP-7160E-QA160
ALTERA	EPM7160EQC160 (E)	WA70XE.EXE	ADP-7160E-QA160
ALTERA	EPM7160SLC84	WA70XE.EXE	ADP-EPM7160E-PL
ALTERA	EPM7192EGC160 (C)	WA70XE.EXE	ADP-EPM7192E-PG
ALTERA	EPM7192EGC160 (E)	WA70XE.EXE	ADP-EPM7192E-PG

ALTERA	EPM7192EQC160 (C)	WA70XE.EXE	ADP-EPM7192E-
QA/-Q160			
ALTERA	EPM7192EQC160 (E)	WA70XE.EXE	ADP-EPM7192E-
QA/-Q160			
ALTERA	EPM7256EGC192 (C)	WA70XE.EXE	ADP-EPM7256E-PG
ALTERA	EPM7256EGC192 (E)	WA70XE.EXE	ADP-EPM7256E-PG
ALTERA	EPM7256EQC160 (C)	WA70XE.EXE	ADP-7256E-QA160
ALTERA	EPM7256EQC160 (E)	WA70XE.EXE	ADP-7256E-QA160
ALTERA	EPM7256ERC208 (C)	WA70XE.EXE	ADP-7256E-QA208
ALTERA	EPM7256ERC208 (E)	WA70XE.EXE	ADP-7256E-QA208
ALTERA	EPS448DC/PC	WPLD1.EXE	
AMD	AM27128 [21V]	WMEM1.EXE	
AMD	AM2716B [12.5V]	WMEM1.EXE	
AMD	AM2716 [25V]	WMEM1.EXE	
AMD	AM27256HV [21V]	WMEM1.EXE	
AMD	AM2732A [21V]	WMEM1.EXE	
AMD	AM2732B [12.5V]	WMEM1.EXE	
AMD	AM2732 [25V]	WMEM1.EXE	
AMD	AM27512HV [21V]	WMEM1.EXE	
AMD	AM27512 [12.75V]	WMEM1.EXE	
AMD	AM2764 [21V]	WMEM1.EXE	
AMD	AM27C010	WMEM1.EXE	
AMD	AM27C020	WMEM1.EXE	
AMD	AM27C040	WMEM1.EXE	
AMD	AM27C080	WMEM1.EXE	
AMD	AM27C100	WMEM1.EXE	
AMD	AM27C1024	WMEM1.EXE	
AMD	AM27C128 [12.5V]	WMEM1.EXE	
AMD	AM27C2048	WMEM1.EXE	
AMD	AM27C256 [12.75V]	WMEM1.EXE	
AMD	AM27C400	WMEM1.EXE	
AMD	AM27C4096	WMEM1.EXE	
AMD	AM27C512 [12.75V]	WMEM1.EXE	
AMD	AM27C64 [12.75V]	WMEM1.EXE	
AMD	AM27C800	WAEP42.EXE	ADP-EP42/-PL
AMD	AM27H010	WMEM1.EXE	
AMD	AM27H256 [12.75V]	WMEM1.EXE	
AMD	AM27HB010	WMEM1.EXE	
AMD	AM27LV010	WMEM1.EXE	
AMD	AM27LV010B	WMEM1.EXE	
AMD	AM27LV020	WMEM1.EXE	
AMD	AM27LV020B	WMEM1.EXE	
AMD	AM27P256 [12.75V]	WMEM1.EXE	
AMD	AM2817A	WMEM1.EXE	
AMD	AM2864AE/A	WMEM1.EXE	
AMD	AM2864BE/B	WMEM1.EXE	
AMD	AM28C256	WMEM1.EXE	
AMD	AM28F010	WMEM1.EXE	
AMD	AM28F010A	WMEM1.EXE	
AMD	AM28F020	WMEM1.EXE	
AMD	AM28F020A	WMEM1.EXE	
AMD	AM28F256	WMEM1.EXE	
AMD	AM28F256A	WMEM1.EXE	
AMD	AM28F512	WMEM1.EXE	
AMD	AM28F512A	WMEM1.EXE	
AMD	AM29BL162CB	WA28F.EXE	ADP-29BL162-SS
AMD	AM29BL802CB	WA28F.EXE	ADP-29BL162-SS
AMD	AM29DL161DB-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMD	AM29DL161DB-WC	WA28F.EXE	ADP-29F160-BG
AMD	AM29DL161DT-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMD	AM29DL161DT-WC	WA28F.EXE	ADP-29F160-BG
AMD	AM29DL162CB-E	WA28F.EXE	ADP-49F800-

TS/TSV2		
AMD	AM29DL162CB-WC	WA28F.EXE ADP-29F160-BG
AMD	AM29DL162CT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL162CT-WC	WA28F.EXE ADP-29F160-BG
AMD	AM29DL162DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL162DB-WC	WA28F.EXE ADP-29F160-BG
AMD	AM29DL162DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL162DT-WC	WA28F.EXE ADP-29F160-BG
AMD	AM29DL163CB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL163CB-WC	WA28F.EXE ADP-29F160-BG
AMD	AM29DL163CT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL163CT-WC	WA28F.EXE ADP-29F160-BG
AMD	AM29DL163DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL163DB-WC	WA28F.EXE ADP-29F160-BG
AMD	AM29DL163DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL163DT-WC	WA28F.EXE ADP-29F160-BG
AMD	AM29DL164DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL164DB-WC	WA28F.EXE ADP-29F160-BG
AMD	AM29DL164DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL164DT-WC	WA28F.EXE ADP-29F160-BG
AMD	AM29DL316CB-E	WA28F.EXE ADP-29F008-TS
AMD	AM29DL316CT-E	WA28F.EXE ADP-29F008-TS
AMD	AM29DL320GB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL320GT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL322CB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL322CT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL322DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL322DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL322GB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL322GT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL323CB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL323CT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL323DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL323DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL323GB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL323GB-WM	WA28F.EXE ADP-29F320-BG
AMD	AM29DL323GT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL323GT-WM	WA28F.EXE ADP-29F320-BG
AMD	AM29DL324DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL324DT-E	WA28F.EXE ADP-49F800-

TS/TSV2		
AMD	AM29DL324GB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL324GT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL400BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29DL400BB*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL400BT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29DL400BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL640D-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL640G-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL640H-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL800B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29DL800B*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL800BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29DL800BB*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL800BB-WB	WA28F.EXE ADP-29F800-BG
AMD	AM29DL800BB-WB*	WA28F.EXE ADP-K8D6316-BG
AMD	AM29DL800BT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29DL800BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29DL800BT-WB	WA28F.EXE ADP-29F800-BG
AMD	AM29DL800BT-WB*	WA28F.EXE ADP-K8D6316-BG
AMD	AM29DL800T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29DL800T*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F002B	WMEM1.EXE
AMD	AM29F002BB	WMEM1.EXE
AMD	AM29F002BT	WMEM1.EXE
AMD	AM29F002NB	WMEM1.EXE
AMD	AM29F002NBB	WMEM1.EXE
AMD	AM29F002NBT	WMEM1.EXE
AMD	AM29F002NT	WMEM1.EXE
AMD	AM29F002T	WMEM1.EXE
AMD	AM29F004BB	WMEM1.EXE
AMD	AM29F004BT	WMEM1.EXE
AMD	AM29F010	WMEM1.EXE
AMD	AM29F010A	WMEM1.EXE
AMD	AM29F010B	WMEM1.EXE
AMD	AM29F016-E	WA28F.EXE ADP-29F016-TS
AMD	AM29F016-F	WA28F.EXE ADP-29F016-TSR
AMD	AM29F016-S	WA28F.EXE ADP-29F080-PS
AMD	AM29F016B-E	WA28F.EXE ADP-29F016-TS
AMD	AM29F016B-E4	WA28F.EXE ADP-29F080-TS
AMD	AM29F016B-F	WA28F.EXE ADP-29F016-TSR
AMD	AM29F016B-S	WA28F.EXE ADP-29F080-PS
AMD	AM29F016D-E	WA28F.EXE ADP-29F016-TS
AMD	AM29F016D-E4	WA28F.EXE ADP-29F080-TS
AMD	AM29F016D-F	WA28F.EXE ADP-29F016-TSR
AMD	AM29F016D-S	WA28F.EXE ADP-29F080-PS
AMD	AM29F017B-E	WA28F.EXE ADP-29F016-TS

AMD	AM29F017B-E4	WA28F.EXE ADP-29F080-TS
AMD	AM29F017D-E	WA28F.EXE ADP-29F016-TS
AMD	AM29F017D-E4	WA28F.EXE ADP-29F080-TS
AMD	AM29F017D-F	WA28F.EXE ADP-29F016-TSR
AMD	AM29F032B-F	WA28F.EXE ADP-29F080-TSR
AMD	AM29F032B-S/E	WA28F.EXE ADP-29F080-PS/TS
AMD	AM29F040	WMEM1.EXE
AMD	AM29F040B	WMEM1.EXE
AMD	AM29F080/B	WA28F.EXE ADP-29F080-PS/TS
AMD	AM29F100B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29F100B*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F100T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29F100T*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F160DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F160DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F160DU-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F200AB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29F200AB*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F200AT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29F200AT*/BT	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F200B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29F200B*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F200BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29F200BB*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F200BT*	WA28F.EXE ADP-29F800-PS
AMD	AM29F200T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29F200T*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F400AB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29F400AB*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F400AT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29F400AT*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F400B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29F400B*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F400BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29F400BB*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29F400BT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29F400BT*	WA28F.EXE ADP-49F800-
TS/TSV2		

AMD PS/TS/TSV2	AM29F400T	WA28F.EXE ADP-29F800-
AMD TS/TSV2	AM29F400T*	WA28F.EXE ADP-49F800-
AMD PS/TS/TSV2	AM29F800B	WA28F.EXE ADP-29F800-
AMD TS/TSV2	AM29F800B*	WA28F.EXE ADP-49F800-
AMD PS/TS/TSV2	AM29F800BB	WA28F.EXE ADP-29F800-
AMD TS/TSV2	AM29F800BB*	WA28F.EXE ADP-49F800-
AMD PS/TS/TSV2	AM29F800BT	WA28F.EXE ADP-29F800-
AMD TS/TSV2	AM29F800BT*	WA28F.EXE ADP-49F800-
AMD PS/TS/TSV2	AM29F800T	WA28F.EXE ADP-29F800-
AMD TS/TSV2	AM29F800T*	WA28F.EXE ADP-49F800-
AMD	AM29LV001BB	WMEM1.EXE
AMD	AM29LV001BT	WMEM1.EXE
AMD	AM29LV002B	WA28F.EXE ADP-29F008-PS/TS
AMD	AM29LV002BB	WA28F.EXE ADP-29F008-PS/TS
AMD	AM29LV002BT	WA28F.EXE ADP-29F008-PS/TS
AMD	AM29LV002T	WA28F.EXE ADP-29F008-PS/TS
AMD	AM29LV004B	WA28F.EXE ADP-29F008-PS/TS
AMD	AM29LV004BB-E	WA28F.EXE ADP-29F008-TS
AMD	AM29LV004BT-E	WA28F.EXE ADP-29F008-TS
AMD	AM29LV004T	WA28F.EXE ADP-29F008-PS/TS
AMD	AM29LV008B/BB	WA28F.EXE ADP-29F008-PS/TS
AMD	AM29LV008T/BT	WA28F.EXE ADP-29F008-PS/TS
AMD	AM29LV010B	WMEM1.EXE
AMD	AM29LV017B-E	WA28F.EXE ADP-29F008-TS
AMD	AM29LV017B-F	WA28F.EXE ADP-29F008-TSR
AMD	AM29LV017D-E	WA28F.EXE ADP-29F008-TS
AMD	AM29LV017D-F	WA28F.EXE ADP-29F008-TSR
AMD	AM29LV033C-E	WA28F.EXE ADP-29F008-TS
AMD	AM29LV033MU-E	WA28F.EXE ADP-29F008-TS
AMD	AM29LV040B	WMEM1.EXE
AMD	AM29LV065DU-E	WA28F.EXE ADP-29F065-TS
AMD	AM29LV081B-E	WA28F.EXE ADP-29F008-TS
AMD	AM29LV081B-F	WA28F.EXE ADP-29F008-TSR
AMD	AM29LV116BB-E	WA28F.EXE ADP-29F008-TS
AMD	AM29LV116BT-E	WA28F.EXE ADP-29F008-TS
AMD	AM29LV116DB-E	WA28F.EXE ADP-29F008-TS
AMD	AM29LV116DB-F	WA28F.EXE ADP-29F008-TSR
AMD	AM29LV116DT-E	WA28F.EXE ADP-29F008-TS
AMD	AM29LV116DT-F	WA28F.EXE ADP-29F008-TSR
AMD	AM29LV128MH-E	WA28F.EXE ADP-29LV640-TS
AMD	AM29LV128ML-E	WA28F.EXE ADP-29LV640-TS
AMD TS/TSV2	AM29LV160BB-E	WA28F.EXE ADP-49F800-
AMD	AM29LV160BB-S	WA28F.EXE ADP-49F800-PS
AMD	AM29LV160BB-WC	WA28F.EXE ADP-29F160-BG
AMD TS/TSV2	AM29LV160BT-E	WA28F.EXE ADP-49F800-
AMD	AM29LV160BT-S	WA28F.EXE ADP-49F800-PS
AMD	AM29LV160BT-WC	WA28F.EXE ADP-29F160-BG
AMD TS/TSV2	AM29LV160DB-E	WA28F.EXE ADP-49F800-
AMD	AM29LV160DB-S	WA28F.EXE ADP-49F800-PS
AMD	AM29LV160DB-WC	WA28F.EXE ADP-29F160-BG
AMD	AM29LV160DT-E	WA28F.EXE ADP-49F800-

TS/TSV2		
AMD	AM29LV160DT-S	WA28F.EXE ADP-49F800-PS
AMD	AM29LV160MB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29LV160MB-WA	WA28F.EXE ADP-S29PL064J-BG
AMD	AM29LV160MT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29LV160MT-WA	WA28F.EXE ADP-S29PL064J-BG
AMD	AM29LV200B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29LV200B*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29LV200BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29LV200BB*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29LV200BT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29LV200BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29LV200T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29LV200T*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29LV256MH-E	WA28F.EXE ADP-29LV640-TS
AMD	AM29LV256ML-E	WA28F.EXE ADP-29LV640-TS
AMD	AM29LV320DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29LV320DB-WM	WA28F.EXE ADP-29F320-BG
AMD	AM29LV320DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29LV320DT-WM	WA28F.EXE ADP-29F320-BG
AMD	AM29LV320MB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29LV320MB-WC	WA28F.EXE ADP-29F160-BG
AMD	AM29LV320MH-E	WA28F.EXE ADP-29LV640-TS
AMD	AM29LV320ML-E	WA28F.EXE ADP-29LV640-TS
AMD	AM29LV320MT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29LV320MT-WC	WA28F.EXE ADP-29F160-BG
AMD	AM29LV400B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29LV400B*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29LV400BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29LV400BB*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29LV400BB-WA	WA28F.EXE ADP-29F400-BG
AMD	AM29LV400BB-WA*	WA28F.EXE ADP-49B1614A-BG
AMD	AM29LV400BT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29LV400BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29LV400BT-WA	WA28F.EXE ADP-29F400-BG
AMD	AM29LV400BT-WA*	WA28F.EXE ADP-49B1614A-BG
AMD	AM29LV400T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMD	AM29LV400T*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMD	AM29LV640MB-E	WA28F.EXE ADP-49F800-TSV2
AMD	AM29LV640MH-E	WA28F.EXE ADP-29LV640-TS
AMD	AM29LV640ML-E	WA28F.EXE ADP-29LV640-TS
AMD	AM29LV640MT-E	WA28F.EXE ADP-49F800-TSV2

AMD	AM29LV641DH-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMD	AM29LV641DL-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMD	AM29LV641GH-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMD	AM29LV641MH-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMD	AM29LV641ML-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMD	AM29LV800B	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
AMD	AM29LV800B*	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMD	AM29LV800B-WB	WA28F.EXE	ADP-29F800-BG
AMD	AM29LV800B-WB*	WA28F.EXE	ADP-K8D6316-BG
AMD	AM29LV800BB	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
AMD	AM29LV800BB*	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMD	AM29LV800BB-WB	WA28F.EXE	ADP-29F800-BG
AMD	AM29LV800BB-WB*	WA28F.EXE	ADP-K8D6316-BG
AMD	AM29LV800BT	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
AMD	AM29LV800BT*	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMD	AM29LV800BT-WB	WA28F.EXE	ADP-29F800-BG
AMD	AM29LV800BT-WB*	WA28F.EXE	ADP-K8D6316-BG
AMD	AM29LV800T	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
AMD	AM29LV800T*	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMD	AM29LV800T-WB	WA28F.EXE	ADP-29F800-BG
AMD	AM29LV800T-WB*	WA28F.EXE	ADP-K8D6316-BG
AMD	AM29PL160CB-E	WA28F.EXE	ADP-29PL160-
TS/TSV2			
AMD	AM29PL160CB-S	WA28F.EXE	ADP-MX29F1610-PS
AMD	AM29PL160CT-E	WA28F.EXE	ADP-29PL160-
TS/TSV2			
AMD	AM29PL160CT-S	WA28F.EXE	ADP-MX29F1610-PS
AMD	AM29SL160CB-E	WA28F.EXE	ADP-29SL800-TS
AMD	AM29SL160CT-E	WA28F.EXE	ADP-29SL800-TS
AMD	AM29SL400CB-E	WA28F.EXE	ADP-29SL800-TS
AMD	AM29SL400CT-E	WA28F.EXE	ADP-29SL800-TS
AMD	AM29SL800CB-E	WA28F.EXE	ADP-29SL800-TS
AMD	AM29SL800CT-E	WA28F.EXE	ADP-29SL800-TS
AMD	AM29SL800DB-E	WA28F.EXE	ADP-29SL800-TS
AMD	AM29SL800DT-E	WA28F.EXE	ADP-29SL800-TS
AMD	AM30LV0064D-J40WG	WA29F.EXE	ADP-30LV0064-BG
AMD	AM41DL1634DT	WA28F.EXE	ADP-41DL1644-BG
AMD	AM41DL1644DB	WA28F.EXE	ADP-41DL1644-BG
AMD	AM41DL3224GB	WA28F.EXE	ADP-41DL1644-BG
AMD	AM41DL3224GT	WA28F.EXE	ADP-41DL1644-BG
AMD	AM41DL3234GB	WA28F.EXE	ADP-41DL1644-BG
AMD	AM41DL3244GB	WA28F.EXE	ADP-41DL1644-BG
AMD	AM41DL3244GT	WA28F.EXE	ADP-41DL1644-BG
AMD	AM42DL640AG	WA28F.EXE	ADP-41DL1644-BG
AMD	AM9864	WMEM1.EXE	
AMD	AM25FL005D	WSPROM.EXE	
AMD	AM25FL010D	WSPROM.EXE	
AMD	AM25FL020D	WSPROM.EXE	
AMD	S25FL004D	WSPROM.EXE	
AMD	27S12	WBPPGM.EXE	
AMD	27S13	WBPPGM.EXE	

AMD	27S18	WBPPGM.EXE
AMD	27S180	WBPPGM.EXE
AMD	27S181	WBPPGM.EXE
AMD	27S181A	WBPPGM.EXE
AMD	27S184	WBPPGM.EXE
AMD	27S185	WBPPGM.EXE
AMD	27S19	WBPPGM.EXE
AMD	27S190	WBPPGM.EXE
AMD	27S191	WBPPGM.EXE
AMD	27S191A	WBPPGM.EXE
AMD	27S191SA	WBPPGM.EXE
AMD	27S19A	WBPPGM.EXE
AMD	27S19SA	WBPPGM.EXE
AMD	27S20	WBPPGM.EXE
AMD	27S21	WBPPGM.EXE
AMD	27S21A	WBPPGM.EXE
AMD	27S23	WBPPGM.EXE
AMD	27S25	WBPPGM.EXE
AMD	27S25A	WBPPGM.EXE
AMD	27S25SA	WBPPGM.EXE
AMD	27S27	WBPPGM.EXE
AMD	27S27A	WBPPGM.EXE
AMD	27S28	WBPPGM.EXE
AMD	27S280	WBPPGM.EXE
AMD	27S281	WBPPGM.EXE
AMD	27S281A	WBPPGM.EXE
AMD	27S28A	WBPPGM.EXE
AMD	27S29	WBPPGM.EXE
AMD	27S290	WBPPGM.EXE
AMD	27S291	WBPPGM.EXE
AMD	27S29A	WBPPGM.EXE
AMD	27S29SA	WBPPGM.EXE
AMD	27S31	WBPPGM.EXE
AMD	27S31A	WBPPGM.EXE
AMD	27S32	WBPPGM.EXE
AMD	27S33	WBPPGM.EXE
AMD	27S33A	WBPPGM.EXE
AMD	27S35	WBPPGM.EXE
AMD	27S35A	WBPPGM.EXE
AMD	27S37	WBPPGM.EXE
AMD	27S37A	WBPPGM.EXE
AMD	27S41	WBPPGM.EXE
AMD	27S41A	WBPPGM.EXE
AMD	27S43	WBPPGM.EXE
AMD	27S43A	WBPPGM.EXE
AMD	27S45	WBPPGM.EXE
AMD	27S45A	WBPPGM.EXE
AMD	27S45SA	WBPPGM.EXE
AMD	27S47	WBPPGM.EXE
AMD	27S47A	WBPPGM.EXE
AMD	27S47SA	WBPPGM.EXE
AMD	27S49	WBPPGM.EXE
AMD	27S49A	WBPPGM.EXE
AMD	27S49SA	WBPPGM.EXE
AMD	8751H	WPGM51.EXE
AMD	8753H	WPGM51.EXE
AMD	87C51	WPGM51.EXE
AMD	87C521	WPGM51.EXE
AMD	87C52T2	WPGM51.EXE
AMD	87C541	WPGM51.EXE
AMD	AmPAL16L8	WPLD1.EXE
AMD	AmPAL16L8A	WPLD1.EXE
AMD	AmPAL16L8AL	WPLD1.EXE
AMD	AmPAL16L8B/Q/L	WPLD1.EXE

AMD	AmPAL16R4	WPLD1.EXE
AMD	AmPAL16R4A	WPLD1.EXE
AMD	AmPAL16R4AL	WPLD1.EXE
AMD	AmPAL16R4B/Q/L	WPLD1.EXE
AMD	AmPAL16R6	WPLD1.EXE
AMD	AmPAL16R6A	WPLD1.EXE
AMD	AmPAL16R6AL	WPLD1.EXE
AMD	AmPAL16R6B/Q/L	WPLD1.EXE
AMD	AmPAL16R8	WPLD1.EXE
AMD	AmPAL16R8A	WPLD1.EXE
AMD	AmPAL16R8AL	WPLD1.EXE
AMD	AmPAL16R8B/Q/L	WPLD1.EXE
AMD	AmPAL18P8AL	WPLD1.EXE
AMD	AmPAL20L10-20	WPLD1.EXE
AMD	AmPAL20L10AL	WPLD1.EXE
AMD	AmPAL20L10B	WPLD1.EXE
AMD	AmPAL20RP10	WPLD1.EXE
AMD	AmPAL20RP4	WPLD1.EXE
AMD	AmPAL20RP6	WPLD1.EXE
AMD	AmPAL20RP8	WPLD1.EXE
AMD	AmPAL22P10	WPLD1.EXE
AMD	AmPAL22V10A/-15/-20	WPLD1.EXE
AMD	M4-128/64-VC	WAMACH1.EXE ADP-MACH231SP-TQ
AMD	M4-128/64-YC	WAMACH1.EXE ADP-MACH445
AMD	M4-128N/64-JC	WAMACH1.EXE ADP-MACH1
AMD	M4-192/96-VC	WAMACH1.EXE ADP-M4/192-TQ144
AMD	M4-256/128-YC	WAMACH1.EXE ADP-MACH465-Q
AMD	M4-96/48-VC	WAMACH1.EXE ADP-MACH231SP-TQ
AMD	M4LV-128/64-VC	WAMACH1.EXE ADP-MACH231SP-TQ
AMD	M4LV-128/64-YC	WAMACH1.EXE ADP-MACH445
AMD	M4LV-128N/64-JC	WAMACH1.EXE ADP-MACH1
AMD	M4LV-192/96-VC	WAMACH1.EXE ADP-M4/192-TQ144
AMD	M4LV-256/128-YC	WAMACH1.EXE ADP-MACH465-Q
AMD	M4LV-96/48-VC	WAMACH1.EXE ADP-MACH231SP-TQ
AMD	M5-128/120 YC/1	WAMACH5.EXE ADP-MACH5-Q160
AMD	M5-128/68 VC/1	WAMACH5.EXE ADP-MACH5-TQ100
AMD	M5-128/68 YC/1	WAMACH5.EXE ADP-MACH5-Q100
AMD	M5-192/120 YC/1	WAMACH5.EXE ADP-MACH5-Q160
AMD	M5-192/68 VC/1	WAMACH5.EXE ADP-MACH5-TQ100
AMD	M5-256/68 VC/1	WAMACH5.EXE ADP-MACH5-TQ100
AMD	MACH110	WAMACH.EXE ADP-MACH
AMD	MACH111	WAMACH.EXE ADP-MACH/-TQ
AMD	MACH111SP	WAMACH.EXE ADP-MACH/-TQ
AMD	MACH120	WAMACH1.EXE ADP-MACH2
AMD	MACH130	WAMACH1.EXE ADP-MACH1
AMD	MACH131	WAMACH1.EXE ADP-MACH1
AMD	MACH131/1	WAMACH1.EXE ADP-MACH1
AMD	MACH131SP	WAMACH1.EXE ADP-MACH445
AMD	MACH131SP-VC	WAMACH1.EXE ADP-MACH231SP-TQ
AMD	MACH210/A/AQ	WAMACH.EXE ADP-MACH
AMD	MACH211	WAMACH.EXE ADP-MACH/-TQ
AMD	MACH211SP	WAMACH.EXE ADP-MACH/-TQ
AMD	MACH215	WAMACH.EXE ADP-MACH
AMD	MACH220	WAMACH1.EXE ADP-MACH2
AMD	MACH221	WAMACH1.EXE ADP-MACH2
AMD	MACH221/1	WAMACH1.EXE ADP-MACH2
AMD	MACH221SP	WAMACH1.EXE ADP-MACH445
AMD	MACH221SP-VC	WAMACH1.EXE ADP-MACH231SP-TQ
AMD	MACH230	WAMACH1.EXE ADP-MACH1
AMD	MACH231	WAMACH1.EXE ADP-MACH1
AMD	MACH231/1	WAMACH1.EXE ADP-MACH1
AMD	MACH231SP	WAMACH1.EXE ADP-MACH445
AMD	MACH231SP-VC	WAMACH1.EXE ADP-MACH231SP-TQ
AMD	MACH355/Q	WAMACH1.EXE ADP-MACH355-Q

AMD	MACH435	WAMACH1.EXE	ADP-MACH1
AMD	MACH436	WAMACH1.EXE	ADP-MACH1
AMD	MACH445/Q	WAMACH1.EXE	ADP-MACH445
AMD	MACH446	WAMACH1.EXE	ADP-MACH445
AMD	MACH465/Q	WAMACH1.EXE	ADP-MACH465-Q
AMD	MACH466	WAMACH1.EXE	ADP-MACH465-Q
AMD	MACH5-128/104	WAMACH5.EXE	ADP-MACH5-Q144
AMD	MACH5-128/120	WAMACH5.EXE	ADP-MACH5-Q160
AMD	MACH5-128/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
AMD	MACH5-192/104	WAMACH5.EXE	ADP-MACH5-Q144
AMD	MACH5-192/120	WAMACH5.EXE	ADP-MACH5-Q160
AMD	MACH5-192/160	WAMACH5.EXE	ADP-MACH5-Q208
AMD	MACH5-192/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
AMD	MACH5-256/104	WAMACH5.EXE	ADP-MACH5-Q144
AMD	MACH5-256/120	WAMACH5.EXE	ADP-MACH5-Q160
AMD	MACH5-256/160	WAMACH5.EXE	ADP-MACH5-Q208
AMD	MACH5-256/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
AMD	MACH5-320/120	WAMACH5.EXE	ADP-MACH5-Q160
AMD	MACH5-320/160	WAMACH5.EXE	ADP-MACH5-Q208
AMD	MACH5-320/184	WAMACH5.EXE	ADP-MACH5-Q240
AMD	MACH5-320/192	WAMACH5.EXE	ADP-MACH5-BG256
AMD	MACH5-384/120	WAMACH5.EXE	ADP-MACH5-Q160
AMD	MACH5-384/160	WAMACH5.EXE	ADP-MACH5-Q208
AMD	MACH5-384/184	WAMACH5.EXE	ADP-MACH5-Q240
AMD	MACH5-384/192	WAMACH5.EXE	ADP-MACH5-BG256
AMD	MACH5-512/120	WAMACH5.EXE	ADP-MACH5-Q160
AMD	MACH5-512/160	WAMACH5.EXE	ADP-MACH5-Q208
AMD	MACH5-512/184	WAMACH5.EXE	ADP-MACH5-Q240
AMD	MACH5-512/192	WAMACH5.EXE	ADP-MACH5-BG256
AMD	MACH5-512/256	WAMACH5.EXE	ADP-MACH5-BG352
AMD	MACH5LV-128/104	WAMACH5.EXE	ADP-MACH5-
Q144/TQ144			
AMD	MACH5LV-128/120	WAMACH5.EXE	ADP-MACH5-Q160
AMD	MACH5LV-128/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
AMD	MACH5LV-128/74	WAMACH5.EXE	ADP-MACH5-TQ100
AMD	MACH5LV-256/104	WAMACH5.EXE	ADP-MACH5-
Q144/TQ144			
AMD	MACH5LV-256/120	WAMACH5.EXE	ADP-MACH5-Q160
AMD	MACH5LV-256/160	WAMACH5.EXE	ADP-MACH5-Q208
AMD	MACH5LV-256/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
AMD	MACH5LV-256/74	WAMACH5.EXE	ADP-MACH5-TQ100
AMD	MACH5LV-320/120	WAMACH5.EXE	ADP-MACH5-Q160
AMD	MACH5LV-320/160	WAMACH5.EXE	ADP-MACH5-Q208
AMD	MACH5LV-320/184	WAMACH5.EXE	ADP-MACH5-Q240
AMD	MACH5LV-320/192	WAMACH5.EXE	ADP-MACH5-BG256
AMD	MACH5LV-384/120	WAMACH5.EXE	ADP-MACH5-Q160
AMD	MACH5LV-384/160	WAMACH5.EXE	ADP-MACH5-Q208
AMD	MACH5LV-384/184	WAMACH5.EXE	ADP-MACH5-Q240
AMD	MACH5LV-384/192	WAMACH5.EXE	ADP-MACH5-BG256
AMD	MACH5LV-512/120	WAMACH5.EXE	ADP-MACH5-Q160
AMD	MACH5LV-512/160	WAMACH5.EXE	ADP-MACH5-Q208
AMD	MACH5LV-512/184	WAMACH5.EXE	ADP-MACH5-Q240
AMD	MACH5LV-512/192	WAMACH5.EXE	ADP-MACH5-BG256
AMD	MACH5LV-512/256	WAMACH5.EXE	ADP-MACH5-BG352
AMD	MACHLV210/A	WAMACH.EXE	ADP-MACH
AMD	MACHLV436	WAMACH1.EXE	ADP-MACH1
AMD	MACHLV446	WAMACH1.EXE	ADP-MACH445
AMD	MACHLV466	WAMACH1.EXE	ADP-MACH465-Q
AMD	PAL16L8-4	WPLD1.EXE	CNV-PLCC-16L8-4

AMD	PAL16L8-5	WPLD1.EXE
AMD	PAL16L8-7	WPLD1.EXE
AMD	PAL16L8D/2	WPLD1.EXE
AMD	PAL16L8H-10	WPLD1.EXE
AMD	PAL16R4-4	WPLD1.EXE CNV-PLCC-16L8-4
AMD	PAL16R4-5	WPLD1.EXE
AMD	PAL16R4-7	WPLD1.EXE
AMD	PAL16R4D/2	WPLD1.EXE
AMD	PAL16R4H-10	WPLD1.EXE
AMD	PAL16R6-4	WPLD1.EXE CNV-PLCC-16L8-4
AMD	PAL16R6-5	WPLD1.EXE
AMD	PAL16R6-7	WPLD1.EXE
AMD	PAL16R6D/2	WPLD1.EXE
AMD	PAL16R6H-10	WPLD1.EXE
AMD	PAL16R8-4	WPLD1.EXE CNV-PLCC-16L8-4
AMD	PAL16R8-5	WPLD1.EXE
AMD	PAL16R8-7	WPLD1.EXE
AMD	PAL16R8D/2	WPLD1.EXE
AMD	PAL16R8H-10	WPLD1.EXE
AMD	PAL20L8-10/2	WPLD1.EXE
AMD	PAL20L8-4	WPLD1.EXE CNV-PLCC-20L8-4
AMD	PAL20L8-5	WPLD1.EXE
AMD	PAL20L8-7	WPLD1.EXE
AMD	PAL20R4-10/2	WPLD1.EXE
AMD	PAL20R4-4	WPLD1.EXE CNV-PLCC-20L8-4
AMD	PAL20R4-5	WPLD1.EXE
AMD	PAL20R4-7	WPLD1.EXE
AMD	PAL20R6-10/2	WPLD1.EXE
AMD	PAL20R6-4	WPLD1.EXE CNV-PLCC-20L8-4
AMD	PAL20R6-5	WPLD1.EXE
AMD	PAL20R6-7	WPLD1.EXE
AMD	PAL20R8-10/2	WPLD1.EXE
AMD	PAL20R8-4	WPLD1.EXE CNV-PLCC-20L8-4
AMD	PAL20R8-5	WPLD1.EXE
AMD	PAL20R8-7	WPLD1.EXE
AMD	PAL22V10-7/-10/-15	WPLD1.EXE
AMD	PALCE16V8H	WPLD1.EXE
AMD	PALCE16V8H/4	WPLD1.EXE
AMD	PALCE16V8H/5	WPLD1.EXE
AMD	PALCE16V8HD	WPLD1.EXE
AMD	PALCE16V8Q	WPLD1.EXE
AMD	PALCE16V8Q/4	WPLD1.EXE
AMD	PALCE16V8Q/5	WPLD1.EXE
AMD	PALCE16V8Z	WPLD1.EXE
AMD	PALCE20RA10H	WPLD1.EXE
AMD	PALCE20RA10H/4	WPLD1.EXE
AMD	PALCE20RA10Q	WPLD1.EXE
AMD	PALCE20RA10Q/4	WPLD1.EXE
AMD	PALCE20V8H	WPLD1.EXE
AMD	PALCE20V8H/4	WPLD1.EXE
AMD	PALCE20V8H/5	WPLD1.EXE
AMD	PALCE20V8Q	WPLD1.EXE
AMD	PALCE20V8Q/4	WPLD1.EXE
AMD	PALCE20V8Q/5	WPLD1.EXE
AMD	PALCE22V10H	WPLD1.EXE
AMD	PALCE22V10H/4	WPLD1.EXE
AMD	PALCE22V10H/5	WPLD1.EXE
AMD	PALCE22V10Q	WPLD1.EXE
AMD	PALCE22V10Q/4	WPLD1.EXE
AMD	PALCE22V10Q/5	WPLD1.EXE
AMD	PALCE22V10Z	WPLD1.EXE
AMD	PALCE24V10H	WPLD1.EXE
AMD	PALCE24V10Q	WPLD1.EXE
AMD	PALCE26V12H	WPLD1.EXE

AMD	PALCE26V12H/4	WPLD1.EXE
AMD	PALCE29M16H/4	WPLD1.EXE
AMD	PALCE29MA16H/4	WPLD1.EXE
AMD	PALCE610H	WPLD1.EXE
AMD	PALLV16V8	WPLD1.EXE
AMD	PALLV16V8Z	WPLD1.EXE
AMD	PALLV22V10	WPLD1.EXE
AMD	PALLV22V10Z	WPLD1.EXE
AMD	iM4-32/32	WAMACH.EXE ADP-MACH/-TQ/-
TQ48		
AMD	iM4-64/32	WAMACH.EXE ADP-MACH/-TQ/-
TQ48		
AMD	iM4A3-32/32 (PLCC44)	WAMACH.EXE ADP-MACH
AMD	iM4A3-32/32 (TQFP44)	WAMACH.EXE ADP-MACH-TQ
AMD	iM4A3-32/32 (TQFP48)	WAMACH.EXE ADP-MACH-TQ48
AMD	iM4A3-64/32 (PLCC44)	WAMACH.EXE ADP-MACH
AMD	iM4A3-64/32 (TQFP44)	WAMACH.EXE ADP-MACH-TQ
AMD	iM4A3-64/32 (TQFP48)	WAMACH.EXE ADP-MACH-TQ48
AMD	iM4A5-32/32 (PLCC44)	WAMACH.EXE ADP-MACH
AMD	iM4A5-32/32 (TQFP44)	WAMACH.EXE ADP-MACH-TQ
AMD	iM4A5-32/32 (TQFP48)	WAMACH.EXE ADP-MACH-TQ48
AMD	iM4A5-64/32 (PLCC44)	WAMACH.EXE ADP-MACH
AMD	iM4A5-64/32 (TQFP44)	WAMACH.EXE ADP-MACH-TQ
AMD	iM4A5-64/32 (TQFP48)	WAMACH.EXE ADP-MACH-TQ48
AMD	iM4LV-32/32	WAMACH.EXE ADP-MACH/-TQ/-
TQ48		
AMD	iM4LV-64/32	WAMACH.EXE ADP-MACH/-TQ/-
TQ48		
AMI	FS6370	WSPROM.EXE
AMI	PEEL153	WPLD1.EXE
AMI	PEEL173	WPLD1.EXE
AMI	PEEL18CV8	WPLD1.EXE
AMI	PEEL20CG10	WPLD1.EXE
AMI	PEEL20CG10A	WPLD1.EXE
AMI	PEEL22CV10	WPLD1.EXE
AMI	PEEL22CV10A	WPLD1.EXE
AMI	PEEL22CV10A+	WPLD1.EXE
AMI	PEEL22CV10Z	WPLD1.EXE
AMI	PEEL253	WPLD1.EXE
AMI	PEEL273	WPLD1.EXE
AMIC	A27020	WMEM1.EXE
AMIC	A27020A	WMEM1.EXE
AMIC	A275308[12.75V]	WMEM1.EXE
AMIC	A276308A[12.75V]	WMEM1.EXE
AMIC	A277308	WMEM1.EXE
AMIC	A277308A	WMEM1.EXE
AMIC	A278308	WMEM1.EXE
AMIC	A278308A	WMEM1.EXE
AMIC	A279308	WMEM1.EXE
AMIC	A290011T	WMEM1.EXE
AMIC	A290011U	WMEM1.EXE
AMIC	A29001T	WMEM1.EXE
AMIC	A290021T	WMEM1.EXE
AMIC	A290021U	WMEM1.EXE
AMIC	A29002T	WMEM1.EXE
AMIC	A29002U	WMEM1.EXE
AMIC	A29008T	WMEM1.EXE
AMIC	A29008U	WMEM1.EXE
AMIC	A29010	WMEM1.EXE
AMIC	A29040	WMEM1.EXE
AMIC	A29040A	WMEM1.EXE
AMIC	A29040B	WMEM1.EXE
AMIC	A29400T	WA28F.EXE ADP-29F800-

AMIC	A29400T*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29400U	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMIC	A29400U*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29512	WMEM1.EXE
AMIC	A29800T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMIC	A29800T*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29800U	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
AMIC	A29800U*	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29DL163UV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29DL320FUV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L004T	WMEM1.EXE
AMIC	A29L004TW	WA28F.EXE ADP-29F008-TS
AMIC	A29L004U	WMEM1.EXE
AMIC	A29L004UW	WA28F.EXE ADP-29F008-TS
AMIC	A29L008T	WMEM1.EXE
AMIC	A29L008TV	WA28F.EXE ADP-29F008-TS
AMIC	A29L008U	WMEM1.EXE
AMIC	A29L008UV	WA28F.EXE ADP-29F008-TS
AMIC	A29L040	WMEM1.EXE
AMIC	A29L160ATV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L160ATV-F	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L160AUV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L160BTV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L160FTV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L160HTV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L160HUV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L160TV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L160UV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L320ATV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L400ATV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L400AUV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L400TG	WA28F.EXE ADP-49B1614A-BG
AMIC	A29L400TV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L400UG	WA28F.EXE ADP-49B1614A-BG
AMIC	A29L400UV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L800ATG	WA28F.EXE ADP-49B1614A-BG
AMIC	A29L800ATV	WA28F.EXE ADP-49F800-
TS/TSV2		
AMIC	A29L800AUG	WA28F.EXE ADP-49B1614A-BG
AMIC	A29L800AUV	WA28F.EXE ADP-49F800-
TS/TSV2		

AMIC	A29L800HTV	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMIC	A29L800HUV	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMIC	A29L800TG	WA28F.EXE	ADP-49B1614A-BG
AMIC	A29L800TV	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMIC	A29L800UG	WA28F.EXE	ADP-49B1614A-BG
AMIC	A29L800UV	WA28F.EXE	ADP-49F800-
TS/TSV2			
AMIC	A49LF004	WMEM1.EXE	
AMIC	A49LF004M	WMEM1.EXE	
AMIC	A49LF004T	WMEM1.EXE	
AMIC	A49LF040A	WMEM1.EXE	
AMIC	A49LF040T	WMEM1.EXE	
AMIC	A50FW040 (PLCC)	WMEM1.EXE	
AMIC	A50FW040M (PLCC)	WMEM1.EXE	
AMIC	A50LPW040T (PLCC)	WMEM1.EXE	
AMIC	A25L40PT	WSPROM.EXE	
AMIC	A25L40PU	WSPROM.EXE	
AMIC	A25L42PT	WSPROM.EXE	
AMIC	A25L42PU	WSPROM.EXE	
AMIC	A25L80P	WSPROM.EXE	
AMIC	AP160 (87C52)	WPGM51.EXE	
AMIC	AP180	WPGM51.EXE	
AMIC (KOREA)	AMI29LV160BT	WA28F.EXE	ADP-49F800-
TS/TSV2			
ANACHIP	AM93LC86	WSPROM.EXE	
ANALOG	ADM1065	WASIG.EXE	ADP-ADM106X-Q48
ANALOG	ADUC812 (QFP52)	WASIG.EXE	ADP-ADUC812-Q
ANALOG	ADUC814	WASIG.EXE	CNV-TSSOP-DIP28
ANALOG	ADUC831	WASIG.EXE	ADP-ADUC8XX-Q
ANALOG	ADUC834	WASIG.EXE	ADP-ADUC8XX-Q
ANALOG	ADUC841BS62-5	WASIG.EXE	ADP-ADUC8XX-Q
ANALOG	ADUC842BS62-3	WASIG.EXE	ADP-ADUC8XX-Q
ANALOG	ADUC842BS62-5	WASIG.EXE	ADP-ADUC8XX-Q
ANALOG	ADUC843BS62-5	WASIG.EXE	ADP-ADUC8XX-Q
ANALOG	ADUC845BS62-5	WASIG.EXE	ADP-ADUC8XX-Q
ANALOG	ADUC847BCP62-3	WASIG.EXE	ADP-ADUC8XX-QFN
ANALOG	ADUC847BCP62-5	WASIG.EXE	ADP-ADUC8XX-QFN
ANALOG	ADUC848BCP62-3	WASIG.EXE	ADP-ADUC8XX-QFN
ANALOG	ADUC848BCP62-5	WASIG.EXE	ADP-ADUC8XX-QFN
APLUS	AF24BC02	WSPROM.EXE	
APLUS	AF24BC04	WSPROM.EXE	
APLUS	AF24BC08	WSPROM.EXE	
APLUS	AF24BC128	WSPROM.EXE	
APLUS	AF24BC16	WSPROM.EXE	
APLUS	AF24BC256	WSPROM.EXE	
APLUS	AF24BC32	WSPROM.EXE	
APLUS	AF24BC64	WSPROM.EXE	
APLUS	AF93BC46 (128*8)	WSPROM.EXE	
APLUS	AF93BC46 (64*16)	WSPROM.EXE	
APLUS	AF93BC56 (128*16)	WSPROM.EXE	
APLUS	AF93BC56 (256*8)	WSPROM.EXE	
APLUS	AF93BC66 (256*16)	WSPROM.EXE	
APLUS	AF93BC66 (512*8)	WSPROM.EXE	
APLUS	AF93BC86 (1024*16)	WSPROM.EXE	
APLUS	AF93BC86 (2048*8)	WSPROM.EXE	
ART	AR50P11	WAMPU7.EXE	ADP-AR50P11-TQ
ASAHI-KASEI	AK28C64	WMEM1.EXE	
ASAHI-KASEI	AK27CX161	WBPPGM.EXE	
ASAHI-KASEI	AK27CX162	WBPPGM.EXE	
ASAHI-KASEI	AK27CX321	WBPPGM.EXE	
ASAHI-KASEI	AK27CX322	WBPPGM.EXE	

ASAHI-KASEI	AK27CX641	WBPPGM.EXE	
ASAHI-KASEI	AK27CX642	WBPPGM.EXE	
ASD	AE29F2008	WMEM1.EXE	
ASD	AE49F2008	WMEM1.EXE	
ASLIC	AX87C60	WASIG.EXE	ADP-P87C234-Q
AT&T	ATT17128/F	WSPROM.EXE	
AT&T	ATT17128A	WSPROM.EXE	
AT&T	ATT1736/F	WSPROM.EXE	
AT&T	ATT1736A	WSPROM.EXE	
AT&T	ATT1765/F	WSPROM.EXE	
AT&T	ATT1765A	WSPROM.EXE	
ATC	ATC24C02	WSPROM.EXE	
ATC	ATC24C02P	WSPROM.EXE	
ATC	ATC24C02S	WSPROM.EXE	
ATC	ATC24C02W	WSPROM.EXE	
ATC	ATC24C04	WSPROM.EXE	
ATC	ATC24C04P	WSPROM.EXE	
ATC	ATC24C04S	WSPROM.EXE	
ATC	ATC24C04W	WSPROM.EXE	
ATC	ATC24C08	WSPROM.EXE	
ATC	ATC24LC02	WSPROM.EXE	
ATC	ATC24LC02P	WSPROM.EXE	
ATC	ATC24LC02S	WSPROM.EXE	
ATC	ATC24LC02W	WSPROM.EXE	
ATC	ATC24LC04	WSPROM.EXE	
ATC	ATC24LC04P	WSPROM.EXE	
ATC	ATC24LC04S	WSPROM.EXE	
ATC	ATC24LC04W	WSPROM.EXE	
ATC	ATC24LC08	WSPROM.EXE	
ATC	ATC24LC16	WSPROM.EXE	
ATC	ATC93C46	WSPROM.EXE	
ATC	ATC93C46S	WSPROM.EXE	
ATC	ATC93C56	WSPROM.EXE	
ATC	ATC93C56 (256*8)	WSPROM.EXE	
ATC	ATC93C56S	WSPROM.EXE	
ATC	ATC93C66 (256*16)	WSPROM.EXE	
ATC	ATC93C66 (512*8)	WSPROM.EXE	
ATC	ATC93C66S	WSPROM.EXE	
ATC	ATC93LC46	WSPROM.EXE	
ATC	ATC93LC46S	WSPROM.EXE	
ATC	ATC93LC56	WSPROM.EXE	
ATC	ATC93LC56 (256*8)	WSPROM.EXE	
ATC	ATC93LC56S	WSPROM.EXE	
ATC	ATC93LC66 (256*16)	WSPROM.EXE	
ATC	ATC93LC66 (512*8)	WSPROM.EXE	
ATC	ATC93LC66S	WSPROM.EXE	
ATMEL	AT27BV010	WMEM1.EXE	
ATMEL	AT27BV020	WMEM1.EXE	
ATMEL	AT27BV040	WMEM1.EXE	
ATMEL	AT27BV1024	WMEM1.EXE	
ATMEL	AT27BV256 [13V]	WMEM1.EXE	
ATMEL	AT27BV400	WAEP42.EXE	ADP-EP42-PS/-PL
ATMEL	AT27BV4096	WMEM1.EXE	
ATMEL	AT27BV512 [13V]	WMEM1.EXE	
ATMEL	AT27C010	WMEM1.EXE	
ATMEL	AT27C010L	WMEM1.EXE	
ATMEL	AT27C020	WMEM1.EXE	
ATMEL	AT27C040	WMEM1.EXE	
ATMEL	AT27C080	WMEM1.EXE	
ATMEL	AT27C1024	WMEM1.EXE	
ATMEL	AT27C1024L	WMEM1.EXE	
ATMEL	AT27C128 [12.5V]	WMEM1.EXE	
ATMEL	AT27C2048	WMEM1.EXE	
ATMEL	AT27C256R [13V]	WMEM1.EXE	

ATMEL	AT27C256[12.75V]	WMEM1.EXE
ATMEL	AT27C4096	WMEM1.EXE
ATMEL	AT27C512R[13V]	WMEM1.EXE
ATMEL	AT27C512[12.75V]	WMEM1.EXE
ATMEL	AT27C513R[13V]	WMEM1.EXE
ATMEL	AT27C513[12.75V]	WMEM1.EXE
ATMEL	AT27C516	WMEM1.EXE
ATMEL	AT27C520[13V]	WMEM1.EXE
ATMEL	AT27HC1024	WMEM1.EXE
ATMEL	AT27HC256R[13V]	WMEM1.EXE
ATMEL	AT27HC64L[12.5V]	WMEM1.EXE
ATMEL	AT27HC64[12.5V]	WMEM1.EXE
ATMEL	AT27LV010/A	WMEM1.EXE
ATMEL	AT27LV020/A	WMEM1.EXE
ATMEL	AT27LV040/A	WMEM1.EXE
ATMEL	AT27LV080	WMEM1.EXE
ATMEL	AT27LV1024	WMEM1.EXE
ATMEL	AT27LV1026	WMEM1.EXE
ATMEL	AT27LV256A[13V]	WMEM1.EXE
ATMEL	AT27LV256R[13V]	WMEM1.EXE
ATMEL	AT27LV4096	WMEM1.EXE
ATMEL	AT27LV512A[13V]	WMEM1.EXE
ATMEL	AT27LV512R[13V]	WMEM1.EXE
ATMEL	AT27LV520[13V]	WMEM1.EXE
ATMEL	AT28BV16	WMEM1.EXE
ATMEL	AT28BV256	WMEM1.EXE
ATMEL	AT28BV64	WMEM1.EXE
ATMEL	AT28BV64B	WMEM1.EXE
ATMEL	AT28C010	WMEM1.EXE
ATMEL	AT28C020	WMEM1.EXE
ATMEL	AT28C04	WMEM1.EXE
ATMEL	AT28C040	WMEM1.EXE
ATMEL	AT28C16/T	WMEM1.EXE
ATMEL	AT28C17	WMEM1.EXE
ATMEL	AT28C256	WMEM1.EXE
ATMEL	AT28C64/X	WMEM1.EXE
ATMEL	AT28C64B	WMEM1.EXE
ATMEL	AT28C64B(Extra)	WMEM1.EXE
ATMEL	AT28HC16/L	WMEM1.EXE
ATMEL	AT28HC191/L	WMEM1.EXE
ATMEL	AT28HC256/L	WMEM1.EXE
ATMEL	AT28HC291/L	WMEM1.EXE
ATMEL	AT28HC64/L	WMEM1.EXE
ATMEL	AT28HC64B	WMEM1.EXE
ATMEL	AT28LV010	WMEM1.EXE
ATMEL	AT28LV256	WMEM1.EXE
ATMEL	AT28LV64	WMEM1.EXE
ATMEL	AT28LV64B	WMEM1.EXE
ATMEL	AT28MC010	WMEM1.EXE
ATMEL	AT28MC020	WMEM1.EXE
ATMEL	AT28MC040	WMEM1.EXE
ATMEL	AT28PC64	WMEM1.EXE
ATMEL	AT29BV010A	WMEM1.EXE
ATMEL	AT29BV020	WMEM1.EXE
ATMEL	AT29BV040A	WMEM1.EXE
ATMEL	AT29C010	WMEM1.EXE
ATMEL	AT29C010A	WMEM1.EXE
ATMEL	AT29C020	WMEM1.EXE
ATMEL	AT29C040A	WMEM1.EXE
ATMEL	AT29C1024	WMEM1.EXE
ATMEL	AT29C256	WMEM1.EXE
ATMEL	AT29C257	WMEM1.EXE
ATMEL	AT29C512	WMEM1.EXE
ATMEL	AT29LV010A	WMEM1.EXE

ATMEL	AT29LV020	WMEM1.EXE
ATMEL	AT29LV040A	WMEM1.EXE
ATMEL	AT29LV1024	WMEM1.EXE
ATMEL	AT29LV256	WMEM1.EXE
ATMEL	AT29LV512	WMEM1.EXE
ATMEL	AT47BV163A-T	WA28F.EXE ADP-49F800-TSV2
ATMEL	AT49BN1604-T	WA28F.EXE ADP-49BN1604-TS
ATMEL	AT49BN1604T-T	WA28F.EXE ADP-49BN1604-TS
ATMEL	AT49BV001	WMEM1.EXE
ATMEL	AT49BV001A	WMEM1.EXE
ATMEL	AT49BV001AN	WMEM1.EXE
ATMEL	AT49BV001ANT	WMEM1.EXE
ATMEL	AT49BV001AT	WMEM1.EXE
ATMEL	AT49BV001N	WMEM1.EXE
ATMEL	AT49BV001NT	WMEM1.EXE
ATMEL	AT49BV001T	WMEM1.EXE
ATMEL	AT49BV002	WMEM1.EXE
ATMEL	AT49BV002A	WMEM1.EXE
ATMEL	AT49BV002AN	WMEM1.EXE
ATMEL	AT49BV002ANT	WMEM1.EXE
ATMEL	AT49BV002AT	WMEM1.EXE
ATMEL	AT49BV002N	WMEM1.EXE
ATMEL	AT49BV002NT	WMEM1.EXE
ATMEL	AT49BV002T	WMEM1.EXE
ATMEL	AT49BV008AT-T	WA28F.EXE ADP-29F008-TS
ATMEL	AT49BV010	WMEM1.EXE
ATMEL	AT49BV020	WMEM1.EXE
ATMEL	AT49BV040	WMEM1.EXE
ATMEL	AT49BV040A	WMEM1.EXE
ATMEL	AT49BV040B	WMEM1.EXE
ATMEL	AT49BV040T	WMEM1.EXE
ATMEL	AT49BV080-R	WA28F.EXE ADP-29F080-PS
ATMEL	AT49BV080-T	WA28F.EXE ADP-29F080-TS
ATMEL	AT49BV080T-R	WA28F.EXE ADP-29F080-PS
ATMEL	AT49BV080T-T	WA28F.EXE ADP-29F080-TS
ATMEL	AT49BV160-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV1604-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV1604T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV160C-T	WA28F.EXE ADP-28F160-TS
ATMEL	AT49BV160CT-T	WA28F.EXE ADP-28F160-TS
ATMEL	AT49BV160D-T	WA28F.EXE ADP-28F160-TS
ATMEL	AT49BV160DT-T	WA28F.EXE ADP-28F160-TS
ATMEL	AT49BV160T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV161-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV1614-C	WA28F.EXE ADP-49F1614-BG
ATMEL	AT49BV1614-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV1614A-C	WA28F.EXE ADP-49B1614A-BG
ATMEL	AT49BV1614A-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV1614AT-C	WA28F.EXE ADP-49B1614A-BG
ATMEL	AT49BV1614T-C	WA28F.EXE ADP-49F1614-BG
ATMEL	AT49BV1614T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV161T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV162A-T	WA28F.EXE ADP-49F800-TSV2
ATMEL	AT49BV162AT-T	WA28F.EXE ADP-49F800-TSV2
ATMEL	AT49BV163A-T	WA28F.EXE ADP-49F800-TSV2

ATMEL	AT49BV163AT-T	WA28F.EXE ADP-49F800-TSV2
ATMEL	AT49BV163D-C	WA28F.EXE ADP-MX29LV320-BG
ATMEL	AT49BV163D-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV163DT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV2048-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49BV2048-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV2048A-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV2048T-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49BV2048T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV320A-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV320AT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV320C-T	WA28F.EXE ADP-28F160-TS
ATMEL	AT49BV320CT-T	WA28F.EXE ADP-28F160-TS
ATMEL	AT49BV320D-T	WA28F.EXE ADP-28F160-TS
ATMEL	AT49BV320DT-T	WA28F.EXE ADP-28F160-TS
ATMEL	AT49BV320T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV321-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV321T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV322A-C	WA28F.EXE ADP-49BV322A-BG
ATMEL	AT49BV322A-T	WA28F.EXE ADP-49F800-TSV2
ATMEL	AT49BV322AT-C	WA28F.EXE ADP-49BV322A-BG
ATMEL	AT49BV322AT-T	WA28F.EXE ADP-49F800-TSV2
ATMEL	AT49BV322D-C	WA28F.EXE ADP-49BV322A_BG
ATMEL	AT49BV322D-T	WA28F.EXE ADP-49F800-TSV2
ATMEL	AT49BV322DT-C	WA28F.EXE ADP-49BV322A_BG
ATMEL	AT49BV322DT-T	WA28F.EXE ADP-49F800-TSV2
ATMEL	AT49BV4096-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49BV4096-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV4096A-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49BV4096A-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV4096AT-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49BV4096AT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV4096T-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49BV4096T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV512	WMEM1.EXE
ATMEL	AT49BV6416-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV6416T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV642D-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV642DT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV8004-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV8004T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV8011-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV8011T-T	WA28F.EXE ADP-49F800-

TS/TSV2		
ATMEL	AT49BV802A-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV802AT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV8192-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49BV8192-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV8192A-C	WA28F.EXE ADP-49BV8192A-BG
ATMEL	AT49BV8192A-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV8192AT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49BV8192T-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49BV8192T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49F001	WMEM1.EXE
ATMEL	AT49F001A	WMEM1.EXE
ATMEL	AT49F001AN	WMEM1.EXE
ATMEL	AT49F001ANT	WMEM1.EXE
ATMEL	AT49F001AT	WMEM1.EXE
ATMEL	AT49F001N	WMEM1.EXE
ATMEL	AT49F001NT	WMEM1.EXE
ATMEL	AT49F001T	WMEM1.EXE
ATMEL	AT49F002	WMEM1.EXE
ATMEL	AT49F002A	WMEM1.EXE
ATMEL	AT49F002AN	WMEM1.EXE
ATMEL	AT49F002ANT	WMEM1.EXE
ATMEL	AT49F002AT	WMEM1.EXE
ATMEL	AT49F002N	WMEM1.EXE
ATMEL	AT49F002NT	WMEM1.EXE
ATMEL	AT49F002T	WMEM1.EXE
ATMEL	AT49F010	WMEM1.EXE
ATMEL	AT49F020	WMEM1.EXE
ATMEL	AT49F040	WMEM1.EXE
ATMEL	AT49F040A	WMEM1.EXE
ATMEL	AT49F040B (PLCC)	WMEM1.EXE
ATMEL	AT49F080-R	WA28F.EXE ADP-29F080-PS
ATMEL	AT49F080-T	WA28F.EXE ADP-29F080-TS
ATMEL	AT49F080T-R	WA28F.EXE ADP-29F080-PS
ATMEL	AT49F080T-T	WA28F.EXE ADP-29F080-TS
ATMEL	AT49F1024	WMEM1.EXE
ATMEL	AT49F1025	WMEM1.EXE
ATMEL	AT49F1604-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49F1604T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49F1614-C	WA28F.EXE ADP-49F1614-BG
ATMEL	AT49F1614-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49F1614T-C	WA28F.EXE ADP-49F1614-BG
ATMEL	AT49F1614T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49F2048-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49F2048-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49F2048T-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49F2048T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49F4096-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49F4096-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49F4096A-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49F4096A-T	WA28F.EXE ADP-49F800-

TS/TSV2		
ATMEL	AT49F4096AT-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49F4096AT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49F4096T-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49F4096T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49F512	WMEM1.EXE
ATMEL	AT49F516	WMEM1.EXE
ATMEL	AT49F8011-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49F8192-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49F8192-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49F8192A-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49F8192AT-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49F8192AT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49F8192T-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49F8192T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49HBV010	WMEM1.EXE
ATMEL	AT49HF010	WMEM1.EXE
ATMEL	AT49HLV010	WMEM1.EXE
ATMEL	AT49LH002 (PLCC)	WMEM1.EXE
ATMEL	AT49LH002 (TSOP)	WMEM1.EXE
ATMEL	AT49LH004 (PLCC)	WMEM1.EXE
ATMEL	AT49LH004 (TSOP)	WMEM1.EXE
ATMEL	AT49LH00B4 (PLCC)	WMEM1.EXE
ATMEL	AT49LL020 (TSOP)	WMEM1.EXE
ATMEL	AT49LL040 (PLCC)	WMEM1.EXE
ATMEL	AT49LL040 (TSOP)	WMEM1.EXE
ATMEL	AT49LL080 (PLCC)	WMEM1.EXE
ATMEL	AT49LL080 (TSOP)	WMEM1.EXE
ATMEL	AT49LV001	WMEM1.EXE
ATMEL	AT49LV001N	WMEM1.EXE
ATMEL	AT49LV001NT	WMEM1.EXE
ATMEL	AT49LV001T	WMEM1.EXE
ATMEL	AT49LV002	WMEM1.EXE
ATMEL	AT49LV002N	WMEM1.EXE
ATMEL	AT49LV002NT	WMEM1.EXE
ATMEL	AT49LV002T	WMEM1.EXE
ATMEL	AT49LV008A-T	WA28F.EXE ADP-29F008-TS
ATMEL	AT49LV010	WMEM1.EXE
ATMEL	AT49LV020	WMEM1.EXE
ATMEL	AT49LV040	WMEM1.EXE
ATMEL	AT49LV040T	WMEM1.EXE
ATMEL	AT49LV080-R	WA28F.EXE ADP-29F080-PS
ATMEL	AT49LV080-T	WA28F.EXE ADP-29F080-TS
ATMEL	AT49LV080T-R	WA28F.EXE ADP-29F080-PS
ATMEL	AT49LV080T-T	WA28F.EXE ADP-29F080-TS
ATMEL	AT49LV1024	WMEM1.EXE
ATMEL	AT49LV1024A	WMEM1.EXE
ATMEL	AT49LV1025	WMEM1.EXE
ATMEL	AT49LV161-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV1614-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV1614A-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV2048-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49LV2048-T	WA28F.EXE ADP-49F800-
TS/TSV2		

ATMEL	AT49LV2048B-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV2048T-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49LV2048T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV320T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV321-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV3218T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV321T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV4096-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49LV4096-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV4096A-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV4096T-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49LV4096T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV8192-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49LV8192-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV8192A-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV8192AT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LV8192T-R	WA28F.EXE ADP-49F800-PS
ATMEL	AT49LV8192T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ATMEL	AT49LW040 (PLCC)	WMEM1.EXE
ATMEL	AT49LW040 (TSOP)	WMEM1.EXE
ATMEL	AT49LW080 (PLCC)	WMEM1.EXE
ATMEL	AT49LW080 (TSOP)	WMEM1.EXE
ATMEL	AT17C002	WSPROM.EXE
ATMEL	AT17C002A	WSPROM.EXE
ATMEL	AT17C010	WSPROM.EXE
ATMEL	AT17C010A	WSPROM.EXE
ATMEL	AT17C020	WSPROM.EXE
ATMEL	AT17C020A	WSPROM.EXE
ATMEL	AT17C128	WSPROM.EXE
ATMEL	AT17C128A	WSPROM.EXE
ATMEL	AT17C256	WSPROM.EXE
ATMEL	AT17C256A	WSPROM.EXE
ATMEL	AT17C512	WSPROM.EXE
ATMEL	AT17C512A	WSPROM.EXE
ATMEL	AT17C65	WSPROM.EXE
ATMEL	AT17C65A	WSPROM.EXE
ATMEL	AT17F040	WSPROM.EXE
ATMEL	AT17F040A	WSPROM.EXE
ATMEL	AT17F080	WSPROM.EXE
ATMEL	AT17F080A	WSPROM.EXE
ATMEL	AT17F16	WSPROM.EXE
ATMEL	AT17F16A	WSPROM.EXE
ATMEL	AT17F32	WSPROM.EXE
ATMEL	AT17LV002	WSPROM.EXE
ATMEL	AT17LV002A	WSPROM.EXE
ATMEL	AT17LV010	WSPROM.EXE
ATMEL	AT17LV010A	WSPROM.EXE
ATMEL	AT17LV020	WSPROM.EXE
ATMEL	AT17LV020A	WSPROM.EXE
ATMEL	AT17LV040	WSPROM.EXE
ATMEL	AT17LV128	WSPROM.EXE

ATMEL	AT17LV128A	WSPROM.EXE
ATMEL	AT17LV256	WSPROM.EXE
ATMEL	AT17LV256A	WSPROM.EXE
ATMEL	AT17LV512	WSPROM.EXE
ATMEL	AT17LV512A	WSPROM.EXE
ATMEL	AT17LV65	WSPROM.EXE
ATMEL	AT17LV65A	WSPROM.EXE
ATMEL	AT17N002	WSPROM.EXE
ATMEL	AT17N010	WSPROM.EXE
ATMEL	AT17N040	WSPROM.EXE
ATMEL	AT17N256	WSPROM.EXE
ATMEL	AT17N512	WSPROM.EXE
ATMEL	AT24C01	WSPROM.EXE
ATMEL	AT24C01A	WSPROM.EXE
ATMEL	AT24C01B	WSPROM.EXE
ATMEL	AT24C02	WSPROM.EXE
ATMEL	AT24C02A	WSPROM.EXE
ATMEL	AT24C02B	WSPROM.EXE
ATMEL	AT24C02B (SOT-23)	WSPROM.EXE
ATMEL	AT24C04	WSPROM.EXE
ATMEL	AT24C04A	WSPROM.EXE
ATMEL	AT24C08	WSPROM.EXE
ATMEL	AT24C08A	WSPROM.EXE
ATMEL	AT24C1024	WSPROM.EXE
ATMEL	AT24C1024B	WSPROM.EXE
ATMEL	AT24C128	WSPROM.EXE
ATMEL	AT24C128B	WSPROM.EXE
ATMEL	AT24C16/AT24C164	WSPROM.EXE
ATMEL	AT24C16A	WSPROM.EXE
ATMEL	AT24C16B	WSPROM.EXE
ATMEL	AT24C16B (SOT-23)	WSPROM.EXE
ATMEL	AT24C21	WSPROM.EXE
ATMEL	AT24C256	WSPROM.EXE
ATMEL	AT24C256B	WSPROM.EXE
ATMEL	AT24C32	WSPROM.EXE
ATMEL	AT24C32A	WSPROM.EXE
ATMEL	AT24C32C	WSPROM.EXE
ATMEL	AT24C512	WSPROM.EXE
ATMEL	AT24C512B	WSPROM.EXE
ATMEL	AT24C64	WSPROM.EXE
ATMEL	AT24C64A	WSPROM.EXE
ATMEL	AT24C64B	WSPROM.EXE
ATMEL	AT24C64C	WSPROM.EXE
ATMEL	AT24HC02B	WSPROM.EXE
ATMEL	AT24RF08	WSPROM.EXE
ATMEL	AT25010	WSPROM.EXE
ATMEL	AT25010A	WSPROM.EXE
ATMEL	AT25020	WSPROM.EXE
ATMEL	AT25020A	WSPROM.EXE
ATMEL	AT25040	WSPROM.EXE
ATMEL	AT25040A	WSPROM.EXE
ATMEL	AT25080	WSPROM.EXE
ATMEL	AT25080A	WSPROM.EXE
ATMEL	AT25128	WSPROM.EXE
ATMEL	AT25128A	WSPROM.EXE
ATMEL	AT25160	WSPROM.EXE
ATMEL	AT25160A	WSPROM.EXE
ATMEL	AT25256	WSPROM.EXE
ATMEL	AT25256A	WSPROM.EXE
ATMEL	AT25320	WSPROM.EXE
ATMEL	AT25320A	WSPROM.EXE
ATMEL	AT25640	WSPROM.EXE
ATMEL	AT25640A	WSPROM.EXE
ATMEL	AT25C01	WSPROM.EXE

ATMEL	AT25C02	WSPROM.EXE
ATMEL	AT25C04	WSPROM.EXE
ATMEL	AT25F1024	WSPROM.EXE
ATMEL	AT25F1024A	WSPROM.EXE
ATMEL	AT25F2048	WSPROM.EXE
ATMEL	AT25F4096	WSPROM.EXE
ATMEL	AT25F512A	WSPROM.EXE
ATMEL	AT25F512N	WSPROM.EXE
ATMEL	AT25FS040	WSPROM.EXE
ATMEL	AT25HP256	WSPROM.EXE
ATMEL	AT25HP512	WSPROM.EXE
ATMEL	AT25P1024	WSPROM.EXE
ATMEL	AT26DF041	WSPROM.EXE
ATMEL	AT26DF081	WSPROM.EXE
ATMEL	AT26DF081A	WSPROM.EXE
ATMEL	AT26DF161	WSPROM.EXE
ATMEL	AT26DF321 (SOP8)	WSPROM.EXE
ATMEL	AT26F004	WSPROM.EXE
ATMEL	AT34C02	WSPROM.EXE
ATMEL	AT45BCM021B (SOP8)	WABPP.EXE ADP-AT45DB011-S
ATMEL	AT45D011 (PLCC32)	WABPP.EXE ADP-AT45DBXX-PL
ATMEL	AT45D011 (SOP8)	WABPP.EXE ADP-AT45DB011-S
ATMEL	AT45D011 (TSSOP14)	WABPP.EXE ADP-AT45DB011-TS
ATMEL	AT45D021 (PLCC32)	WABPP.EXE ADP-AT45DBXX-PL
ATMEL	AT45D021 (SOP28)	WABPP.EXE ADP-AT45DBXX-S
ATMEL	AT45D021 (TSOP28)	WABPP.EXE ADP-AT45DBXX-TS
ATMEL	AT45D041 (PLCC32)	WABPP.EXE ADP-AT45DBXX-PL
ATMEL	AT45D041 (SOP28)	WABPP.EXE ADP-AT45DBXX-S
ATMEL	AT45D041 (TSOP28)	WABPP.EXE ADP-AT45DBXX-TS
ATMEL	AT45D041A (PLCC32)	WABPP.EXE ADP-AT45DBXX-PL
ATMEL	AT45D041A (SOP)	WABPP.EXE ADP-AT45DBXX-S
ATMEL	AT45D041A (TSOP)	WABPP.EXE ADP-AT45DBXX-TS
ATMEL	AT45D081 (SOP)	WABPP.EXE ADP-AT45DBXX-S
ATMEL	AT45D081 (TSOP)	WABPP.EXE ADP-AT45DB08-TS
ATMEL	AT45D161 (PLCC32)	WABPP.EXE ADP-AT45DBXX-PL
ATMEL	AT45D161 (SOP)	WABPP.EXE ADP-AT45DBXX-S
ATMEL	AT45D161 (TSOP)	WABPP.EXE ADP-AT45DBXX-TS
ATMEL	AT45DB011 (PLCC32)	WABPP.EXE ADP-AT45DBXX-PL
ATMEL	AT45DB011 (SOP8)	WABPP.EXE ADP-AT45DB011-S
ATMEL	AT45DB011 (TSSOP14)	WABPP.EXE ADP-AT45DB011-TS
ATMEL	AT45DB011B (SOP8)	WABPP.EXE ADP-AT45DB011-S
ATMEL	AT45DB011B (TSSOP14)	WABPP.EXE ADP-AT45DB011-TS
ATMEL	AT45DB021 (PLCC32)	WABPP.EXE ADP-AT45DBXX-PL
ATMEL	AT45DB021 (SOP28)	WABPP.EXE ADP-AT45DBXX-S
ATMEL	AT45DB021 (TSOP28)	WABPP.EXE ADP-AT45DBXX-TS
ATMEL	AT45DB021B (SOP28)	WABPP.EXE ADP-AT45DBXX-S
ATMEL	AT45DB021B (SOP8)	WABPP.EXE ADP-AT45DB011-S
ATMEL	AT45DB021B (TSOP28)	WABPP.EXE ADP-AT45DBXX-TS
ATMEL	AT45DB041 (PLCC32)	WABPP.EXE ADP-AT45DBXX-PL
ATMEL	AT45DB041 (SOP28)	WABPP.EXE ADP-AT45DBXX-S
ATMEL	AT45DB041 (TSOP28)	WABPP.EXE ADP-AT45DBXX-TS
ATMEL	AT45DB041A (TSOP)	WABPP.EXE ADP-AT45DBXX-TS
ATMEL	AT45DB041B (CASON8)	WABPP.EXE CNV-CASON-DIP8
ATMEL	AT45DB041B (SOP28)	WABPP.EXE ADP-AT45DBXX-S
ATMEL	AT45DB041B (SOP8)	WABPP.EXE ADP-AT45DB011-S
ATMEL	AT45DB041B (TSOP28)	WABPP.EXE ADP-AT45DBXX-TS
ATMEL	AT45DB041D-256-MU	WABPP.EXE ADP-W45B012-SON
ATMEL	AT45DB041D-256-SSU	WABPP.EXE CNV-SOP-
NDIP16 (E/F/G) 1		
ATMEL	AT45DB041D-256-SU	WABPP.EXE CNV-SOP-NDIP16B
ATMEL	AT45DB041D-264-MU	WABPP.EXE ADP-W45B012-SON
ATMEL	AT45DB041D-264-SSU	WABPP.EXE CNV-SOP-
NDIP16 (E/F/G) 1		
ATMEL	AT45DB041D-264-SU	WABPP.EXE CNV-SOP-NDIP16B

ATMEL	AT45DB081 (SOP28)	WABPP.EXE	ADP-AT45DBXX-S
ATMEL	AT45DB081 (TSOP)	WABPP.EXE	ADP-AT45DB08-TS
ATMEL	AT45DB081A (SOP)	WABPP.EXE	ADP-AT45DBXX-S
ATMEL	AT45DB081A (TSOP)	WABPP.EXE	ADP-AT45DBXX-TS
ATMEL	AT45DB081B (CASON8)	WABPP.EXE	CNV-CASON-DIP8
ATMEL	AT45DB081B (SOP28)	WABPP.EXE	ADP-AT45DBXX-S
ATMEL	AT45DB081B (TSOP28)	WABPP.EXE	ADP-AT45DBXX-TS
ATMEL	AT45DB161 (PLCC32)	WABPP.EXE	ADP-AT45DBXX-PL
ATMEL	AT45DB161 (SOP)	WABPP.EXE	ADP-AT45DBXX-S
ATMEL	AT45DB161 (TSOP28)	WABPP.EXE	ADP-AT45DBXX-TS
ATMEL	AT45DB161B (CASON8)	WABPP.EXE	CNV-CASON-DIP8
ATMEL	AT45DB161B (SOP28)	WABPP.EXE	ADP-AT45DBXX-S
ATMEL	AT45DB161B (TSOP28)	WABPP.EXE	ADP-AT45DBXX-TS
ATMEL	AT45DB161D (CASON8) -512	WABPP.EXE	ADP-W45B012-SON
ATMEL	AT45DB161D (CASON8) -528	WABPP.EXE	ADP-W45B012-SON
ATMEL	AT45DB161D (SOP8) -512	WABPP.EXE	CNV-SOP-NDIP16B
ATMEL	AT45DB161D (SOP8) -528	WABPP.EXE	CNV-SOP-NDIP16B
ATMEL	AT45DB161D (TSOP28) -512	WABPP.EXE	ADP-AT45DBXX-TS
ATMEL	AT45DB161D (TSOP28) -528	WABPP.EXE	ADP-AT45DBXX-TS
ATMEL	AT45DB321B (SOP28)	WABPP.EXE	ADP-AT45DBXX-S
ATMEL	AT45DB321B (TSOP32)	WABPP.EXE	ADP-AT45DB08-TS
ATMEL	AT45DB321C (CASON8)	WABPP.EXE	CNV-CASON-DIP8
ATMEL	AT45DB321C (TSOP28)	WABPP.EXE	ADP-AT45DBXX-TS
ATMEL	AT45DB321D-512-MU	WABPP.EXE	ADP-W45B012-SON
ATMEL	AT45DB321D-512-MWU	WABPP.EXE	CNV-CASON-DIP8
ATMEL	AT45DB321D-512-TU	WABPP.EXE	ADP-AT45DBXX-TS
ATMEL	AT45DB321D-528-MU	WABPP.EXE	ADP-W45B012-SON
ATMEL	AT45DB321D-528-MWU	WABPP.EXE	CNV-CASON-DIP8
ATMEL	AT45DB321D-528-TU	WABPP.EXE	ADP-AT45DBXX-TS
ATMEL	AT45DB642 (TSOP40)	WABPP.EXE	ADP-AT45DB64-TS
ATMEL	AT45DB642D (CASON8) -1024	WABPP.EXE	CNV-CASON-DIP8
ATMEL	AT45DB642D (CASON8) -1056	WABPP.EXE	CNV-CASON-DIP8
ATMEL	AT45DB642D (TSOP28) -1024	WABPP.EXE	ADP-AT45DBXX-TS
ATMEL	AT45DB642D (TSOP28) -1056	WABPP.EXE	ADP-AT45DBXX-TS
ATMEL	AT45DCB001	WABPP.EXE	CNV-SD11-DIP10
ATMEL	AT45DCB002	WABPP.EXE	CNV-SD11-DIP10
ATMEL	AT59C11 (128x8)	WSPROM.EXE	
ATMEL	AT59C11 (64x16)	WSPROM.EXE	
ATMEL	AT93C46 (128*8)	WSPROM.EXE	
ATMEL	AT93C46 (64*16)	WSPROM.EXE	
ATMEL	AT93C46A	WSPROM.EXE	
ATMEL	AT93C46B	WSPROM.EXE	
ATMEL	AT93C56 (128*16)	WSPROM.EXE	
ATMEL	AT93C56 (256*8)	WSPROM.EXE	
ATMEL	AT93C56A (128*16)	WSPROM.EXE	
ATMEL	AT93C56A (256*8)	WSPROM.EXE	
ATMEL	AT93C57 (128*16)	WSPROM.EXE	
ATMEL	AT93C57 (256*8)	WSPROM.EXE	
ATMEL	AT93C66 (256*16)	WSPROM.EXE	
ATMEL	AT93C66 (512*8)	WSPROM.EXE	
ATMEL	AT93C66A (256*16)	WSPROM.EXE	
ATMEL	AT93C66A (512*8)	WSPROM.EXE	
ATMEL	AT93C86 (1024*16)	WSPROM.EXE	
ATMEL	AT93C86 (2048*8)	WSPROM.EXE	
ATMEL	AT27HC641	WBPPGM.EXE	
ATMEL	AT27HC641R	WBPPGM.EXE	
ATMEL	AT27HC642	WBPPGM.EXE	
ATMEL	AT27HC642R	WBPPGM.EXE	
ATMEL	AT87C5103 (DIP24)	WASIG.EXE	
ATMEL	AT87C5103 (SSOP16)	WASIG.EXE	CNV-SSOP-DIP30/A
ATMEL	AT87C5103 (SSOP24)	WASIG.EXE	CNV-SSOP-DIP30/A
ATMEL	AT87C5111	WPGM51.EXE	
ATMEL	AT87C5112	WASIG.EXE	ADP-T87C5112-

PL/-LQ

ATMEL	AT87C51RB2	WPGM51.EXE
ATMEL	AT87C52X2	WPGM51.EXE
ATMEL	AT87C54X2	WPGM51.EXE
ATMEL	AT87C58X2	WPGM51.EXE
ATMEL	AT87F51	WPGM51.EXE
ATMEL	AT87F51RC	WPGM51.EXE
ATMEL	AT87F52	WPGM51.EXE
ATMEL	AT87F55WD	WPGM51.EXE
ATMEL	AT89C1051	WPGM51.EXE
ATMEL	AT89C1051U	WPGM51.EXE
ATMEL	AT89C2051	WPGM51.EXE
ATMEL	AT89C2051X2	WPGM51.EXE
ATMEL	AT89C4051	WPGM51.EXE
ATMEL	AT89C51	WPGM51.EXE
ATMEL	AT89C5114	WASIG.EXE ADP-89C5114
ATMEL	AT89C5115 (PLCC28)	WASIG.EXE ADP-89C51CC02-PL
ATMEL	AT89C5115 (QFP32)	WASIG.EXE ADP-89C51CC02-Q
ATMEL	AT89C5115 (SOP28)	WASIG.EXE ADP-89C51CC02-
S/-SV2		
ATMEL	AT89C5130A (PLCC52)	WASIG.EXE ADP-AT89C5131-
PLV2		
ATMEL	AT89C5130A (QFP64)	WASIG.EXE ADP-AT89C5131-
QV2		
ATMEL	AT89C5131 (PLCC52)	WASIG.EXE ADP-AT89C5131-
PL/-PLV2		
ATMEL	AT89C5131 (QFP64)	WASIG.EXE ADP-AT89C5131-
Q/-QV2		
ATMEL	AT89C5131 (SOP28)	WASIG.EXE CNV-SOP-
DIP28/CNV-SOP-DIP28A		
ATMEL	AT89C5131A (PLCC52)	WASIG.EXE ADP-AT89C5131-
PLV2		
ATMEL	AT89C5131A (QFP64)	WASIG.EXE ADP-AT89C5131-
QV2		
ATMEL	AT89C5132	WASIG.EXE ADP-T89C51SND1-Q
ATMEL	AT89C51AC2 (PLCC44)	WASIG.EXE ADP-89C51CC01-PL
ATMEL	AT89C51AC2 (QFP44)	WASIG.EXE ADP-89C51CC01-TQ
ATMEL	AT89C51AC3 (PLCC44)	WASIG.EXE ADP-89C51CC01-PL
ATMEL	AT89C51AC3 (PLCC52)	WASIG.EXE ADP-89C51CC03-
PL52		
ATMEL	AT89C51AC3 (QFP44)	WASIG.EXE ADP-89C51CC01-TQ
ATMEL	AT89C51AC3 (QFP64)	WASIG.EXE ADP-89C51CC03-
Q64		
ATMEL	AT89C51CC01 (PLCC44)	WASIG.EXE ADP-89C51CC01-PL
ATMEL	AT89C51CC01 (QFP44)	WASIG.EXE ADP-89C51CC01-TQ
ATMEL	AT89C51CC02 (PLCC28)	WASIG.EXE ADP-89C51CC02-PL
ATMEL	AT89C51CC02 (QFP32)	WASIG.EXE ADP-89C51CC02-Q
ATMEL	AT89C51CC02 (SOP28)	WASIG.EXE ADP-89C51CC02-
S/-SV2		
ATMEL	AT89C51CC03 (PLCC44)	WASIG.EXE ADP-89C51CC01-PL
ATMEL	AT89C51CC03 (PLCC52)	WASIG.EXE ADP-89C51CC03-
PL52		
ATMEL	AT89C51CC03 (QFP44)	WASIG.EXE ADP-89C51CC01-TQ
ATMEL	AT89C51CC03 (QFP64)	WASIG.EXE ADP-89C51CC03-
Q64		
ATMEL	AT89C51ED2	WPGM51.EXE
ATMEL	AT89C51IC2	WPGM51.EXE
ATMEL	AT89C51ID2	WPGM51.EXE
ATMEL	AT89C51RB2	WPGM51.EXE
ATMEL	AT89C51RC	WPGM51.EXE
ATMEL	AT89C51RC2	WPGM51.EXE
ATMEL	AT89C51RD2	WPGM51.EXE
ATMEL	AT89C51SND1	WASIG.EXE ADP-T89C51SND1-
Q/-PL/-BG		
ATMEL	AT89C51SND2	WASIG.EXE ADP-T89C51SND2-

BG

ATMEL	AT89C52	WPGM51.EXE
ATMEL	AT89C55	WPGM51.EXE
ATMEL	AT89C55WD	WPGM51.EXE
ATMEL	AT89LP2052	WPGM51.EXE
ATMEL	AT89LP4052	WPGM51.EXE
ATMEL	AT89LS51	WPGM51.EXE
ATMEL	AT89LS52	WPGM51.EXE
ATMEL	AT89LS53	WPGM51.EXE
ATMEL	AT89LS8252	WPGM51.EXE
ATMEL	AT89LV51	WPGM51.EXE
ATMEL	AT89LV52	WPGM51.EXE
ATMEL	AT89LV55	WPGM51.EXE
ATMEL	AT89S2051	WPGM51.EXE
ATMEL	AT89S4051	WPGM51.EXE
ATMEL	AT89S4D12	WASIG.EXE ADP-AT89S4D12-S
ATMEL	AT89S51	WPGM51.EXE
ATMEL	AT89S52	WPGM51.EXE
ATMEL	AT89S53	WPGM51.EXE
ATMEL	AT89S54	WPGM51.EXE
ATMEL	AT89S58	WPGM51.EXE
ATMEL	AT89S64	WPGM51.EXE
ATMEL	AT89S8252	WPGM51.EXE
ATMEL	AT89S8253	WPGM51.EXE
ATMEL	AT90CAN128 (MLF64)	WASIG.EXE ADP-ATMEGA128-
MLF64		
ATMEL	AT90CAN128 (QFP64)	WASIG.EXE ADP-ATMEGA603-Q
ATMEL	AT90CAN32 (QFP64)	WASIG.EXE ADP-ATMEGA603-Q
ATMEL	AT90CAN64 (QFP64)	WASIG.EXE ADP-ATMEGA603-Q
ATMEL	AT90LS2323	WAVR.EXE
ATMEL	AT90LS2333	WAVR.EXE
ATMEL	AT90LS2343	WAVR.EXE
ATMEL	AT90LS4433	WAVR.EXE
ATMEL	AT90LS4434	WAVR.EXE
ATMEL	AT90LS8535	WAVR.EXE
ATMEL	AT90PWM2	WAVR.EXE ADP-AT90PWM2-S24
ATMEL	AT90S1200	WAVR.EXE
ATMEL	AT90S1200A	WAVR.EXE
ATMEL	AT90S2313	WAVR.EXE
ATMEL	AT90S2323	WAVR.EXE
ATMEL	AT90S2333	WAVR.EXE
ATMEL	AT90S2343	WAVR.EXE
ATMEL	AT90S4414	WAVR.EXE
ATMEL	AT90S4433	WAVR.EXE
ATMEL	AT90S4434	WAVR.EXE
ATMEL	AT90S8515	WAVR.EXE
ATMEL	AT90S8535	WAVR.EXE
ATMEL	AT90USB1287 (MLF64)	WASIG.EXE ADP-ATMEGA128-
MLF64		
ATMEL	AT90USB1287 (QFP64)	WASIG.EXE ADP-ATMEGA603-Q
ATMEL	AT91SAM7S128	WAVR.EXE ADP-91SAM7S64-
Q64		
ATMEL	AT91SAM7S256	WAVR.EXE ADP-91SAM7S64-
Q64		
ATMEL	AT91SAM7S32	WAVR.EXE ADP-91SAM7S32-
Q48		
ATMEL	AT91SAM7S64	WAVR.EXE ADP-91SAM7S64-
Q64		
ATMEL	AT91SAM7X128	WAVR.EXE ADP-91SAM7X-Q100
ATMEL	AT91SAM7X256	WAVR.EXE ADP-91SAM7X-Q100
ATMEL	ATMEGA103	WASIG.EXE ADP-ATMEGA603-Q
ATMEL	ATMEGA103L	WASIG.EXE ADP-ATMEGA603-Q
ATMEL	ATMEGA128 (MLF64)	WASIG.EXE ADP-ATMEGA128-
MLF64		

ATMEL	ATMEGA128 (QFP64)	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA1280	WASIG.EXE	ADP-ATMEGA128-
Q100			
ATMEL	ATMEGA1281 (QFP64)	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA128L (MLF64)	WASIG.EXE	ADP-ATMEGA128-
MLF64			
ATMEL	ATMEGA128L (QFP64)	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA16	WAVR.EXE	
ATMEL	ATMEGA161	WAVR.EXE	
ATMEL	ATMEGA161L	WAVR.EXE	
ATMEL	ATMEGA162	WAVR.EXE	
ATMEL	ATMEGA162C	WAVR.EXE	
ATMEL	ATMEGA162V	WAVR.EXE	
ATMEL	ATMEGA163	WAVR.EXE	
ATMEL	ATMEGA163L	WAVR.EXE	
ATMEL	ATMEGA164	WAVR.EXE	
ATMEL	ATMEGA165	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA168	WAVR.EXE	
ATMEL	ATMEGA168V	WAVR.EXE	
ATMEL	ATMEGA169 (MLF64)	WASIG.EXE	ADP-ATMEGA128-
MLF64			
ATMEL	ATMEGA169 (QFP64)	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA169L (QFP64)	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA169P (MLF64)	WASIG.EXE	ADP-ATMEGA128-
MLF64			
ATMEL	ATMEGA169P (QFP64)	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA169PV (MLF64)	WASIG.EXE	ADP-ATMEGA128-
MLF64			
ATMEL	ATMEGA169PV (QFP64)	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA169V (MLF64)	WASIG.EXE	ADP-ATMEGA128-
MLF64			
ATMEL	ATMEGA169V (QFP64)	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA16L	WAVR.EXE	
ATMEL	ATMEGA2560	WASIG.EXE	ADP-ATMEGA128-
Q100			
ATMEL	ATMEGA2561 (MLF64)	WASIG.EXE	ADP-ATMEGA128-
MLF64			
ATMEL	ATMEGA2561 (QFP64)	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA32	WAVR.EXE	
ATMEL	ATMEGA323	WAVR.EXE	
ATMEL	ATMEGA323L	WAVR.EXE	
ATMEL	ATMEGA324	WAVR.EXE	
ATMEL	ATMEGA3250	WASIG.EXE	ADP-ATMEGA128-
Q100			
ATMEL	ATMEGA3250P	WASIG.EXE	ADP-ATMEGA128-
Q100			
ATMEL	ATMEGA325P (QFP64)	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA329 (MLF64)	WASIG.EXE	ADP-ATMEGA128-
MLF64			
ATMEL	ATMEGA3290P	WASIG.EXE	ADP-ATMEGA128-
Q100			
ATMEL	ATMEGA329P (QFP64)	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA32L	WAVR.EXE	
ATMEL	ATMEGA406	WASIG.EXE	ADP-ATMEGA406-
Q48			
ATMEL	ATMEGA48	WAVR.EXE	
ATMEL	ATMEGA48V	WAVR.EXE	
ATMEL	ATMEGA603	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA603L	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA64	WASIG.EXE	ADP-ATMEGA603-Q
ATMEL	ATMEGA640	WASIG.EXE	ADP-ATMEGA128-
Q100			
ATMEL	ATMEGA644	WAVR.EXE	
ATMEL	ATMEGA644V	WAVR.EXE	

ATMEL Q100	ATMEGA645	WASIG.EXE ADP-ATMEGA128-
ATMEL Q100	ATMEGA6450	WASIG.EXE ADP-ATMEGA128-
ATMEL MLF64	ATMEGA649 (MLF64)	WASIG.EXE ADP-ATMEGA128-
ATMEL	ATMEGA649 (QFP64)	WASIG.EXE ADP-ATMEGA603-Q
ATMEL Q100	ATMEGA6490	WASIG.EXE ADP-ATMEGA128-
ATMEL	ATMEGA64L	WASIG.EXE ADP-ATMEGA603-Q
ATMEL MLF64	ATMEGA64L (MLF64)	WASIG.EXE ADP-ATMEGA128-
ATMEL	ATMEGA8	WAVR.EXE
ATMEL	ATMEGA8515	WAVR.EXE
ATMEL	ATMEGA8515L	WAVR.EXE
ATMEL	ATMEGA8535	WAVR.EXE
ATMEL	ATMEGA8535L	WAVR.EXE
ATMEL	ATMEGA88	WAVR.EXE
ATMEL	ATMEGA88V	WAVR.EXE
ATMEL	ATMEGA8L	WAVR.EXE
ATMEL	ATtiny11	WAVR.EXE
ATMEL	ATtiny11L	WAVR.EXE
ATMEL	ATtiny12	WAVR.EXE
ATMEL	ATtiny12L	WAVR.EXE
ATMEL	ATtiny12V	WAVR.EXE
ATMEL	ATtiny13	WAVR.EXE
ATMEL	ATtiny13V	WAVR.EXE
ATMEL	ATtiny15	WAVR.EXE
ATMEL	ATtiny15L	WAVR.EXE
ATMEL	ATtiny22	WAVR.EXE
ATMEL	ATtiny22L	WAVR.EXE
ATMEL	ATtiny2313	WAVR.EXE
ATMEL	ATtiny2313V	WAVR.EXE
ATMEL	ATtiny24	WAVR.EXE
ATMEL	ATtiny25	WAVR.EXE
ATMEL	ATtiny26	WAVR.EXE
ATMEL	ATtiny26L	WAVR.EXE
ATMEL	ATtiny28	WAVR.EXE
ATMEL	ATtiny28L	WAVR.EXE
ATMEL	ATtiny28V	WAVR.EXE
ATMEL	ATtiny44V	WAVR.EXE
ATMEL	ATtiny45	WAVR.EXE
ATMEL	ATtiny45V	WAVR.EXE
ATMEL	ATtiny84	WAVR.EXE
ATMEL	ATtiny85V	WAVR.EXE
ATMEL	T87C5101	WPGM51.EXE
ATMEL	T89C5115	WASIG.EXE ADP-89C51CC02-
PL/-S/-SV2		
ATMEL	T89C51AC2	WASIG.EXE ADP-89C51CC01-
PL/-TQ		
ATMEL	T89C51CC01	WASIG.EXE ADP-89C51CC01-
PL/-TQ		
ATMEL	T89C51CC02 (PLCC28)	WASIG.EXE ADP-89C51CC02-PL
ATMEL	T89C51CC02 (QFP32)	WASIG.EXE ADP-89C51CC02-Q
ATMEL	T89C51CC02 (SOP24)	WASIG.EXE ADP-89C51CC02-
SV2		
ATMEL	T89C51CC02 (SOP28)	WASIG.EXE ADP-89C51CC02-
S/-SV2		
ATMEL	T89C51IC2	WPGM51.EXE
ATMEL	T89C51RB2	WPGM51.EXE
ATMEL	T89C51RC2	WPGM51.EXE
ATMEL	T89C51RD2	WPGM51.EXE
ATMEL	TS87C51RB2	WPGM51.EXE
ATMEL	TS87C51RC2	WPGM51.EXE

ATMEL	TS87C51RD2	WPGM51.EXE
ATMEL	TS87C52X2	WPGM51.EXE
ATMEL	TS87C54X2	WPGM51.EXE
ATMEL	TS87C58X2	WPGM51.EXE
ATMEL	AT18V8Z	WPLD1.EXE
ATMEL	AT22LV10/L	WPLD1.EXE
ATMEL	AT22V10/L	WPLD1.EXE
ATMEL	AT22V10B	WPLD1.EXE
ATMEL	AT94S05AL (BGA256)	WA94S.EXE ADP-AT94SXX-
BG256		
ATMEL	AT94S05AL (TQFP144)	WA94S.EXE ADP-AT94SXX-
TQ144		
ATMEL	AT94S10AL (BGA256)	WA94S.EXE ADP-AT94SXX-
BG256		
ATMEL	AT94S10AL (TQFP144)	WA94S.EXE ADP-AT94SXX-
TQ144		
ATMEL	AT94S40AL (BGA256)	WA94S.EXE ADP-AT94SXX-
BG256		
ATMEL	AT94S40AL (TQFP144)	WA94S.EXE ADP-AT94SXX-
TQ144		
ATMEL	ATF1500/L	WA1500.EXE ADP-ATF1500-PL/Q
ATMEL	ATF1500A/ABV/AL	WA1500.EXE ADP-ATF1500-PL/Q
ATMEL	ATF1502AE-J44	WA1500.EXE ADP-ATF1504-
PL44/V2		
ATMEL	ATF1502AE-Q44	WA1500.EXE ADP-ATF1504-
Q44/V2/V3		
ATMEL	ATF1502AEL-J44	WA1500.EXE ADP-ATF1504-
PL44/V2		
ATMEL	ATF1502AEL-Q44	WA1500.EXE ADP-ATF1504-
Q44/V2/V3		
ATMEL	ATF1502AS-J44	WA1500.EXE ADP-ATF1504-
PL44/V2		
ATMEL	ATF1502AS-Q44	WA1500.EXE ADP-ATF1504-
Q44/V2/V3		
ATMEL	ATF1502ASL-J44	WA1500.EXE ADP-ATF1504-
PL44/V2		
ATMEL	ATF1502ASL-Q44	WA1500.EXE ADP-ATF1504-
Q44/V2/V3		
ATMEL	ATF1502ASV-J44	WA1500.EXE ADP-ATF1504-
PL44/V2		
ATMEL	ATF1502ASV-Q44	WA1500.EXE ADP-ATF1504-
Q44/V2/V3		
ATMEL	ATF1502ASVL-J44	WA1500.EXE ADP-ATF1504-
PL44/V2		
ATMEL	ATF1502ASVL-Q44	WA1500.EXE ADP-ATF1504-
Q44/V2/V3		
ATMEL	ATF1502SE-J44	WA1500.EXE ADP-ATF1504-
PL44/V2		
ATMEL	ATF1502SE-Q44	WA1500.EXE ADP-ATF1504-
Q44/V2/V3		
ATMEL	ATF1502SEL-J44	WA1500.EXE ADP-ATF1504-
PL44/V2		
ATMEL	ATF1502SEL-Q44	WA1500.EXE ADP-ATF1504-
Q44/V2/V3		
ATMEL	ATF1504AS-J44	WA1500.EXE ADP-ATF1504-
PL44/V2		
ATMEL	ATF1504AS-J68	WA1500.EXE ADP-ATF1508-
PL68/ATF1504-PL68V2		
ATMEL	ATF1504AS-J84	WA1500.EXE ADP-ATF1508-
PL84/V2		
ATMEL	ATF1504AS-Q100	WA1500.EXE ADP-ATF1508-
Q100/V2		
ATMEL	ATF1504AS-Q44	WA1500.EXE ADP-ATF1504-
Q44/V2/V3		

ATMEL V100/V2/V3	ATF1504AS-T100	WA1500.EXE ADP-ATF1508-
ATMEL PL44/V2	ATF1504ASL-J44	WA1500.EXE ADP-ATF1504-
ATMEL PL68/ATF1504-PL68V2	ATF1504ASL-J68	WA1500.EXE ADP-ATF1508-
ATMEL PL84/V2	ATF1504ASL-J84	WA1500.EXE ADP-ATF1508-
ATMEL Q100/V2	ATF1504ASL-Q100	WA1500.EXE ADP-ATF1508-
ATMEL Q44/V2/V3	ATF1504ASL-Q44	WA1500.EXE ADP-ATF1504-
ATMEL V100/V2/V3	ATF1504ASL-T100	WA1500.EXE ADP-ATF1508-
ATMEL PL44/V2	ATF1504ASV-J44	WA1500.EXE ADP-ATF1504-
ATMEL PL68/ATF1504-PL68V2	ATF1504ASV-J68	WA1500.EXE ADP-ATF1508-
ATMEL PL84/V2	ATF1504ASV-J84	WA1500.EXE ADP-ATF1508-
ATMEL Q100/V2	ATF1504ASV-Q100	WA1500.EXE ADP-ATF1508-
ATMEL Q44/V2/V3	ATF1504ASV-Q44	WA1500.EXE ADP-ATF1504-
ATMEL V100/V2/V3	ATF1504ASV-T100	WA1500.EXE ADP-ATF1508-
ATMEL PL44/V2	ATF1504ASVL-J44	WA1500.EXE ADP-ATF1504-
ATMEL PL68/ATF1504-PL68V2	ATF1504ASVL-J68	WA1500.EXE ADP-ATF1508-
ATMEL PL84/V2	ATF1504ASVL-J84	WA1500.EXE ADP-ATF1508-
ATMEL Q100/V2	ATF1504ASVL-Q100	WA1500.EXE ADP-ATF1508-
ATMEL Q44/V2/V3	ATF1504ASVL-Q44	WA1500.EXE ADP-ATF1504-
ATMEL V100/V2/V3	ATF1504ASVL-T100	WA1500.EXE ADP-ATF1508-
ATMEL PL84/V2	ATF1508AS-J84	WA1500.EXE ADP-ATF1508-
ATMEL Q100/V2	ATF1508AS-Q100	WA1500.EXE ADP-ATF1508-
ATMEL Q160/V2	ATF1508AS-Q160	WA1500.EXE ADP-ATF1508-
ATMEL V100/V2/V3	ATF1508AS-T100	WA1500.EXE ADP-ATF1508-
ATMEL PL84/V2	ATF1508ASL-J84	WA1500.EXE ADP-ATF1508-
ATMEL Q100/V2	ATF1508ASL-Q100	WA1500.EXE ADP-ATF1508-
ATMEL Q160/V2	ATF1508ASL-Q160	WA1500.EXE ADP-ATF1508-
ATMEL V100/V2/V3	ATF1508ASL-T100	WA1500.EXE ADP-ATF1508-
ATMEL PL84/V2	ATF1508ASV-J84	WA1500.EXE ADP-ATF1508-
ATMEL Q100/V2	ATF1508ASV-Q100	WA1500.EXE ADP-ATF1508-
ATMEL Q160/V2	ATF1508ASV-Q160	WA1500.EXE ADP-ATF1508-
ATMEL V100/V2/V3	ATF1508ASV-T100	WA1500.EXE ADP-ATF1508-
ATMEL PL84/V2	ATF1508ASVL-J84	WA1500.EXE ADP-ATF1508-

ATMEL Q100/V2	ATF1508ASVL-Q100	WA1500.EXE ADP-ATF1508-
ATMEL Q160/V2	ATF1508ASVL-Q160	WA1500.EXE ADP-ATF1508-
ATMEL V100/V2/V3	ATF1508ASVL-T100	WA1500.EXE ADP-ATF1508-
ATMEL	ATF16LV8C	WPLD1.EXE
ATMEL	ATF16LV8CEXT	WPLD1.EXE
ATMEL	ATF16V8B (16L8)	WPLD1.EXE
ATMEL	ATF16V8B (16R4)	WPLD1.EXE
ATMEL	ATF16V8B (16R6)	WPLD1.EXE
ATMEL	ATF16V8B (16R8)	WPLD1.EXE
ATMEL	ATF16V8B/BL	WPLD1.EXE
ATMEL	ATF16V8BQ/BQL	WPLD1.EXE
ATMEL	ATF16V8C	WPLD1.EXE
ATMEL	ATF16V8CEXT	WPLD1.EXE
ATMEL	ATF16V8CZ	WPLD1.EXE
ATMEL	ATF20V8B (20L8)	WPLD1.EXE
ATMEL	ATF20V8B (20R4)	WPLD1.EXE
ATMEL	ATF20V8B (20R6)	WPLD1.EXE
ATMEL	ATF20V8B (20R8)	WPLD1.EXE
ATMEL	ATF20V8B (20RP4)	WPLD1.EXE
ATMEL	ATF20V8B (20RP6)	WPLD1.EXE
ATMEL	ATF20V8B (20RP8)	WPLD1.EXE
ATMEL	ATF20V8B/BL	WPLD1.EXE
ATMEL	ATF20V8BQ/BQL	WPLD1.EXE
ATMEL	ATF20V8C	WPLD1.EXE
ATMEL	ATF20V8CEXT	WPLD1.EXE
ATMEL	ATF20V8CQ	WPLD1.EXE
ATMEL	ATF20V8CZ	WPLD1.EXE
ATMEL	ATF22LV10C	WPLD1.EXE
ATMEL	ATF22LV10C (UES)	WPLD1.EXE
ATMEL	ATF22LV10CEXT	WPLD1.EXE
ATMEL	ATF22LV10CQ	WPLD1.EXE
ATMEL	ATF22LV10CQ (UES)	WPLD1.EXE
ATMEL	ATF22LV10CQZ	WPLD1.EXE
ATMEL	ATF22LV10CQZ (UES)	WPLD1.EXE
ATMEL	ATF22LV10CZ	WPLD1.EXE
ATMEL	ATF22LV10CZ (UES)	WPLD1.EXE
ATMEL	ATF22V10B (UES)	WPLD1.EXE
ATMEL	ATF22V10B/BL	WPLD1.EXE
ATMEL	ATF22V10BQ/BQL	WPLD1.EXE
ATMEL	ATF22V10C (UES)	WPLD1.EXE
ATMEL	ATF22V10C/CQ	WPLD1.EXE
ATMEL	ATF22V10CEXT	WPLD1.EXE
ATMEL	ATF22V10CQZ	WPLD1.EXE
ATMEL	ATF22V10CQZ (UES)	WPLD1.EXE
ATMEL	ATF22V10CZ	WPLD1.EXE
ATMEL	ATF22V10CZ (UES)	WPLD1.EXE
ATMEL	ATF2500C/CQ/CL/CQL	WPLD1.EXE
ATMEL	ATF2500C/CQ/CL/CQL (V2500)	WPLD1.EXE
ATMEL	ATF2500C/CQ/CL/CQL (V2500B)	WPLD1.EXE
ATMEL	ATF750C	WPLD1.EXE
ATMEL	ATF750C (V750)	WPLD1.EXE
ATMEL	ATF750C (V750B)	WPLD1.EXE
ATMEL	ATF750CL	WPLD1.EXE
ATMEL	ATF750CL (V750)	WPLD1.EXE
ATMEL	ATF750CL (V750B)	WPLD1.EXE
ATMEL	ATF750LVC	WPLD1.EXE
ATMEL	ATF750LVC (V750)	WPLD1.EXE
ATMEL	ATF750LVC (V750B)	WPLD1.EXE
ATMEL	ATF750LVCEXT	WPLD1.EXE
ATMEL	ATF750LVCL	WPLD1.EXE
ATMEL	ATF750LVCL (V750)	WPLD1.EXE

ATMEL	ATF750LVCL (V750B)	WPLD1.EXE
ATMEL	ATV2500B/BL/BQ/BQL	WPLD1.EXE
ATMEL	ATV2500H/L/LV/LVL	WPLD1.EXE
ATMEL	ATV750/L	WPLD1.EXE
ATMEL	ATV750B/BL	WPLD1.EXE
ATMEL	ATV750BQ/BQL	WPLD1.EXE
BIFORST	BI-5001	WABI.EXE ADP-BI5001-Q64
BMI	BM29F020	WMEM1.EXE
BMI	BM29F040	WMEM1.EXE
BMI	BM29F400B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
BMI	BM29F400B*	WA28F.EXE ADP-49F800-
TS/TSV2		
BMI	BM29F400T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
BMI	BM29F400T*	WA28F.EXE ADP-49F800-
TS/TSV2		
BMI	BM29FS020	WMEM1.EXE
BMI	BM29FS040	WMEM1.EXE
BMI	BM29LV010	WMEM1.EXE
BMI	BM29LV040	WMEM1.EXE
BOWMAR-WHITE	8023	WMEM1.EXE
CATALYST	CAT27128A[12.5V]	WMEM1.EXE
CATALYST	CAT27256[12.75V]	WMEM1.EXE
CATALYST	CAT27512[12.75V]	WMEM1.EXE
CATALYST	CAT2764A[12.5V]	WMEM1.EXE
CATALYST	CAT27C010	WMEM1.EXE
CATALYST	CAT27C210	WMEM1.EXE
CATALYST	CAT27HC256L[12.75V]	WMEM1.EXE
CATALYST	CAT28C16A/AI	WMEM1.EXE
CATALYST	CAT28C16V3	WMEM1.EXE
CATALYST	CAT28C17A/AI	WMEM1.EXE
CATALYST	CAT28C256/I	WMEM1.EXE
CATALYST	CAT28C64A/AI	WMEM1.EXE
CATALYST	CAT28C64B/BI	WMEM1.EXE
CATALYST	CAT28C65A/AI	WMEM1.EXE
CATALYST	CAT28C65B/BI	WMEM1.EXE
CATALYST	CAT28F001B	WMEM1.EXE
CATALYST	CAT28F001T	WMEM1.EXE
CATALYST	CAT28F002B	WA28F.EXE ADP-28F008-TS-V2
CATALYST	CAT28F002P-T	WA28F.EXE ADP-28F002BC
CATALYST	CAT28F002T	WA28F.EXE ADP-28F008-TS-V2
CATALYST	CAT28F010	WMEM1.EXE
CATALYST	CAT28F010I	WMEM1.EXE
CATALYST	CAT28F010V5	WMEM1.EXE
CATALYST	CAT28F010V5I	WMEM1.EXE
CATALYST	CAT28F020	WMEM1.EXE
CATALYST	CAT28F020I	WMEM1.EXE
CATALYST	CAT28F102	WMEM1.EXE
CATALYST	CAT28F512	WMEM1.EXE
CATALYST	CAT28F512I	WMEM1.EXE
CATALYST	CAT28F512V5	WMEM1.EXE
CATALYST	CAT28F512V5I	WMEM1.EXE
CATALYST	CAT28LV256	WMEM1.EXE
CATALYST	CAT28LV64	WMEM1.EXE
CATALYST	CAT24AC128	WSPROM.EXE
CATALYST	CAT24C01B	WSPROM.EXE
CATALYST	CAT24C02/I/AI	WSPROM.EXE
CATALYST	CAT24C021/022	WSPROM.EXE
CATALYST	CAT24C023	WSPROM.EXE
CATALYST	CAT24C04/I	WSPROM.EXE
CATALYST	CAT24C041/042	WSPROM.EXE
CATALYST	CAT24C043	WSPROM.EXE
CATALYST	CAT24C08/I	WSPROM.EXE

CATALYST	CAT24C081/082	WSPROM.EXE
CATALYST	CAT24C083	WSPROM.EXE
CATALYST	CAT24C128	WSPROM.EXE
CATALYST	CAT24C16/I	WSPROM.EXE
CATALYST	CAT24C161/162	WSPROM.EXE
CATALYST	CAT24C163	WSPROM.EXE
CATALYST	CAT24C256	WSPROM.EXE
CATALYST	CAT24C44	WSPROM.EXE
CATALYST	CAT24C64	WSPROM.EXE
CATALYST	CAT24FC02	WSPROM.EXE
CATALYST	CAT24FC256	WSPROM.EXE
CATALYST	CAT24WC01	WSPROM.EXE
CATALYST	CAT24WC02	WSPROM.EXE
CATALYST	CAT24WC03	WSPROM.EXE
CATALYST	CAT24WC04	WSPROM.EXE
CATALYST	CAT24WC08	WSPROM.EXE
CATALYST	CAT24WC128	WSPROM.EXE
CATALYST	CAT24WC16	WSPROM.EXE
CATALYST	CAT24WC256	WSPROM.EXE
CATALYST	CAT24WC32	WSPROM.EXE
CATALYST	CAT24WC64	WSPROM.EXE
CATALYST	CAT25C01	WSPROM.EXE
CATALYST	CAT25C02	WSPROM.EXE
CATALYST	CAT25C04	WSPROM.EXE
CATALYST	CAT25C08	WSPROM.EXE
CATALYST	CAT25C128	WSPROM.EXE
CATALYST	CAT25C16	WSPROM.EXE
CATALYST	CAT25C256	WSPROM.EXE
CATALYST	CAT25C32	WSPROM.EXE
CATALYST	CAT25C64	WSPROM.EXE
CATALYST	CAT34C02	WSPROM.EXE
CATALYST	CAT34WC02	WSPROM.EXE
CATALYST	CAT35C102 (128*16)	WSPROM.EXE
CATALYST	CAT35C102 (256*8)	WSPROM.EXE
CATALYST	CAT35C104 (256*16)	WSPROM.EXE
CATALYST	CAT35C104 (512*8)	WSPROM.EXE
CATALYST	CAT35C108 (1024*8)	WSPROM.EXE
CATALYST	CAT35C108 (512*16)	WSPROM.EXE
CATALYST	CAT35C116 (1024*16)	WSPROM.EXE
CATALYST	CAT35C116 (2048*8)	WSPROM.EXE
CATALYST	CAT59C11/I (128x8)	WSPROM.EXE
CATALYST	CAT59C11/I (64x16)	WSPROM.EXE
CATALYST	CAT64LC20	WSPROM.EXE
CATALYST	CAT64LC40	WSPROM.EXE
CATALYST	CAT93C46 (128*8)	WSPROM.EXE
CATALYST	CAT93C46 (64*16)	WSPROM.EXE
CATALYST	CAT93C46A	WSPROM.EXE
CATALYST	CAT93C46AH	WSPROM.EXE
CATALYST	CAT93C46AI	WSPROM.EXE
CATALYST	CAT93C46B (128*8)	WSPROM.EXE
CATALYST	CAT93C46B (64*16)	WSPROM.EXE
CATALYST	CAT93C46BI (128*8)	WSPROM.EXE
CATALYST	CAT93C46BI (64*16)	WSPROM.EXE
CATALYST	CAT93C46H (128*8)	WSPROM.EXE
CATALYST	CAT93C46H (64*16)	WSPROM.EXE
CATALYST	CAT93C46I (128*8)	WSPROM.EXE
CATALYST	CAT93C46I (64*16)	WSPROM.EXE
CATALYST	CAT93C56 (128*16)	WSPROM.EXE
CATALYST	CAT93C56 (256*8)	WSPROM.EXE
CATALYST	CAT93C56I (128*16)	WSPROM.EXE
CATALYST	CAT93C56I (256*8)	WSPROM.EXE
CATALYST	CAT93C57 (128*16)	WSPROM.EXE
CATALYST	CAT93C57 (256*8)	WSPROM.EXE
CATALYST	CAT93C66 (256*16)	WSPROM.EXE

CATALYST	CAT93C66 (512*8)	WSPROM.EXE
CATALYST	CAT93C86 (1024*16)	WSPROM.EXE
CATALYST	CAT93C86 (2048*8)	WSPROM.EXE
CATALYST	CAT93LC56 (128*16)	WSPROM.EXE
CATALYST	CAT93LC56 (256*8)	WSPROM.EXE
CATALYST	CAT93LC56I (128*16)	WSPROM.EXE
CATALYST	CAT93LC56I (256*8)	WSPROM.EXE
CENTURY	5001	WAMPU3.EXE ADP-5001
CERAMATE	24LLC02	WSPROM.EXE
CYPRESS	CY27C010	WMEM1.EXE
CYPRESS	CY27C128 [12.5V]	WMEM1.EXE
CYPRESS	CY27C256A [12.75V]	WMEM1.EXE
CYPRESS	CY27C256 [12.5V]	WMEM1.EXE
CYPRESS	CY27C512 [12.75V]	WMEM1.EXE
CYPRESS	CY27C64 [12.5V]	WMEM1.EXE
CYPRESS	CY27H010	WMEM1.EXE
CYPRESS	CY27H256 [12.75V]	WMEM1.EXE
CYPRESS	CY27H512 [12.75V]	WMEM1.EXE
CYPRESS	CY27L010	WMEM1.EXE
CYPRESS	CY7C243 [12.5V]	WMEM1.EXE
CYPRESS	CY7C244 [12.5V]	WMEM1.EXE
CYPRESS	CY7C251 [12.5V]	WMEM1.EXE
CYPRESS	CY7C253 [12.5V]	WMEM1.EXE
CYPRESS	CY7C254 [12.5V]	WMEM1.EXE
CYPRESS	CY7C261 [12.5V]	WMEM1.EXE
CYPRESS	CY7C263 [12.5V]	WMEM1.EXE
CYPRESS	CY7C264 [12.5V]	WMEM1.EXE
CYPRESS	CY7C266 [12.5V]	WMEM1.EXE
CYPRESS	CY7C271A [12.75V]	WMEM1.EXE
CYPRESS	CY7C271 [12.5V]	WMEM1.EXE
CYPRESS	CY7C274 [12.5V]	WMEM1.EXE
CYPRESS	CY7C277 [12.5V]	WMEM1.EXE
CYPRESS	CY7C279 [12.5V]	WMEM1.EXE
CYPRESS	CY3LV010	WSPROM.EXE
CYPRESS	CY7C225A	WBPPGM.EXE
CYPRESS	CY7C235A	WBPPGM.EXE
CYPRESS	CY7C245	WBPPGM.EXE
CYPRESS	CY7C245A	WBPPGM.EXE
CYPRESS	CY7C265	WBPPGM.EXE
CYPRESS	CY7C269	WBPPGM.EXE
CYPRESS	CY7C276	WABPP.EXE ADP-7C276
CYPRESS	CY7C291	WBPPGM.EXE
CYPRESS	CY7C291A	WBPPGM.EXE
CYPRESS	CY7C292	WBPPGM.EXE
CYPRESS	CY7C292A	WBPPGM.EXE
CYPRESS	CY7C293A	WBPPGM.EXE
CYPRESS	CY2071AF	WACY229X.EXE ADP-CY2907-S
CYPRESS	CY2077FS	WACY229X.EXE ADP-CY2077-S
CYPRESS	CY2077FZ	WACY229X.EXE ADP-CY2077-TS
CYPRESS	CY22050F	WACY229X.EXE ADP-CY22XXX-
TS/TSV2 (2-3)		
CYPRESS	CY22150F	WACY229X.EXE ADP-CY22XXX-
TS/TSV2 (2-3)		
CYPRESS	CY22381F	WACY229X.EXE ADP-CY25XXX-
TS/SV2 (1-2)		
CYPRESS	CY22392F	WACY229X.EXE ADP-CY22XXX-
TS/TSV2 (1-2)		
CYPRESS	CY22393F	WACY229X.EXE ADP-CY22XXX-
TS/TSV2 (1-2)		
CYPRESS	CY22394F	WACY229X.EXE ADP-CY22XXX-
TS/TSV2 (1-2)		
CYPRESS	CY22395F	WACY229X.EXE ADP-CY22XXX-
TS/TSV2 (1-2)		
CYPRESS	CY2291F	WACY229X.EXE ADP-CY2291F-S

CYPRESS	CY2292F	WACY229X.EXE	ADP-CY2292F-S
CYPRESS	CY2292FZ	WACY229X.EXE	ADP-CY2292F-SS
CYPRESS	CY25100FS	WACY229X.EXE	ADP-CY25XXX-
TS/SV2 (2-3)			
CYPRESS	CY2907F14	WACY229X.EXE	ADP-CY2907-S
CYPRESS	CY2907F8	WACY229X.EXE	ADP-CY2907-S
CYPRESS	CY7C53120E2 (SOP)	WACY7C.EXE	ADP-CY7C53120-
SO32			
CYPRESS	CY7C53120E2 (TQFP)	WACY7C.EXE	ADP-7C53120-TQ44
CYPRESS	CY7C53120E4 (SOP)	WACY7C.EXE	ADP-CY7C53120-
SO32			
CYPRESS	CY7C53120E4 (TQFP)	WACY7C.EXE	ADP-7C53120-TQ44
CYPRESS	CY7C53120L8 (SOP)	WACY7C.EXE	ADP-CY7C53120-
SO32			
CYPRESS	CY7C53120L8 (TQFP)	WACY7C.EXE	ADP-7C53120-TQ44
CYPRESS	CY7C60123-PVXC	WACY8C2X.EXE	ADP-CY7C63923-
SS48			
CYPRESS	CY7C60223-QXC	WACY8C2X.EXE	ADP-CY7C63823-
QS24			
CYPRESS	CY7C60223-SXC	WACY8C2X.EXE	ADP-CY7C638XX-
S24			
CYPRESS	CY7C60323-PVXC	WACY8C2X.EXE	ADP-CY8C2XXXX-
SS28			
CYPRESS	CY7C60333-LFXC	WACY8C2X.EXE	ADP-CY8C2XXXX-
MLF32			
CYPRESS	CY7C63000/A (DIP20)	WAMPU6.EXE	ADP-CY63410
CYPRESS	CY7C63000/A (SOP20)	WAMPU6.EXE	ADP-CY63100-S
CYPRESS	CY7C63001/A (DIP20)	WAMPU6.EXE	ADP-CY63410
CYPRESS	CY7C63001/A (SOP20)	WAMPU6.EXE	ADP-CY63100-S
CYPRESS	CY7C63001C (DIP20)	WAMPU6.EXE	ADP-CY63410
CYPRESS	CY7C63100/A (DIP24)	WAMPU6.EXE	ADP-CY63410
CYPRESS	CY7C63100/A (QSOP24)	WAMPU6.EXE	ADP-CY63100-QS
CYPRESS	CY7C63100/A (SOP24)	WAMPU6.EXE	ADP-CY63100-S
CYPRESS	CY7C63101/A (DIP24)	WAMPU6.EXE	ADP-CY63410
CYPRESS	CY7C63101/A (QSOP24)	WAMPU6.EXE	ADP-CY63100-QS
CYPRESS	CY7C63101/A (SOP24)	WAMPU6.EXE	ADP-CY63100-S
CYPRESS	CY7C63200	WAMPU6.EXE	ADP-CY63410
CYPRESS	CY7C63201	WAMPU6.EXE	ADP-CY63410
CYPRESS	CY7C63221	WAMPU6.EXE	
CYPRESS	CY7C63231	WAMPU6.EXE	
CYPRESS	CY7C63231A (DIP18)	WAMPU6.EXE	
CYPRESS	CY7C63231A (SOP18)	WAMPU6.EXE	
CYPRESS	CY7C63310-PXC	WACY8C2X.EXE	ADP-CY7C638XX
CYPRESS	CY7C63310-SXC	WACY8C2X.EXE	ADP-CY7C63XXX-
S16			
CYPRESS	CY7C63410 (DIP40)	WAMPU6.EXE	ADP-CY63410
CYPRESS	CY7C63410 (DIP48)	WAMPU6.EXE	ADP-CY63410-D48
CYPRESS	CY7C63410 (SSOP48)	WAMPU6.EXE	ADP-CY63410-S48
CYPRESS	CY7C63411 (DIP40)	WAMPU6.EXE	ADP-CY63410
CYPRESS	CY7C63411 (DIP48)	WAMPU6.EXE	ADP-CY63410-D48
CYPRESS	CY7C63411 (SSOP48)	WAMPU6.EXE	ADP-CY63410-S48
CYPRESS	CY7C63412 (DIP40)	WAMPU6.EXE	ADP-CY63410
CYPRESS	CY7C63412 (DIP48)	WAMPU6.EXE	ADP-CY63410-D48
CYPRESS	CY7C63412 (SSOP48)	WAMPU6.EXE	ADP-CY63410-S48
CYPRESS	CY7C63413 (DIP40)	WAMPU6.EXE	ADP-CY63410
CYPRESS	CY7C63413 (DIP48)	WAMPU6.EXE	ADP-CY63410-D48
CYPRESS	CY7C63413 (SSOP48)	WAMPU6.EXE	ADP-CY63410-S48
CYPRESS	CY7C63510 (DIP48)	WAMPU6.EXE	ADP-CY63410-D48
CYPRESS	CY7C63510 (SSOP48)	WAMPU6.EXE	ADP-CY63410-S48
CYPRESS	CY7C63511 (DIP48)	WAMPU6.EXE	ADP-CY63410-D48
CYPRESS	CY7C63511 (SSOP48)	WAMPU6.EXE	ADP-CY63410-S48
CYPRESS	CY7C63512 (DIP48)	WAMPU6.EXE	ADP-CY63410-D48
CYPRESS	CY7C63512 (SSOP48)	WAMPU6.EXE	ADP-CY63410-S48
CYPRESS	CY7C63513 (DIP48)	WAMPU6.EXE	ADP-CY63410-D48

CYPRESS	CY7C63513 (SSOP48)	WAMPU6.EXE	ADP-CY63410-S48
CYPRESS	CY7C63612	WAMPU6.EXE	ADP-CY6361X-S24
CYPRESS	CY7C63613	WAMPU6.EXE	ADP-CY6361X-S24
CYPRESS	CY7C63722	WAMPU6.EXE	
CYPRESS	CY7C63723	WAMPU6.EXE	
CYPRESS	CY7C63742	WAMPU6.EXE	
CYPRESS	CY7C63743	WAMPU6.EXE	
CYPRESS	CY7C63801-PXC	WACY8C2X.EXE	ADP-CY7C638XX
CYPRESS	CY7C63801-SXC	WACY8C2X.EXE	ADP-CY7C63XXX-
S16			
CYPRESS	CY7C63803-SXC	WACY8C2X.EXE	ADP-CY7C63XXX-
S16			
CYPRESS	CY7C63813-PXC	WACY8C2X.EXE	ADP-CY7C638XX
CYPRESS	CY7C63813-SXC	WACY8C2X.EXE	ADP-CY7C638XX-
S24			
CYPRESS	CY7C63823-PXC	WACY8C2X.EXE	ADP-CY7C638XX
CYPRESS	CY7C63823-QXC	WACY8C2X.EXE	ADP-CY7C63823-
QS24			
CYPRESS	CY7C63823-SXC	WACY8C2X.EXE	ADP-CY7C638XX-
S24			
CYPRESS	CY7C63833-LFXC	WACY8C2X.EXE	ADP-CY7C63XXX-
MLF32			
CYPRESS	CY7C63903-PVXC	WACY8C2X.EXE	ADP-CY7C63903-
SS28			
CYPRESS	CY7C63913-PXC	WACY8C2X.EXE	ADP-CY7C638XX
CYPRESS	CY7C63923-PVXC	WACY8C2X.EXE	ADP-CY7C63923-
SS48			
CYPRESS	CY7C64011 (DIP28)	WAMPU6.EXE	ADP-CY7C66XX-D48
CYPRESS	CY7C64011 (SOP28)	WAMPU6.EXE	ADP-CY7C6XXX-S28
CYPRESS	CY7C64012 (DIP28)	WAMPU6.EXE	ADP-CY7C66XX-D48
CYPRESS	CY7C64012 (SOP28)	WAMPU6.EXE	ADP-CY7C6XXX-S28
CYPRESS	CY7C64013 (DIP28)	WAMPU6.EXE	ADP-CY7C66XX-D48
CYPRESS	CY7C64013 (SOP28)	WAMPU6.EXE	ADP-CY7C6XXX-S28
CYPRESS	CY7C64111 (DIP48)	WAMPU6.EXE	ADP-CY7C66XX-D48
CYPRESS	CY7C64111 (SSOP48)	WAMPU6.EXE	ADP-CY7C66XX-SS
CYPRESS	CY7C64112 (DIP48)	WAMPU6.EXE	ADP-CY7C66XX-D48
CYPRESS	CY7C64112 (SSOP48)	WAMPU6.EXE	ADP-CY7C66XX-SS
CYPRESS	CY7C64113 (DIP48)	WAMPU6.EXE	ADP-CY7C66XX-D48
CYPRESS	CY7C64113 (SSOP48)	WAMPU6.EXE	ADP-CY7C66XX-SS
CYPRESS	CY7C64215-28PVXC	WACY8C2X.EXE	ADP-CY7C64215-
SS28			
CYPRESS	CY7C64215-56LFXC	WACY8C2X.EXE	ADP-CY8C24794-
MLF56			
CYPRESS	CY7C65013 (DIP48)	WAMPU6.EXE	ADP-CY7C66XX-D48
CYPRESS	CY7C65013 (SSOP48)	WAMPU6.EXE	ADP-CY7C66XX-SS
CYPRESS	CY7C65113 (DIP28)	WAMPU6.EXE	ADP-CY7C66XX-D48
CYPRESS	CY7C65113 (SOP28)	WAMPU6.EXE	ADP-CY7C6XXX-S28
CYPRESS	CY7C66011 (DIP48)	WAMPU6.EXE	ADP-CY7C66XX-D48
CYPRESS	CY7C66011 (SSOP48)	WAMPU6.EXE	ADP-CY7C66XX-SS
CYPRESS	CY7C66012 (DIP48)	WAMPU6.EXE	ADP-CY7C66XX-D48
CYPRESS	CY7C66012 (SSOP48)	WAMPU6.EXE	ADP-CY7C66XX-SS
CYPRESS	CY7C66013 (DIP48)	WAMPU6.EXE	ADP-CY7C66XX-D48
CYPRESS	CY7C66013 (SSOP48)	WAMPU6.EXE	ADP-CY7C66XX-SS
CYPRESS	CY7C66111	WAMPU6.EXE	ADP-CY7C66XX-SS
CYPRESS	CY7C66112	WAMPU6.EXE	ADP-CY7C66XX-SS
CYPRESS	CY7C66113	WAMPU6.EXE	ADP-CY7C66XX-SS
CYPRESS	CY7C66113C	WAMPU6.EXE	ADP-CY7C66XX-SS
CYPRESS	CY8C21123-24SXI	WACY8C2X.EXE	ADP-CY8C2XXXX-S8
CYPRESS	CY8C21223-24SXI	WACY8C2X.EXE	ADP-CY8C2XXXX-
S16			
CYPRESS	CY8C21234-24SXI	WACY8C2X.EXE	ADP-CY8C2XXXX-
S16			
CYPRESS	CY8C21323-24PVXI	WACY8C2X.EXE	ADP-CY8C2XXXX-
SS28			

CYPRESS SS28	CY8C21334-24PVXI	WACY8C2X.EXE ADP-CY8C2XXXX-
CYPRESS MLF32	CY8C21434-24LFXI	WACY8C2X.EXE ADP-CY8C2XXXX-
CYPRESS SS28	CY8C21534-24PVXI	WACY8C2X.EXE ADP-CY8C2XXXX-
CYPRESS MLF32	CY8C21634-24LFXI	WACY8C2X.EXE ADP-CY8C2XXXX-
CYPRESS MLF32	CY8C22213-24LFI	WACY8C2X.EXE ADP-CY8C2XXXX-
CYPRESS	CY8C22213-24PVI	WACY8C2X.EXE ADP-CY8C26233-SS
CYPRESS S20	CY8C22213-24SI	WACY8C2X.EXE ADP-CY8C2XXXX-
CYPRESS	CY8C24123-24PI	WACY8C2X.EXE ADP-CY8C26XXX
CYPRESS	CY8C24123-24SI	WACY8C2X.EXE ADP-CY8C2XXXX-S8
CYPRESS	CY8C24123A-24PXI	WACY8C2X.EXE ADP-CY8C26XXX
CYPRESS	CY8C24123A-24SXI	WACY8C2X.EXE ADP-CY8C2XXXX-S8
CYPRESS	CY8C24223-24PI	WACY8C2X.EXE ADP-CY8C26XXX
CYPRESS	CY8C24223-24PVI	WACY8C2X.EXE ADP-CY8C26233-SS
CYPRESS	CY8C24223-24SI	WACY8C2X.EXE ADP-CY8C26233-S
CYPRESS	CY8C24223A-24PVXI	WACY8C2X.EXE ADP-CY8C26233-SS
CYPRESS	CY8C24223A-24PXI	WACY8C2X.EXE ADP-CY8C26XXX
CYPRESS	CY8C24223A-24SXI	WACY8C2X.EXE ADP-CY8C26233-S
CYPRESS	CY8C24423-24LFI	WACY8C2X.EXE ADP-CY8C2XXXX-
MLF32		
CYPRESS	CY8C24423-24PI	WACY8C2X.EXE ADP-CY8C26XXX
CYPRESS	CY8C24423-24PVI	WACY8C2X.EXE ADP-CY8C2XXXX-
SS28		
CYPRESS	CY8C24423-24PVI*	WACY8C2X.EXE ADP-CY8C26443-SS
CYPRESS	CY8C24423-24SI	WACY8C2X.EXE ADP-CY8C26443-S
CYPRESS	CY8C24423A-24LFXI	WACY8C2X.EXE ADP-CY8C2XXXX-
MLF32		
CYPRESS	CY8C24423A-24PVXI	WACY8C2X.EXE ADP-CY8C2XXXX-
SS28		
CYPRESS	CY8C24423A-24PVXI*	WACY8C2X.EXE ADP-CY8C26443-SS
CYPRESS	CY8C24423A-24PXI	WACY8C2X.EXE ADP-CY8C26XXX
CYPRESS	CY8C24423A-24SXI	WACY8C2X.EXE ADP-CY8C26443-S
CYPRESS	CY8C24794-24LFXI	WACY8C2X.EXE ADP-CY8C24794-
MLF56		
CYPRESS	CY8C25122-24PI	WACY8C2X.EXE ADP-CY8C26XXX
CYPRESS	CY8C25122-24PXI	WACY8C2X.EXE ADP-CY8C26XXX
CYPRESS	CY8C26233-24PI	WACY8C2X.EXE ADP-CY8C26XXX
CYPRESS	CY8C26233-24PVI	WACY8C2X.EXE ADP-CY8C26233-SS
CYPRESS	CY8C26233-24PVXI	WACY8C2X.EXE ADP-CY8C26233-SS
CYPRESS	CY8C26233-24PXI	WACY8C2X.EXE ADP-CY8C26XXX
CYPRESS	CY8C26233-24SI	WACY8C2X.EXE ADP-CY8C26233-S
CYPRESS	CY8C26233-24SXI	WACY8C2X.EXE ADP-CY8C26233-S
CYPRESS	CY8C26443-24PI	WACY8C2X.EXE ADP-CY8C26XXX
CYPRESS	CY8C26443-24PVI	WACY8C2X.EXE ADP-CY8C2XXXX-
SS28		
CYPRESS	CY8C26443-24PVI*	WACY8C2X.EXE ADP-CY8C26443-SS
CYPRESS	CY8C26443-24PVXI	WACY8C2X.EXE ADP-CY8C2XXXX-
SS28		
CYPRESS	CY8C26443-24PVXI*	WACY8C2X.EXE ADP-CY8C26443-SS
CYPRESS	CY8C26443-24PXI	WACY8C2X.EXE ADP-CY8C26XXX
CYPRESS	CY8C26443-24SI	WACY8C2X.EXE ADP-CY8C26443-S
CYPRESS	CY8C26443-24SXI	WACY8C2X.EXE ADP-CY8C26443-S
CYPRESS	CY8C26643-24AI	WACY8C2X.EXE ADP-CY8C26643-
Q44		
CYPRESS	CY8C26643-24AXI	WACY8C2X.EXE ADP-CY8C26643-
Q44		
CYPRESS	CY8C26643-24PI	WACY8C2X.EXE ADP-CY8C26XXX
CYPRESS	CY8C26643-24PVI	WACY8C2X.EXE ADP-CY8C26643-SS
CYPRESS	CY8C26643-24PVXI	WACY8C2X.EXE ADP-CY8C26643-SS

CYPRESS	CY8C27143-24PI	WACY8C2X.EXE	ADP-CY8C26XXX
CYPRESS	CY8C27143-24PXI	WACY8C2X.EXE	ADP-CY8C26XXX
CYPRESS	CY8C27243-24PVI	WACY8C2X.EXE	ADP-CY8C26233-SS
CYPRESS	CY8C27243-24PVXI	WACY8C2X.EXE	ADP-CY8C26233-SS
CYPRESS	CY8C27243-24SI	WACY8C2X.EXE	ADP-CY8C26233-S
CYPRESS	CY8C27243-24SXI	WACY8C2X.EXE	ADP-CY8C26233-S
CYPRESS	CY8C27443-24PI	WACY8C2X.EXE	ADP-CY8C26XXX
CYPRESS	CY8C27443-24PVI	WACY8C2X.EXE	ADP-CY8C2XXXX-
SS28			
CYPRESS	CY8C27443-24PVI*	WACY8C2X.EXE	ADP-CY8C26443-SS
CYPRESS	CY8C27443-24PVXI	WACY8C2X.EXE	ADP-CY8C2XXXX-
SS28			
CYPRESS	CY8C27443-24PVXI*	WACY8C2X.EXE	ADP-CY8C26443-SS
CYPRESS	CY8C27443-24PXI	WACY8C2X.EXE	ADP-CY8C26XXX
CYPRESS	CY8C27443-24SI	WACY8C2X.EXE	ADP-CY8C26443-S
CYPRESS	CY8C27443-24SXI	WACY8C2X.EXE	ADP-CY8C26443-S
CYPRESS	CY8C27543-24AI	WACY8C2X.EXE	ADP-CY8C26643-
Q44			
CYPRESS	CY8C27543-24AXI	WACY8C2X.EXE	ADP-CY8C26643-
Q44			
CYPRESS	CY8C27643-24LFI	WACY8C2X.EXE	ADP-CY8C27643-
MLF48			
CYPRESS	CY8C27643-24LFXI	WACY8C2X.EXE	ADP-CY8C27643-
MLF48			
CYPRESS	CY8C27643-24PVI	WACY8C2X.EXE	ADP-CY8C26643-SS
CYPRESS	CY8C27643-24PVXI	WACY8C2X.EXE	ADP-CY8C26643-SS
CYPRESS	CY8C29466-24PVXI	WACY8C2X.EXE	ADP-CY8C2XXXX-
SS28			
CYPRESS	CY8C29466-24PVXI*	WACY8C2X.EXE	ADP-CY8C26443-SS
CYPRESS	CY8C29466-24PXI	WACY8C2X.EXE	ADP-CY8C26XXX
CYPRESS	CY8C29466-24SXI	WACY8C2X.EXE	ADP-CY8C26443-S
CYPRESS	CY8C29566-24AXI	WACY8C2X.EXE	ADP-CY8C26643-
Q44			
CYPRESS	CY8C29666-24LFXI	WACY8C2X.EXE	ADP-CY8C27643-
MLF48			
CYPRESS	CY8C29666-24PVXI	WACY8C2X.EXE	ADP-CY8C26643-SS
CYPRESS	CY8C29866-24AXI	WACY8C2X.EXE	ADP-CY8C29866-
Q100			
CYPRESS	CY8C9560	WCYX.EXE	ADP-CY8C9560-
Q100			
CYPRESS	CYWUSB6953-48LFXC	WACY8C2X.EXE	ADP-CYWUSB6953-
MLF48			
CYPRESS	CY37032 (PLCC 44)	WACY37X.EXE	ADP-CY37064-PL44
CYPRESS	CY37032 (TQFP 44)	WACY37X.EXE	ADP-CY37064-Q44
CYPRESS	CY37032V (PLCC 44)	WACY37X.EXE	ADP-CY37064-PL44
CYPRESS	CY37032V (TQFP 44)	WACY37X.EXE	ADP-CY37064-Q44
CYPRESS	CY37064 (PLCC 44)	WACY37X.EXE	ADP-CY37064-PL44
CYPRESS	CY37064 (PLCC 84)	WACY37X.EXE	ADP-CY37064-PL84
CYPRESS	CY37064 (TQFP 100)	WACY37X.EXE	ADP-CY37064-Q100
CYPRESS	CY37064 (TQFP 44)	WACY37X.EXE	ADP-CY37064-Q44
CYPRESS	CY37064V (PLCC 44)	WACY37X.EXE	ADP-CY37064-PL44
CYPRESS	CY37064V (PLCC 84)	WACY37X.EXE	ADP-CY37064-PL84
CYPRESS	CY37064V (TQFP 100)	WACY37X.EXE	ADP-CY37064-Q100
CYPRESS	CY37064V (TQFP 44)	WACY37X.EXE	ADP-CY37064-Q44
CYPRESS	CY37128 (PLCC 84)	WACY37X.EXE	ADP-CY37064-PL84
CYPRESS	CY37128 (TQFP 100)	WACY37X.EXE	ADP-CY37064-Q100
CYPRESS	CY37128 (TQFP 160)	WACY37X.EXE	ADP-CY37192-Q160
CYPRESS	CY37128V (PLCC 84)	WACY37X.EXE	ADP-CY37064-PL84
CYPRESS	CY37128V (TQFP 100)	WACY37X.EXE	ADP-CY37064-Q100
CYPRESS	CY37128V (TQFP 160)	WACY37X.EXE	ADP-CY37192-Q160
CYPRESS	CY37192 (TQFP 160)	WACY37X.EXE	ADP-CY37192-Q160
CYPRESS	CY37192V (TQFP 160)	WACY37X.EXE	ADP-CY37192-Q160
CYPRESS	CY37256 (BGA 256)	WACY37X.EXE	ADP-CY37XX-BG256
CYPRESS	CY37256 (CQFP 160)	WACY37X.EXE	ADP-CY37XX-CQ160

CYPRESS	CY37256 (TQFP 160)	WACY37X.EXE	ADP-CY37192-Q160
CYPRESS	CY37256 (TQFP 208)	WACY37X.EXE	ADP-CY37256-Q208
CYPRESS	CY37256V (BGA 256)	WACY37X.EXE	ADP-CY37XX-BG256
CYPRESS	CY37256V (CQFP 160)	WACY37X.EXE	ADP-CY37XX-CQ160
CYPRESS	CY37256V (TQFP 160)	WACY37X.EXE	ADP-CY37192-Q160
CYPRESS	CY37256V (TQFP 208)	WACY37X.EXE	ADP-CY37256-Q208
CYPRESS	CY37384 (BGA 256)	WACY37X.EXE	ADP-CY37XX-BG256
CYPRESS	CY37384 (TQFP 208)	WACY37X.EXE	ADP-CY37256-Q208
CYPRESS	CY37384V (BGA 256)	WACY37X.EXE	ADP-CY37XX-BG256
CYPRESS	CY37384V (TQFP 208)	WACY37X.EXE	ADP-CY37256-Q208
CYPRESS	CY37512 (BGA 256)	WACY37X.EXE	ADP-CY37XX-BG256
CYPRESS	CY37512 (BGA 352)	WACY37X.EXE	ADP-CY37XX-BG352
CYPRESS	CY37512 (CQFP 208)	WACY37X.EXE	ADP-CY37256-Q208
CYPRESS	CY37512 (TQFP 208)	WACY37X.EXE	ADP-CY37256-Q208
CYPRESS	CY37512V (BGA 256)	WACY37X.EXE	ADP-CY37XX-BG256
CYPRESS	CY37512V (BGA 352)	WACY37X.EXE	ADP-CY37XX-BG352
CYPRESS	CY37512V (CQFP 208)	WACY37X.EXE	ADP-CY37256-Q208
CYPRESS	CY37512V (TQFP 208)	WACY37X.EXE	ADP-CY37256-Q208
CYPRESS	CY7B326 (PLD610)	WEPLD1.EXE	
CYPRESS	CY7C341	WAMAX.EXE	ADP-
MAX50E/EPM5192-PG			
CYPRESS	CY7C341B	WAMAX.EXE	ADP-EPM5192A-PL
CYPRESS	CY7C342	WAMAX.EXE	ADP-MAX50C/-PG
CYPRESS	CY7C342B	WAMAX.EXE	ADP-EPM5128A-
PL/PG			
CYPRESS	CY7C343	WAMAX.EXE	ADP-MAX50B
CYPRESS	CY7C343B	WAMAX.EXE	ADP-EPM5064-PL44
CYPRESS	CY7C344	WMAX.EXE	
CYPRESS	CY7C344B	WMAX.EXE	
CYPRESS	CY7C346 (PGA100)	WAMAX.EXE	ADP-EPM5130-PG
CYPRESS	CY7C346 (PLCC84)	WAMAX.EXE	ADP-EPM5130-PL
CYPRESS	CY7C346B	WAMAX.EXE	ADP-EPM5130A-
PL/Q			
CYPRESS	CY7C371	WA7C37X.EXE	ADP-7C371
CYPRESS	CY7C371i	WA7C37X.EXE	ADP-7C371
CYPRESS	CY7C371i (TQ44)	WA7C37X.EXE	ADP-7C371-Q
CYPRESS	CY7C372	WA7C37X.EXE	ADP-7C371
CYPRESS	CY7C372i	WA7C37X.EXE	ADP-7C371
CYPRESS	CY7C373 (PLCC)	WA7C37X.EXE	ADP-7C374-PL
CYPRESS	CY7C373 (QFP)	WA7C37X.EXE	ADP-7C374-Q
CYPRESS	CY7C373i (PLCC)	WA7C37X.EXE	ADP-7C374-PL
CYPRESS	CY7C373i (QFP)	WA7C37X.EXE	ADP-7C374-Q
CYPRESS	CY7C374 (PGA)	WA7C37X.EXE	ADP-7C374-PG
CYPRESS	CY7C374 (PLCC)	WA7C37X.EXE	ADP-7C374-PL
CYPRESS	CY7C374 (QFP)	WA7C37X.EXE	ADP-7C374-Q
CYPRESS	CY7C374i (PGA)	WA7C37X.EXE	ADP-7C374-PG
CYPRESS	CY7C374i (PLCC)	WA7C37X.EXE	ADP-7C374-PL
CYPRESS	CY7C374i (QFP)	WA7C37X.EXE	ADP-7C374-Q
CYPRESS	CY7C375 (PGA)	WA7C37X.EXE	ADP-7C375-PG
CYPRESS	CY7C375 (QFP)	WA7C37X.EXE	ADP-7C375-Q
CYPRESS	CY7C375i (PGA)	WA7C37X.EXE	ADP-7C375-PG
CYPRESS	CY7C375i (QFP)	WA7C37X.EXE	ADP-7C375-Q
CYPRESS	PAL16L8-5	WPLD1.EXE	
CYPRESS	PAL16L8-7	WPLD1.EXE	
CYPRESS	PAL16L8B	WPLD1.EXE	
CYPRESS	PAL16R4-5	WPLD1.EXE	
CYPRESS	PAL16R4-7	WPLD1.EXE	
CYPRESS	PAL16R4B	WPLD1.EXE	
CYPRESS	PAL16R6-5	WPLD1.EXE	
CYPRESS	PAL16R6-7	WPLD1.EXE	
CYPRESS	PAL16R6B	WPLD1.EXE	
CYPRESS	PAL16R8-5	WPLD1.EXE	
CYPRESS	PAL16R8-7	WPLD1.EXE	
CYPRESS	PAL16R8B	WPLD1.EXE	

CYPRESS	PAL22V10C	WPLD1.EXE
CYPRESS	PAL22V10G	WPLD1.EXE
CYPRESS	PAL22VP10C	WPLD1.EXE
CYPRESS	PAL22VP10G	WPLD1.EXE
CYPRESS	PALC16L8	WPLD1.EXE
CYPRESS	PALC16R4	WPLD1.EXE
CYPRESS	PALC16R6	WPLD1.EXE
CYPRESS	PALC16R8	WPLD1.EXE
CYPRESS	PALC22V10/A	WPLD1.EXE
CYPRESS	PALC22V10B	WPLD1.EXE
CYPRESS	PALC22V10D (PALCE22V10)	WPLD1.EXE
CYPRESS	PALCE16V8	WPLD1.EXE
CYPRESS	PALCE16V8 (16L8)	WPLD1.EXE
CYPRESS	PALCE16V8 (16R4)	WPLD1.EXE
CYPRESS	PALCE16V8 (16R6)	WPLD1.EXE
CYPRESS	PALCE16V8 (16R8)	WPLD1.EXE
CYPRESS	PALCE20V8	WPLD1.EXE
CYPRESS	PLDC20G10/A	WPLD1.EXE
CYPRESS	PLDC20G10B	WPLD1.EXE
CYPRESS	PLDC20G10C	WPLD1.EXE
CYPRESS	PLDC20RA10	WPLD1.EXE
DALLAS	DS1213B (2K*8)	WMEM1.EXE
DALLAS	DS1213B (8K*8)	WMEM1.EXE
DALLAS	DS1213C (32K*8)	WMEM1.EXE
DALLAS	DS1213C (8K*8)	WMEM1.EXE
DALLAS	DS1213D (128K*8)	WMEM1.EXE
DALLAS	DS1213D (32K*8)	WMEM1.EXE
DALLAS	DS1213D (8K*8)	WMEM1.EXE
DALLAS	DS1213D (512K*8)	WMEM1.EXE
DALLAS	DS1216B (2K*8)	WMEM1.EXE
DALLAS	DS1216B (8K*8)	WMEM1.EXE
DALLAS	DS1216C (32K*8)	WMEM1.EXE
DALLAS	DS1216C (8K*8)	WMEM1.EXE
DALLAS	DS1216D (128K*8)	WMEM1.EXE
DALLAS	DS1216D (32K*8)	WMEM1.EXE
DALLAS	DS1216D (8K*8)	WMEM1.EXE
DALLAS	DS1216E (32K*8)	WMEM1.EXE
DALLAS	DS1216E (8K*8)	WMEM1.EXE
DALLAS	DS1216F (128K*8)	WMEM1.EXE
DALLAS	DS1216F (32K*8)	WMEM1.EXE
DALLAS	DS1216F (8K*8)	WMEM1.EXE
DALLAS	DS1220AB/AD	WMEM1.EXE
DALLAS	DS1220Y	WMEM1.EXE
DALLAS	DS1225AB/AD	WMEM1.EXE
DALLAS	DS1225D/E/Y	WMEM1.EXE
DALLAS	DS1230Y/AB	WMEM1.EXE
DALLAS	DS1235Y/AB	WMEM1.EXE
DALLAS	DS1243Y	WMEM1.EXE
DALLAS	DS1244Y	WMEM1.EXE
DALLAS	DS1245EE	WMEM1.EXE
DALLAS	DS1245W	WMEM1.EXE
DALLAS	DS1245Y/AB	WMEM1.EXE
DALLAS	DS1248Y	WMEM1.EXE
DALLAS	DS1250W	WMEM1.EXE
DALLAS	DS1258Y	WMEM1.EXE
DALLAS	DS1286	WMEM1.EXE
DALLAS	DS12887	WMEM1.EXE
DALLAS	DS12C887	WMEM1.EXE
DALLAS	DS1386 (32K*8)	WMEM1.EXE
DALLAS	DS1386 (8K*8)	WMEM1.EXE
DALLAS	DS1486	WMEM1.EXE
DALLAS	DS1613D	WMEM1.EXE
DALLAS	DS1630Y/AB	WMEM1.EXE
DALLAS	DS1643	WMEM1.EXE

DALLAS	DS1644	WMEM1.EXE
DALLAS	DS1645EE	WMEM1.EXE
DALLAS	DS1645Y/AB	WMEM1.EXE
DALLAS	DS1646	WMEM1.EXE
DALLAS	DS1650Y/AB	WMEM1.EXE
DALLAS	DS1687-5	WMEM1.EXE
DALLAS	DS17287	WMEM1.EXE
DALLAS	DS1742W	WMEM1.EXE
DALLAS	DS1743	WMEM1.EXE
DALLAS	DS1744	WMEM1.EXE
DALLAS	DS1744W	WMEM1.EXE
DALLAS	DS17887	WMEM1.EXE
DALLAS	DS2401	WDS2502.EXE
DALLAS	DS2430	WDS2502.EXE
DALLAS	DS2430A	WDS2502.EXE
DALLAS	DS2502	WDS2502.EXE
DALLAS	DS5000 32	WPGM51.EXE
DALLAS	DS5000 8	WPGM51.EXE
DALLAS	DS87C520	WPGM51.EXE
DALLAS	DS87C530	WASIG.EXE ADP-530-PL/-Q
DALLAS	DS87C550	WASIG.EXE ADP-552
DALLAS	DS89C420 (Revision A)	WPGM51.EXE
DALLAS	DS89C450 (Revision A5)	WPGM51.EXE
DEUTRON	P439LV010	WMEM1.EXE
DEUTRON	P439LV040	WMEM1.EXE
DEUTRON	P439LV088-E	WA28F.EXE ADP-49F800-
TS/TSV2		
DEUTRON	P439LV800-E	WA28F.EXE ADP-49F800-
TS/TSV2		
DEUTRON	AC25LV010	WSPROM.EXE
DEUTRON	AC25LV512	WSPROM.EXE
DynaColor	D16F51D	WPGM51.EXE
DynaColor	D16F51P	WPGM51.EXE
DynaColor	D16F52D	WPGM51.EXE
DynaColor	D16F52P	WPGM51.EXE
DynaColor	D16F54D/L	WPGM51.EXE
DynaColor	D16F54P	WPGM51.EXE
DynaColor	D16F78BE	WPGM51.EXE
DynaColor	D16F78BL	WPGM51.EXE
ECHELON	FT3120 [SOP]	WACY7C.EXE ADP-CY7C53120-
SO32		
ECHELON	FT3120 [TQFP]	WACY7C.EXE ADP-7C53120-TQ44
ECHELON	PL3120-E4T10 (TSSOP)	WACY7C.EXE ADP-PL3120-TS
EFST	F49B002UA	WMEM1.EXE
EFST	F49L004BA	WMEM1.EXE
EFST	F49L040A	WMEM1.EXE
EFST	F49L160BA-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EFST	F49L400BA-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EFST	F49L400UA-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EFST	F49L800BA-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EFST	F49L800UA-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EFST	F25L004A	WSPROM.EXE
EMC	EM39LV010	WMEM1.EXE
EMC	EM39LV040	WMEM1.EXE
EMC	EM39LV088	WA28F.EXE ADP-49F800-
TS/TSV2		
EMC	EM39LV800	WA28F.EXE ADP-49F800-
TS/TSV2		
EMC	EM25LV010	WSPROM.EXE

EMC	EM25LV512	WSPROM.EXE
EMC	EM78P156ELAS	WMPU1.EXE
EMC	EM78P156ELKM	WMPU1.EXE
EMC	EM78P156ELM	WMPU1.EXE
EMC	EM78P156ELP	WMPU1.EXE
EMC	EM78P156NM	WMPU1.EXE
EMC	EM78P156NP	WMPU1.EXE
EMC	EM78P257AKM	WMPU1.EXE
EMC	EM78P257AM	WMPU1.EXE
EMC	EM78P257AP	WMPU1.EXE
EMC	EM78P257BM	WMPU1.EXE
EMC	EM78P257BP	WMPU1.EXE
EMC	EM78P447NAM	WMPU1.EXE
EMC	EM78P447NAP	WMPU1.EXE
EMC	EM78P447NAS	WMPU1.EXE
EMC	EM78P447NBP	WMPU1.EXE
EMC	EM78P447NBWM	WMPU1.EXE
EMC	EM78P447SAM	WMPU1.EXE
EMC	EM78P447SAP	WMPU1.EXE
EMC	EM78P447SAS	WMPU1.EXE
EMC	EM78P447SBP	WMPU1.EXE
EMC	EM78P447SBWM	WMPU1.EXE
EMC	EM78P458AM	WMPU1.EXE
EMC	EM78P458AP	WMPU1.EXE
EMC	EM78P459AK	WMPU1.EXE
EMC	EM78P459AM	WMPU1.EXE
EMTC	EM27SL512AU	WMEM1.EXE
EMTC	EM29SF002AB	WMEM1.EXE
EMTC	EM29SF002AT	WMEM1.EXE
EMTC	EM29SF002NAB	WMEM1.EXE
EMTC	EM29SF002NAT	WMEM1.EXE
EMTC	EM29SF020AU	WMEM1.EXE
EMTC	EM29SF020NAU	WMEM1.EXE
EMTC	EM24C02	WSPROM.EXE
EMTC	EM24C04	WSPROM.EXE
EMTC	EM24C08	WSPROM.EXE
EMTC	EM24C16	WSPROM.EXE
EMTC	EM25SL512EU	WSPROM.EXE
EON	EN27C010	WMEM1.EXE
EON	EN27C512 [12.75V]	WMEM1.EXE
EON	EN29F001NT	WMEM1.EXE
EON	EN29F002ANB	WMEM1.EXE
EON	EN29F002ANT	WMEM1.EXE
EON	EN29F002AT	WMEM1.EXE
EON	EN29F002CB	WMEM1.EXE
EON	EN29F002CNT	WMEM1.EXE
EON	EN29F002CT	WMEM1.EXE
EON	EN29F002NB	WMEM1.EXE
EON	EN29F002NT	WMEM1.EXE
EON	EN29F010	WMEM1.EXE
EON	EN29F040	WMEM1.EXE
EON	EN29F040A	WMEM1.EXE
EON	EN29F080	WA28F.EXE ADP-29F080-TS
EON	EN29F512	WMEM1.EXE
EON	EN29F800B	WA28F.EXE ADP-29F800-
TS/TSV2		
EON	EN29F800B*	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29F800T	WA28F.EXE ADP-29F800-
TS/TSV2		
EON	EN29F800T*	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV010	WMEM1.EXE
EON	EN29LV040	WMEM1.EXE

EON	EN29LV040A	WMEM1.EXE
EON	EN29LV160AB-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV160AT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV160B	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV160JB	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV160JT	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV160T	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV320B-B	WA28F.EXE ADP-MX29LV320-BG
EON	EN29LV320B-BP	WA28F.EXE ADP-MX29LV320-BG
EON	EN29LV320B-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV320T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV400AB-B	WA28F.EXE ADP-49B1614A-BG
EON	EN29LV400AB-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV400AT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV400B	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV400B-B	WA28F.EXE ADP-49B1614A-BG
EON	EN29LV400JB	WA28F.EXE ADP-29F800-
TS/TSV2		
EON	EN29LV400JB*	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV400JT	WA28F.EXE ADP-29F800-
TS/TSV2		
EON	EN29LV400JT*	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV400T	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV512	WMEM1.EXE
EON	EN29LV640H-T	WA28F.EXE ADP-49F800-TSV2
EON	EN29LV640L-T	WA28F.EXE ADP-49F800-TSV2
EON	EN29LV641H	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV641L	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV800AB	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV800AB-B	WA28F.EXE ADP-49B1614A-BG
EON	EN29LV800AT	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV800B	WA28F.EXE ADP-29F800-
TS/TSV2		
EON	EN29LV800B*	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV800BB-B	WA28F.EXE ADP-49B1614A-BG
EON	EN29LV800BB-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV800BT-B	WA28F.EXE ADP-49B1614A-BG
EON	EN29LV800BT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV800JB	WA28F.EXE ADP-29F800-
TS/TSV2		
EON	EN29LV800JB*	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV800JT	WA28F.EXE ADP-29F800-

TS/TSV2		
EON	EN29LV800JT*	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29LV800T	WA28F.EXE ADP-29F800-
TS/TSV2		
EON	EN29LV800T*	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29SL400T-B	WA28F.EXE ADP-49B1614A-BG
EON	EN29SL400T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29SL800B-B	WA28F.EXE ADP-49B1614A-BG
EON	EN29SL800B-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN29SL800T-B	WA28F.EXE ADP-49B1614A-BG
EON	EN29SL800T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EON	EN25B05T	WSPROM.EXE
EON	EN25B10	WSPROM.EXE
EON	EN25B10T	WSPROM.EXE
EON	EN25B16	WSPROM.EXE
EON	EN25B16T	WSPROM.EXE
EON	EN25B20	WSPROM.EXE
EON	EN25B20T	WSPROM.EXE
EON	EN25B40	WSPROM.EXE
EON	EN25B40T	WSPROM.EXE
EON	EN25B80	WSPROM.EXE
EON	EN25B80T	WSPROM.EXE
EON	EN25F20	WSPROM.EXE
EON	EN25F40	WSPROM.EXE
EON	EN25F80	WSPROM.EXE
EON	EN25P05	WSPROM.EXE
EON	EN25P10	WSPROM.EXE
EON	EN25P16 (16PIN)	WSPROM.EXE
EON	EN25P16 (8PIN)	WSPROM.EXE
EON	EN25P20	WSPROM.EXE
EON	EN25P40	WSPROM.EXE
EON	EN25P80	WSPROM.EXE
EON	EN25S40T	WSPROM.EXE
EON	EN25T80	WSPROM.EXE
ESMT	F49B002UA	WMEM1.EXE
ESMT	F49L004BA	WMEM1.EXE
ESMT	F49L040A	WMEM1.EXE
ESMT	F49L160BA-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ESMT	F49L160UA-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ESMT	F49L400BA-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ESMT	F49L400UA-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ESMT	F49L800BA-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ESMT	F49L800UA-T	WA28F.EXE ADP-49F800-
TS/TSV2		
ESMT	F25L004A	WSPROM.EXE
ESMT	F25L008A	WSPROM.EXE
ESMT	F25L016A	WSPROM.EXE
ESMT	F25L04UA	WSPROM.EXE
EXCELSEMI	ES29LV160DB-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV160DB-W	WA28F.EXE ADP-49B1614A-BG
EXCELSEMI	ES29LV160DT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV160EB-T	WA28F.EXE ADP-49F800-

TS/TSV2		
EXCELSEMI	ES29LV160EB-W	WA28F.EXE ADP-49B1614A-BG
EXCELSEMI	ES29LV160ET-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV160ET-W	WA28F.EXE ADP-49B1614A-BG
EXCELSEMI	ES29LV320DB-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV320DT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV320EB-TG	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV320ET-TG	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV400DB-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV400DB-W	WA28F.EXE ADP-49B1614A-BG
EXCELSEMI	ES29LV400DT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV400EB-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV400EB-W	WA28F.EXE ADP-49B1614A-BG
EXCELSEMI	ES29LV400ET-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV400ET-W	WA28F.EXE ADP-49B1614A-BG
EXCELSEMI	ES29LV800DB-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV800DB-W	WA28F.EXE ADP-49B1614A-BG
EXCELSEMI	ES29LV800DT-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV800EB-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV800EB-W	WA28F.EXE ADP-49B1614A-BG
EXCELSEMI	ES29LV800ET-T	WA28F.EXE ADP-49F800-
TS/TSV2		
EXCELSEMI	ES29LV800ET-W	WA28F.EXE ADP-49B1614A-BG
EXCELSEMI	ES25P16	WSPROM.EXE
EXEL	XL2816A	WMEM1.EXE
EXEL	XL2817A	WMEM1.EXE
EXEL	XL2864A	WMEM1.EXE
EXEL	XL2865A	WMEM1.EXE
EXEL	XL28C04/A	WMEM1.EXE
EXEL	XL28C16A/B	WMEM1.EXE
EXEL	XL28C256	WMEM1.EXE
EXEL	XL28C64	WMEM1.EXE
EXEL	XL28C64B	WMEM1.EXE
EXEL	XL28F010	WMEM1.EXE
EXEL	XL28F020	WMEM1.EXE
EXEL	XL46C15	WMEM1.EXE
EXEL	XL24C01A	WSPROM.EXE
EXEL	XL9020	WSPROM.EXE
EXEL	XL93C46	WSPROM.EXE
EXEL	XL93CS46	WSPROM.EXE
EXEL	XL93LC06	WSPROM.EXE
EXEL	XL93LC46	WSPROM.EXE
EXEL	XL93LC46A	WSPROM.EXE
EXEL	XL93LC56	WSPROM.EXE
EXEL	XL93LC56A	WSPROM.EXE
EXEL	XL93LC66	WSPROM.EXE
EXEL	XL93LC66A	WSPROM.EXE
EXEL	XL93LL46	WSPROM.EXE
EXEL	XL93LL56	WSPROM.EXE
EXEL	XL93LL66	WSPROM.EXE
EXEL	XLS24C02P	WSPROM.EXE
EXEL	XLS24C04P	WSPROM.EXE

FAIRCHILD	FM27C010	WMEM1.EXE
FAIRCHILD	FM27C020	WMEM1.EXE
FAIRCHILD	FM27C040	WMEM1.EXE
FAIRCHILD	FM27C240	WMEM1.EXE
FAIRCHILD	FM27C256 [12.75V]	WMEM1.EXE
FAIRCHILD	FM27C512 [12.75V]	WMEM1.EXE
FAIRCHILD	FM27LV010	WMEM1.EXE
FAIRCHILD	NM27C128 [12.75]	WMEM1.EXE
FAIRCHILD	NM27C256 [12.75]	WMEM1.EXE
FAIRCHILD	NM27C512 [12.75V]	WMEM1.EXE
FAIRCHILD	NMC27C128 [12.75V]	WMEM1.EXE
FAIRCHILD	NMC27C16B [12.75V]	WMEM1.EXE
FAIRCHILD	NMC27C32B [12.75V]	WMEM1.EXE
FAIRCHILD	NMC27C64 [12.75V]	WMEM1.EXE
FAIRCHILD	FM24C256	WSPROM.EXE
FAIRCHILD	FM93C46	WSPROM.EXE
FAIRCHILD	NM24C02	WSPROM.EXE
FAIRCHILD	NM25C020	WSPROM.EXE
FAIRCHILD	NM25C160	WSPROM.EXE
FAIRCHILD	NM93C46	WSPROM.EXE
FAIRCHILD	NM93C56	WSPROM.EXE
FAIRCHILD	NM93C86A	WSPROM.EXE
FAIRCHILD	NM93CS46	WSPROM.EXE
FAIRCHILD	ACE1101EMT8 (TSOP8)	WAMPU3.EXE
FAIRCHILD	ACE1202EM8 (SOP8)	WAMPU3.EXE
FAIRCHILD	ACE1501EM8 (SOP8)	WAMPU3.EXE
FAIRCHILD	ACE1502EM (SOP14)	WAMPU3.EXE
FAIRCHILD	ACE1502EMT8 (TSOP8)	WAMPU3.EXE
FREESCALE	MC68701	WAMMPU.EXE ADP-68701
FREESCALE	MC68701U4	WAMMPU.EXE ADP-68701
FREESCALE	MC68705P3	WAMMPU.EXE ADP-68705P3
FREESCALE	MC68705P5	WAMMPU.EXE ADP-68705P3
FREESCALE	MC68705R3	WAMMPU.EXE ADP-68705
FREESCALE	MC68705R5	WAMMPU.EXE ADP-68705
FREESCALE	MC68705U3	WAMMPU.EXE ADP-68705
FREESCALE	MC68705U5	WAMMPU.EXE ADP-68705
FREESCALE	MC68H (R) C908JK1	WA68908.EXE ADP-68HC908JK3
FREESCALE	MC68H (R) C908JK1 (SOP20)	WA68908.EXE ADP-68HC908JK3-S
FREESCALE	MC68H (R) C908JK3	WA68908.EXE ADP-68HC908JK3
FREESCALE	MC68H (R) C908JK3 (SOP20)	WA68908.EXE ADP-68HC908JK3-S
FREESCALE	MC68H (R) C908JL3	WA68908.EXE ADP-68HC908JL3
FREESCALE	MC68H (R) C908JL3 (SOP28)	WA68908.EXE ADP-68HC908JL3-S
FREESCALE	MC68HC05B6/B8	WAMMPU.EXE ADP-68HC705B5-PL
FREESCALE	MC68HC11A1 (DIP-48)	WAMMPU.EXE ADP-68HC811E2
FREESCALE	MC68HC11A1 (PLCC-52)	WAMMPU.EXE ADP-68HC711E
FREESCALE	MC68HC11A8 (DIP-48)	WAMMPU.EXE ADP-68HC811E2
FREESCALE	MC68HC11A8 (PLCC-52)	WAMMPU.EXE ADP-68HC711E
FREESCALE	MC68HC11E1	WAMMPU.EXE ADP-68HC711E/E9-
Q		
FREESCALE	MC68HC11E20	WAMMPU.EXE ADP-68HC711E/E9-
Q		
FREESCALE	MC68HC11E9	WAMMPU.EXE ADP-68HC711E/E9-
Q		
FREESCALE	MC68HC11F1 (PLCC68)	WAMMPU.EXE ADP-68HC11F1
FREESCALE	MC68HC11F1 (QFP80)	WAMMPU.EXE ADP-68HC11F1-Q80
FREESCALE	MC68HC11K4	WAMMPU.EXE ADP-68HC711/K4-Q
FREESCALE	MC68HC11KA4	WAMMPU.EXE ADP-68HC711KA4
FREESCALE	MC68HC705B16/X16	WAMMPU.EXE ADP-68HC705B5-
PL/X16-Q		
FREESCALE	MC68HC705B16N	WAMMPU.EXE ADP-68HC705B5-
PL/X16-Q		
FREESCALE	MC68HC705B16N (SDIP56)	WAMMPU.EXE ADP-68HC705B5-SD
FREESCALE	MC68HC705B32	WAMMPU.EXE ADP-68HC705B5-
PL/X16-Q		

FREESCALE	MC68HC705B32 (SDIP56)	WAMMPU.EXE	ADP-68HC705B5-SD
FREESCALE	MC68HC705B5	WAMMPU.EXE	ADP-68HC705B5-PL
FREESCALE	MC68HC705BD3	WAMMPU.EXE	ADP-68HC705BDX
FREESCALE	MC68HC705BD3 (SDIP42)	WAMMPU.EXE	ADP-68HC705BD-SD
FREESCALE	MC68HC705BD7	WAMMPU.EXE	ADP-68HC705BDX
FREESCALE	MC68HC705BD7 (SDIP42)	WAMMPU.EXE	ADP-68HC705BD-SD
FREESCALE	MC68HC705BD9	WAMMPU.EXE	ADP-68HC705BD9
FREESCALE	MC68HC705BD9 (SDIP42)	WAMMPU.EXE	ADP-705BD9-SD
FREESCALE	MC68HC705C12A	WAMMPU.EXE	ADP-68HC705C9/-
PL			
FREESCALE	MC68HC705C4	WAMMPU.EXE	ADP-68HC705C9/-
PL			
FREESCALE	MC68HC705C4A	WAMMPU.EXE	ADP-68HC705C9/-
PL			
FREESCALE	MC68HC705C8	WAMMPU.EXE	ADP-68HC705C9/-
PL			
FREESCALE	MC68HC705C8A (DIP40)	WAMMPU.EXE	ADP-68HC705C9
FREESCALE	MC68HC705C8A (PLCC44)	WAMMPU.EXE	ADP-68HC705C9-PL
FREESCALE	MC68HC705C8A (QFP44)	WAMMPU.EXE	ADP-68HC705C9-Q
FREESCALE	MC68HC705C8A (SDIP42)	WAMMPU.EXE	ADP-68HC705C9-SD
FREESCALE	MC68HC705C9	WAMMPU.EXE	ADP-68HC705C9/-
PL			
FREESCALE	MC68HC705C9A (DIP40)	WAMMPU.EXE	ADP-68HC705C9
FREESCALE	MC68HC705C9A (PLCC44)	WAMMPU.EXE	ADP-68HC705C9-PL
FREESCALE	MC68HC705C9A (QFP44)	WAMMPU.EXE	ADP-68HC705C9-Q
FREESCALE	MC68HC705D32	WAMMPU.EXE	ADP-68HC705C9/-
PL			
FREESCALE	MC68HC705D32A	WAMMPU.EXE	ADP-68HC705C9/-
PL			
FREESCALE	MC68HC705D9	WAMMPU.EXE	ADP-68HC705C9/-
PL			
FREESCALE	MC68HC705E1	WAMMPU.EXE	ADP-68HC705E1/-S
FREESCALE	MC68HC705J1 EMUL	WAMMPU.EXE	ADP-68HC705J/J2-
S			
FREESCALE	MC68HC705J1A	WAMMPU.EXE	ADP-68HC705J1A/-
S			
FREESCALE	MC68HC705J1A*	WAMMPU.EXE	ADP-68HC705J1AV2
FREESCALE	MC68HC705J1A* (SOP20)	WAMMPU.EXE	ADP-68HC705J1A-
SV2			
FREESCALE	MC68HC705J2	WAMMPU.EXE	ADP-68HC705J/J2-
S			
FREESCALE	MC68HC705JB3	WAMMPU.EXE	ADP-68HC705JB3/-
S			
FREESCALE	MC68HC705JB4	WAMMPU.EXE	ADP-68HC705JB4/-
S			
FREESCALE	MC68HC705JJ7	WAMMPU.EXE	ADP-68HC705JJ7/-
S			
FREESCALE	MC68HC705JP7	WAMMPU.EXE	ADP-68HC705JP7/-
S			
FREESCALE	MC68HC705K1	WAMMPU.EXE	ADP-68HC705K1/-S
FREESCALE	MC68HC705KJ1	WAMMPU.EXE	ADP-68HC705KJ1
FREESCALE	MC68HC705KJ1 (SOP16)	WAMMPU.EXE	ADP-68HC705KJ1-S
FREESCALE	MC68HC705L16	WAMMPU.EXE	ADP-68HC705L5-Q
FREESCALE	MC68HC705L5	WAMMPU.EXE	ADP-68HC705L5-Q
FREESCALE	MC68HC705MC4	WAMMPU.EXE	ADP-68HC705MC4
FREESCALE	MC68HC705P6	WAMMPU.EXE	ADP-68HC705P
FREESCALE	MC68HC705P6 (SDIP28)	WAMMPU.EXE	ADP-68HC705P-SD
FREESCALE	MC68HC705P6 (SOP28)	WAMMPU.EXE	ADP-68HC705P9-S
FREESCALE	MC68HC705P6A	WAMMPU.EXE	ADP-68HC705P
FREESCALE	MC68HC705P6A (SDIP28)	WAMMPU.EXE	ADP-68HC705P-SD
FREESCALE	MC68HC705P6A (SOP28)	WAMMPU.EXE	ADP-68HC705P9-S
FREESCALE	MC68HC705P9	WAMMPU.EXE	ADP-68HC705P
FREESCALE	MC68HC705P9 (SDIP28)	WAMMPU.EXE	ADP-68HC705P-SD
FREESCALE	MC68HC705P9 (SOP28)	WAMMPU.EXE	ADP-68HC705P9-S

FREESCALE	MC68HC705SR3	WAMMPU.EXE	ADP-
68HC705SR3/SR-SD/SR3-Q			
FREESCALE	MC68HC705X32	WAMMPU.EXE	ADP-68HC705X16-Q
FREESCALE	MC68HC705X4	WAMMPU.EXE	ADP-68HC705X4-S
FREESCALE	MC68HC711D3	WAMMPU.EXE	ADP-68HC711D/D3-
PL/D3-Q			
FREESCALE	MC68HC711E20	WAMMPU.EXE	ADP-68HC711E/E9-
Q			
FREESCALE	MC68HC711E9	WAMMPU.EXE	ADP-68HC711E/E9-
Q			
FREESCALE	MC68HC711EA9	WAMMPU.EXE	ADP-68711EA9-PL
FREESCALE	MC68HC711G5	WAMMPU.EXE	ADP-68HC711G5-PL
FREESCALE	MC68HC711K4	WAMMPU.EXE	ADP-68HC711/K4-Q
FREESCALE	MC68HC711KA4	WAMMPU.EXE	ADP-68HC711KA4
FREESCALE	MC68HC711L6	WAMMPU.EXE	ADP-68HC711L6
FREESCALE	MC68HC805B6	WAMMPU.EXE	ADP-68HC705B5-PL
FREESCALE	MC68HC805P18	WAMMPU.EXE	ADP-68805P18/-S
FREESCALE	MC68HC811E2	WAMMPU.EXE	ADP-68HC811E2/-
PL			
FREESCALE	MC68HC908AB32 (QFP64)	WA68908.EXE	ADP-68HC908AB32-
Q			
FREESCALE	MC68HC908AP16 (LQFP48)	WA68908.EXE	ADP-68HC908AP-
LQ48			
FREESCALE	MC68HC908AP16 (QFP44)	WA68908.EXE	ADP-68HC908AP-
Q44			
FREESCALE	MC68HC908AP32 (LQFP48)	WA68908.EXE	ADP-68HC908AP-
LQ48			
FREESCALE	MC68HC908AP32 (QFP44)	WA68908.EXE	ADP-68HC908AP-
Q44			
FREESCALE	MC68HC908AP64 (LQFP48)	WA68908.EXE	ADP-68HC908AP-
LQ48			
FREESCALE	MC68HC908AP64 (QFP44)	WA68908.EXE	ADP-68HC908AP-
Q44			
FREESCALE	MC68HC908AP8 (LQFP48)	WA68908.EXE	ADP-68HC908AP-
LQ48			
FREESCALE	MC68HC908AP8 (QFP44)	WA68908.EXE	ADP-68HC908AP-
Q44			
FREESCALE	MC68HC908BD48	WA68908.EXE	ADP-68HC908BD48
FREESCALE	MC68HC908EY16 (QFP32)	WA68908.EXE	ADP-68HC908EY-
TQ32			
FREESCALE	MC68HC908GP20	WA68908.EXE	ADP-68HC908GPX
FREESCALE	MC68HC908GP20 (QFP44)	WA68908.EXE	ADP-68HC908GPX-Q
FREESCALE	MC68HC908GP32	WA68908.EXE	ADP-68HC908GPX
FREESCALE	MC68HC908GP32 (QFP44)	WA68908.EXE	ADP-68HC908GPX-Q
FREESCALE	MC68HC908GP32 (SDIP42)	WA68908.EXE	ADP-68HC908GTX-
SD			
FREESCALE	MC68HC908GR4 (QFP32)	WA68908.EXE	ADP-68HC908GR8-Q
FREESCALE	MC68HC908GR4 (SOP28)	WA68908.EXE	ADP-68HC908GR8-
S28			
FREESCALE	MC68HC908GR8	WA68908.EXE	ADP-68HC908GR8
FREESCALE	MC68HC908GR8 (QFP32)	WA68908.EXE	ADP-68HC908GR8-Q
FREESCALE	MC68HC908GR8 (SOP28)	WA68908.EXE	ADP-68HC908GR8-
S28			
FREESCALE	MC68HC908GT16 (QFP44)	WA68908.EXE	ADP-68HC908GPX-Q
FREESCALE	MC68HC908GT8 (SDIP42)	WA68908.EXE	ADP-68HC908GTX-
SD			
FREESCALE	MC68HC908JB8	WA68908.EXE	ADP-68HC908JB8
FREESCALE	MC68HC908JB8 (SOP20)	WA68908.EXE	ADP-68HC908JB8-
S20			
FREESCALE	MC68HC908JB8 (SOP28)	WA68908.EXE	ADP-68HC908JB8-
S28			
FREESCALE	MC68HC908JK1E	WA68908.EXE	ADP-68HC908JK3
FREESCALE	MC68HC908JK1E (SOP20)	WA68908.EXE	ADP-68HC908JK3-S
FREESCALE	MC68HC908JK3E	WA68908.EXE	ADP-68HC908JK3

FREESCALE	MC68HC908JK3E (SOP20)	WA68908.EXE	ADP-68HC908JK3-S
FREESCALE	MC68HC908JL16 (DIP28)	WA68908.EXE	ADP-68HC908JL3
FREESCALE	MC68HC908JL16 (QFP32)	WA68908.EXE	ADP-68HC908JL8-Q
FREESCALE	MC68HC908JL16 (SDIP32)	WA68908.EXE	ADP-68HC908JL8-
SD			
FREESCALE	MC68HC908JL16 (SOP28)	WA68908.EXE	ADP-68HC908JL3-S
FREESCALE	MC68HC908JL3E	WA68908.EXE	ADP-68HC908JL3
FREESCALE	MC68HC908JL3E (SOP28)	WA68908.EXE	ADP-68HC908JL3-S
FREESCALE	MC68HC908JL8 (QFP32)	WA68908.EXE	ADP-68HC908JL8-Q
FREESCALE	MC68HC908JL8 (SDIP32)	WA68908.EXE	ADP-68HC908JL8-
SD			
FREESCALE	MC68HC908JL8 (SOP28)	WA68908.EXE	ADP-68HC908JL3-S
FREESCALE	MC68HC908JR32 (QFP64)	WA68908.EXE	ADP-68HC908JR32-
Q64			
FREESCALE	MC68HC908JW32 (LQFP52)	WA68908.EXE	ADP-68HC908JW32-
LQ52			
FREESCALE	MC68HC908JW32 (MLF48)	WA68908.EXE	ADP-68HC908JW32-
ML			
FREESCALE	MC68HC908KX2	WA68908.EXE	ADP-68HC908KX
FREESCALE	MC68HC908KX2 (SOP16)	WA68908.EXE	ADP-68HC908KX-S
FREESCALE	MC68HC908KX8	WA68908.EXE	ADP-68HC908KX
FREESCALE	MC68HC908KX8 (SOP16)	WA68908.EXE	ADP-68HC908KX-S
FREESCALE	MC68HC908LJ12 (LQFP52)	WA68908.EXE	ADP-68HC908LJ-
LQ52			
FREESCALE	MC68HC908LJ12 (LQFP64)	WA68908.EXE	ADP-68HC908LJ-
LQ64			
FREESCALE	MC68HC908LJ12 (QFP64)	WA68908.EXE	ADP-68HC908LJ-
QF64			
FREESCALE	MC68HC908LJ8 (LQFP52)	WA68908.EXE	ADP-68HC908LJ-
LQ52			
FREESCALE	MC68HC908MR16 (QFP64)	WA68908.EXE	ADP-68HC908MR32-
Q			
FREESCALE	MC68HC908MR32 (QFP64)	WA68908.EXE	ADP-68HC908MR32-
Q			
FREESCALE	MC68HC908MR8	WA68908.EXE	ADP-68HC908MR8
FREESCALE	MC68HC908MR8 (QFP32)	WA68908.EXE	ADP-68HC908MR8-
Q32			
FREESCALE	MC68HC908MR8 (SOP28)	WA68908.EXE	ADP-68HC908MR8-S
FREESCALE	MC68HC908QT1	WA68908.EXE	ADP-68HC908QYX
FREESCALE	MC68HC908QT1 (SOP8)	WA68908.EXE	ADP-68HC908QYX-
S8			
FREESCALE	MC68HC908QT2	WA68908.EXE	ADP-68HC908QYX
FREESCALE	MC68HC908QT2 (SOP8)	WA68908.EXE	ADP-68HC908QYX-
S8			
FREESCALE	MC68HC908QT4	WA68908.EXE	ADP-68HC908QYX
FREESCALE	MC68HC908QT4 (SOP8)	WA68908.EXE	ADP-68HC908QYX-
S8			
FREESCALE	MC68HC908QY1 (SOP16)	WA68908.EXE	ADP-68HC908QYX-S
FREESCALE	MC68HC908QY1 (TSSOP16)	WA68908.EXE	ADP-68HC908QYX-
TS			
FREESCALE	MC68HC908QY2	WA68908.EXE	ADP-68HC908QYX
FREESCALE	MC68HC908QY2 (SOP16)	WA68908.EXE	ADP-68HC908QYX-S
FREESCALE	MC68HC908QY4	WA68908.EXE	ADP-68HC908QYX
FREESCALE	MC68HC908QY4 (SOP16)	WA68908.EXE	ADP-68HC908QYX-S
FREESCALE	MC68HC908QY4 (TSSOP16)	WA68908.EXE	ADP-68HC908QYX-
TS			
FREESCALE	MC68HC908RF2 (QFP32)	WA68908.EXE	ADP-68HC908RF2-
TQ			
FREESCALE	MC68HC908SR12 (QFP48)	WA68908.EXE	ADP-68HC908SR12-
Q			
FREESCALE	MC68HC908SR12 (SDIP42)	WA68908.EXE	ADP-68HC908SR12-
SD			
FREESCALE	MC68HR705J1A	WAMMPU.EXE	ADP-68HC705J1A/-
S			

FREESCALE 68HC705J1A/J1A-S	MC68HRC705J1A	WAMMPU.EXE ADP-
FREESCALE S	MC68HRC705KJ1	WAMMPU.EXE ADP-68HC705KJ1/-
FREESCALE	MC68L11E1	WAMMPU.EXE ADP-68HC711E
FREESCALE	MC68S711E9	WAMMPU.EXE ADP-68HC711E/E9-
Q		
FREESCALE	S553104T2	WA68908.EXE ADP-68HC908QYX
FREESCALE	S553104T2 (SOP8)	WA68908.EXE ADP-68HC908QYX-
S8		
FREESCALE	S553104T4 (SOP8)	WA68908.EXE ADP-68HC908QYX-
S8		
FREESCALE	S553104Y4	WA68908.EXE ADP-68HC908QYX
FREESCALE	S553104Y4 (SOP16)	WA68908.EXE ADP-68HC908QYX-S
FREESCALE	S553104Y4 (TSSOP16)	WA68908.EXE ADP-68HC908QYX-
TS		
FREESCALE	XC68HC805P18 (SOP28)	WAMMPU.EXE ADP-68805P18-S
FUJITSU	MBM27128 [21V]	WMEM1.EXE
FUJITSU	MBM27256 [12.5V]	WMEM1.EXE
FUJITSU	MBM2732A [21V]	WMEM1.EXE
FUJITSU	MBM2732 [25V]	WMEM1.EXE
FUJITSU	MBM2764 [21V]	WMEM1.EXE
FUJITSU	MBM27C1000	WMEM1.EXE
FUJITSU	MBM27C1001	WMEM1.EXE
FUJITSU	MBM27C1024	WMEM1.EXE
FUJITSU	MBM27C1028	WMEM1.EXE
FUJITSU	MBM27C128 [21V]	WMEM1.EXE
FUJITSU	MBM27C2048	WMEM1.EXE
FUJITSU	MBM27C256A [12.5V]	WMEM1.EXE
FUJITSU	MBM27C256H [21V]	WMEM1.EXE
FUJITSU	MBM27C32A [21V]	WMEM1.EXE
FUJITSU	MBM27C4001	WMEM1.EXE
FUJITSU	MBM27C4096	WMEM1.EXE
FUJITSU	MBM27C512 [12.5V]	WMEM1.EXE
FUJITSU	MBM27C64 [21V]	WMEM1.EXE
FUJITSU	MBM8516 [25V]	WMEM1.EXE
FUJITSU	MBM8532 [25V]	WMEM1.EXE
FUJITSU	MB84VD21194DA	WA28F.EXE ADP-K5A3240-BG
FUJITSU	MBM28C64	WMEM1.EXE
FUJITSU	MBM28C65	WMEM1.EXE
FUJITSU	MBM28F010	WMEM1.EXE
FUJITSU	MBM29DL161BD-PBT	WA28F.EXE ADP-29F160-BG
FUJITSU	MBM29DL161BD-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29DL161TD-PBT	WA28F.EXE ADP-29F160-BG
FUJITSU	MBM29DL161TD-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29DL162BD-PBT	WA28F.EXE ADP-29F160-BG
FUJITSU	MBM29DL162BD-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29DL162TD-PBT	WA28F.EXE ADP-29F160-BG
FUJITSU	MBM29DL162TD-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29DL162TE-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29DL163BD-PBT	WA28F.EXE ADP-29F160-BG
FUJITSU	MBM29DL163BD-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29DL163BE-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29DL163TD-PBT	WA28F.EXE ADP-29F160-BG
FUJITSU	MBM29DL163TD-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29DL164BD-PBT	WA28F.EXE ADP-29F160-BG

FUJITSU TS/TSV2	MBM29DL164BD-PFTN	WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29DL164BE-PFCN	WA28F.EXE ADP-49F800-
FUJITSU FUJITSU TS/TSV2	MBM29DL164TD-PBT MBM29DL164TD-PFTN	WA28F.EXE ADP-29F160-BG WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29DL321BD-PFTN	WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29DL321TD-PFTN	WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29DL322BD-PFTN	WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29DL322TD-PFTN	WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29DL323BD-PFTN	WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29DL323TD-PFTN	WA28F.EXE ADP-49F800-
FUJITSU FUJITSU TS/TSV2	MBM29DL323TE-PBT MBM29DL323TE-PFTN	WA28F.EXE ADP-M29DW32X-BG WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29DL324BD-PFTN	WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29DL324BE-PFTN	WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29DL324TD-PFTN	WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29DL324TE-PFTN	WA28F.EXE ADP-49F800-
FUJITSU FUJITSU TS/TSV2	MBM29DL32BF-PBT MBM29DL32BF-PFTN	WA28F.EXE ADP-K8D6316-BG WA28F.EXE ADP-49F800-
FUJITSU PS/TS/TSV2	MBM29DL400BB	WA28F.EXE ADP-29F800-
FUJITSU TS/TSV2	MBM29DL400BB*	WA28F.EXE ADP-49F800-
FUJITSU PS/TS/TSV2	MBM29DL400TB	WA28F.EXE ADP-29F800-
FUJITSU TS/TSV2	MBM29DL400TB*	WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29DL640E-TN	WA28F.EXE ADP-49F800-
FUJITSU FUJITSU PS/TS/TSV2	MBM29DL64DF-TN MBM29DL800B	WA28F.EXE ADP-49F800-TSV2 WA28F.EXE ADP-29F800-
FUJITSU TS/TSV2	MBM29DL800B*	WA28F.EXE ADP-49F800-
FUJITSU PS/TS/TSV2	MBM29DL800BB	WA28F.EXE ADP-29F800-
FUJITSU TS/TSV2	MBM29DL800BB*	WA28F.EXE ADP-49F800-
FUJITSU PS/TS/TSV2	MBM29DL800T	WA28F.EXE ADP-29F800-
FUJITSU TS/TSV2	MBM29DL800T*	WA28F.EXE ADP-49F800-
FUJITSU PS/TS/TSV2	MBM29DL800TB	WA28F.EXE ADP-29F800-
FUJITSU TS/TSV2	MBM29DL800TB*	WA28F.EXE ADP-49F800-
FUJITSU	MBM29F002B	WMEM1.EXE
FUJITSU	MBM29F002NB	WMEM1.EXE
FUJITSU	MBM29F002NT	WMEM1.EXE
FUJITSU	MBM29F002SB	WMEM1.EXE

FUJITSU	MBM29F002ST	WMEM1.EXE
FUJITSU	MBM29F002T	WMEM1.EXE
FUJITSU	MBM29F016	WA28F.EXE ADP-29F016-TS
FUJITSU	MBM29F016A	WA28F.EXE ADP-29F016-TS
FUJITSU	MBM29F017A-PFTN	WA28F.EXE ADP-29F016-TS
FUJITSU	MBM29F033C-PTN	WA28F.EXE ADP-29F080-TS
FUJITSU	MBM29F040	WMEM1.EXE
FUJITSU	MBM29F040A	WMEM1.EXE
FUJITSU	MBM29F040B	WMEM1.EXE
FUJITSU	MBM29F040C	WMEM1.EXE
FUJITSU	MBM29F080A-PF	WA28F.EXE ADP-29F080-PS
FUJITSU	MBM29F080A-PFTN	WA28F.EXE ADP-29F016-TS
FUJITSU	MBM29F080A-PTN	WA28F.EXE ADP-29F080-TS
FUJITSU	MBM29F080PF	WA28F.EXE ADP-29F080-PS
FUJITSU	MBM29F080PFTN	WA28F.EXE ADP-29F016-TS
FUJITSU	MBM29F160BE-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F160DB-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F160DT-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F160TE-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F200B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29F200B*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F200BC	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29F200BC*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F200T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29F200T*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F200TC	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29F200TC*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F400B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29F400B*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F400BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29F400BB*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F400BC	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29F400BC*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F400T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29F400T*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F400TB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29F400TB*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F400TC	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29F400TC*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F800B	WA28F.EXE ADP-29F800-

PS/TS/TSV2		
FUJITSU	MBM29F800B*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F800BA	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29F800BA*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F800T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29F800T*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29F800TA	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29F800TA*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29LV001BC	WMEM1.EXE
FUJITSU	MBM29LV001TC	WMEM1.EXE
FUJITSU	MBM29LV002B	WA28F.EXE ADP-29F008-PS/TS
FUJITSU	MBM29LV002T	WA28F.EXE ADP-29F008-PS/TS
FUJITSU	MBM29LV004B	WA28F.EXE ADP-29F008-PS/TS
FUJITSU	MBM29LV004T	WA28F.EXE ADP-29F008-PS/TS
FUJITSU	MBM29LV008B	WA28F.EXE ADP-29F008-PS/TS
FUJITSU	MBM29LV008T	WA28F.EXE ADP-29F008-PS/TS
FUJITSU	MBM29LV016B	WA28F.EXE ADP-29F008-TS
FUJITSU	MBM29LV016T	WA28F.EXE ADP-29F008-TS
FUJITSU	MBM29LV017-PTN	WA28F.EXE ADP-29F008-TS
FUJITSU	MBM29LV017-PTR	WA28F.EXE ADP-29F008-TSR
FUJITSU	MBM29LV040B	WMEM1.EXE
FUJITSU	MBM29LV080A-PFTN	WA28F.EXE ADP-29F008-TS
FUJITSU	MBM29LV080A-PFTR	WA28F.EXE ADP-29F008-TSR
FUJITSU	MBM29LV160B-PBT	WA28F.EXE ADP-29F160-BG
FUJITSU	MBM29LV160B-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29LV160BE-PBT	WA28F.EXE ADP-49B1614A-BG
FUJITSU	MBM29LV160BE-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29LV160T-PBT	WA28F.EXE ADP-29F160-BG
FUJITSU	MBM29LV160T-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29LV160TE-PBT	WA28F.EXE ADP-49B1614A-BG
FUJITSU	MBM29LV160TE-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29LV160TM-TN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29LV200B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29LV200B*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29LV200T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29LV200T*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29LV320BE-TN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29LV320TE-TN	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29LV400B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29LV400B*	WA28F.EXE ADP-49F800-
TS/TSV2		
FUJITSU	MBM29LV400BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
FUJITSU	MBM29LV400BB*	WA28F.EXE ADP-49F800-
TS/TSV2		

FUJITSU TS/TSV2	MBM29LV400BC	WA28F.EXE ADP-49F800-
FUJITSU PS/TS/TSV2	MBM29LV400T	WA28F.EXE ADP-29F800-
FUJITSU TS/TSV2	MBM29LV400T*	WA28F.EXE ADP-49F800-
FUJITSU PS/TS/TSV2	MBM29LV400TB	WA28F.EXE ADP-29F800-
FUJITSU TS/TSV2	MBM29LV400TB*	WA28F.EXE ADP-49F800-
FUJITSU	MBM29LV400TC	WA28F.EXE ADP-29F800-TS
FUJITSU TS/TSV2	MBM29LV400TC*	WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29LV650UE-PFTN	WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29LV651UE-PFTN	WA28F.EXE ADP-49F800-
FUJITSU PS/TS/TSV2	MBM29LV800B	WA28F.EXE ADP-29F800-
FUJITSU TS/TSV2	MBM29LV800B*	WA28F.EXE ADP-49F800-
FUJITSU PS/TS/TSV2	MBM29LV800BA	WA28F.EXE ADP-29F800-
FUJITSU TS/TSV2	MBM29LV800BA*	WA28F.EXE ADP-49F800-
FUJITSU	MBM29LV800BA-PB	WA28F.EXE ADP-29F800-BG
FUJITSU	MBM29LV800BA-PBT*	WA28F.EXE ADP-K8D6316-BG
FUJITSU PS/TS/TSV2	MBM29LV800BB	WA28F.EXE ADP-29F800-
FUJITSU TS/TSV2	MBM29LV800BB*	WA28F.EXE ADP-49F800-
FUJITSU TS/TSV2	MBM29LV800BE-PFTN	WA28F.EXE ADP-49F800-
FUJITSU PS/TS/TSV2	MBM29LV800T	WA28F.EXE ADP-29F800-
FUJITSU TS/TSV2	MBM29LV800T*	WA28F.EXE ADP-49F800-
FUJITSU PS/TS/TSV2	MBM29LV800TA	WA28F.EXE ADP-29F800-
FUJITSU TS/TSV2	MBM29LV800TA*	WA28F.EXE ADP-49F800-
FUJITSU	MBM29LV800TA-PB	WA28F.EXE ADP-29F800-BG
FUJITSU	MBM29LV800TA-PBT*	WA28F.EXE ADP-K8D6316-BG
FUJITSU PS/TS/TSV2	MBM29LV800TB	WA28F.EXE ADP-29F800-
FUJITSU TS/TSV2	MBM29LV800TB*	WA28F.EXE ADP-49F800-
FUJITSU	MBM29PL12LM	WA28F.EXE ADP-29LV640-TS
FUJITSU TS/TSV2	MBM29PL160BD-PFTN	WA28F.EXE ADP-29PL160-
FUJITSU TS/TSV2	MBM29PL160TD-PFTN	WA28F.EXE ADP-29PL160-
FUJITSU TS/TSV2	MBM29PL32BM-TN	WA28F.EXE ADP-49F800-
FUJITSU	MBM29PL64LM-TN	WA28F.EXE ADP-49F800-TSV2
FUJITSU	MB89F202 (SDIP)	WAMPU3.EXE ADP-MB89F202-SD
FUJITSU	MB89P195/A	WAMPU7.EXE ADP-MB89P195-S
FUJITSU	MB89P985 (LQFP)	WAMPU3.EXE ADP-MB89XX-LQ64
FUJITSU	MB90F347CA (QFP)	WAMPU3.EXE ADP-MB90F347-Q
FUJITSU	MB90F462 (QFP)	WAMPU3.EXE ADP-MB90F497G-
QV2		
FUJITSU	MB90F497G (QFP)	WAMPU3.EXE ADP-MB90F497G-Q
FUJITSU	MB90F543GS (QFP)	WAMPU3.EXE ADP-MB90F543-Q
FUJITSU	MB90F543GS* (QFP)	WAMPU3.EXE ADP-MB90F543-Q

FUJITSU	MB90F546G (QFP)	WAMPU3.EXE	ADP-MB90F347-Q
FUJITSU	MB90F947 (QFP)	WAMPU3.EXE	ADP-MB90F347-Q
GENCORE	GC87C510A0 (DIP14)	WASIG.EXE	ADP-GC87C510
GENCORE	GC87C510A0 (DIP16)	WASIG.EXE	ADP-GC87C510
GENCORE	GC87C510A0 (DIP20)	WASIG.EXE	ADP-GC87C510
GENCORE	GC87C510A0 (DIP8)	WASIG.EXE	ADP-GC87C510
GENCORE	GC87C510A0 (SOP14)	WASIG.EXE	ADP-GC87C510-
S14/-S16			
GENCORE	GC87C510A0 (SOP16 3.9mm)	WASIG.EXE	ADP-GC87C510-S16
GENCORE	GC87C510A0 (SOP16 7.5mm)	WASIG.EXE	ADP-GC87C510-S20
GENCORE	GC87C510A0 (SOP20)	WASIG.EXE	ADP-GC87C510-S20
GENCORE	GC87C510A0 (SOP8)	WASIG.EXE	ADP-GC87C510-
S14/-S16			
GENCORE	GC87C510A1 (SOP8)	WASIG.EXE	ADP-GC87C510-
S14/-S16			
GENCORE	GC87C520 (DIP28)	WASIG.EXE	ADP-GC87C520
GENCORE	GC87C520 (SOP28)	WASIG.EXE	ADP-GC87C520-S28
GENCORE	GC89C591A0 (PLCC44)	WASIG.EXE	CNV-PLCC-MPU51B
GENCORE	GC89C591A0 (QFP100)	WASIG.EXE	ADP-GC89C591-
Q100			
GENCORE	GC89C591A0 (QFP44)	WASIG.EXE	CNV-QFP-MPU51B
GENCORE	GC89C591A0 (QFP64)	WASIG.EXE	ADP-GC89C591-Q64
GENCORE	GC89C591A0 (QFP80)	WASIG.EXE	ADP-GC89C591-Q80
GENCORE	GC89C591A0 (SDIP64)	WASIG.EXE	ADP-GC89C591-SD
GOAL	GT29LV160BM	WA28F.EXE	ADP-49F800-PS
GOAL	VRS1000	WPGM51.EXE	
GOAL	VRS1100	WPGM51.EXE	
GOAL	VRS540	WPGM51.EXE	
GOAL	VRS550	WPGM51.EXE	
GOAL	VRS560	WPGM51.EXE	
GOAL	VRS570	WPGM51.EXE	
GOAL	VRS580	WPGM51.EXE	
GOAL	VRS700	WPGM51.EXE	
GOAL	VRS900	WPGM51.EXE	
GOULD	PEEL153	WPLD1.EXE	
GOULD	PEEL173	WPLD1.EXE	
GOULD	PEEL18CV8	WPLD1.EXE	
GOULD	PEEL20CG10	WPLD1.EXE	
GOULD	PEEL20CG10A	WPLD1.EXE	
GOULD	PEEL22CV10	WPLD1.EXE	
GOULD	PEEL22CV10A	WPLD1.EXE	
GOULD	PEEL22CV10A+	WPLD1.EXE	
GOULD	PEEL22CV10Z	WPLD1.EXE	
GOULD	PEEL253	WPLD1.EXE	
GOULD	PEEL273	WPLD1.EXE	
GSSP	GM120BP	WAGSSP.EXE	ADP-GM120-Q64
GTK	ARF35LV020 (Hidden)	WMEM1.EXE	
GTK	ARF35LV020 (Normal)	WMEM1.EXE	
GTK	ARF35LV020 (Total)	WMEM1.EXE	
GTK	AVF35LV040	WMEM1.EXE	
HANBIT	HMNR5128DV	WMEM1.EXE	
HARRIS	7602/03	WBPPGM.EXE	
HARRIS	7610/11	WBPPGM.EXE	
HARRIS	76161	WBPPGM.EXE	
HARRIS	76165	WBPPGM.EXE	
HARRIS	7620/21	WBPPGM.EXE	
HARRIS	76321	WBPPGM.EXE	
HARRIS	7640/41	WBPPGM.EXE	
HARRIS	7642/43	WBPPGM.EXE	
HARRIS	7649	WBPPGM.EXE	
HARRIS	7681	WBPPGM.EXE	
HARRIS	7685	WBPPGM.EXE	
HITACHI	27256G [12.5V]	WMEM1.EXE	
HITACHI	27512G [12.5V]	WMEM1.EXE	

HITACHI	27512P[12.5V]	WMEM1.EXE
HITACHI	27C256AG[12.5V]	WMEM1.EXE
HITACHI	27C256HG[12.5V]	WMEM1.EXE
HITACHI	27C512G[12.5V]	WMEM1.EXE
HITACHI	462716[25V]	WMEM1.EXE
HITACHI	462732A[21V]	WMEM1.EXE
HITACHI	462732[25V]	WMEM1.EXE
HITACHI	4827128[21V]	WMEM1.EXE
HITACHI	482732A[21V]	WMEM1.EXE
HITACHI	482764[21V]	WMEM1.EXE
HITACHI	4827C64[21V]	WMEM1.EXE
HITACHI	HN27128AG[12.5V]	WMEM1.EXE
HITACHI	HN27C101	WMEM1.EXE
HITACHI	HN27C101A	WMEM1.EXE
HITACHI	HN27C1024	WMEM1.EXE
HITACHI	HN27C301	WMEM1.EXE
HITACHI	HN27C4000	WMEM1.EXE
HITACHI	HN27C4001	WMEM1.EXE
HITACHI	HN27C4096	WMEM1.EXE
HITACHI	HN27C64[21V]	WMEM1.EXE
HITACHI	HN28F101	WMEM1.EXE
HITACHI	HN29C101	WMEM1.EXE
HITACHI	HN29C101B	WMEM1.EXE
HITACHI	HN58064	WMEM1.EXE
HITACHI	HN58C1000	WMEM1.EXE
HITACHI	HN58C1001	WMEM1.EXE
HITACHI	HN58C256	WMEM1.EXE
HITACHI	HN58C257	WMEM1.EXE
HITACHI	HN58C65	WMEM1.EXE
HITACHI	HN58C66	WMEM1.EXE
HITACHI	HN58V1001	WMEM1.EXE
HITACHI	HN58V257	WMEM1.EXE
HITACHI	HN58X2402I	WSPROM.EXE
HITACHI	HN58X2402SI	WSPROM.EXE
HITACHI	HN58X2404SI	WSPROM.EXE
HITACHI	HN58X2408I	WSPROM.EXE
HITACHI	HD4074008C	WAHMPU.EXE ADP-4019
HITACHI	HD4074008F	WAHMPU.EXE ADP-4019-Q
HITACHI	HD4074008S	WAHMPU.EXE ADP-4019
HITACHI	HD4074019C	WAHMPU.EXE ADP-4019
HITACHI	HD4074019F	WAHMPU.EXE ADP-4019-Q
HITACHI	HD4074019H	WAHMPU.EXE ADP-4019H-Q
HITACHI	HD4074019S	WAHMPU.EXE ADP-4019
HITACHI	HD4074054H	WAHMPU.EXE ADP-4654-Q
HITACHI	HD4074054S	WAHMPU.EXE ADP-4654-SD
HITACHI	HD4074094H	WAHMPU.EXE ADP-4654-Q
HITACHI	HD4074094S	WAHMPU.EXE ADP-4654-SD
HITACHI	HD4074224S	WAHMPU.EXE ADP-4224-SD
HITACHI	HD4074308C	WAHMPU.EXE ADP-4308
HITACHI	HD4074308P	WAHMPU.EXE ADP-4308
HITACHI	HD4074308S	WAHMPU.EXE ADP-4308-SD
HITACHI	HD4074318H	WAHMPU.EXE ADP-4318-Q
HITACHI	HD4074318S	WAHMPU.EXE ADP-4318-SD
HITACHI	HD4074329C	WAHMPU.EXE ADP-4329
HITACHI	HD4074329FS	WAHMPU.EXE ADP-4329-Q
HITACHI	HD4074329S	WAHMPU.EXE ADP-4329
HITACHI	HD4074339S	WAHMPU.EXE ADP-4339
HITACHI	HD4074344FP	WAHMPU.EXE ADP-4344-S28
HITACHI	HD4074344S	WAHMPU.EXE ADP-4344-SD
HITACHI	HD4074394FP	WAHMPU.EXE ADP-4344-S28
HITACHI	HD4074394S	WAHMPU.EXE ADP-4344-SD
HITACHI	HD4074408C	WAHMPU.EXE ADP-4418
HITACHI	HD4074408F	WAHMPU.EXE ADP-4418-Q
HITACHI	HD4074408S	WAHMPU.EXE ADP-4418

HITACHI	HD4074418C	WAHMPU.EXE	ADP-4418
HITACHI	HD4074418F	WAHMPU.EXE	ADP-4418-Q
HITACHI	HD4074418S	WAHMPU.EXE	ADP-4418
HITACHI	HD4074459H	WAHMPU.EXE	ADP-4459-Q
HITACHI	HD4074608FS	WAHMPU.EXE	ADP-4618
HITACHI	HD4074608H	WAHMPU.EXE	ADP-4618A
HITACHI	HD4074618FS	WAHMPU.EXE	ADP-4618
HITACHI	HD4074618H	WAHMPU.EXE	ADP-4618A
HITACHI	HD4074629FS	WAHMPU.EXE	ADP-4629-Q
HITACHI	HD4074629H	WAHMPU.EXE	ADP-4629-TQ
HITACHI	HD4074629TF	WAHMPU.EXE	ADP-4629-TQ
HITACHI	HD4074654H	WAHMPU.EXE	ADP-4654-Q
HITACHI	HD4074654S	WAHMPU.EXE	ADP-4654-SD
HITACHI	HD4074808FS	WAHMPU.EXE	ADP-4618
HITACHI	HD4074808H	WAHMPU.EXE	ADP-4618A
HITACHI	HD4074818FS	WAHMPU.EXE	ADP-4618
HITACHI	HD4074818H	WAHMPU.EXE	ADP-4618A
HITACHI	HD4074889H	WAHMPU.EXE	ADP-4889-Q
HITACHI	HD4074889TE	WAHMPU.EXE	ADP-4889-TQ
HITACHI	HD4074899TE	WAHMPU.EXE	ADP-4889-TQ
HITACHI	HD407A4069H	WAHMPU.EXE	ADP-4669-Q
HITACHI	HD407A4374FT	WAHMPU.EXE	ADP-4384-S
HITACHI	HD407A4384FT	WAHMPU.EXE	ADP-4384-S
HITACHI	HD407A4384S	WAHMPU.EXE	ADP-4384-SD
HITACHI	HD407A4389FT	WAHMPU.EXE	ADP-4389-S
HITACHI	HD407A4639RF	WAHMPU.EXE	ADP-4639-Q
HITACHI	HD407A4669H	WAHMPU.EXE	ADP-4669-Q
HITACHI	HD407C4389FT	WAHMPU.EXE	ADP-4389-S
HITACHI	HD407L4808FS	WAHMPU.EXE	ADP-4618
HITACHI	HD407L4808H	WAHMPU.EXE	ADP-4618A
HITACHI	HD407L4818FS	WAHMPU.EXE	ADP-4618
HITACHI	HD407L4818H	WAHMPU.EXE	ADP-4618A
HITACHI	HD63701V0	WMPU2.EXE	
HITACHI	HD637A01V0	WMPU2.EXE	
HITACHI	HD637B01V0	WMPU2.EXE	
HITACHI	HD647180X0CP	WAHMPU.EXE	ADP-647180-PL
HITACHI	HD647180X0FS	WAHMPU.EXE	ADP-647180-Q
HITACHI	HD647180X0P	WAHMPU.EXE	ADP-647180
HITACHI	HD6472237F	WAHMPU.EXE	ADP-6472237-QA
HITACHI	HD6472237TE	WAHMPU.EXE	ADP-6472237-QB
HITACHI	HD6472237TF	WAHMPU.EXE	ADP-6472237-TQ
HITACHI	HD6472246F	WAHMPU.EXE	ADP-6472246-Q
HITACHI	HD6472246TE	WAHMPU.EXE	ADP-6472246-Q
HITACHI	HD6473032F	WAHMPU.EXE	ADP-H8/3032-Q
HITACHI	HD6473035F	WAHMPU.EXE	ADP-6473035-Q
HITACHI	HD6473035TE	WAHMPU.EXE	ADP-6473035-TQ
HITACHI	HD6473042F	WAHMPU.EXE	ADP-H8/3048-Q
HITACHI	HD6473042FP	WAHMPU.EXE	ADP-6473042FP-QA
HITACHI	HD6473042TF	WAHMPU.EXE	ADP-H8/3048-Q
HITACHI	HD6473048F	WAHMPU.EXE	ADP-H8/3048-Q
HITACHI	HD6473048TF	WAHMPU.EXE	ADP-H8/3048-Q
HITACHI	HD6473214F	WAHMPU.EXE	ADP-H8/3217-Q
HITACHI	HD6473214P	WAHMPU.EXE	ADP-H8/3217-SD
HITACHI	HD6473217F	WAHMPU.EXE	ADP-H8/3217-Q
HITACHI	HD6473217P	WAHMPU.EXE	ADP-H8/3217-SD
HITACHI	HD6473228CP	WAHMPU.EXE	ADP-H8/325-PL
HITACHI	HD6473228F	WAHMPU.EXE	ADP-H8/325-Q
HITACHI	HD6473228P	WAHMPU.EXE	ADP-H8/325
HITACHI	HD6473238CP	WAHMPU.EXE	ADP-H8/325-PL
HITACHI	HD6473238F	WAHMPU.EXE	ADP-H8/325-Q
HITACHI	HD6473238P	WAHMPU.EXE	ADP-H8/325
HITACHI	HD6473256CP	WAHMPU.EXE	ADP-H8/3257-PL
HITACHI	HD6473256F	WAHMPU.EXE	ADP-H8/3217-Q
HITACHI	HD6473256P	WAHMPU.EXE	ADP-H8/3217-SD

HITACHI	HD6473257C
HITACHI	HD6473257CP
HITACHI	HD6473257F
HITACHI	HD6473257P
HITACHI	HD6473258CP
HITACHI	HD6473258F
HITACHI	HD6473258P
HITACHI	HD6473278F
HITACHI	HD6473294F
HITACHI	HD6473297F
HITACHI	HD6473298P
HITACHI	HD6473308CP
HITACHI	HD6473308F
HITACHI	HD6473332CP
HITACHI	HD6473332TF
HITACHI	HD6473334F
HITACHI	HD6473334TF
HITACHI	HD6473337CP
HITACHI	HD6473337TF
HITACHI	HD6473378CP
HITACHI	HD6473378F
HITACHI	HD6473378VCP
HITACHI	HD6473378VF
HITACHI	HD6473388CP
HITACHI	HD6473388F
HITACHI	HD6473388VCP
HITACHI	HD6473388VF
HITACHI	HD6473434F
HITACHI	HD6473434TF
HITACHI	HD6473614H
HITACHI	HD6473644H
HITACHI	HD6473644P
HITACHI	HD6473657H
HITACHI	HD6473657W
HITACHI	HD6473657X
HITACHI	HD6473714H
HITACHI	HD6473714P
HITACHI	HD6473724F
HITACHI	HD6473724H
HITACHI	HD6473726H
HITACHI	HD64738024H
HITACHI	HD64738024W
HITACHI	HD6473802FP
HITACHI	HD6473802H
HITACHI	HD6473827H
HITACHI	HD6473827W
HITACHI	HD6473834F
HITACHI	HD6473834H
HITACHI	HD6473834X
HITACHI	HD6473837F
HITACHI	HD6473837H
HITACHI	HD6473837X
HITACHI	HD6473847H
HITACHI	HD6473847RH
HITACHI	HD6473867W
HITACHI	HD6473927X
HITACHI	HD6473937X
HITACHI	HD6475208C
HITACHI	HD6475208CP
HITACHI	HD6475208F
HITACHI	HD6475208P
HITACHI	HD6475328CP
HITACHI	HD6475328F
HITACHI	HD6475348CP

WAHMPU.EXE	ADP-H8/3217-SD
WAHMPU.EXE	ADP-H8/3257-PL
WAHMPU.EXE	ADP-H8/3217-Q
WAHMPU.EXE	ADP-H8/3217-SD
WAHMPU.EXE	ADP-H8/325-PL
WAHMPU.EXE	ADP-H8/325-Q
WAHMPU.EXE	ADP-H8/325
WAHMPU.EXE	ADP-6473278-Q
WAHMPU.EXE	ADP-H8/3297-Q
WAHMPU.EXE	ADP-H8/3297-Q
WAHMPU.EXE	ADP-6473298-SD
WAHMPU.EXE	ADP-H8/330
WAHMPU.EXE	ADP-H8/330-Q
WAHMPU.EXE	ADP-H8/3332
WAHMPU.EXE	ADP-H8/3332-Q
WAHMPU.EXE	ADP-6473334-Q
WAHMPU.EXE	ADP-6473334-TQ
WAHMPU.EXE	ADP-6473337-PL
WAHMPU.EXE	ADP-6473334-TQ
WAHMPU.EXE	ADP-H8/330
WAHMPU.EXE	ADP-H8/330-Q
WAHMPU.EXE	ADP-H8/330
WAHMPU.EXE	ADP-H8/330-Q
WAHMPU.EXE	ADP-H8/330
WAHMPU.EXE	ADP-H8/330-Q
WAHMPU.EXE	ADP-H8/330
WAHMPU.EXE	ADP-H8/330-Q
WAHMPU.EXE	ADP-H8/3434-Q
WAHMPU.EXE	ADP-H8/3434-Q
WAHMPU.EXE	ADP-6473614-Q
WAHMPU.EXE	ADP-H8/3644-Q
WAHMPU.EXE	ADP-H8/3644-SD
WAHMPU.EXE	ADP-6473657-QA
WAHMPU.EXE	ADP-6473657-TQ
WAHMPU.EXE	ADP-6473657-TQF
WAHMPU.EXE	ADP-H8/3714-Q
WAHMPU.EXE	ADP-H8/3714-SD
WAHMPU.EXE	ADP-6473724-QB
WAHMPU.EXE	ADP-6473724-QA
WAHMPU.EXE	ADP-6473724-QA
WAHMPU.EXE	ADP-64738024-QA
WAHMPU.EXE	ADP-64738024-TQ
WAHMPU.EXE	ADP-6473802-QE
WAHMPU.EXE	ADP-6473802-Q
WAHMPU.EXE	ADP-6473827-Q
WAHMPU.EXE	ADP-6473827-TQ
WAHMPU.EXE	ADP-H8/3834-QA
WAHMPU.EXE	ADP-H8/3834-Q
WAHMPU.EXE	ADP-H8/3834-Q
WAHMPU.EXE	ADP-6473837-QA
WAHMPU.EXE	ADP-6473837-Q
WAHMPU.EXE	ADP-6473837-Q
WAHMPU.EXE	ADP-6473847-Q
WAHMPU.EXE	ADP-6473847-Q
WAHMPU.EXE	ADP-6473827-TQ
WAHMPU.EXE	ADP-6473927-TQ
WAHMPU.EXE	ADP-6473937-TQ
WAHMPU.EXE	ADP-H8/520
WAHMPU.EXE	ADP-H8/520-PL
WAHMPU.EXE	ADP-H8/520-Q
WAHMPU.EXE	ADP-H8/520
WAHMPU.EXE	ADP-H8/532
WAHMPU.EXE	ADP-H8/532-Q
WAHMPU.EXE	ADP-H8/532

HITACHI	HD6475348SF	WAHMPU.EXE	ADP-H8/532-Q
HITACHI	HD6475368CP	WAHMPU.EXE	ADP-H8/532
HITACHI	HD6475368F	WAHMPU.EXE	ADP-H8/532-Q
HITACHI	HD6475378F	WAHMPU.EXE	ADP-H8/532-Q
HITACHI	HD6475388F	WAHMPU.EXE	ADP-6475388-Q
HITACHI	HD6475398F	WAHMPU.EXE	ADP-6475388-Q
HITACHI	HD6477034F	WAHMPU.EXE	ADP-6477034F
HITACHI	HD6477042F	WAHMPU.EXE	ADP-6477042-Q
HITACHI	HD6477043F	WAHMPU.EXE	ADP-6477043-Q
HITACHI	HD64F2132F	WAHMPU.EXE	ADP-64F2134-Q/V2
HITACHI	HD64F2134F	WAHMPU.EXE	ADP-64F2134-Q/V2
HITACHI	HD64F2148AFA	WAHMPU.EXE	ADP-64F2148-TQ
HITACHI	HD64F2149TE	WAHMPU.EXE	ADP-64F2148-TQ
HITACHI	HD64F2149YVTE	WAHMPU.EXE	ADP-64F2148-TQ
HITACHI	HD64F2215TE	WAHMPU.EXE	ADP-64F2215-Q
HITACHI	HD64F2215U	WAHMPU.EXE	ADP-64F2215-Q
HITACHI	HD64F2268FA	WAHMPU.EXE	ADP-64F2268-
Q100B			
HITACHI	HD64F2328F	WAHMPU.EXE	ADP-64F2328-
QA128			
HITACHI	HD64F2345TE	WAHMPU.EXE	ADP-64F2345-TQ
HITACHI	HD64F2357F	WAHMPU.EXE	ADP-64F2357F-Q
HITACHI	HD64F2398F	WAHMPU.EXE	ADP-64F2328-
QA128			
HITACHI	HD64F2623FA	WAHMPU.EXE	ADP-64F2623-Q
HITACHI	HD64F3039F	WAHMPU.EXE	ADP-64F3039-Q
HITACHI	HD64F3039TE	WAHMPU.EXE	ADP-64F3039-TQ
HITACHI	HD64F3048F	WAHMPU.EXE	ADP-H8/3048F-Q
HITACHI	HD64F3048TF	WAHMPU.EXE	ADP-H8/3048F-Q
HITACHI	HD64F3062ATE	WAHMPU.EXE	ADP-64F3064-TQ
HITACHI	HD64F3062BF	WAHMPU.EXE	ADP-64F3062-TQ
HITACHI	HD64F3062F	WAHMPU.EXE	ADP-64F3062-TQ
HITACHI	HD64F3062TE	WAHMPU.EXE	ADP-64F3062-TQ
HITACHI	HD64F3064F	WAHMPU.EXE	ADP-64F3064-TQ
HITACHI	HD64F3064TE	WAHMPU.EXE	ADP-64F3064-TQ
HITACHI	HD64F3067F	WAHMPU.EXE	ADP-64F3062-TQ
HITACHI	HD64F3334CP	WAHMPU.EXE	ADP-H8/3334-PL
HITACHI	HD64F3334F	WAHMPU.EXE	ADP-H8/3334-Q
HITACHI	HD64F3334TF	WAHMPU.EXE	ADP-H8/3334-TQ
HITACHI	HD64F3337CP	WAHMPU.EXE	ADP-H8/3334-PL
HITACHI	HD64F3337F	WAHMPU.EXE	ADP-H8/3334-Q
HITACHI	HD64F3337TF	WAHMPU.EXE	ADP-H8/3334-TQ
HITACHI	HD64F3434F	WAHMPU.EXE	ADP-H8/3434F-
Q(2-3)			
HITACHI	HD64F3434TF	WAHMPU.EXE	ADP-H8/3434F-
Q(2-3)			
HITACHI	HD64F3437F	WAHMPU.EXE	ADP-H8/3434F-
Q(2-3)			
HITACHI	HD64F3437STF	WAHMPU.EXE	ADP-H8/3434F-
Q(1-2)			
HITACHI	HD64F3642AH	WAHMPU.EXE	ADP-64F3644-Q
HITACHI	HD64F3642AP	WAHMPU.EXE	ADP-64F3644-SD
HITACHI	HD64F3643H	WAHMPU.EXE	ADP-64F3644-Q
HITACHI	HD64F3644H	WAHMPU.EXE	ADP-64F3644-Q
HITACHI	HD64F3644P	WAHMPU.EXE	ADP-64F3644-SD
HITACHI	HD64F3644W	WAHMPU.EXE	ADP-64F3644-TQ
HITACHI	HD64F3664BP	WAHMPU.EXE	ADP-64F3664-SD
HITACHI	HD64F3664FP	WAHMPU.EXE	ADP-64F3664-QE
HITACHI	HD64F3664FY	WAHMPU.EXE	ADP-64F3664-Q48
HITACHI	HD64F3664H	WAHMPU.EXE	ADP-64F3664-Q
HITACHI	HD64F3687FP	WAHMPU.EXE	ADP-64F3687-TQ
HITACHI	HD64F3687H	WAHMPU.EXE	ADP-64F3687-Q
HITACHI	HD64F38024F	WAHMPU.EXE	ADP-64F38024-QB
HITACHI	HD64F38024H	WAHMPU.EXE	ADP-64F38024-Q

HITACHI	HD64F38024W	WAHMPU.EXE	ADP-64F38024-TQ
HITACHI	HD64F5388F	WAHMPU.EXE	ADP-64F5388-Q
HITACHI	HD64F7044F	WAHMPU.EXE	ADP-64F7044-Q
HITACHI	HD64F7045F	WAHMPU.EXE	ADP-64F7045-Q
HITACHI	HD64F7046F	WAHMPU.EXE	ADP-64F7046-Q80
HITACHI	HD64F7410F	WAHMPU.EXE	ADP-64F7410-Q
HOLTEK	HT27C010	WMEM1.EXE	
HOLTEK	HT27C020	WMEM1.EXE	
HOLTEK	HT27C040	WMEM1.EXE	
HOLTEK	HT27C256[12.5V]	WMEM1.EXE	
HOLTEK	HT27C4096	WMEM1.EXE	
HOLTEK	HT27C512-B (PLCC)	WMEM1.EXE	CNV-PLCC-EP1M32
HOLTEK	HT27C512[12.2V]	WMEM1.EXE	
HOLTEK	HT27LC010	WMEM1.EXE	
HOLTEK	HT27LC020	WMEM1.EXE	
HOLTEK	HT27LC040	WMEM1.EXE	
HOLTEK	HT27LC4096	WMEM1.EXE	
HOLTEK	HT27LC512-B (PLCC)	WMEM1.EXE	CNV-PLCC-EP1M32
HOLTEK	HT27LC512[12.2V]	WMEM1.EXE	
HOLTEK	HT27PC010	WMEM1.EXE	
HOLTEK	HT27PC256[12.5V]	WMEM1.EXE	
HOLTEK	HT27PC512[12.2V]	WMEM1.EXE	
HOLTEK	HT28C040	WMEM1.EXE	
HOLTEK	HT24C01	WSPROM.EXE	
HOLTEK	HT24C02	WSPROM.EXE	
HOLTEK	HT24C04	WSPROM.EXE	
HOLTEK	HT24C08	WSPROM.EXE	
HOLTEK	HT24C16	WSPROM.EXE	
HOLTEK	HT24LC01	WSPROM.EXE	
HOLTEK	HT24LC02	WSPROM.EXE	
HOLTEK	HT24LC04	WSPROM.EXE	
HOLTEK	HT24LC08	WSPROM.EXE	
HOLTEK	HT24LC16	WSPROM.EXE	
HOLTEK	HT24LC32	WSPROM.EXE	
HOLTEK	HT24LC64	WSPROM.EXE	
HOLTEK	HT25LC512	WSPROM.EXE	
HOLTEK	HT93C46/LC46 (*16)	WSPROM.EXE	
HOLTEK	HT93C46/LC46 (*8)	WSPROM.EXE	
HOLTEK	HT93C56 (128*16)	WSPROM.EXE	
HOLTEK	HT93C56 (256*8)	WSPROM.EXE	
HOLTEK	HT93C66/LC66 (*16)	WSPROM.EXE	
HOLTEK	HT93C66/LC66 (*8)	WSPROM.EXE	
HOLTEK	HT93LC56 (128*16)	WSPROM.EXE	
HOLTEK	HT93LC56 (256*8)	WSPROM.EXE	
HOLTEK	HT93LC86 (1024*16)	WSPROM.EXE	
HOLTEK	HT93LC86 (2048*8)	WSPROM.EXE	
HOLTEK	HT46R14 (28PIN)	WAHT48R.EXE	
HOLTEK	HT46R22	WAHT48R.EXE	ADP-HT8BIT-
DP40/S28			
HOLTEK	HT46R23	WAHT48R.EXE	ADP-HT8BIT-
DP40/S28			
HOLTEK	HT46R232 (28PIN)	WAHT48R.EXE	
HOLTEK	HT46R232 (48PIN)	WAHT48R.EXE	ADP-HT8A-SSOP56
HOLTEK	HT46R24 (28PIN)	WAHT48R.EXE	
HOLTEK	HT46R24 (48PIN)	WAHT48R.EXE	ADP-HT8A-SSOP56
HOLTEK	HT46R46 (18PIN)	WAHT48R.EXE	
HOLTEK	HT46R46 (20PIN)	WAHT48R.EXE	
HOLTEK	HT46R47	WAHT48R.EXE	ADP-HT8BIT-
DP40/S28			
HOLTEK	HT46R47 (20PIN)	WAHT48R.EXE	
HOLTEK	HT46R48 (24PIN)	WAHT48R.EXE	
HOLTEK	HT46R51 (18PIN)	WAHT48R.EXE	
HOLTEK	HT46R51 (20PIN)	WAHT48R.EXE	
HOLTEK	HT46R52 (18PIN)	WAHT48R.EXE	

HOLTEK	HT46R52 (20PIN)	WAHT48R.EXE
HOLTEK	HT46R53 (28PIN)	WAHT48R.EXE
HOLTEK	HT46R54 (28PIN)	WAHT48R.EXE
HOLTEK	HT46R62 (56PIN)	WAHT48R.EXE ADP-HT8A-SSOP56
HOLTEK	HT46R63 (56PIN)	WAHT48R.EXE ADP-HT8A-SSOP56
HOLTEK	HT46R63 (100PIN)	WAHT48R.EXE ADP-HT8A-QF100
HOLTEK	HT46R64 (56PIN)	WAHT48R.EXE ADP-HT8A-SSOP56
HOLTEK	HT46R64 (100PIN)	WAHT48R.EXE ADP-HT8A-QF100
HOLTEK	HT46R65 (56PIN)	WAHT48R.EXE ADP-HT8A-SSOP56
HOLTEK	HT46R65 (100PIN)	WAHT48R.EXE ADP-HT8A-QF100
HOLTEK	HT48E06 (18PIN)	WAHT48R.EXE
HOLTEK	HT48R05A (18PIN) - A	WAHT48R.EXE ADP-HT48R0X
HOLTEK	HT48R05A-1 (16PIN)	WAHT48R.EXE
HOLTEK	HT48R05A-1 (18PIN)	WAHT48R.EXE
HOLTEK	HT48R06A (18PIN) - A	WAHT48R.EXE ADP-HT48R0X
HOLTEK	HT48R06A-1 (16PIN)	WAHT48R.EXE
HOLTEK	HT48R06A-1 (18PIN)	WAHT48R.EXE
HOLTEK	HT48R07A-1 (24PIN)	WAHT48R.EXE
HOLTEK	HT48R10A-1	WAHT48R.EXE ADP-HT8BIT-
DP40/S28		
HOLTEK	HT48R11 (16PIN) - A/B/C/D	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R11 (18PIN) - A/B/C/D	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R11 (18PIN) - F	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R11 (20PIN) - A/B/C/D	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R11 (20PIN) - F	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R11 (24PIN) - A/B/C	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R11 (28PIN) - AP	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R12 (16PIN) - A/B/C/D	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R12 (18PIN) - A/B/C/D	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R12 (18PIN) - F	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R12 (20PIN) - A/B/C/D	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R12 (20PIN) - F	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R12 (24PIN) - A/B/C	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R12 (28PIN) - A	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R30A-1	WAHT48R.EXE ADP-HT8BIT-
DP40/S28		
HOLTEK	HT48R31 (16PIN) - A/B/C/D	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R31 (18PIN) - A/B/C/D	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R31 (20PIN) - A/B/C/D	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R31 (20PIN) - F	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R31 (24PIN) - A/B/C	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R31 (28PIN) - A/B/C	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R31 (32PIN) - AP	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R32 (16PIN) - A/B/C/D	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R32 (18PIN) - A/B/C/D	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R32 (20PIN) - A/B/C/D	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R32 (20PIN) - F	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R32 (24PIN) - A/B/C	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R32 (28PIN) - A/B/C	WAHT48R.EXE ADP-HT48R/-S28
HOLTEK	HT48R32 (32PIN) - A	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R50 (20PIN) - A/B/C/D/E/F	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R50 (24PIN) - A/B/C/D/E/F	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R50 (28PIN) - A/B/C/D/E/F	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R50 (32PIN) - A/B/C/D/E/F	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R50 (40PIN) - A	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R50A-1	WAHT48R.EXE ADP-HT8BIT-
DP40/S28		
HOLTEK	HT48R51-1 (40PIN) - AP	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R52 (28PIN) - A/B/C/D/E/F	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R52 (40PIN) - A	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R52 (52PIN)	WAHT48R.EXE ADP-HT8A-QF52
HOLTEK	HT48R53 (52PIN)	WAHT48R.EXE ADP-HT8A-QF52
HOLTEK	HT48R70 (20PIN) - A/B/C/D/E/F	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R70 (24PIN) - A/B/C/D/E/F	WAHT48R.EXE ADP-HT48R

HOLTEK	HT48R70 (28PIN) - A/B/C/D/E/F	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R70 (32PIN) - A/B/C/D/E/F	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R70 (40PIN) - A/B/C/D/E/F	WAHT48R.EXE ADP-HT48R
HOLTEK	HT48R70A-1 (48PIN)	WAHT48R.EXE ADP-HT8A-SSOP56
HOLTEK	HT48RA0 (20PIN) - A	WAHT48R.EXE ADP-HT48RA0/-S
HOLTEK	HT48RA0-1 (24PIN)	WAHT48R.EXE
HOLTEK	HT48RA0-2 (20PIN)	WAHT48R.EXE
HOLTEK	HT48RA0A (24PIN)	WAHT48R.EXE ADP-HT48RA0-S
HOLTEK	HT48RA1 (28PIN)	WAHT48R.EXE
HOLTEK	HT48RA3	WAHT48R.EXE ADP-HT8BIT-
DP40/S28		
HOLTEK	HT48RA3 (28PIN)	WAHT48R.EXE
HOLTEK	HT48RA5 (28PIN)	WAHT48R.EXE
HOLTEK	HT48RB8 (28PIN)	WAHT48R.EXE
HOLTEK	HT49R30A-1 (48PIN)	WAHT48R.EXE ADP-HT8A-SSOP56
HOLTEK	HT49R50 (100PIN)	WAHT48R.EXE ADP-HT49R50-Q100
HOLTEK	HT49R50 (80PIN)	WAHT48R.EXE ADP-HT49R50-Q80
HOLTEK	HT49R50A-1 (100PIN)	WAHT48R.EXE ADP-HT8A-QF100
HOLTEK	HT49R50A-1 (48PIN)	WAHT48R.EXE ADP-HT8A-SSOP56
HOLTEK	HT49R70A-1 (100PIN)	WAHT48R.EXE ADP-HT8A-QF100
HOLTEK	HT82K68E	WAHT48R.EXE ADP-HT8BIT-
DP40/S28		
HOLTEK	HT82K94E (48PIN)	WAHT48R.EXE ADP-HT8A-SSOP56
HOLTEK	HT82K95E (20PIN)	WAHT48R.EXE
HOLTEK	HT82K95E (28PIN)	WAHT48R.EXE
HOLTEK	HT82K95E (48PIN)	WAHT48R.EXE ADP-HT8A-SSOP56
HOLTEK	HT82M99E (18PIN)	WAHT48R.EXE
HOLTEK	HT95A10P (28PIN)	WAHT48R.EXE
HOLTEK	HT95A20P (48PIN)	WAHT48R.EXE ADP-HT8A-SSOP56
HOLTEK	HT95A30P (48PIN)	WAHT48R.EXE ADP-HT8A-SSOP56
HOLTEK	HT95L00P (56PIN)	WAHT48R.EXE ADP-HT8A-SSOP56
HOLTEK	HT95L20P (100PIN)	WAHT48R.EXE ADP-HT8A-QF100
HOLTEK	HT95L30P (100PIN)	WAHT48R.EXE ADP-HT8A-QF100
HYNIX	27C64[12.5V]	WMEM1.EXE
HYNIX	HY29DL162B-T	WA28F.EXE ADP-49F800-
TS/TSV2		
HYNIX	HY29DL162T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
HYNIX	HY29DL163B-F	WA28F.EXE ADP-29F160-BG
HYNIX	HY29DL163T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
HYNIX	HY29F002T	WMEM1.EXE
HYNIX	HY29F040/A	WMEM1.EXE
HYNIX	HY29F080	WA28F.EXE ADP-29F080-PS/TS
HYNIX	HY29F400AB	WA28F.EXE ADP-29F800-
TS/TSV2		
HYNIX	HY29F400AB*	WA28F.EXE ADP-49F800-
TS/TSV2		
HYNIX	HY29F400AT	WA28F.EXE ADP-29F800-
TS/TSV2		
HYNIX	HY29F400AT*	WA28F.EXE ADP-49F800-
TS/TSV2		
HYNIX	HY29F400B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
HYNIX	HY29F400B*	WA28F.EXE ADP-49F800-
TS/TSV2		
HYNIX	HY29F400T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
HYNIX	HY29F400T*	WA28F.EXE ADP-49F800-
TS/TSV2		
HYNIX	HY29F800B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
HYNIX	HY29F800B*	WA28F.EXE ADP-49F800-
TS/TSV2		

HYNIX PS/TS/TSV2	HY29F800T	WA28F.EXE ADP-29F800-
HYNIX TS/TSV2	HY29F800T*	WA28F.EXE ADP-49F800-
HYNIX HYNIX TS/TSV2	HY29LV160B-F HY29LV160B-T	WA28F.EXE ADP-29F160-BG WA28F.EXE ADP-49F800-
HYNIX HYNIX TS/TSV2	HY29LV160T-F HY29LV160T-T	WA28F.EXE ADP-29F160-BG WA28F.EXE ADP-49F800-
HYNIX TS/TSV2	HY29LV320B-T	WA28F.EXE ADP-49F800-
HYNIX TS/TSV2	HY29LV320T-T	WA28F.EXE ADP-49F800-
HYNIX TS/TSV2	HY29LV400B-T	WA28F.EXE ADP-49F800-
HYNIX TS/TSV2	HY29LV400T-T	WA28F.EXE ADP-49F800-
HYNIX TS/TSV2	HY29LV800B-T	WA28F.EXE ADP-49F800-
HYNIX TS/TSV2	HY29LV800T-T	WA28F.EXE ADP-49F800-
HYNIX	GMS34140TK	WGMS3X.EXE
HYNIX	HMS77C1000	WPIC.EXE
HYNIX	HMS77C1000A	WPIC.EXE
HYNIX	HMS77C1001	WPIC.EXE
HYNIX	HMS77C1001A	WPIC.EXE
HYNIX	HMS77C2000	WPIC.EXE
HYNIX	HMS77C2001	WPIC.EXE
HYNIX	HMS80C701	WPGM51.EXE
HYNIX	HMS81032ET 28-pin	WPGM51.EXE
HYNIX	HMS81032TL	WPGM51.EXE
HYNIX	HMS81504T	WAMPU7.EXE ADP-GMS81504-SD
HYNIX	HMS81508T	WAMPU7.EXE ADP-GMS81516-SD
HYNIX	HMS81508T Q	WAMPU7.EXE ADP-GMS81516-Q
HYNIX	HMS81508T TQ	WAMPU7.EXE ADP-GMS81516-TQ
HYNIX	HMS81516BT TQ	WAMPU7.EXE ADP-GMS81516-TQ
HYNIX	HMS81516T	WAMPU7.EXE ADP-GMS81516-SD
HYNIX	HMS81516T Q	WAMPU7.EXE ADP-GMS81516-Q
HYNIX	HMS81516T TQ	WAMPU7.EXE ADP-GMS81516-TQ
HYNIX	HMS81524BT TQ	WAMPU7.EXE ADP-GMS81516-TQ
HYNIX	HMS82524T	WAMPU7.EXE ADP-82524T-SD
HYNIX	HMS84512T	WAMPU7.EXE ADP-GMS84524-SD
HYNIX	HMS84524T	WAMPU7.EXE ADP-GMS84524-SD
HYNIX	HMS87C1101	WPGM51.EXE
HYNIX	HMS87C1102	WPGM51.EXE
HYNIX	HMS87C1102A	WPGM51.EXE
HYNIX	HMS87C1104A	WPGM51.EXE
HYNIX	HMS87C1201	WPGM51.EXE
HYNIX	HMS87C1202	WPGM51.EXE
HYNIX	HMS87C1202A	WPGM51.EXE
HYNIX	HMS87C1204A	WPGM51.EXE
HYNIX	HMS87C1302A	WAMPU7.EXE ADP-87C130XA-S
HYNIX	HMS87C1304A	WAMPU7.EXE ADP-87C130XA-S
HYNIX	HMS87C1404	WPGM51.EXE
HYNIX	HMS87C1408	WPGM51.EXE
HYNIX	HMS87C1416B	WPGM51.EXE
HYNIX	HMS87C5032	WAMPU7.EXE ADP-GMS87C5032
HYNIX	HMS97C1051 (DIP20)	WASIG.EXE ADP-97C2051
HYNIX	HMS97C1051 (SOP20)	WASIG.EXE ADP-97C2051-S
HYNIX	HMS97C2051 (DIP20)	WASIG.EXE ADP-97C2051
HYNIX	HMS97C2051 (SOP20)	WASIG.EXE ADP-97C2051-S
HYNIX	HMS97C51	WPGM51.EXE
HYNIX	HMS97C52	WPGM51.EXE

HYNIX	HMS97C54	WPGM51.EXE
HYNIX	HMS97C56	WPGM51.EXE
HYNIX	HMS97C58	WPGM51.EXE
HYNIX	HMS97L1051 (DIP20)	WASIG.EXE ADP-97C2051
HYNIX	HMS97L1051 (SOP20)	WASIG.EXE ADP-97C2051-S
HYNIX	HMS97L2051 (DIP20)	WASIG.EXE ADP-97C2051
HYNIX	HMS97L2051 (SOP20)	WASIG.EXE ADP-97C2051-S
HYNIX	HMS97L51	WPGM51.EXE
HYNIX	HMS97L52	WPGM51.EXE
HYNIX	HMS97L54	WPGM51.EXE
HYNIX	HMS97L56	WPGM51.EXE
HYNIX	HMS97L58	WPGM51.EXE
HYNIX	HMS99C52	WPGM51.EXE
HYNIX	HMS99C58	WPGM51.EXE
HYUNDAI	27C64 [12.5V]	WMEM1.EXE
HYUNDAI	HY29F002T	WMEM1.EXE
HYUNDAI	HY29F040/A	WMEM1.EXE
HYUNDAI	HY29F080	WA28F.EXE ADP-29F080-PS/TS
HYUNDAI	HY29F400AB	WA28F.EXE ADP-29F800-
TS/TSV2		
HYUNDAI	HY29F400AB*	WA28F.EXE ADP-49F800-
TS/TSV2		
HYUNDAI	HY29F400AT	WA28F.EXE ADP-29F800-
TS/TSV2		
HYUNDAI	HY29F400AT*	WA28F.EXE ADP-49F800-
TS/TSV2		
HYUNDAI	HY29F400B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
HYUNDAI	HY29F400B*	WA28F.EXE ADP-49F800-
TS/TSV2		
HYUNDAI	HY29F400T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
HYUNDAI	HY29F400T*	WA28F.EXE ADP-49F800-
TS/TSV2		
HYUNDAI	HY29F800B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
HYUNDAI	HY29F800B*	WA28F.EXE ADP-49F800-
TS/TSV2		
HYUNDAI	HY29F800T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
HYUNDAI	HY29F800T*	WA28F.EXE ADP-49F800-
TS/TSV2		
HYUNDAI	HY29LV160B-F	WA28F.EXE ADP-29F160-BG
HYUNDAI	HY29LV160B-T	WA28F.EXE ADP-49F800-
TS/TSV2		
HYUNDAI	HY29LV160T-F	WA28F.EXE ADP-29F160-BG
HYUNDAI	HY29LV160T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
HYUNDAI	HY93C46	WSPROM.EXE
HYUNDAI	HMS77C1000	WPIC.EXE
HYUNDAI	HMS77C1001	WPIC.EXE
HYUNDAI	HMS80C701	WPGM51.EXE
HYUNDAI	HMS81032TL	WPGM51.EXE
HYUNDAI	HMS81504T	WAMPU7.EXE ADP-GMS81504-SD
HYUNDAI	HMS81508T	WAMPU7.EXE ADP-GMS81516-SD
HYUNDAI	HMS81508T Q	WAMPU7.EXE ADP-GMS81516-Q
HYUNDAI	HMS81508T TQ	WAMPU7.EXE ADP-GMS81516-TQ
HYUNDAI	HMS81516BT TQ	WAMPU7.EXE ADP-GMS81516-TQ
HYUNDAI	HMS81516T	WAMPU7.EXE ADP-GMS81516-SD
HYUNDAI	HMS81516T Q	WAMPU7.EXE ADP-GMS81516-Q
HYUNDAI	HMS81516T TQ	WAMPU7.EXE ADP-GMS81516-TQ
HYUNDAI	HMS81524BT TQ	WAMPU7.EXE ADP-GMS81516-TQ
HYUNDAI	HMS84512T	WAMPU7.EXE ADP-GMS84524-SD
HYUNDAI	HMS84524T	WAMPU7.EXE ADP-GMS84524-SD

HYUNDAI	HMS87C1101	WPGM51.EXE
HYUNDAI	HMS87C1102	WPGM51.EXE
HYUNDAI	HMS87C1102A	WPGM51.EXE
HYUNDAI	HMS87C1104A	WPGM51.EXE
HYUNDAI	HMS87C1201	WPGM51.EXE
HYUNDAI	HMS87C1202	WPGM51.EXE
HYUNDAI	HMS87C1202A	WPGM51.EXE
HYUNDAI	HMS87C1204A	WPGM51.EXE
HYUNDAI	HMS87C1404	WPGM51.EXE
HYUNDAI	HMS87C1408	WPGM51.EXE
HYUNDAI	HMS87C5032	WAMPU7.EXE ADP-GMS87C5032
HYUNDAI	HMS97C1051 (DIP20)	WASIG.EXE ADP-97C2051
HYUNDAI	HMS97C1051 (SOP20)	WASIG.EXE ADP-97C2051-S
HYUNDAI	HMS97C2051 (DIP20)	WASIG.EXE ADP-97C2051
HYUNDAI	HMS97C2051 (SOP20)	WASIG.EXE ADP-97C2051-S
HYUNDAI	HMS97C51	WPGM51.EXE
HYUNDAI	HMS97C52	WPGM51.EXE
HYUNDAI	HMS97C54	WPGM51.EXE
HYUNDAI	HMS97C56	WPGM51.EXE
HYUNDAI	HMS97C58	WPGM51.EXE
HYUNDAI	HMS97L1051 (DIP20)	WASIG.EXE ADP-97C2051
HYUNDAI	HMS97L1051 (SOP20)	WASIG.EXE ADP-97C2051-S
HYUNDAI	HMS97L2051 (DIP20)	WASIG.EXE ADP-97C2051
HYUNDAI	HMS97L2051 (SOP20)	WASIG.EXE ADP-97C2051-S
HYUNDAI	HMS97L51	WPGM51.EXE
HYUNDAI	HMS97L52	WPGM51.EXE
HYUNDAI	HMS97L54	WPGM51.EXE
HYUNDAI	HMS97L56	WPGM51.EXE
HYUNDAI	HMS97L58	WPGM51.EXE
HYUNDAI	HMS99C58	WPGM51.EXE
HYUNDAI	HY18CV8	WPLD1.EXE
ICE	ICE27C010	WMEM1.EXE
ICE	ICE27C512	WMEM1.EXE
ICE	ICE27LC512	WMEM1.EXE
ICE	ICE37C512	WMEM1.EXE
ICE	ICE37C512 (PLCC)	WMEM1.EXE CNV-PLCC-EP1M32
ICE	ICE37LC512	WMEM1.EXE
ICE	ICE37LC512 (PLCC)	WMEM1.EXE CNV-PLCC-EP1M32
ICE	ICE28LF010	WMEM1.EXE
ICE	ICE29LF512	WMEM1.EXE
ICE	ICE25P05	WSPROM.EXE
ICSI	IC89C51A	WPGM51.EXE
ICSI	IC89C52A	WPGM51.EXE
ICSI	IC89C54	WPGM51.EXE
ICSI	IC89C58	WPGM51.EXE
ICSI	IC89C64	WPGM51.EXE
ICSI	IC89E54	WPGM51.EXE
ICSI	IC89E58	WPGM51.EXE
ICSI	IC89E64	WPGM51.EXE
ICSI	IC89LV52A	WPGM51.EXE
ICSI	IS89C51	WPGM51.EXE
ICSI	IS89C52	WPGM51.EXE
ICT	27CX010	WMEM1.EXE
ICT	27CX256[12.75V]	WMEM1.EXE
ICT	93C46	WSPROM.EXE
ICT	93C46A	WSPROM.EXE
ICT	93C56A	WSPROM.EXE
ICT	93C66A	WSPROM.EXE
ICT	93CX46	WSPROM.EXE
ICT	93CX56	WSPROM.EXE
ICT	93CX66	WSPROM.EXE
ICT	27CX321	WBPPGM.EXE
ICT	27CX322	WBPPGM.EXE
ICT	27CX641	WBPPGM.EXE

ICT	27CX642	WBPPGM.EXE
ICT	PA7024	WPLD1.EXE
ICT	PA7128	WPLD1.EXE
ICT	PA7140	WPLD1.EXE
ICT	PA7540	WPLD1.EXE
ICT	PA7540JN	WPLD1.EXE
ICT	PA7572	WPLD1.EXE
ICT	PEEL153	WPLD1.EXE
ICT	PEEL16CV8	WPLD1.EXE
ICT	PEEL16V8	WPLD1.EXE
ICT	PEEL16V8 (16L8)	WPLD1.EXE
ICT	PEEL16V8 (16R4)	WPLD1.EXE
ICT	PEEL16V8 (16R6)	WPLD1.EXE
ICT	PEEL16V8 (16R8)	WPLD1.EXE
ICT	PEEL173	WPLD1.EXE
ICT	PEEL18CV8	WPLD1.EXE
ICT	PEEL18CV8Z	WPLD1.EXE
ICT	PEEL18LV8Z	WPLD1.EXE
ICT	PEEL20CG10	WPLD1.EXE
ICT	PEEL20CG10A	WPLD1.EXE
ICT	PEEL20V8	WPLD1.EXE
ICT	PEEL22CV10	WPLD1.EXE
ICT	PEEL22CV10A	WPLD1.EXE
ICT	PEEL22CV10A+	WPLD1.EXE
ICT	PEEL22CV10A++	WPLD1.EXE
ICT	PEEL22CV10AZ	WPLD1.EXE
ICT	PEEL22CV10AZ+	WPLD1.EXE
ICT	PEEL22CV10AZ++	WPLD1.EXE
ICT	PEEL22CV10Z	WPLD1.EXE
ICT	PEEL22CV8	WPLD1.EXE
ICT	PEEL22LV10AZ	WPLD1.EXE
ICT	PEEL22LV10AZ+	WPLD1.EXE
ICT	PEEL22LV10AZ++	WPLD1.EXE
ICT	PEEL253	WPLD1.EXE
ICT	PEEL273	WPLD1.EXE
IDT	78C16A	WMEM1.EXE
IMT	IM29F001T	WMEM1.EXE
IMT	IM29F002B	WMEM1.EXE
IMT	IM29F002T	WMEM1.EXE
IMT	IM29F004B	WMEM1.EXE
IMT	IM29F004T	WMEM1.EXE
IMT	IM29LV001T	WMEM1.EXE
IMT	IM29LV400T	WA28F.EXE ADP-49F800-
TS/TSV2		
INFINEON	HYF31CS256-B	WA28F.EXE ADP-28F128K3-EBG
INFINEON	SAB-C501G-1E	WPGM51.EXE
INFINEON	SAB-C504-2E	WASIG.EXE ADP-SABC504-Q
INFINEON	SAB-C508-4E (QFP64)	WASIG.EXE ADP-C508-Q
INFINEON	SAB-C508-4E (SDIP64)	WASIG.EXE ADP-C508-SD
INFINEON	SAB-C540U (PLCC44)	WASIG.EXE ADP-C541-PL
INFINEON	SAB-C540U (SDIP52)	WASIG.EXE ADP-C541-SD
INFINEON	SAB-C541U (PLCC44)	WASIG.EXE ADP-C541-PL
INFINEON	SAB-C541U (SDIP52)	WASIG.EXE ADP-C541-SD
INFINEON	SAF-C164CI-8E (Segment 0)	WASIG.EXE ADP-C164CI-Q
INFINEON	SAF-C164CI-8E (Segment 1)	WASIG.EXE ADP-C164CI-Q
INFINEON	SAF-C504-2E	WASIG.EXE ADP-SABC504-Q
INFINEON	SAF-C505CA-4E	WASIG.EXE ADP-SABC504-Q
INFINEON	SAF-C505L-4E	WASIG.EXE ADP-C505L-Q
INFINEON	SAF-C513A-2E	WPGM51.EXE
INFINEON	SAF-C513A-2E (PLCC)	WPGM51.EXE ADP-C541-PL
INFINEON	SAF-C513A-2E (QFP)	WPGM51.EXE ADP-SABC504-Q
INFINEON	SAF-C513A-H	WPGM51.EXE
INFINEON	SAF-C515C-8E	WASIG.EXE ADP-C515C-Q
INFINEON	SAK-C164CI-8E (Segment 0)	WASIG.EXE ADP-C164CI-Q

INFINEON	SAK-C164CI-8E (Segment 1)	WASIG.EXE	ADP-C164CI-Q
INFINEON	SAK-C164CM-4E (Segment 0)	WASIG.EXE	ADP-C164CM/SM-TQ
INFINEON	SAK-C164CM-4E (Segment 1)	WASIG.EXE	ADP-C164CM/SM-TQ
INFINEON	SAK-C505CA-4E	WASIG.EXE	ADP-SABC504-Q
INTEL	27010	WMEM1.EXE	
INTEL	27C010	WMEM1.EXE	
INTEL	27C010A	WMEM1.EXE	
INTEL	27C011	WMEM1.EXE	
INTEL	27C020	WMEM1.EXE	
INTEL	27C040	WMEM1.EXE	
INTEL	27C080	WMEM1.EXE	
INTEL	27C100	WMEM1.EXE	
INTEL	27C800	WAEP42.EXE	ADP-EP42/-PS
INTEL	27HC010	WMEM1.EXE	
INTEL	D27128A[12.5V]	WMEM1.EXE	
INTEL	D27128[21V]	WMEM1.EXE	
INTEL	D2716[25V]	WMEM1.EXE	
INTEL	D27210/C210	WMEM1.EXE	
INTEL	D27256[12.75V]	WMEM1.EXE	
INTEL	D2732A[21V]	WMEM1.EXE	
INTEL	D2732[25V]	WMEM1.EXE	
INTEL	D27512[12.75V]	WMEM1.EXE	
INTEL	D27513[12.5V]	WMEM1.EXE	
INTEL	D2764A[12.5V]	WMEM1.EXE	
INTEL	D2764[21V]	WMEM1.EXE	
INTEL	D27C128[12.5V]	WMEM1.EXE	
INTEL	D27C220	WMEM1.EXE	
INTEL	D27C240	WMEM1.EXE	
INTEL	D27C256[12.75V]	WMEM1.EXE	
INTEL	D27C400	WMEM1.EXE	
INTEL	D27C512[12.75V]	WMEM1.EXE	
INTEL	D27C513[12.75V]	WMEM1.EXE	
INTEL	D27C64[12.5V]	WMEM1.EXE	
INTEL	D68C257[12.75V]	WMEM1.EXE	
INTEL	D87C256[12.75V]	WMEM1.EXE	
INTEL	D87C257[12.75V]	WMEM1.EXE	
INTEL	D87C64[12.5V]	WMEM1.EXE	
INTEL	2816	WMEM1.EXE	
INTEL	2816A	WMEM1.EXE	
INTEL	2817A	WMEM1.EXE	
INTEL	28256A	WMEM1.EXE	
INTEL	2864A	WMEM1.EXE	
INTEL	28F001BX-B	WMEM1.EXE	
INTEL	28F001BX-T	WMEM1.EXE	
INTEL	28F010	WMEM1.EXE	
INTEL	28F020	WMEM1.EXE	
INTEL	28F020A	WMEM1.EXE	
INTEL	28F512	WMEM1.EXE	
INTEL	A28F010	WMEM1.EXE	
INTEL	A28F010A	WMEM1.EXE	
INTEL	A28F256	WMEM1.EXE	
INTEL	A28F256A	WMEM1.EXE	
INTEL	A28F512	WMEM1.EXE	
INTEL	A28F512A	WMEM1.EXE	
INTEL	DA28F016SA	WA28F.EXE	ADP-28F640-SS
INTEL	DA28F016SV	WA28F.EXE	ADP-28F640-SS
INTEL	DA28F320J5	WA28F.EXE	ADP-28F640-SS
INTEL	DA28F640J5	WA28F.EXE	ADP-28F640-SS
INTEL	DA28F640J5-L	WA28F.EXE	ADP-28F640-SS
INTEL	DD28F032SA	WA28F.EXE	ADP-28F016-TS-V2
INTEL	DT28F016SA	WA28F.EXE	ADP-28F640-SS
INTEL	DT28F016SV	WA28F.EXE	ADP-28F640-SS
INTEL	DT28F160F3-B	WA28F.EXE	ADP-28F800F3-SS
INTEL	DT28F160F3-T	WA28F.EXE	ADP-28F800F3-SS

INTEL	DT28F160S3	WA28F.EXE	ADP-28F640-SS
INTEL	DT28F160S5	WA28F.EXE	ADP-28F640-SS
INTEL	DT28F320J5A	WA28F.EXE	ADP-28F640-SS
INTEL	DT28F320S3	WA28F.EXE	ADP-28F640-SS
INTEL	DT28F320S5	WA28F.EXE	ADP-28F640-SS
INTEL	DT28F640J5	WA28F.EXE	ADP-28F640-SS
INTEL	DT28F800F3-B	WA28F.EXE	ADP-28F800F3-SS
INTEL	DT28F800F3-T	WA28F.EXE	ADP-28F800F3-SS
INTEL	E28F002BC-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F002BL-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F002BL-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F002BV-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F002BV-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F002BX-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F002BX-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F004B5-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F004B5-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F004BL-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F004BL-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F004BV-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F004BV-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F004BX-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F004BX-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F004S3	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F004S5	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F004SC	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F008B3-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F008B3-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F008BV-B	WA28F.EXE	ADP-28F008BV-TS
INTEL	E28F008BV-T	WA28F.EXE	ADP-28F008BV-TS
INTEL	E28F008S3	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F008S5	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F008SA	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F008SA-L	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F008SC	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F016B3-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F016B3-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F016S3	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F016S5	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F016SA	WA28F.EXE	ADP-28F016-TS-V2
INTEL	E28F016SC	WA28F.EXE	ADP-28F008-TS-V2
INTEL	E28F016SV	WA28F.EXE	ADP-28F016-TS-V2
INTEL	E28F016XD	WA28F.EXE	ADP-28F016XD-TS
INTEL	E28F128J3A	WA28F.EXE	ADP-28F128-TS
INTEL	E28F160B3-B	WA28F.EXE	ADP-28F160-TS
INTEL	E28F160B3-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F160B3-BA	WA28F.EXE	ADP-28F160-TS
INTEL	E28F160B3-T	WA28F.EXE	ADP-28F160-TS
INTEL	E28F160B3-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F160B3-TA	WA28F.EXE	ADP-28F160-TS
INTEL	E28F160S3	WA28F.EXE	ADP-28F016-TS-V2
INTEL	E28F160S5	WA28F.EXE	ADP-28F016-TS-V2
INTEL	E28F200B5-B	WA28F.EXE	ADP-28F160-TS
INTEL	E28F200B5-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F200B5-T	WA28F.EXE	ADP-28F160-TS
INTEL	E28F200B5-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F200BL-B	WA28F.EXE	ADP-28F400-TS
INTEL	E28F200BL-T	WA28F.EXE	ADP-28F400-TS
INTEL	E28F200BV-B	WA28F.EXE	ADP-28F400-TS
INTEL	E28F200BV-T	WA28F.EXE	ADP-28F400-TS
INTEL	E28F200BX-B	WA28F.EXE	ADP-28F400-TS
INTEL	E28F200BX-T	WA28F.EXE	ADP-28F400-TS
INTEL	E28F200CV-B	WA28F.EXE	ADP-28F160-TS
INTEL	E28F200CV-B*	WA28F.EXE	ADP-28F800CV-TS

INTEL	E28F200CV-T	WA28F.EXE	ADP-28F160-TS
INTEL	E28F200CV-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F320J3A	WA28F.EXE	ADP-28F128-TS
INTEL	E28F320J5	WA28F.EXE	ADP-28F016-TS-V2
INTEL	E28F320J5A	WA28F.EXE	ADP-28F016-TS-V2
INTEL	E28F400B3-B	WA28F.EXE	ADP-28F160-TS
INTEL	E28F400B3-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F400B3-T	WA28F.EXE	ADP-28F160-TS
INTEL	E28F400B3-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F400B5-B	WA28F.EXE	ADP-28F160-TS
INTEL	E28F400B5-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F400B5-T	WA28F.EXE	ADP-28F160-TS
INTEL	E28F400B5-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F400BL-B	WA28F.EXE	ADP-28F400-TS
INTEL	E28F400BL-T	WA28F.EXE	ADP-28F400-TS
INTEL	E28F400BV-B	WA28F.EXE	ADP-28F400-TS
INTEL	E28F400BV-T	WA28F.EXE	ADP-28F400-TS
INTEL	E28F400BX-B	WA28F.EXE	ADP-28F400-TS
INTEL	E28F400BX-T	WA28F.EXE	ADP-28F400-TS
INTEL	E28F400CV-B	WA28F.EXE	ADP-28F160-TS
INTEL	E28F400CV-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F400CV-T	WA28F.EXE	ADP-28F160-TS
INTEL	E28F400CV-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F640J3A	WA28F.EXE	ADP-28F128-TS
INTEL	E28F800B3-B	WA28F.EXE	ADP-28F160-TS
INTEL	E28F800B3-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F800B3-T	WA28F.EXE	ADP-28F160-TS
INTEL	E28F800B3-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F800B5-B	WA28F.EXE	ADP-28F160-TS
INTEL	E28F800B5-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F800B5-T	WA28F.EXE	ADP-28F160-TS
INTEL	E28F800B5-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F800CE-B	WA28F.EXE	ADP-28F160-TS
INTEL	E28F800CE-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F800CE-T	WA28F.EXE	ADP-28F160-TS
INTEL	E28F800CE-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F800CV-B	WA28F.EXE	ADP-28F160-TS
INTEL	E28F800CV-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E28F800CV-T	WA28F.EXE	ADP-28F160-TS
INTEL	E28F800CV-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	E82802AA	WMEM1.EXE	
INTEL	E82802AB	WMEM1.EXE	
INTEL	E82802AC	WMEM1.EXE	
INTEL	F28F008SA	WA28F.EXE	ADP-28F008-TSR
INTEL	F28F008SA-L	WA28F.EXE	ADP-28F008-TSR
INTEL	G28F008S3	WA28F.EXE	ADP-28F008-BG
INTEL	G28F008S5	WA28F.EXE	ADP-28F008-BG
INTEL	G28F008SC	WA28F.EXE	ADP-28F008-BG
INTEL	G28F016S3	WA28F.EXE	ADP-28F016-BG
INTEL	G28F016S5	WA28F.EXE	ADP-28F016-BG
INTEL	G28F016SC	WA28F.EXE	ADP-28F016-BG
INTEL	G28F640J5	WA28F.EXE	ADP-28F640-BG
INTEL	GE28F160B3-BC	WA28F.EXE	ADP-28F160A-BG
INTEL	GE28F160B3-BD	WA28F.EXE	ADP-28F160A-BG
INTEL	GE28F160B3-TC	WA28F.EXE	ADP-28F160A-BG
INTEL	GE28F160B3-TD	WA28F.EXE	ADP-28F160A-BG
INTEL	GE28F160C3-BC	WA28F.EXE	ADP-28F160A-BG
INTEL	GE28F160C3-BD	WA28F.EXE	ADP-28F160A-BG
INTEL	GE28F160C3-TC	WA28F.EXE	ADP-28F160A-BG
INTEL	GE28F160C3-TD	WA28F.EXE	ADP-28F160A-BG
INTEL	GE28F320B3-BC	WA28F.EXE	ADP-28F160A-BG
INTEL	GE28F320B3-TC	WA28F.EXE	ADP-28F160A-BG
INTEL	GE28F320C3-BC	WA28F.EXE	ADP-28F160A-BG
INTEL	GE28F320C3-TC	WA28F.EXE	ADP-28F160A-BG

INTEL	GE28F320C3-TD	WA28F.EXE	ADP-28F160A-BG
INTEL	GE28F320J3A	WA28F.EXE	ADP-28F320A-BG
INTEL	GT28F008B3-B	WA28F.EXE	ADP-28F800-BG
INTEL	GT28F008B3-T	WA28F.EXE	ADP-28F800-BG
INTEL	GT28F016B3-B	WA28F.EXE	ADP-28F160-BG
INTEL	GT28F016B3-BA	WA28F.EXE	ADP-28F160A-BG
INTEL	GT28F016B3-T	WA28F.EXE	ADP-28F160-BG
INTEL	GT28F016B3-TA	WA28F.EXE	ADP-28F160A-BG
INTEL	GT28F016C3-BA	WA28F.EXE	ADP-28F160A-BG
INTEL	GT28F016C3-TA	WA28F.EXE	ADP-28F160A-BG
INTEL	GT28F160B3-B	WA28F.EXE	ADP-28F160-BG
INTEL	GT28F160B3-BA	WA28F.EXE	ADP-28F160A-BG
INTEL	GT28F160B3-T	WA28F.EXE	ADP-28F160-BG
INTEL	GT28F160B3-TA	WA28F.EXE	ADP-28F160A-BG
INTEL	GT28F160C3-BA	WA28F.EXE	ADP-28F160A-BG
INTEL	GT28F160C3-TA	WA28F.EXE	ADP-28F160A-BG
INTEL	GT28F320B3-BA	WA28F.EXE	ADP-28F320A-BG
INTEL	GT28F320B3-TA	WA28F.EXE	ADP-28F320A-BG
INTEL	GT28F320C3-BA	WA28F.EXE	ADP-28F320A-BG
INTEL	GT28F320C3-TA	WA28F.EXE	ADP-28F320A-BG
INTEL	GT28F800B3-B	WA28F.EXE	ADP-28F800-BG
INTEL	GT28F800B3-T	WA28F.EXE	ADP-28F800-BG
INTEL	JS28F128J3C	WA28F.EXE	ADP-28F128-TS
INTEL	JS28F128J3D	WA28F.EXE	ADP-28F128-TS
INTEL	JS28F160C3-BD	WA28F.EXE	ADP-28F160-TS
INTEL	JS28F160C3-TD	WA28F.EXE	ADP-28F160-TS
INTEL	JS28F320C3-BD	WA28F.EXE	ADP-28F160-TS
INTEL	JS28F320C3-TD	WA28F.EXE	ADP-28F160-TS
INTEL	JS28F320J3C	WA28F.EXE	ADP-28F128-TS
INTEL	JS28F320J3D	WA28F.EXE	ADP-28F128-TS
INTEL	JS28F640J3C	WA28F.EXE	ADP-28F128-TS
INTEL	JS28F640J3D	WA28F.EXE	ADP-28F128-TS
INTEL	MC28F008	WA28F.EXE	
INTEL	N82802AA	WMEM1.EXE	
INTEL	N82802AB	WMEM1.EXE	
INTEL	N82802AC	WMEM1.EXE	
INTEL	P28F002BC-T	WA28F.EXE	ADP-28F002BC
INTEL	PA28F002BC-T	WA28F.EXE	ADP-28F400P
INTEL	PA28F004S3	WA28F.EXE	ADP-28F008S-PS
INTEL	PA28F004S5	WA28F.EXE	ADP-28F008S-PS
INTEL	PA28F004SC	WA28F.EXE	ADP-28F008S-PS
INTEL	PA28F008S3	WA28F.EXE	ADP-28F008S-PS
INTEL	PA28F008S5	WA28F.EXE	ADP-28F008S-PS
INTEL	PA28F008SA	WA28F.EXE	ADP-28F008S-PS
INTEL	PA28F008SA-L	WA28F.EXE	ADP-28F008S-PS
INTEL	PA28F008SC	WA28F.EXE	ADP-28F008S-PS
INTEL	PA28F016S3	WA28F.EXE	ADP-28F008S-PS
INTEL	PA28F016S5	WA28F.EXE	ADP-28F008S-PS
INTEL	PA28F016SC	WA28F.EXE	ADP-28F008S-PS
INTEL	PA28F200B5-B	WA28F.EXE	ADP-28F400P
INTEL	PA28F200B5-T	WA28F.EXE	ADP-28F400P
INTEL	PA28F200BL-B	WA28F.EXE	ADP-28F400P
INTEL	PA28F200BL-T	WA28F.EXE	ADP-28F400P
INTEL	PA28F200BV-B	WA28F.EXE	ADP-28F400P
INTEL	PA28F200BV-T	WA28F.EXE	ADP-28F400P
INTEL	PA28F200BX-B	WA28F.EXE	ADP-28F400P
INTEL	PA28F200BX-T	WA28F.EXE	ADP-28F400P
INTEL	PA28F400B5-B	WA28F.EXE	ADP-28F400P
INTEL	PA28F400B5-T	WA28F.EXE	ADP-28F400P
INTEL	PA28F400BL-B	WA28F.EXE	ADP-28F400P
INTEL	PA28F400BL-T	WA28F.EXE	ADP-28F400P
INTEL	PA28F400BV-B	WA28F.EXE	ADP-28F400P
INTEL	PA28F400BV-T	WA28F.EXE	ADP-28F400P
INTEL	PA28F400BX-B	WA28F.EXE	ADP-28F400P

INTEL	PA28F400BX-T	WA28F.EXE	ADP-28F400P
INTEL	PA28F800B5-B	WA28F.EXE	ADP-28F400P
INTEL	PA28F800B5-T	WA28F.EXE	ADP-28F400P
INTEL	PA28F800BV-B	WA28F.EXE	ADP-28F400P
INTEL	PA28F800BV-T	WA28F.EXE	ADP-28F400P
INTEL	PC28F128J3D	WA28F.EXE	ADP-28F128K3-EBG
INTEL	PC28F128J3D*	WA28F.EXE	ADP-28F128-EBG
INTEL	PC28F160C3-BD	WA28F.EXE	ADP-28F800F3-
EBG/EBGV2			
INTEL	PC28F160C3-TD	WA28F.EXE	ADP-28F800F3-
EBG/EBGV2			
INTEL	PC28F256J3C	WA28F.EXE	ADP-28F256K3-EBG
INTEL	PC28F320J3C	WA28F.EXE	ADP-28F128K3-
EBG/ADP-28F128-EBG			
INTEL	PC28F320J3D	WA28F.EXE	ADP-28F128K3-EBG
INTEL	PC28F640J3D	WA28F.EXE	ADP-28F128K3-EBG
INTEL	PH28F160C3-TD	WA28F.EXE	ADP-28F160A-BG
INTEL	RC28F128J3A	WA28F.EXE	ADP-28F128-EBG
INTEL	RC28F128J3A*	WA28F.EXE	ADP-28F128K3-EBG
INTEL	RC28F128J3C	WA28F.EXE	ADP-28F128K3-EBG
INTEL	RC28F128J3C*	WA28F.EXE	ADP-28F128-EBG
INTEL	RC28F128J3D	WA28F.EXE	ADP-28F128K3-EBG
INTEL	RC28F128K3C	WA28F.EXE	ADP-28F128K3-EBG
INTEL	RC28F160C3-BA	WA28F.EXE	ADP-28F800F3-
EBG/EBGV2			
INTEL	RC28F160C3-BC	WA28F.EXE	ADP-28F800F3-
EBG/EBGV2			
INTEL	RC28F160C3-BD	WA28F.EXE	ADP-28F800F3-
EBG/EBGV2			
INTEL	RC28F160C3-TA	WA28F.EXE	ADP-28F800F3-
EBG/EBGV2			
INTEL	RC28F160C3-TC	WA28F.EXE	ADP-28F800F3-
EBG/EBGV2			
INTEL	RC28F160C3-TD	WA28F.EXE	ADP-28F800F3-
EBG/EBGV2			
INTEL	RC28F160F3-B	WA28F.EXE	ADP-28F800F3-
EBG/EBGV2			
INTEL	RC28F160F3-T	WA28F.EXE	ADP-28F800F3-
EBG/EBGV2			
INTEL	RC28F256J3C	WA28F.EXE	ADP-28F256K3-EBG
INTEL	RC28F256K3C	WA28F.EXE	ADP-28F256K3-EBG
INTEL	RC28F320C3-BD	WA28F.EXE	ADP-28F800F3-
EBGV2			
INTEL	RC28F320C3-TD	WA28F.EXE	ADP-28F800F3-
EBGV2			
INTEL	RC28F320J3A	WA28F.EXE	ADP-28F128-EBG
INTEL	RC28F320J3A*	WA28F.EXE	ADP-28F128K3-EBG
INTEL	RC28F320J3C	WA28F.EXE	ADP-28F128-EBG
INTEL	RC28F320J3C*	WA28F.EXE	ADP-28F128K3-EBG
INTEL	RC28F640C3-BC	WA28F.EXE	ADP-28F800F3-
EBGV2			
INTEL	RC28F640C3-TC	WA28F.EXE	ADP-28F800F3-
EBGV2			
INTEL	RC28F640J3A	WA28F.EXE	ADP-28F128-EBG
INTEL	RC28F640J3A*	WA28F.EXE	ADP-28F128K3-EBG
INTEL	RC28F640J3C	WA28F.EXE	ADP-28F128-EBG
INTEL	RC28F640J3C*	WA28F.EXE	ADP-28F128K3-EBG
INTEL	RC28F640J3D	WA28F.EXE	ADP-28F128-EBG
INTEL	RC28F640J3D*	WA28F.EXE	ADP-28F128K3-EBG
INTEL	RC28F800C3-BA	WA28F.EXE	ADP-28F800F3-
EBG/EBGV2			
INTEL	RC28F800C3-TA	WA28F.EXE	ADP-28F800F3-
EBG/EBGV2			
INTEL	RD28F128J3AM	WA28F.EXE	ADP-28F256-EBG

INTEL	RD28F192SJ3AM (Flash#1)	WA28F.EXE	ADP-28F256-EBG
INTEL	RD28F192SJ3AM (Flash#2)	WA28F.EXE	ADP-28F256-EBG
INTEL	RD28F256SJ3AM (Flash#1)	WA28F.EXE	ADP-28F256-EBG
INTEL	RD28F256SJ3AM (Flash#2)	WA28F.EXE	ADP-28F256-EBG
INTEL	TB28F004S3	WA28F.EXE	ADP-28F008S-PS
INTEL	TB28F004S5	WA28F.EXE	ADP-28F008S-PS
INTEL	TB28F004SC	WA28F.EXE	ADP-28F008S-PS
INTEL	TB28F008S3	WA28F.EXE	ADP-28F008S-PS
INTEL	TB28F008S5	WA28F.EXE	ADP-28F008S-PS
INTEL	TB28F008SA	WA28F.EXE	ADP-28F008S-PS
INTEL	TB28F008SA-L	WA28F.EXE	ADP-28F008S-PS
INTEL	TB28F016S3	WA28F.EXE	ADP-28F008S-PS
INTEL	TB28F016S5	WA28F.EXE	ADP-28F008S-PS
INTEL	TB28F016SC	WA28F.EXE	ADP-28F008S-PS
INTEL	TB28F200B5-B	WA28F.EXE	ADP-28F400P
INTEL	TB28F200B5-T	WA28F.EXE	ADP-28F400P
INTEL	TB28F200BL-B	WA28F.EXE	ADP-28F400P
INTEL	TB28F200BL-T	WA28F.EXE	ADP-28F400P
INTEL	TB28F200BV-B	WA28F.EXE	ADP-28F400P
INTEL	TB28F200BV-T	WA28F.EXE	ADP-28F400P
INTEL	TB28F200BX-B	WA28F.EXE	ADP-28F400P
INTEL	TB28F200BX-T	WA28F.EXE	ADP-28F400P
INTEL	TB28F400B5-B	WA28F.EXE	ADP-28F400P
INTEL	TB28F400B5-T	WA28F.EXE	ADP-28F400P
INTEL	TB28F400BL-B	WA28F.EXE	ADP-28F400P
INTEL	TB28F400BL-T	WA28F.EXE	ADP-28F400P
INTEL	TB28F400BV-B	WA28F.EXE	ADP-28F400P
INTEL	TB28F400BV-T	WA28F.EXE	ADP-28F400P
INTEL	TB28F400BX-B	WA28F.EXE	ADP-28F400P
INTEL	TB28F400BX-T	WA28F.EXE	ADP-28F400P
INTEL	TB28F800B5-B	WA28F.EXE	ADP-28F400P
INTEL	TB28F800B5-T	WA28F.EXE	ADP-28F400P
INTEL	TB28F800BV-B	WA28F.EXE	ADP-28F400P
INTEL	TB28F800BV-T	WA28F.EXE	ADP-28F400P
INTEL	TE28F002BV-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F002BV-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F002BX-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F002BX-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F004B3-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F004B3-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F004BE-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F004BE-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F004BV-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F004BV-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F004BX-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F004BX-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F004S3	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F004S5	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F004SC	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F008B3-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F008B3-BA	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F008B3-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F008B3-TA	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F008BV-B	WA28F.EXE	ADP-28F008BV-TS
INTEL	TE28F008BV-T	WA28F.EXE	ADP-28F008BV-TS
INTEL	TE28F008S3	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F008S5	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F008SA	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F008SA-L	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F016B3-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F016B3-T	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F016B3-TA	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F016C3-B	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F016C3-T	WA28F.EXE	ADP-28F008-TS-V2

INTEL	TE28F016C3-TA	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F016S3	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F016S5	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F016SC	WA28F.EXE	ADP-28F008-TS-V2
INTEL	TE28F128J3C	WA28F.EXE	ADP-28F128-TS
INTEL	TE28F128J3D	WA28F.EXE	ADP-28F128-TS
INTEL	TE28F160B3-B	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160B3-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F160B3-BA	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160B3-BC	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160B3-BD	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160B3-T	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160B3-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F160B3-TA	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160B3-TC	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160B3-TD	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160C3-B	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160C3-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F160C3-BA	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160C3-BA*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F160C3-BC	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160C3-BD	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160C3-T	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160C3-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F160C3-TA	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160C3-TA*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F160C3-TC	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160C3-TD	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F160F3-B	WA28F.EXE	ADP-28F800F3-TS
INTEL	TE28F160F3-T	WA28F.EXE	ADP-28F800F3-TS
INTEL	TE28F160S3	WA28F.EXE	ADP-28F016-TS-V2
INTEL	TE28F160S5	WA28F.EXE	ADP-28F016-TS-V2
INTEL	TE28F200B5-B	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F200B5-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F200B5-T	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F200B5-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F200BL-B	WA28F.EXE	ADP-28F400-TS
INTEL	TE28F200BL-T	WA28F.EXE	ADP-28F400-TS
INTEL	TE28F200BV-B	WA28F.EXE	ADP-28F400-TS
INTEL	TE28F200BV-T	WA28F.EXE	ADP-28F400-TS
INTEL	TE28F200BX-B	WA28F.EXE	ADP-28F400-TS
INTEL	TE28F200BX-T	WA28F.EXE	ADP-28F400-TS
INTEL	TE28F200CV-B	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F200CV-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F200CV-T	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F200CV-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F256J3C	WA28F.EXE	ADP-28F128-TS
INTEL	TE28F320B3-B	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F320B3-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F320B3-BD	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F320B3-T	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F320B3-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F320B3-TD	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F320C3-B	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F320C3-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F320C3-BD	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F320C3-T	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F320C3-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F320C3-TD	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F320J3C	WA28F.EXE	ADP-28F128-TS
INTEL	TE28F320J3D	WA28F.EXE	ADP-28F128-TS
INTEL	TE28F320J5	WA28F.EXE	ADP-28F016-TS-V2
INTEL	TE28F400B3-B	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F400B3-B*	WA28F.EXE	ADP-28F800CV-TS

INTEL	TE28F400B3-T	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F400B3-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F400B5-B	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F400B5-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F400B5-T	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F400B5-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F400BL-B	WA28F.EXE	ADP-28F400-TS
INTEL	TE28F400BL-T	WA28F.EXE	ADP-28F400-TS
INTEL	TE28F400BV-B	WA28F.EXE	ADP-28F400-TS
INTEL	TE28F400BV-T	WA28F.EXE	ADP-28F400-TS
INTEL	TE28F400BX-B	WA28F.EXE	ADP-28F400-TS
INTEL	TE28F400BX-T	WA28F.EXE	ADP-28F400-TS
INTEL	TE28F400CV-B	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F400CV-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F400CV-T	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F400CV-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F640C3-BC	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F640C3-TC	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F640J3C	WA28F.EXE	ADP-28F128-TS
INTEL	TE28F640J3D	WA28F.EXE	ADP-28F128-TS
INTEL	TE28F800B3-B	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F800B3-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F800B3-BA	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F800B3-BA*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F800B3-T	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F800B3-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F800B3-TA	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F800B3-TA*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F800B5-B	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F800B5-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F800B5-T	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F800B5-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F800C3-BA	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F800C3-BA*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F800C3-TA	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F800C3-TA*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F800CE-B	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F800CE-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F800CE-T	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F800CE-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F800CV-B	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F800CV-B*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F800CV-T	WA28F.EXE	ADP-28F160-TS
INTEL	TE28F800CV-T*	WA28F.EXE	ADP-28F800CV-TS
INTEL	TE28F800F3-B	WA28F.EXE	ADP-28F800F3-TS
INTEL	TE28F800F3-T	WA28F.EXE	ADP-28F800F3-TS
INTEL	QB25F016S33B	WSPROM.EXE	
INTEL	QB25F016S33T	WSPROM.EXE	
INTEL	QB25F160S33B	WSPROM.EXE	
INTEL	QB25F160S33T	WSPROM.EXE	
INTEL	QB25F320S33B	WSPROM.EXE	
INTEL	QB25F320S33T	WSPROM.EXE	
INTEL	QH25F320S33B	WSPROM.EXE	
INTEL	QH25F320S33T	WSPROM.EXE	
INTEL	8744	WPGM51.EXE	
INTEL	8744H	WPGM51.EXE	
INTEL	8751	WPGM51.EXE	
INTEL	8751BH	WPGM51.EXE	
INTEL	8751H	WPGM51.EXE	
INTEL	8752	WPGM51.EXE	
INTEL	8752BH	WPGM51.EXE	
INTEL	8752H	WPGM51.EXE	
INTEL	8755A	WPGM51.EXE	
INTEL	8795BH	WAMPU3.EXE	ADP-8798

INTEL 8796BH (PGA)
 INTEL 8796BH (PLCC)
 INTEL 8796JC (PGA)
 INTEL 8796JC (PLCC)
 INTEL 8797BH (PGA)
 INTEL 8797BH (PLCC)
 INTEL 8797JF (PGA)
 INTEL 8797JF (PLCC)
 INTEL 8798
 INTEL 87C151SA
 INTEL 87C151SB
 INTEL 87C194 (PLCC)
 INTEL 87C194 (QFP)
 INTEL 87C196CA
 INTEL 87C196CB (PLCC)
 INTEL 87C196CB (QFP)
 INTEL 87C196JQ
 INTEL 87C196JR
 INTEL 87C196JT
 INTEL 87C196JV
 INTEL 87C196KB (PGA)
 INTEL 87C196KB (PLCC)
 INTEL 87C196KB (QFP)
 INTEL 87C196KC (PGA)
 INTEL 87C196KC (PLCC)
 INTEL 87C196KC (QFP)
 INTEL 87C196KC (SQFP)
 INTEL 87C196KD (PGA)
 INTEL 87C196KD (PLCC)
 INTEL 87C196KD (QFP)
 INTEL 87C196KQ
 INTEL 87C196KR
 INTEL 87C196KS
 INTEL 87C196KT
 INTEL 87C196MC (PLCC)
 INTEL 87C196MC (QFP)
 INTEL 87C196MC (SDIP)
 INTEL 87C196MD (PLCC)
 INTEL 87C196MD (QFP)
 INTEL 87C196MH (PLCC)
 INTEL 87C196MH (QFP)
 INTEL 87C196NQ
 INTEL 87C196NT
 INTEL 87C198 (PLCC)
 INTEL 87C198 (QFP)
 INTEL 87C251SA
 INTEL 87C251SB (A-step)
 INTEL 87C251SB (B-step)
 INTEL 87C251SP
 INTEL 87C251SQ
 INTEL 87C252
 INTEL 87C51
 INTEL 87C51 (FX CORE)
 INTEL 87C51FA
 INTEL 87C51FB
 INTEL 87C51FC
 INTEL 87C51GB OTP
 INTEL 87C51GB WINDOW
 INTEL 87C51RA
 INTEL 87C51RB
 INTEL 87C51RC
 INTEL 87C52
 INTEL 87C54
 INTEL 87C58

WAMPU3.EXE ADP-8796PGA
 WAMPU3.EXE ADP-8796PLCC
 WAMPU3.EXE ADP-8796PGA
 WAMPU3.EXE ADP-8796PLCC
 WAMPU3.EXE ADP-8796PGA
 WAMPU3.EXE ADP-8796PLCC
 WAMPU3.EXE ADP-8796PGA
 WAMPU3.EXE ADP-8796PLCC
 WAMPU3.EXE ADP-8798
 WPGM51.EXE
 WPGM51.EXE
 WAMPU3.EXE ADP-87C198
 WAMPU3.EXE ADP-87C196KC-Q
 WAMPU3.EXE ADP-87C196CA-PL
 WAMPU3.EXE ADP-87C196CB-PL
 WAMPU3.EXE ADP-87C196CB-Q
 WAMPU3.EXE ADP-87C196JR
 WAMPU3.EXE ADP-87C196JR
 WAMPU3.EXE ADP-87C196JR
 WAMPU3.EXE ADP-87C196JR
 WAMPU3.EXE ADP-8796PGA
 WAMPU3.EXE ADP-8796PLCC
 WAMPU3.EXE ADP-87C196KC-Q
 WAMPU3.EXE ADP-8796PGA
 WAMPU3.EXE ADP-8796PLCC
 WAMPU3.EXE ADP-87C196KC-Q
 WAMPU3.EXE ADP-87C196KC-SQ
 WAMPU3.EXE ADP-8796PGA
 WAMPU3.EXE ADP-8796PLCC
 WAMPU3.EXE ADP-87C196KC-Q
 WAMPU3.EXE ADP-87C196KR
 WAMPU3.EXE ADP-87C196KR
 WAMPU3.EXE ADP-87C196KR
 WAMPU3.EXE ADP-87C196KR
 WAMPU3.EXE ADP-87C196MC
 WAMPU3.EXE ADP-87C196MC-Q
 WAMPU3.EXE ADP-87C196MC-SD
 WAMPU3.EXE ADP-87C196MC
 WAMPU3.EXE ADP-87C196MC-Q
 WAMPU3.EXE ADP-87C196MC
 WAMPU3.EXE ADP-87C196MC-Q
 WAMPU3.EXE ADP-87C196NT
 WAMPU3.EXE ADP-87C196NT
 WAMPU3.EXE ADP-87C198
 WAMPU3.EXE ADP-87C196KC-Q
 WPGM51.EXE
 WPGM51.EXE
 WPGM51.EXE
 WPGM51.EXE
 WPGM51.EXE
 WPGM51.EXE
 WPGM51.EXE
 WPGM51.EXE
 WASIG.EXE ADP-51GB
 WASIG.EXE ADP-51GB
 WPGM51.EXE
 WPGM51.EXE
 WPGM51.EXE
 WPGM51.EXE
 WPGM51.EXE
 WPGM51.EXE

INTEL	87L196KD (PGA)	WAMPU3.EXE	ADP-8796PGA
INTEL	87L196KD (PLCC)	WAMPU3.EXE	ADP-8796PLCC
INTEL	87L196KD (QFP)	WAMPU3.EXE	ADP-87C196KC-Q
INTEL	87L51FA	WPGM51.EXE	
INTEL	87L51FB	WPGM51.EXE	
INTEL	87L51FC	WPGM51.EXE	
INTEL	87L52	WPGM51.EXE	
INTEL	87L54	WPGM51.EXE	
INTEL	87L58	WPGM51.EXE	
INTEL	KU87C51SL	WASIG.EXE	ADP-51SL-KU
INTEL	SB87C51SL	WASIG.EXE	ADP-51SL-SB
INTEL	5AC312-25/-30	WEPLD1.EXE	
INTEL	5AC324	WEPLD1.EXE	
INTEL	5C031	WEPLD1.EXE	
INTEL	5C060	WEPLD1.EXE	
INTEL	5C090	WEPLD1.EXE	
INTEL	5C1810	WA1810.EXE	ADP-1810PLCC
INTEL	85C060	WEPLD1.EXE	
INTEL	85C090	WEPLD1.EXE	
INTEL	85C220	WEPLD1.EXE	
INTEL	85C224	WEPLD1.EXE	
INTEL	85C22V10	WPLD1.EXE	
INTEL	D5C032-25/-30	WEPLD1.EXE	
INTEL	P5C032-25/-30	WEPLD1.EXE	
INTEL	iPLD22V10	WPLD1.EXE	
INTEL	iPLD610	WEPLD1.EXE	
INTEL	iPLD910	WEPLD1.EXE	
ISSI	27C020	WMEM1.EXE	
ISSI	27HC010	WMEM1.EXE	
ISSI	27HC020	WMEM1.EXE	
ISSI	27HC256 [12.5V]	WMEM1.EXE	
ISSI	27HC512 [12.5V]	WMEM1.EXE	
ISSI	27LV010	WMEM1.EXE	
ISSI	IS28F010	WMEM1.EXE	
ISSI	IS28F020	WMEM1.EXE	
ISSI	IS24C01	WSPROM.EXE	
ISSI	IS24C01B	WSPROM.EXE	
ISSI	IS24C02/IS24C02-3	WSPROM.EXE	
ISSI	IS24C02B	WSPROM.EXE	
ISSI	IS24C04/IS24C04-3	WSPROM.EXE	
ISSI	IS24C04A	WSPROM.EXE	
ISSI	IS24C08A	WSPROM.EXE	
ISSI	IS24C128/IS24C128-3	WSPROM.EXE	
ISSI	IS24C16/IS24C16-3	WSPROM.EXE	
ISSI	IS24C16A	WSPROM.EXE	
ISSI	IS24C256A	WSPROM.EXE	
ISSI	IS24C32/IS24C32-3	WSPROM.EXE	
ISSI	IS24C32A	WSPROM.EXE	
ISSI	IS24C64A	WSPROM.EXE	
ISSI	IS24L128	WSPROM.EXE	
ISSI	IS24L256	WSPROM.EXE	
ISSI	IS25C01	WSPROM.EXE	
ISSI	IS25C02	WSPROM.EXE	
ISSI	IS25C04	WSPROM.EXE	
ISSI	IS25C08	WSPROM.EXE	
ISSI	IS25C16	WSPROM.EXE	
ISSI	IS25C32A	WSPROM.EXE	
ISSI	IS25C64A	WSPROM.EXE	
ISSI	IS93C46	WSPROM.EXE	
ISSI	IS93C46A (128*8)	WSPROM.EXE	
ISSI	IS93C46A (64*16)	WSPROM.EXE	
ISSI	IS93C46B	WSPROM.EXE	
ISSI	IS93C46D (128*8)	WSPROM.EXE	
ISSI	IS93C46D (64*16)	WSPROM.EXE	

ISSI	IS93C56	WSPROM.EXE
ISSI	IS93C66	WSPROM.EXE
ISSI	IS93C66A (256*16)	WSPROM.EXE
ISSI	IS93C66A (512*8)	WSPROM.EXE
ISSI	IS93C86A (1024*16)	WSPROM.EXE
ISSI	IS93C86A (2048*8)	WSPROM.EXE
ISSI	IS89C51	WPGM51.EXE
ISSI	IS89C51A	WPGM51.EXE
ISSI	IS89C52	WPGM51.EXE
ISSI	IS89C52A	WPGM51.EXE
ISSI	IS89C54	WPGM51.EXE
ISSI	IS89C58	WPGM51.EXE
ISSI	IS89C64	WPGM51.EXE
ISSI	IS89E54	WPGM51.EXE
ISSI	IS89E58	WPGM51.EXE
ISSI	IS89E64	WPGM51.EXE
ISSI	IS89LV52A	WPGM51.EXE
ITT	NVM3060	WSPROM.EXE
LATTICE	GAL16LV8C	WPLD1.EXE
LATTICE	GAL16LV8D	WPLD1.EXE
LATTICE	GAL16LV8Z	WPLD1.EXE
LATTICE	GAL16V8	WPLD1.EXE
LATTICE	GAL16V8A	WPLD1.EXE
LATTICE	GAL16V8B	WPLD1.EXE
LATTICE	GAL16V8B-7	WPLD1.EXE
LATTICE	GAL16V8C	WPLD1.EXE
LATTICE	GAL16V8D	WPLD1.EXE
LATTICE	GAL16V8Z	WPLD1.EXE
LATTICE	GAL16VP8B	WPLD1.EXE
LATTICE	GAL18V10	WPLD1.EXE
LATTICE	GAL18V10B	WPLD1.EXE
LATTICE	GAL20LV8C	WPLD1.EXE
LATTICE	GAL20LV8D	WPLD1.EXE
LATTICE	GAL20LV8Z	WPLD1.EXE
LATTICE	GAL20RA10 (no UES)	WPLD1.EXE
LATTICE	GAL20RA10 UES	WPLD1.EXE
LATTICE	GAL20RA10B (no UES)	WPLD1.EXE
LATTICE	GAL20RA10B UES	WPLD1.EXE
LATTICE	GAL20V8	WPLD1.EXE
LATTICE	GAL20V8A	WPLD1.EXE
LATTICE	GAL20V8B	WPLD1.EXE
LATTICE	GAL20V8B-7	WPLD1.EXE
LATTICE	GAL20V8C	WPLD1.EXE
LATTICE	GAL20V8Z	WPLD1.EXE
LATTICE	GAL20VP8B	WPLD1.EXE ADP-GAL20VP8
LATTICE	GAL20XV10	WPLD1.EXE
LATTICE	GAL20XV10B	WPLD1.EXE
LATTICE	GAL22LV10C	WPLD1.EXE
LATTICE	GAL22LV10D	WPLD1.EXE
LATTICE	GAL22LV10Z	WPLD1.EXE
LATTICE	GAL22V10 (no UES)	WPLD1.EXE
LATTICE	GAL22V10 UES	WPLD1.EXE
LATTICE	GAL22V10B (no UES)	WPLD1.EXE
LATTICE	GAL22V10B UES	WPLD1.EXE
LATTICE	GAL22V10C (no UES)	WPLD1.EXE
LATTICE	GAL22V10C UES	WPLD1.EXE
LATTICE	GAL22V10D (no UES)	WPLD1.EXE
LATTICE	GAL22V10D UES	WPLD1.EXE
LATTICE	GAL26CLV12C	WPLD1.EXE
LATTICE	GAL26CLV12D	WPLD1.EXE
LATTICE	GAL26CLV12Z	WPLD1.EXE
LATTICE	GAL26CLV12ZD	WPLD1.EXE
LATTICE	GAL26CV12	WPLD1.EXE
LATTICE	GAL26CV12B	WPLD1.EXE

LATTICE	GAL26CV12C	WPLD1.EXE
LATTICE	GAL26V12C	WPLD1.EXE
LATTICE	GAL6001	WPLD1.EXE
LATTICE	GAL6001B	WPLD1.EXE
LATTICE	GAL6002B	WPLD1.EXE
LATTICE	LC4032B (TQ44)	WAMACH2.EXE ADP-MACH4000-
TQ44		
LATTICE	LC4032B (TQ48)	WAMACH2.EXE ADP-MACH4000-
TQ48		
LATTICE	LC4032V (TQ44)	WAMACH2.EXE ADP-MACH4000-
TQ44		
LATTICE	LC4032V (TQ48)	WAMACH2.EXE ADP-MACH4000-
TQ48		
LATTICE	LC4064B (TQ100)	WAMACH2.EXE ADP-MACH4000-
TQ100		
LATTICE	LC4064B (TQ44)	WAMACH2.EXE ADP-MACH4000-
TQ44		
LATTICE	LC4064V (TQ100)	WAMACH2.EXE ADP-MACH4000-
TQ100		
LATTICE	LC4064V (TQ44)	WAMACH2.EXE ADP-MACH4000-
TQ44		
LATTICE	LC4064V (TQ48)	WAMACH2.EXE ADP-MACH4000-
TQ48		
LATTICE	LC4128B (TQ100)	WAMACH2.EXE ADP-MACH4000-
TQ100		
LATTICE	LC4128B (TQ128)	WAMACH2.EXE ADP-MACH4000-
TQ128		
LATTICE	LC4128V (TQ100)	WAMACH2.EXE ADP-MACH4000-
TQ100		
LATTICE	LC4128V (TQ128)	WAMACH2.EXE ADP-MACH4000-
TQ128		
LATTICE	LC4128V (TQ144)	WAMACH2.EXE ADP-MACH4000-
TQ144		
LATTICE	LC4256B (TQ100)	WAMACH2.EXE ADP-MACH4000-
TQ100		
LATTICE	LC4256B (TQ176)	WAMACH2.EXE ADP-MACH4000-
TQ176		
LATTICE	LC4256V (TQ100)	WAMACH2.EXE ADP-MACH4000-
TQ100		
LATTICE	LC4256V (TQ144)	WAMACH2.EXE ADP-MACH4000-
TQ144		
LATTICE	LC4256V (TQ176)	WAMACH2.EXE ADP-MACH4000-
TQ176		
LATTICE	LC4384B (TQ176)	WAMACH2.EXE ADP-MACH4000-
TQ176		
LATTICE	LC4384V (TQ176)	WAMACH2.EXE ADP-MACH4000-
TQ176		
LATTICE	LC4512B (TQ176)	WAMACH2.EXE ADP-MACH4000-
TQ176		
LATTICE	LC4512V (TQ176)	WAMACH2.EXE ADP-MACH4000-
TQ176		
LATTICE	LC5256B (PQ208)	WAMACH2.EXE ADP-MACH5000-
PQ208		
LATTICE	LC5384B (PQ208)	WAMACH2.EXE ADP-MACH5000-
PQ208		
LATTICE	LC5512B (PQ208)	WAMACH2.EXE ADP-MACH5000-
PQ208		
LATTICE	M4-128/64-VC	WAMACH1.EXE ADP-MACH231SP-TQ
LATTICE	M4-128/64-YC	WAMACH1.EXE ADP-MACH445
LATTICE	M4-128N/64-JC	WAMACH1.EXE ADP-MACH1
LATTICE	M4-192/96-VC	WAMACH1.EXE ADP-M4/192-TQ144
LATTICE	M4-256/128-YC	WAMACH1.EXE ADP-MACH465-Q
LATTICE	M4-96/48-VC	WAMACH1.EXE ADP-MACH231SP-TQ
LATTICE	M4LV-128/64-VC	WAMACH1.EXE ADP-MACH231SP-TQ

LATTICE	M4LV-128/64-YC	WAMACH1.EXE	ADP-MACH445
LATTICE	M4LV-128N/64-JC	WAMACH1.EXE	ADP-MACH1
LATTICE	M4LV-192/96-VC	WAMACH1.EXE	ADP-M4/192-TQ144
LATTICE	M4LV-256/128-YC	WAMACH1.EXE	ADP-MACH465-Q
LATTICE	M4LV-96/48-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
LATTICE	M5-128/120 YC/1	WAMACH5.EXE	ADP-MACH5-Q160
LATTICE	M5-128/68 VC/1	WAMACH5.EXE	ADP-MACH5-TQ100
LATTICE	M5-128/68 YC/1	WAMACH5.EXE	ADP-MACH5-Q100
LATTICE	M5-192/120 YC/1	WAMACH5.EXE	ADP-MACH5-Q160
LATTICE	M5-192/68 VC/1	WAMACH5.EXE	ADP-MACH5-TQ100
LATTICE	M5-256/68 VC/1	WAMACH5.EXE	ADP-MACH5-TQ100
LATTICE	MACH110	WAMACH.EXE	ADP-MACH
LATTICE	MACH111	WAMACH.EXE	ADP-MACH/-TQ
LATTICE	MACH111SP	WAMACH.EXE	ADP-MACH/-TQ
LATTICE	MACH120	WAMACH1.EXE	ADP-MACH2
LATTICE	MACH130	WAMACH1.EXE	ADP-MACH1
LATTICE	MACH131	WAMACH1.EXE	ADP-MACH1
LATTICE	MACH131/1	WAMACH1.EXE	ADP-MACH1
LATTICE	MACH131SP	WAMACH1.EXE	ADP-MACH445
LATTICE	MACH131SP-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
LATTICE	MACH210/A/AQ	WAMACH.EXE	ADP-MACH
LATTICE	MACH211	WAMACH.EXE	ADP-MACH/-TQ
LATTICE	MACH211SP	WAMACH.EXE	ADP-MACH/-TQ
LATTICE	MACH215	WAMACH.EXE	ADP-MACH
LATTICE	MACH220	WAMACH1.EXE	ADP-MACH2
LATTICE	MACH221	WAMACH1.EXE	ADP-MACH2
LATTICE	MACH221/1	WAMACH1.EXE	ADP-MACH2
LATTICE	MACH221SP	WAMACH1.EXE	ADP-MACH445
LATTICE	MACH221SP-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
LATTICE	MACH230	WAMACH1.EXE	ADP-MACH1
LATTICE	MACH231	WAMACH1.EXE	ADP-MACH1
LATTICE	MACH231/1	WAMACH1.EXE	ADP-MACH1
LATTICE	MACH231SP	WAMACH1.EXE	ADP-MACH445
LATTICE	MACH231SP-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
LATTICE	MACH355/Q	WAMACH1.EXE	ADP-MACH355-Q
LATTICE	MACH435	WAMACH1.EXE	ADP-MACH1
LATTICE	MACH436	WAMACH1.EXE	ADP-MACH1
LATTICE	MACH445/Q	WAMACH1.EXE	ADP-MACH445
LATTICE	MACH446	WAMACH1.EXE	ADP-MACH445
LATTICE	MACH465/Q	WAMACH1.EXE	ADP-MACH465-Q
LATTICE	MACH466	WAMACH1.EXE	ADP-MACH465-Q
LATTICE	MACH5-128/104	WAMACH5.EXE	ADP-MACH5-Q144
LATTICE	MACH5-128/120	WAMACH5.EXE	ADP-MACH5-Q160
LATTICE	MACH5-128/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
LATTICE	MACH5-192/104	WAMACH5.EXE	ADP-MACH5-Q144
LATTICE	MACH5-192/120	WAMACH5.EXE	ADP-MACH5-Q160
LATTICE	MACH5-192/160	WAMACH5.EXE	ADP-MACH5-Q208
LATTICE	MACH5-192/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
LATTICE	MACH5-256/104	WAMACH5.EXE	ADP-MACH5-Q144
LATTICE	MACH5-256/120	WAMACH5.EXE	ADP-MACH5-Q160
LATTICE	MACH5-256/160	WAMACH5.EXE	ADP-MACH5-Q208
LATTICE	MACH5-256/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
LATTICE	MACH5-320/120	WAMACH5.EXE	ADP-MACH5-Q160
LATTICE	MACH5-320/160	WAMACH5.EXE	ADP-MACH5-Q208
LATTICE	MACH5-320/184	WAMACH5.EXE	ADP-MACH5-Q240
LATTICE	MACH5-320/192	WAMACH5.EXE	ADP-MACH5-BG256
LATTICE	MACH5-384/120	WAMACH5.EXE	ADP-MACH5-Q160
LATTICE	MACH5-384/160	WAMACH5.EXE	ADP-MACH5-Q208
LATTICE	MACH5-384/184	WAMACH5.EXE	ADP-MACH5-Q240
LATTICE	MACH5-384/192	WAMACH5.EXE	ADP-MACH5-BG256
LATTICE	MACH5-512/120	WAMACH5.EXE	ADP-MACH5-Q160

LATTICE	MACH5-512/160	WAMACH5.EXE	ADP-MACH5-Q208
LATTICE	MACH5-512/184	WAMACH5.EXE	ADP-MACH5-Q240
LATTICE	MACH5-512/192	WAMACH5.EXE	ADP-MACH5-BG256
LATTICE	MACH5-512/256	WAMACH5.EXE	ADP-MACH5-BG352
LATTICE	MACH5LV-128/104	WAMACH5.EXE	ADP-MACH5-
Q144/TQ144			
LATTICE	MACH5LV-128/120	WAMACH5.EXE	ADP-MACH5-Q160
LATTICE	MACH5LV-128/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
LATTICE	MACH5LV-128/74	WAMACH5.EXE	ADP-MACH5-TQ100
LATTICE	MACH5LV-256/104	WAMACH5.EXE	ADP-MACH5-
Q144/TQ144			
LATTICE	MACH5LV-256/120	WAMACH5.EXE	ADP-MACH5-Q160
LATTICE	MACH5LV-256/160	WAMACH5.EXE	ADP-MACH5-Q208
LATTICE	MACH5LV-256/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
LATTICE	MACH5LV-256/74	WAMACH5.EXE	ADP-MACH5-TQ100
LATTICE	MACH5LV-320/120	WAMACH5.EXE	ADP-MACH5-Q160
LATTICE	MACH5LV-320/160	WAMACH5.EXE	ADP-MACH5-Q208
LATTICE	MACH5LV-320/184	WAMACH5.EXE	ADP-MACH5-Q240
LATTICE	MACH5LV-320/192	WAMACH5.EXE	ADP-MACH5-BG256
LATTICE	MACH5LV-384/120	WAMACH5.EXE	ADP-MACH5-Q160
LATTICE	MACH5LV-384/160	WAMACH5.EXE	ADP-MACH5-Q208
LATTICE	MACH5LV-384/184	WAMACH5.EXE	ADP-MACH5-Q240
LATTICE	MACH5LV-384/192	WAMACH5.EXE	ADP-MACH5-BG256
LATTICE	MACH5LV-512/120	WAMACH5.EXE	ADP-MACH5-Q160
LATTICE	MACH5LV-512/160	WAMACH5.EXE	ADP-MACH5-Q208
LATTICE	MACH5LV-512/184	WAMACH5.EXE	ADP-MACH5-Q240
LATTICE	MACH5LV-512/192	WAMACH5.EXE	ADP-MACH5-BG256
LATTICE	MACH5LV-512/256	WAMACH5.EXE	ADP-MACH5-BG352
LATTICE	MACHLV210/A	WAMACH.EXE	ADP-MACH
LATTICE	MACHLV436	WAMACH1.EXE	ADP-MACH1
LATTICE	MACHLV446	WAMACH1.EXE	ADP-MACH445
LATTICE	MACHLV466	WAMACH1.EXE	ADP-MACH465-Q
LATTICE	PALCE16V8H	WPLD1.EXE	
LATTICE	PALCE16V8H/4	WPLD1.EXE	
LATTICE	PALCE16V8H/5	WPLD1.EXE	
LATTICE	PALCE16V8Q	WPLD1.EXE	
LATTICE	PALCE16V8Q/4	WPLD1.EXE	
LATTICE	PALCE16V8Q/5	WPLD1.EXE	
LATTICE	PALCE16V8Z	WPLD1.EXE	
LATTICE	PALCE20V8H	WPLD1.EXE	
LATTICE	PALCE20V8H/4	WPLD1.EXE	
LATTICE	PALCE20V8H/5	WPLD1.EXE	
LATTICE	PALCE20V8Q	WPLD1.EXE	
LATTICE	PALCE20V8Q/4	WPLD1.EXE	
LATTICE	PALCE20V8Q/5	WPLD1.EXE	
LATTICE	PALCE22V10H	WPLD1.EXE	
LATTICE	PALCE22V10H/4	WPLD1.EXE	
LATTICE	PALCE22V10H/5	WPLD1.EXE	
LATTICE	PALCE22V10Q	WPLD1.EXE	
LATTICE	PALCE22V10Q/4	WPLD1.EXE	
LATTICE	PALCE22V10Q/5	WPLD1.EXE	
LATTICE	PALCE22V10Z	WPLD1.EXE	
LATTICE	PALCE26V12H/4	WPLD1.EXE	
LATTICE	PALLV16V8Z	WPLD1.EXE	
LATTICE	iM4-32/32	WAMACH.EXE	ADP-MACH/-TQ/-
TQ48			
LATTICE	iM4-64/32	WAMACH.EXE	ADP-MACH/-TQ/-
TQ48			
LATTICE	iM4A3-128/64-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
LATTICE	iM4A3-128/64-YC	WAMACH1.EXE	ADP-MACH445
LATTICE	iM4A3-192/96-VC	WAMACH1.EXE	ADP-M4/192-TQ144
LATTICE	iM4A3-256/128 (QFP208)	WAMACH1.EXE	ADP-MACH465-Q

LATTICE FBG256	iM4A3-256/128 (fpBGA256)	WAMACH1.EXE	ADP-ISPM4A-
LATTICE	iM4A3-256/160-YC	WAMACH1.EXE	ADP-MACH465-Q
LATTICE	iM4A3-32/32 (PLCC44)	WAMACH.EXE	ADP-MACH
LATTICE	iM4A3-32/32 (TQFP44)	WAMACH.EXE	ADP-MACH-TQ
LATTICE	iM4A3-32/32 (TQFP48)	WAMACH.EXE	ADP-MACH-TQ48
LATTICE	iM4A3-384/160	WAMACH1.EXE	ADP-MACH465-Q
LATTICE	iM4A3-384/192	WAMACH1.EXE	ADP-MACH4-BG256
LATTICE	iM4A3-64/32 (PLCC44)	WAMACH.EXE	ADP-MACH
LATTICE	iM4A3-64/32 (TQFP44)	WAMACH.EXE	ADP-MACH-TQ
LATTICE	iM4A3-64/32 (TQFP48)	WAMACH.EXE	ADP-MACH-TQ48
LATTICE	iM4A3-64/64-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
LATTICE	iM4A3-96/48-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
LATTICE	iM4A5-128/64-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
LATTICE	iM4A5-128/64-YC	WAMACH1.EXE	ADP-MACH445
LATTICE	iM4A5-192/96-VC	WAMACH1.EXE	ADP-M4/192-TQ144
LATTICE	iM4A5-32/32 (PLCC44)	WAMACH.EXE	ADP-MACH
LATTICE	iM4A5-32/32 (TQFP44)	WAMACH.EXE	ADP-MACH-TQ
LATTICE	iM4A5-32/32 (TQFP48)	WAMACH.EXE	ADP-MACH-TQ48
LATTICE	iM4A5-64/32 (PLCC44)	WAMACH.EXE	ADP-MACH
LATTICE	iM4A5-64/32 (TQFP44)	WAMACH.EXE	ADP-MACH-TQ
LATTICE	iM4A5-64/32 (TQFP48)	WAMACH.EXE	ADP-MACH-TQ48
LATTICE	iM4A5-96/48-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
LATTICE	iM4LV-32/32	WAMACH.EXE	ADP-MACH/-TQ/-
TQ48			
LATTICE	iM4LV-64/32	WAMACH.EXE	ADP-MACH/-TQ/-
TQ48			
LATTICE	ispGAL22LV10	WAPLSI.EXE	
LATTICE	ispGAL22V10AB (PLCC28)	WAMACH2.EXE	CNV-PLCC-DIP28
LATTICE	ispGAL22V10AB (QFN32)	WAMACH2.EXE	ADP-ISPGAL-QFN32
LATTICE	ispGAL22V10AV (PLCC28)	WAMACH2.EXE	CNV-PLCC-DIP28
LATTICE	ispGAL22V10AV (QFN32)	WAMACH2.EXE	ADP-ISPGAL-QFN32
LATTICE	ispGAL22V10B	WAGDS.EXE	ADP-ISP22V10
LATTICE	ispGAL22V10C	WAGDS.EXE	ADP-ISP22V10
LATTICE	ispGDS14	WPLD1.EXE	
LATTICE	ispGDS22	WPLD1.EXE	
LATTICE	ispGDX80A	WAPLSI.EXE	ADP-ISPGDX-TQ100
LATTICE	ispGDX80VA	WAPLSI.EXE	ADP-ISPGDX-TQ100
LATTICE	ispLSI1016	WAPLSI.EXE	ADP-PLSI-
PL44/TQ44			
LATTICE	ispLSI1016E	WAPLSI.EXE	ADP-PLSI-
PL44/TQ44			
LATTICE	ispLSI1016EA	WAPLSI.EXE	ADP-PLSI-
PL44/TQ44			
LATTICE	ispLSI1024	WAPLSI.EXE	ADP-PLSI-PL68
LATTICE	ispLSI1024E	WAPLSI.EXE	ADP-PLSI-PL68
LATTICE	ispLSI1032	WAPLSI.EXE	ADP-PLSI-
PL84/TQ100/TQ100V2			
LATTICE	ispLSI1032E	WAPLSI.EXE	ADP-PLSI-
PL84/TQ100/TQ100V2			
LATTICE	ispLSI1048	WAPLSI.EXE	ADP-PLSI-PQ120
LATTICE	ispLSI1048C	WAPLSI.EXE	ADP-PLSI-PQ128
LATTICE	ispLSI1048E	WAPLSI.EXE	ADP-PLSI-PQ128
LATTICE	ispLSI1048E-128T	WAPLSI.EXE	ADP-ISPLSI-
TQ128A			
LATTICE	ispLSI2032	WAPLSI.EXE	ADP-PLSI-
PL44/TQ44			
LATTICE	ispLSI2032A	WAPLSI.EXE	ADP-PLSI-
PL44/TQ44			
LATTICE	ispLSI2032E	WAPLSI.EXE	ADP-PLSI-
PL44/TQ44			
LATTICE	ispLSI2032V	WAPLSI.EXE	ADP-PLSI-
PL44/TQ44			
LATTICE	ispLSI2032VE	WAPLSI.EXE	ADP-PLSI-

PL44/TQ44/TQ48			
LATTICE	ispLSI2064	WAPLSI.EXE	ADP-PLSI-
PL84/TQ100/TQ100V2			
LATTICE	ispLSI2064A	WAPLSI.EXE	ADP-PLSI-
PL84/TQ100/TQ100V2			
LATTICE	ispLSI2064E	WAPLSI.EXE	ADP-PLSI-
TQ100/TQ100V2			
LATTICE	ispLSI2064V-100T	WAPLSI.EXE	ADP-ISP2064VE-
TQ100			
LATTICE	ispLSI2064V-44P/T	WAPLSI.EXE	ADP-PLSI-
PL44/TQ44			
LATTICE	ispLSI2064VE-100T	WAPLSI.EXE	ADP-ISP2064VE-
TQ100			
LATTICE	ispLSI2064VE-44P/T	WAPLSI.EXE	ADP-PLSI-
PL44/TQ44			
LATTICE	ispLSI2096	WAPLSI.EXE	ADP-PLSI-PQ128
LATTICE	ispLSI2096A	WAPLSI.EXE	ADP-PLSI-PQ128
LATTICE	ispLSI2096VE	WAPLSI.EXE	ADP-ISPLSI-TQ128
LATTICE	ispLSI2128VE-100T	WAPLSI.EXE	ADP-ISP2064VE-
TQ100			
LATTICE	ispLSI2192VE	WAPLSI.EXE	ADP-ISPLSI-TQ128
LATTICE	ispLSI5128VE	WAPLSI.EXE	ADP-ISPLSI-
TQ128B			
LATTICE	ispPAC-POWR1208 (TQFP44)	WAMACH2.EXE	ADP-ISPPOWR-TQ44
LATTICE	ispPAC-POWR1208P1 (TQFP44)	WAMACH2.EXE	ADP-ISPPOWR-TQ44
LATTICE	ispPAC-POWR604 (TQFP44)	WAMACH2.EXE	ADP-ISPPOWR-TQ44
LATTICE	pLSI1016	WAPLSI.EXE	ADP-PLSI-
PL44/TQ44			
LATTICE	pLSI1016E	WAPLSI.EXE	ADP-PLSI-
PL44/TQ44			
LATTICE	pLSI1024	WAPLSI.EXE	ADP-PLSI-PL68
LATTICE	pLSI1024E	WAPLSI.EXE	ADP-PLSI-PL68
LATTICE	pLSI1032	WAPLSI.EXE	ADP-PLSI-
PL84/TQ100/TQ100V2			
LATTICE	pLSI1032E	WAPLSI.EXE	ADP-PLSI-
PL84/TQ100/TQ100V2			
LATTICE	pLSI1048	WAPLSI.EXE	ADP-PLSI-PQ120
LATTICE	pLSI1048C	WAPLSI.EXE	ADP-PLSI-PQ128
LATTICE	pLSI1048E	WAPLSI.EXE	ADP-PLSI-PQ128
LATTICE	pLSI2032	WAPLSI.EXE	ADP-PLSI-
PL44/TQ44			
LATTICE	pLSI2064	WAPLSI.EXE	ADP-PLSI-
PL84/TQ100/TQ100V2			
LATTICE	pLSI2096	WAPLSI.EXE	ADP-PLSI-PQ128
LG Semicon	GM23C32200AFW	WAEP42.EXE	ADP-EP42-PS
LG Semicon	GMS81604T	WMPU2.EXE	
LG Semicon	GMS81608T	WMPU2.EXE	
LG Semicon	HMS80C701	WPGM51.EXE	
LG Semicon	HMS81504T	WAMPU7.EXE	ADP-GMS81504-SD
LG Semicon	HMS81508T	WAMPU7.EXE	ADP-GMS81516-SD
LG Semicon	HMS81508T Q	WAMPU7.EXE	ADP-GMS81516-Q
LG Semicon	HMS81508T TQ	WAMPU7.EXE	ADP-GMS81516-TQ
LG Semicon	HMS81516BT TQ	WAMPU7.EXE	ADP-GMS81516-TQ
LG Semicon	HMS81516T	WAMPU7.EXE	ADP-GMS81516-SD
LG Semicon	HMS81516T Q	WAMPU7.EXE	ADP-GMS81516-Q
LG Semicon	HMS81516T TQ	WAMPU7.EXE	ADP-GMS81516-TQ
LG Semicon	HMS81524BT TQ	WAMPU7.EXE	ADP-GMS81516-TQ
LG Semicon	HMS84512T	WAMPU7.EXE	ADP-GMS84524-SD
LG Semicon	HMS84524T	WAMPU7.EXE	ADP-GMS84524-SD
LG Semicon	HMS87C1101	WPGM51.EXE	
LG Semicon	HMS87C1102	WPGM51.EXE	
LG Semicon	HMS87C1201	WPGM51.EXE	
LG Semicon	HMS87C1202	WPGM51.EXE	
LG Semicon	HMS87C1404	WPGM51.EXE	

LG Semicon	HMS87C1408	WPGM51.EXE
LG Semicon	HMS97C1051 (DIP20)	WASIG.EXE ADP-97C2051
LG Semicon	HMS97C1051 (SOP20)	WASIG.EXE ADP-97C2051-S
LG Semicon	HMS97C2051 (DIP20)	WASIG.EXE ADP-97C2051
LG Semicon	HMS97C2051 (SOP20)	WASIG.EXE ADP-97C2051-S
LG Semicon	HMS97C51	WPGM51.EXE
LG Semicon	HMS97C52	WPGM51.EXE
LG Semicon	HMS97C54	WPGM51.EXE
LG Semicon	HMS97C56	WPGM51.EXE
LG Semicon	HMS97C58	WPGM51.EXE
LG Semicon	HMS97L1051 (DIP20)	WASIG.EXE ADP-97C2051
LG Semicon	HMS97L1051 (SOP20)	WASIG.EXE ADP-97C2051-S
LG Semicon	HMS97L2051 (DIP20)	WASIG.EXE ADP-97C2051
LG Semicon	HMS97L2051 (SOP20)	WASIG.EXE ADP-97C2051-S
LG Semicon	HMS97L51	WPGM51.EXE
LG Semicon	HMS97L52	WPGM51.EXE
LG Semicon	HMS97L54	WPGM51.EXE
LG Semicon	HMS97L56	WPGM51.EXE
LG Semicon	HMS97L58	WPGM51.EXE
LG Semicon	HMS99C58	WPGM51.EXE
LINKSMART	L29004C	WMEM1.EXE
LINKSMART	L29S160FTC	WA28F.EXE ADP-49F800-
TS/TSV2		
LINKSMART	L29S160FTC-B	WA28F.EXE ADP-49F800-
TS/TSV2		
LINKSMART	L29S400FTC-B	WA28F.EXE ADP-49F800-
TS/TSV2		
LINKSMART	L29S800FTC-B	WA28F.EXE ADP-49F800-
TS/TSV2		
LINKSMART	L29W800ETC	WA28F.EXE ADP-28F160-TS
LINKSMART	LST28002	WMEM1.EXE
LINVEX	LX59CF2128	WMEM1.EXE
LYONTEK	LY24C02	WSPROM.EXE
LYONTEK	LY24C08	WSPROM.EXE
LYONTEK	LY24C16	WSPROM.EXE
M-SQUARE	MS8951 (PLCC44)	WASIG.EXE ADP-RTD2120-PL44
M-SQUARE	MS8951 (QFP48)	WASIG.EXE ADP-RTD2120-Q48
M.tec	TB29F013-B	WMEM1.EXE
M.tec	TB29F013-T	WMEM1.EXE
M.tec	TB29F023-B	WMEM1.EXE
M.tec	TB29F023-T	WMEM1.EXE
M.tec	TB29F043-B	WMEM1.EXE
M.tec	TB29F043-T	WMEM1.EXE
MAGNACHIP	HMS99C52S	WPGM51.EXE
MAGNACHIP	HMS99C54S	WPGM51.EXE
MAGNACHIP	HMS99C58S	WPGM51.EXE
MATSUSHITA	27128 [21V]	WMEM1.EXE
MATSUSHITA	2764 [21V]	WMEM1.EXE
MEGAWIN	MM29F040	WMEM1.EXE
MEGAWIN	MM29LF040	WMEM1.EXE
MEGAWIN	MM25SB512	WSPROM.EXE
MEGAWIN	MM27SB512	WSPROM.EXE
MEGAWIN	MM36SB512	WSPROM.EXE
MEGAWIN	MPC82E52AE	WPGM51.EXE
MEGAWIN	MPC82E52AS	WPGM51.EXE CNV-SOP-DIP28A
MEGAWIN	MPC82E54AE	WPGM51.EXE
MEGAWIN	MPC82E54AE2	WPGM51.EXE
MEGAWIN	MPC82E54AP	WPGM51.EXE CNV-PLCC-EP1M32A
MEGAWIN	MPC82E54AS	WPGM51.EXE CNV-SOP-DIP28A
MEGAWIN	MPC82E54AS2	WPGM51.EXE CNV-SOP-DIP28A
MEGAWIN	MPC82E54AS3	WPGM51.EXE CNV-SSOP-DIP30A
MEGAWIN	MPC82E54AT	WPGM51.EXE CNV-TSSOP-DIP28
MEGAWIN	MPC82E54AT2	WPGM51.EXE CNV-TSSOP-DIP28
MEGAWIN	MPC82G516AE	WPGM51.EXE

MEGAWIN	MPC82G516AF	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC82G516AP	WPGM51.EXE	CNV-PLCC-MPU51B
MEGAWIN	MPC82L52AE	WPGM51.EXE	
MEGAWIN	MPC82L52AS	WPGM51.EXE	CNV-SOP-DIP28A
MEGAWIN	MPC82L54AE	WPGM51.EXE	
MEGAWIN	MPC82L54AE2	WPGM51.EXE	
MEGAWIN	MPC82L54AP	WPGM51.EXE	CNV-PLCC-EP1M32A
MEGAWIN	MPC82L54AS	WPGM51.EXE	CNV-SOP-DIP28A
MEGAWIN	MPC82L54AS2	WPGM51.EXE	CNV-SOP-DIP28A
MEGAWIN	MPC82L54AS3	WPGM51.EXE	CNV-SSOP-DIP30A
MEGAWIN	MPC82L54AT	WPGM51.EXE	CNV-TSSOP-DIP28
MEGAWIN	MPC82L54AT2	WPGM51.EXE	CNV-TSSOP-DIP28
MEGAWIN	MPC89E515AE	WPGM51.EXE	
MEGAWIN	MPC89E515AF	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC89E515AP	WPGM51.EXE	CNV-PLCC-MPU51B
MEGAWIN	MPC89E51AE	WPGM51.EXE	
MEGAWIN	MPC89E51AF	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC89E51AP	WPGM51.EXE	CNV-PLCC-MPU51B
MEGAWIN	MPC89E52AE	WPGM51.EXE	
MEGAWIN	MPC89E52AF	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC89E52AP	WPGM51.EXE	CNV-PLCC-MPU51B
MEGAWIN	MPC89E53AE	WPGM51.EXE	
MEGAWIN	MPC89E53AF	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC89E53AP	WPGM51.EXE	CNV-PLCC-MPU51B
MEGAWIN	MPC89E54AE	WPGM51.EXE	
MEGAWIN	MPC89E54AF	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC89E54AP	WPGM51.EXE	CNV-PLCC-MPU51B
MEGAWIN	MPC89E58AE	WPGM51.EXE	
MEGAWIN	MPC89E58AF	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC89E58AP	WPGM51.EXE	CNV-PLCC-MPU51B
MEGAWIN	MPC89L515AE	WPGM51.EXE	
MEGAWIN	MPC89L515AF	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC89L515AP	WPGM51.EXE	CNV-PLCC-MPU51B
MEGAWIN	MPC89L516X2	WPGM51.EXE	
MEGAWIN	MPC89L516X2F	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC89L516X2P	WPGM51.EXE	CNV-PLCC-MPU51B
MEGAWIN	MPC89L51AE	WPGM51.EXE	
MEGAWIN	MPC89L51AF	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC89L51AP	WPGM51.EXE	CNV-PLCC-MPU51B
MEGAWIN	MPC89L52AE	WPGM51.EXE	
MEGAWIN	MPC89L52AF	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC89L52AP	WPGM51.EXE	CNV-PLCC-MPU51B
MEGAWIN	MPC89L53AE	WPGM51.EXE	
MEGAWIN	MPC89L53AF	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC89L53AP	WPGM51.EXE	CNV-PLCC-MPU51B
MEGAWIN	MPC89L54AE	WPGM51.EXE	
MEGAWIN	MPC89L54AF	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC89L54AP	WPGM51.EXE	CNV-PLCC-MPU51B
MEGAWIN	MPC89L556X2E	WPGM51.EXE	
MEGAWIN	MPC89L556X2F	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC89L556X2P	WPGM51.EXE	CNV-PLCC-MPU51B
MEGAWIN	MPC89L58AE	WPGM51.EXE	
MEGAWIN	MPC89L58AF	WPGM51.EXE	CNV-QFP-MPU51B
MEGAWIN	MPC89L58AP	WPGM51.EXE	CNV-PLCC-MPU51B
MICON	MDT10P05	WMPU1.EXE	
MICON	MDT10P10	WMPU1.EXE	
MICON	MDT10P20	WMPU1.EXE	
MICON	MDT10P21A1K	WMPU1.EXE	
MICON	MDT10P21A1P	WMPU1.EXE	
MICON	MDT10P21A2K	WMPU1.EXE	
MICON	MDT10P22A2K	WMPU1.EXE	
MICON	MDT10P22A3S	WMPU1.EXE	
MICON	MDT10P23A2K	WMPU1.EXE	
MICON	MDT10P41A1P	WMPU1.EXE	

MICON	MDT10P43P11	WMPU1.EXE
MICON	MDT10P55A1P	WMPU1.EXE
MICON	MDT10P55A2P	WMPU1.EXE
MICON	MDT10P55A3P	WMPU1.EXE
MICON	MDT10P55A4P	WMPU1.EXE
MICON	MDT10P55B1P	WMPU1.EXE
MICON	MDT10P55B2P	WMPU1.EXE
MICON	MDT10P55B3P	WMPU1.EXE
MICON	MDT10P55B4P	WMPU1.EXE
MICON	MDT10P56A1P	WMPU1.EXE
MICON	MDT10P56A2P	WMPU1.EXE
MICON	MDT10P56A3P	WMPU1.EXE
MICON	MDT10P56A4P	WMPU1.EXE
MICON	MDT10P61P	WMPU1.EXE
MICON	MDT10P62	WMPU1.EXE
MICON	MDT10P621	WMPU1.EXE
MICON	MDT10P64P	WMPU1.EXE
MICON	MDT10P651P	WMPU1.EXE
MICON	MDT10P72	WMPU1.EXE
MICON	MDT10P721	WMPU1.EXE
MICON	MDT10P73K	WMPU1.EXE
MICON	MDT10P74P	WMPU1.EXE
MICON	MDT2005	WMPU1.EXE
MICON	MDT2010	WMPU1.EXE
MICON	MDT2015	WMPU1.EXE
MICON	MDT2020	WMPU1.EXE
MICON	MDT2030P	WMPU1.EXE
MICON	MDT2051P	WMPU1.EXE
MICROCHIP	27C128 [13V]	WMEM1.EXE
MICROCHIP	27C256 [13V]	WMEM1.EXE
MICROCHIP	27C512A [13V]	WMEM1.EXE
MICROCHIP	27C512 [12.75V]	WMEM1.EXE
MICROCHIP	27C513 [12.5V]	WMEM1.EXE
MICROCHIP	27C64 [12.5V]	WMEM1.EXE
MICROCHIP	27HC256 [13V]	WMEM1.EXE
MICROCHIP	27HC64 [12.5V]	WMEM1.EXE
MICROCHIP	27LV256 [13V]	WMEM1.EXE
MICROCHIP	27LV512 [13V]	WMEM1.EXE
MICROCHIP	27LV64 [12.5V]	WMEM1.EXE
MICROCHIP	28C04A/AF	WMEM1.EXE
MICROCHIP	28C16A/AF	WMEM1.EXE
MICROCHIP	28C17A/AF	WMEM1.EXE
MICROCHIP	28C256	WMEM1.EXE
MICROCHIP	28C64A/AF	WMEM1.EXE
MICROCHIP	28C64AX	WMEM1.EXE
MICROCHIP	28HC16	WMEM1.EXE
MICROCHIP	28HC17	WMEM1.EXE
MICROCHIP	28LV64A	WMEM1.EXE
MICROCHIP	24AA00 (SOT23)	WSPROM.EXE
MICROCHIP	24AA01	WSPROM.EXE
MICROCHIP	24AA02	WSPROM.EXE
MICROCHIP	24AA04	WSPROM.EXE
MICROCHIP	24AA04 (SOT-23)	WSPROM.EXE
MICROCHIP	24AA08	WSPROM.EXE
MICROCHIP	24AA08 (SOT23)	WSPROM.EXE
MICROCHIP	24AA128	WSPROM.EXE
MICROCHIP	24AA16 (SOT23)	WSPROM.EXE
MICROCHIP	24AA16/24AA164	WSPROM.EXE
MICROCHIP	24AA174	WSPROM.EXE
MICROCHIP	24AA256	WSPROM.EXE
MICROCHIP	24AA32/24C32A	WSPROM.EXE
MICROCHIP	24AA32A	WSPROM.EXE
MICROCHIP	24AA512	WSPROM.EXE
MICROCHIP	24AA64	WSPROM.EXE

MICROCHIP	24AA65	WSPROM.EXE
MICROCHIP	24C/AA/LC00	WSPROM.EXE
MICROCHIP	24C00 (SOT23)	WSPROM.EXE
MICROCHIP	24C01A/24C01C	WSPROM.EXE
MICROCHIP	24C02A	WSPROM.EXE
MICROCHIP	24C02C	WSPROM.EXE
MICROCHIP	24C04A	WSPROM.EXE
MICROCHIP	24C16B	WSPROM.EXE
MICROCHIP	24C256	WSPROM.EXE
MICROCHIP	24C65/24LC65	WSPROM.EXE
MICROCHIP	24FC256	WSPROM.EXE
MICROCHIP	24FC512	WSPROM.EXE
MICROCHIP	24LC00 (SOT23)	WSPROM.EXE
MICROCHIP	24LC01B	WSPROM.EXE
MICROCHIP	24LC01B (SOT23)	WSPROM.EXE
MICROCHIP	24LC02B (SOT23)	WSPROM.EXE
MICROCHIP	24LC02B/24LC024	WSPROM.EXE
MICROCHIP	24LC04B	WSPROM.EXE
MICROCHIP	24LC04B (SOT-23)	WSPROM.EXE
MICROCHIP	24LC08B/24C08B	WSPROM.EXE
MICROCHIP	24LC1025	WSPROM.EXE
MICROCHIP	24LC128	WSPROM.EXE
MICROCHIP	24LC16B (SOT23)	WSPROM.EXE
MICROCHIP	24LC16B/24LC164	WSPROM.EXE
MICROCHIP	24LC174/24C174	WSPROM.EXE
MICROCHIP	24LC21	WSPROM.EXE
MICROCHIP	24LC211	WSPROM.EXE
MICROCHIP	24LC21A	WSPROM.EXE
MICROCHIP	24LC256	WSPROM.EXE
MICROCHIP	24LC32/24C32	WSPROM.EXE
MICROCHIP	24LC32A	WSPROM.EXE
MICROCHIP	24LC41	WSPROM.EXE
MICROCHIP	24LC512	WSPROM.EXE
MICROCHIP	24LC515	WSPROM.EXE
MICROCHIP	24LC64/24C64	WSPROM.EXE
MICROCHIP	24LCS21	WSPROM.EXE
MICROCHIP	24LCS21A	WSPROM.EXE
MICROCHIP	24LCS22A	WSPROM.EXE
MICROCHIP	24LCS52	WSPROM.EXE
MICROCHIP	24LCS61	WSPROM.EXE
MICROCHIP	24LCS62	WSPROM.EXE
MICROCHIP	25AA040	WSPROM.EXE
MICROCHIP	25AA040A	WSPROM.EXE
MICROCHIP	25AA320	WSPROM.EXE
MICROCHIP	25C/LC040	WSPROM.EXE
MICROCHIP	25C/LC080	WSPROM.EXE
MICROCHIP	25C/LC160	WSPROM.EXE
MICROCHIP	25C/LC320	WSPROM.EXE
MICROCHIP	25C/LC640	WSPROM.EXE
MICROCHIP	25LC025	WSPROM.EXE
MICROCHIP	25LC040A	WSPROM.EXE
MICROCHIP	25LC1024	WSPROM.EXE
MICROCHIP	25LC160A	WSPROM.EXE
MICROCHIP	25LC256	WSPROM.EXE
MICROCHIP	37LV128	WSPROM.EXE
MICROCHIP	37LV36	WSPROM.EXE
MICROCHIP	37LV65	WSPROM.EXE
MICROCHIP	59C11 (128*8)	WSPROM.EXE
MICROCHIP	59C11 (64*16)	WSPROM.EXE
MICROCHIP	85C72	WSPROM.EXE
MICROCHIP	85C82	WSPROM.EXE
MICROCHIP	85C92	WSPROM.EXE
MICROCHIP	93AA46 (128*8)	WSPROM.EXE
MICROCHIP	93AA46 (64*16)	WSPROM.EXE

MICROCHIP	93AA46A	WSPROM.EXE
MICROCHIP	93AA56 (128*16)	WSPROM.EXE
MICROCHIP	93AA56 (256*8)	WSPROM.EXE
MICROCHIP	93AA66 (256*16)	WSPROM.EXE
MICROCHIP	93AA66 (512*8)	WSPROM.EXE
MICROCHIP	93AA86A (SOT23)	WSPROM.EXE
MICROCHIP	93AA86B (SOT23)	WSPROM.EXE
MICROCHIP	93AA86C (1024*16)	WSPROM.EXE
MICROCHIP	93AA86C (2048*8)	WSPROM.EXE
MICROCHIP	93C06	WSPROM.EXE
MICROCHIP	93C46	WSPROM.EXE
MICROCHIP	93C46B	WSPROM.EXE
MICROCHIP	93C56 (128*16)	WSPROM.EXE
MICROCHIP	93C56 (256*8)	WSPROM.EXE
MICROCHIP	93C56B	WSPROM.EXE
MICROCHIP	93C56B (SOT23)	WSPROM.EXE
MICROCHIP	93C66 (256*16)	WSPROM.EXE
MICROCHIP	93C66 (512*8)	WSPROM.EXE
MICROCHIP	93C76 (1024*8)	WSPROM.EXE
MICROCHIP	93C76 (512*16)	WSPROM.EXE
MICROCHIP	93C86 (1024*16)	WSPROM.EXE
MICROCHIP	93C86 (2048*8)	WSPROM.EXE
MICROCHIP	93C86A (SOT23)	WSPROM.EXE
MICROCHIP	93C86B (SOT23)	WSPROM.EXE
MICROCHIP	93C86C (1024*16)	WSPROM.EXE
MICROCHIP	93C86C (2048*8)	WSPROM.EXE
MICROCHIP	93LC46 (128*8)	WSPROM.EXE
MICROCHIP	93LC46 (64*16)	WSPROM.EXE
MICROCHIP	93LC46A	WSPROM.EXE
MICROCHIP	93LC46B	WSPROM.EXE
MICROCHIP	93LC46B (SOT-23)	WSPROM.EXE
MICROCHIP	93LC46C (128*8)	WSPROM.EXE
MICROCHIP	93LC46C (64*16)	WSPROM.EXE
MICROCHIP	93LC56 (128*16)	WSPROM.EXE
MICROCHIP	93LC56 (256*8)	WSPROM.EXE
MICROCHIP	93LC56B	WSPROM.EXE
MICROCHIP	93LC56C (128*16)	WSPROM.EXE
MICROCHIP	93LC56C (256*8)	WSPROM.EXE
MICROCHIP	93LC66 (256*16)	WSPROM.EXE
MICROCHIP	93LC66 (512*8)	WSPROM.EXE
MICROCHIP	93LC66A	WSPROM.EXE
MICROCHIP	93LC66B	WSPROM.EXE
MICROCHIP	93LC76 (1024*8)	WSPROM.EXE
MICROCHIP	93LC76 (512*16)	WSPROM.EXE
MICROCHIP	93LC76C (1024*8)	WSPROM.EXE
MICROCHIP	93LC76C (512*16)	WSPROM.EXE
MICROCHIP	93LC86 (1024*16)	WSPROM.EXE
MICROCHIP	93LC86 (2048*8)	WSPROM.EXE
MICROCHIP	93LC86A (SOT23)	WSPROM.EXE
MICROCHIP	93LC86B (SOT23)	WSPROM.EXE
MICROCHIP	93LC86C (1024*16)	WSPROM.EXE
MICROCHIP	93LC86C (2048*8)	WSPROM.EXE
MICROCHIP	93LCS56	WSPROM.EXE
MICROCHIP	93LCS66	WSPROM.EXE
MICROCHIP	HCS200	WSPROM.EXE
MICROCHIP	HCS300	WSPROM.EXE
MICROCHIP	HCS301	WSPROM.EXE
MICROCHIP	HCS360	WSPROM.EXE
MICROCHIP	27HC641	WBPPGM.EXE
MICROCHIP	CF745	WPIC.EXE
MICROCHIP	CF775	WPIC.EXE
MICROCHIP	MCP25020	WPIC.EXE
MICROCHIP	MCP25025	WPIC.EXE
MICROCHIP	MCP25050	WPIC.EXE

MICROCHIP	MCP25055	WPIC.EXE
MICROCHIP	PIC10F200	WPIC2.EXE
MICROCHIP	PIC10F202	WPIC2.EXE
MICROCHIP	PIC10F204	WPIC2.EXE
MICROCHIP	PIC10F206	WPIC2.EXE
MICROCHIP	PIC10F220	WPIC2.EXE
MICROCHIP	PIC10F222	WPIC2.EXE
MICROCHIP	PIC12C508	WPIC.EXE
MICROCHIP	PIC12C508 (JW)	WPIC.EXE
MICROCHIP	PIC12C508A	WPIC.EXE
MICROCHIP	PIC12C508A (JW)	WPIC.EXE
MICROCHIP	PIC12C509	WPIC.EXE
MICROCHIP	PIC12C509 (JW)	WPIC.EXE
MICROCHIP	PIC12C509A	WPIC.EXE
MICROCHIP	PIC12C509A (JW)	WPIC.EXE
MICROCHIP	PIC12C671	WPIC.EXE
MICROCHIP	PIC12C671 (JW)	WPIC.EXE
MICROCHIP	PIC12C672	WPIC.EXE
MICROCHIP	PIC12C672 (JW)	WPIC.EXE
MICROCHIP	PIC12CE518	WPIC.EXE
MICROCHIP	PIC12CE518 (JW)	WPIC.EXE
MICROCHIP	PIC12CE519	WPIC.EXE
MICROCHIP	PIC12CE519 (JW)	WPIC.EXE
MICROCHIP	PIC12CE673	WPIC.EXE
MICROCHIP	PIC12CE673 (JW)	WPIC.EXE
MICROCHIP	PIC12CE674	WPIC.EXE
MICROCHIP	PIC12CE674 (JW)	WPIC.EXE
MICROCHIP	PIC12F508	WPIC2.EXE
MICROCHIP	PIC12F509	WPIC2.EXE
MICROCHIP	PIC12F510	WPIC2.EXE
MICROCHIP	PIC12F629	WPIC2.EXE
MICROCHIP	PIC12F635	WPIC2.EXE
MICROCHIP	PIC12F675	WPIC2.EXE
MICROCHIP	PIC12F683	WPIC2.EXE
MICROCHIP	PIC12LC508A	WPIC.EXE
MICROCHIP	PIC12LC509A	WPIC.EXE
MICROCHIP	PIC12LCE519	WPIC.EXE
MICROCHIP	PIC14000	WPIC.EXE
MICROCHIP	PIC16C505	WPIC.EXE
MICROCHIP	PIC16C505 (JW)	WPIC.EXE
MICROCHIP	PIC16C52	WPIC.EXE
MICROCHIP	PIC16C54	WPIC.EXE
MICROCHIP	PIC16C54-HS	WPIC.EXE
MICROCHIP	PIC16C54-LP	WPIC.EXE
MICROCHIP	PIC16C54-RC	WPIC.EXE
MICROCHIP	PIC16C54-XT	WPIC.EXE
MICROCHIP	PIC16C54A	WPIC.EXE
MICROCHIP	PIC16C54B	WPIC.EXE
MICROCHIP	PIC16C54C	WPIC.EXE
MICROCHIP	PIC16C55	WPIC.EXE
MICROCHIP	PIC16C55-HS	WPIC.EXE
MICROCHIP	PIC16C55-LP	WPIC.EXE
MICROCHIP	PIC16C55-RC	WPIC.EXE
MICROCHIP	PIC16C55-XT	WPIC.EXE
MICROCHIP	PIC16C554	WPIC.EXE
MICROCHIP	PIC16C556	WPIC.EXE
MICROCHIP	PIC16C558	WPIC.EXE
MICROCHIP	PIC16C55A	WPIC.EXE
MICROCHIP	PIC16C56	WPIC.EXE
MICROCHIP	PIC16C56-HS	WPIC.EXE
MICROCHIP	PIC16C56-LP	WPIC.EXE
MICROCHIP	PIC16C56-RC	WPIC.EXE
MICROCHIP	PIC16C56-XT	WPIC.EXE
MICROCHIP	PIC16C56A	WPIC.EXE

MICROCHIP	PIC16C57	WPIC.EXE
MICROCHIP	PIC16C57-HS	WPIC.EXE
MICROCHIP	PIC16C57-LP	WPIC.EXE
MICROCHIP	PIC16C57-RC	WPIC.EXE
MICROCHIP	PIC16C57-XT	WPIC.EXE
MICROCHIP	PIC16C57C	WPIC.EXE
MICROCHIP	PIC16C58A	WPIC.EXE
MICROCHIP	PIC16C58B	WPIC.EXE
MICROCHIP	PIC16C61	WPIC.EXE
MICROCHIP	PIC16C62	WPIC.EXE
MICROCHIP	PIC16C620	WPIC.EXE
MICROCHIP	PIC16C620A	WPIC.EXE
MICROCHIP	PIC16C621	WPIC.EXE
MICROCHIP	PIC16C621A	WPIC.EXE
MICROCHIP	PIC16C622	WPIC.EXE
MICROCHIP	PIC16C622A	WPIC.EXE
MICROCHIP	PIC16C62A	WPIC.EXE
MICROCHIP	PIC16C62B	WPIC.EXE
MICROCHIP	PIC16C63	WPIC.EXE
MICROCHIP	PIC16C63A	WPIC.EXE
MICROCHIP	PIC16C64	WPIC.EXE
MICROCHIP	PIC16C641	WPIC.EXE
MICROCHIP	PIC16C642	WPIC.EXE
MICROCHIP	PIC16C64A	WPIC.EXE
MICROCHIP	PIC16C65	WPIC.EXE
MICROCHIP	PIC16C65A	WPIC.EXE
MICROCHIP	PIC16C65B	WPIC.EXE
MICROCHIP	PIC16C66	WPIC.EXE
MICROCHIP	PIC16C661	WPIC.EXE
MICROCHIP	PIC16C662	WPIC.EXE
MICROCHIP	PIC16C67	WPIC.EXE
MICROCHIP	PIC16C71	WPIC.EXE
MICROCHIP	PIC16C710	WPIC.EXE
MICROCHIP	PIC16C711	WPIC.EXE
MICROCHIP	PIC16C712	WPIC.EXE
MICROCHIP	PIC16C715	WPIC.EXE
MICROCHIP	PIC16C716	WPIC.EXE
MICROCHIP	PIC16C717	WPIC.EXE
MICROCHIP	PIC16C72	WPIC.EXE
MICROCHIP	PIC16C72A	WPIC.EXE
MICROCHIP	PIC16C73	WPIC.EXE
MICROCHIP	PIC16C73A	WPIC.EXE
MICROCHIP	PIC16C73B	WPIC.EXE
MICROCHIP	PIC16C74	WPIC.EXE
MICROCHIP	PIC16C745	WPIC.EXE
MICROCHIP	PIC16C74A	WPIC.EXE
MICROCHIP	PIC16C74B	WPIC.EXE
MICROCHIP	PIC16C76	WPIC.EXE
MICROCHIP	PIC16C765	WPIC.EXE
MICROCHIP	PIC16C77	WPIC.EXE
MICROCHIP	PIC16C770	WPIC.EXE
MICROCHIP	PIC16C771	WPIC.EXE
MICROCHIP	PIC16C773	WPIC.EXE
MICROCHIP	PIC16C774	WPIC.EXE
MICROCHIP	PIC16C781	WPIC.EXE
MICROCHIP	PIC16C782	WPIC.EXE
MICROCHIP	PIC16C84	WPIC.EXE
MICROCHIP	PIC16C923 (PLCC)	WAMPU4.EXE ADP-PIC16C924-PL
MICROCHIP	PIC16C923 (SDIP)	WAMPU4.EXE ADP-PIC16C924-SD
MICROCHIP	PIC16C923 (TQFP)	WAMPU4.EXE ADP-PIC16C924-TQ
MICROCHIP	PIC16C924 (PLCC)	WAMPU4.EXE ADP-PIC16C924-PL
MICROCHIP	PIC16C924 (SDIP)	WAMPU4.EXE ADP-PIC16C924-SD
MICROCHIP	PIC16C924 (TQFP)	WAMPU4.EXE ADP-PIC16C924-TQ
MICROCHIP	PIC16C925 (PLCC)	WAMPU4.EXE ADP-PIC16C924-PL

MICROCHIP	PIC16C925 (TQFP)	WAMPU4.EXE	ADP-PIC16C924-TQ
MICROCHIP	PIC16C926 (PLCC)	WAMPU4.EXE	ADP-PIC16C924-PL
MICROCHIP	PIC16C926 (TQFP)	WAMPU4.EXE	ADP-PIC16C924-TQ
MICROCHIP	PIC16CE623	WPIC.EXE	
MICROCHIP	PIC16CE624	WPIC.EXE	
MICROCHIP	PIC16CE625	WPIC.EXE	
MICROCHIP	PIC16F505	WPIC2.EXE	
MICROCHIP	PIC16F54	WPIC2.EXE	
MICROCHIP	PIC16F57	WPIC2.EXE	
MICROCHIP	PIC16F59	WPIC2.EXE	
MICROCHIP	PIC16F59 (QFP)	WPIC2.EXE	
MICROCHIP	PIC16F616	WPIC2.EXE	
MICROCHIP	PIC16F627	WPIC2.EXE	
MICROCHIP	PIC16F627A	WPIC2.EXE	
MICROCHIP	PIC16F628	WPIC2.EXE	
MICROCHIP	PIC16F628A	WPIC2.EXE	
MICROCHIP	PIC16F630	WPIC2.EXE	
MICROCHIP	PIC16F631	WPIC2.EXE	
MICROCHIP	PIC16F636	WPIC2.EXE	
MICROCHIP	PIC16F639	WPIC2.EXE	
MICROCHIP	PIC16F648A	WPIC2.EXE	
MICROCHIP	PIC16F676	WPIC2.EXE	
MICROCHIP	PIC16F677	WPIC2.EXE	
MICROCHIP	PIC16F684	WPIC2.EXE	
MICROCHIP	PIC16F685	WPIC2.EXE	
MICROCHIP	PIC16F687	WPIC2.EXE	
MICROCHIP	PIC16F688	WPIC2.EXE	
MICROCHIP	PIC16F689	WPIC2.EXE	
MICROCHIP	PIC16F690	WPIC2.EXE	
MICROCHIP	PIC16F716	WPIC2.EXE	
MICROCHIP	PIC16F72	WPIC2.EXE	
MICROCHIP	PIC16F73	WPIC2.EXE	
MICROCHIP	PIC16F737	WPIC2.EXE	
MICROCHIP	PIC16F74	WPIC2.EXE	
MICROCHIP	PIC16F747	WPIC2.EXE	
MICROCHIP	PIC16F76	WPIC2.EXE	
MICROCHIP	PIC16F767	WPIC2.EXE	
MICROCHIP	PIC16F77	WPIC2.EXE	
MICROCHIP	PIC16F777	WPIC2.EXE	
MICROCHIP	PIC16F785	WPIC2.EXE	
MICROCHIP	PIC16F818	WPIC2.EXE	
MICROCHIP	PIC16F819	WPIC2.EXE	
MICROCHIP	PIC16F83	WPIC2.EXE	
MICROCHIP	PIC16F84	WPIC2.EXE	
MICROCHIP	PIC16F84A	WPIC2.EXE	
MICROCHIP	PIC16F87	WPIC2.EXE	
MICROCHIP	PIC16F870	WPIC2.EXE	
MICROCHIP	PIC16F871	WPIC2.EXE	
MICROCHIP	PIC16F872	WPIC2.EXE	
MICROCHIP	PIC16F873	WPIC2.EXE	
MICROCHIP	PIC16F873A	WPIC2.EXE	
MICROCHIP	PIC16F874	WPIC2.EXE	
MICROCHIP	PIC16F874A	WPIC2.EXE	
MICROCHIP	PIC16F876	WPIC2.EXE	
MICROCHIP	PIC16F876A	WPIC2.EXE	
MICROCHIP	PIC16F877	WPIC2.EXE	
MICROCHIP	PIC16F877A	WPIC2.EXE	
MICROCHIP	PIC16F88	WPIC2.EXE	
MICROCHIP	PIC16F886	WPIC2.EXE	
MICROCHIP	PIC16F887	WPIC2.EXE	
MICROCHIP	PIC16F913	WPIC2.EXE	
MICROCHIP	PIC16F914	WPIC2.EXE	
MICROCHIP	PIC16F916	WPIC2.EXE	
MICROCHIP	PIC16F917	WPIC2.EXE	

MICROCHIP	PIC16HV540	WPIC.EXE
MICROCHIP	PIC16HV616	WPIC2.EXE
MICROCHIP	PIC16HV785	WPIC2.EXE
MICROCHIP	PIC16LC505	WPIC.EXE
MICROCHIP	PIC16LC554	WPIC.EXE
MICROCHIP	PIC16LC558	WPIC.EXE
MICROCHIP	PIC16LC620A	WPIC.EXE
MICROCHIP	PIC16LC62B	WPIC.EXE
MICROCHIP	PIC16LC63A	WPIC.EXE
MICROCHIP	PIC16LC65B	WPIC.EXE
MICROCHIP	PIC16LC71	WPIC.EXE
MICROCHIP	PIC16LC710	WPIC.EXE
MICROCHIP	PIC16LC711	WPIC.EXE
MICROCHIP	PIC16LC715	WPIC.EXE
MICROCHIP	PIC16LC716	WPIC.EXE
MICROCHIP	PIC16LC717	WPIC.EXE
MICROCHIP	PIC16LC72A	WPIC.EXE
MICROCHIP	PIC16LC771	WPIC.EXE
MICROCHIP	PIC16LC773	WPIC.EXE
MICROCHIP	PIC16LC774	WPIC.EXE
MICROCHIP	PIC16LC84	WPIC.EXE
MICROCHIP	PIC16LC923 (PLCC)	WAMPU4.EXE ADP-PIC16C924-PL
MICROCHIP	PIC16LC923 (TQFP)	WAMPU4.EXE ADP-PIC16C924-TQ
MICROCHIP	PIC16LC924 (PLCC)	WAMPU4.EXE ADP-PIC16C924-PL
MICROCHIP	PIC16LC924 (TQFP)	WAMPU4.EXE ADP-PIC16C924-TQ
MICROCHIP	PIC16LC925 (TQFP)	WAMPU4.EXE ADP-PIC16C924-TQ
MICROCHIP	PIC16LC926 (TQFP)	WAMPU4.EXE ADP-PIC16C924-TQ
MICROCHIP	PIC16LF627A	WPIC2.EXE
MICROCHIP	PIC16LF628	WPIC2.EXE
MICROCHIP	PIC16LF628A	WPIC2.EXE
MICROCHIP	PIC16LF648A	WPIC2.EXE
MICROCHIP	PIC16LF72	WPIC2.EXE
MICROCHIP	PIC16LF73	WPIC2.EXE
MICROCHIP	PIC16LF737	WPIC2.EXE
MICROCHIP	PIC16LF747	WPIC2.EXE
MICROCHIP	PIC16LF76	WPIC2.EXE
MICROCHIP	PIC16LF767	WPIC2.EXE
MICROCHIP	PIC16LF77	WPIC2.EXE
MICROCHIP	PIC16LF777	WPIC2.EXE
MICROCHIP	PIC16LF818	WPIC2.EXE
MICROCHIP	PIC16LF819	WPIC2.EXE
MICROCHIP	PIC16LF83	WPIC2.EXE
MICROCHIP	PIC16LF84	WPIC2.EXE
MICROCHIP	PIC16LF84A	WPIC2.EXE
MICROCHIP	PIC16LF87	WPIC2.EXE
MICROCHIP	PIC16LF870	WPIC2.EXE
MICROCHIP	PIC16LF872	WPIC2.EXE
MICROCHIP	PIC16LF873	WPIC2.EXE
MICROCHIP	PIC16LF873A	WPIC2.EXE
MICROCHIP	PIC16LF874	WPIC2.EXE
MICROCHIP	PIC16LF874A	WPIC2.EXE
MICROCHIP	PIC16LF876	WPIC2.EXE
MICROCHIP	PIC16LF876A	WPIC2.EXE
MICROCHIP	PIC16LF877	WPIC2.EXE
MICROCHIP	PIC16LF877A	WPIC2.EXE
MICROCHIP	PIC16LF88	WPIC2.EXE
MICROCHIP	PIC17C42	WPIC.EXE
MICROCHIP	PIC17C42A	WPIC.EXE
MICROCHIP	PIC17C43	WPIC.EXE
MICROCHIP	PIC17C44	WPIC.EXE
MICROCHIP	PIC17C752	WAMPU4.EXE ADP-PIC17C75X-
SD/-PL/-Q		
MICROCHIP	PIC17C756	WAMPU4.EXE ADP-PIC17C75X-
SD/-PL/-Q		

MICROCHIP	PIC17C756A	WAMPU4.EXE	ADP-PIC17C75X-
SD/-PL/-Q			
MICROCHIP	PIC17C762	WAMPU4.EXE	ADP-PIC17C76X-PL
MICROCHIP	PIC17C766	WAMPU4.EXE	ADP-PIC17C76X-PL
MICROCHIP	PIC17CR42	WPIC.EXE	
MICROCHIP	PIC17CR43	WPIC.EXE	
MICROCHIP	PIC17LC756A	WAMPU4.EXE	ADP-PIC17C75X-Q
MICROCHIP	PIC18C242	WPIC18.EXE	
MICROCHIP	PIC18C252	WPIC18.EXE	
MICROCHIP	PIC18C442	WPIC18.EXE	
MICROCHIP	PIC18C452	WPIC18.EXE	
MICROCHIP	PIC18C601	WPIC18.EXE	ADP-PIC17C75X-
Q/V2/-PL			
MICROCHIP	PIC18C658	WPIC18.EXE	ADP-PIC17C75X-
Q/V2/-PL			
MICROCHIP	PIC18C801	WPIC18.EXE	ADP-PIC17C76X-
Q/-PL			
MICROCHIP	PIC18C858	WPIC18.EXE	ADP-PIC17C76X-
Q/-PL			
MICROCHIP	PIC18F1220	WPIC18.EXE	
MICROCHIP	PIC18F1320	WPIC18.EXE	
MICROCHIP	PIC18F2220	WPIC18.EXE	
MICROCHIP	PIC18F2320	WPIC18.EXE	
MICROCHIP	PIC18F2321	WPIC18.EXE	
MICROCHIP	PIC18F2331	WPIC18.EXE	
MICROCHIP	PIC18F2410	WPIC18.EXE	
MICROCHIP	PIC18F242	WPIC18.EXE	
MICROCHIP	PIC18F2420	WPIC18.EXE	
MICROCHIP	PIC18F2431	WPIC18.EXE	
MICROCHIP	PIC18F2439	WPIC18.EXE	
MICROCHIP	PIC18F2450	WPIC18.EXE	
MICROCHIP	PIC18F2455	WPIC18.EXE	
MICROCHIP	PIC18F248	WPIC18.EXE	
MICROCHIP	PIC18F2480	WPIC18.EXE	
MICROCHIP	PIC18F252	WPIC18.EXE	
MICROCHIP	PIC18F2520	WPIC18.EXE	
MICROCHIP	PIC18F2539	WPIC18.EXE	
MICROCHIP	PIC18F2550	WPIC18.EXE	
MICROCHIP	PIC18F258	WPIC18.EXE	
MICROCHIP	PIC18F2580	WPIC18.EXE	
MICROCHIP	PIC18F2620	WPIC18.EXE	
MICROCHIP	PIC18F2680	WPIC18.EXE	
MICROCHIP	PIC18F4220	WPIC18.EXE	
MICROCHIP	PIC18F4320	WPIC18.EXE	
MICROCHIP	PIC18F4331	WPIC18.EXE	
MICROCHIP	PIC18F4410	WPIC18.EXE	
MICROCHIP	PIC18F442	WPIC18.EXE	
MICROCHIP	PIC18F4420	WPIC18.EXE	
MICROCHIP	PIC18F4431	WPIC18.EXE	
MICROCHIP	PIC18F4439	WPIC18.EXE	
MICROCHIP	PIC18F4450	WPIC18.EXE	
MICROCHIP	PIC18F4455	WPIC18.EXE	
MICROCHIP	PIC18F448	WPIC18.EXE	
MICROCHIP	PIC18F4480	WPIC18.EXE	
MICROCHIP	PIC18F4510	WPIC18.EXE	
MICROCHIP	PIC18F4515	WPIC18.EXE	
MICROCHIP	PIC18F452	WPIC18.EXE	
MICROCHIP	PIC18F4520	WPIC18.EXE	
MICROCHIP	PIC18F4525	WPIC18.EXE	
MICROCHIP	PIC18F4539	WPIC18.EXE	
MICROCHIP	PIC18F4550	WPIC18.EXE	
MICROCHIP	PIC18F458	WPIC18.EXE	
MICROCHIP	PIC18F4580	WPIC18.EXE	
MICROCHIP	PIC18F4585	WPIC18.EXE	

MICROCHIP	PIC18F45J10	WPIC18.EXE
MICROCHIP	PIC18F4610	WPIC18.EXE
MICROCHIP	PIC18F4620	WPIC18.EXE
MICROCHIP	PIC18F4680	WPIC18.EXE
MICROCHIP	PIC18F6390	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18F6490	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18F6520	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18F6525	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18F6527	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18F6585	WPIC18.EXE ADP-PIC17C75X-
Q/V2/-PL		
MICROCHIP	PIC18F6620	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18F6621	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18F6627	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18F6680	WPIC18.EXE ADP-PIC17C75X-
Q/V2/-PL		
MICROCHIP	PIC18F6720	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18F6722	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18F8520	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PIC18F8525	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PIC18F8527	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PIC18F8585	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PIC18F8620	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PIC18F8621	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PIC18F8622	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PIC18F8627	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PIC18F8680	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PIC18F8720	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PIC18F8722	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PIC18LC801	WPIC18.EXE ADP-PIC17C76X-
Q/-PL		
MICROCHIP	PIC18LC858	WPIC18.EXE ADP-PIC17C76X-
Q/-PL		
MICROCHIP	PIC18LF1320	WPIC18.EXE
MICROCHIP	PIC18LF2410	WPIC18.EXE
MICROCHIP	PIC18LF242	WPIC18.EXE
MICROCHIP	PIC18LF2420	WPIC18.EXE
MICROCHIP	PIC18LF2455	WPIC18.EXE
MICROCHIP	PIC18LF248	WPIC18.EXE
MICROCHIP	PIC18LF2480	WPIC18.EXE
MICROCHIP	PIC18LF2510	WPIC18.EXE
MICROCHIP	PIC18LF252	WPIC18.EXE
MICROCHIP	PIC18LF2520	WPIC18.EXE
MICROCHIP	PIC18LF2525	WPIC18.EXE
MICROCHIP	PIC18LF2550	WPIC18.EXE
MICROCHIP	PIC18LF2580	WPIC18.EXE
MICROCHIP	PIC18LF2610	WPIC18.EXE
MICROCHIP	PIC18LF2620	WPIC18.EXE
MICROCHIP	PIC18LF2680	WPIC18.EXE
MICROCHIP	PIC18LF4220	WPIC18.EXE
MICROCHIP	PIC18LF4320	WPIC18.EXE
MICROCHIP	PIC18LF4331	WPIC18.EXE
MICROCHIP	PIC18LF4410	WPIC18.EXE
MICROCHIP	PIC18LF442	WPIC18.EXE

MICROCHIP	PIC18LF4420	WPIC18.EXE
MICROCHIP	PIC18LF4431	WPIC18.EXE
MICROCHIP	PIC18LF4455	WPIC18.EXE
MICROCHIP	PIC18LF448	WPIC18.EXE
MICROCHIP	PIC18LF4480	WPIC18.EXE
MICROCHIP	PIC18LF4510	WPIC18.EXE
MICROCHIP	PIC18LF4515	WPIC18.EXE
MICROCHIP	PIC18LF452	WPIC18.EXE
MICROCHIP	PIC18LF4520	WPIC18.EXE
MICROCHIP	PIC18LF4525	WPIC18.EXE
MICROCHIP	PIC18LF4539	WPIC18.EXE
MICROCHIP	PIC18LF4550	WPIC18.EXE
MICROCHIP	PIC18LF458	WPIC18.EXE
MICROCHIP	PIC18LF4580	WPIC18.EXE
MICROCHIP	PIC18LF4585	WPIC18.EXE
MICROCHIP	PIC18LF4610	WPIC18.EXE
MICROCHIP	PIC18LF4620	WPIC18.EXE
MICROCHIP	PIC18LF4680	WPIC18.EXE
MICROCHIP	PIC18LF6490	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18LF6520	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18LF6525	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18LF6527	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18LF6620	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18LF6622	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18LF6627	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18LF6720	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18LF6722	WPIC18.EXE ADP-PIC17C75X-
Q/V2		
MICROCHIP	PIC18LF8527	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PIC18LF8622	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PIC18LF8627	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PIC18LF8722	WPIC18.EXE ADP-PIC17C76X-Q
MICROCHIP	PS200	WPIC2.EXE
MICROCHIP	dsPIC30F2010	WPIC30F.EXE
MICROCHIP	dsPIC30F2011	WPIC30F.EXE
MICROCHIP	dsPIC30F2012	WPIC30F.EXE
MICROCHIP	dsPIC30F3010	WPIC30F.EXE
MICROCHIP	dsPIC30F3011	WPIC30F.EXE
MICROCHIP	dsPIC30F3012	WPIC30F.EXE
MICROCHIP	dsPIC30F3013	WPIC30F.EXE
MICROCHIP	dsPIC30F3014	WPIC30F.EXE
MICROCHIP	dsPIC30F4011/PT	WPIC30F.EXE ADP-30FXXXX-TQ44
MICROCHIP	dsPIC30F4013	WPIC30F.EXE
MICROCHIP	dsPIC30F5011/PT	WPIC30F.EXE ADP-30FXXXX-TQ64
MICROCHIP	dsPIC30F6011A/PT	WPIC30F.EXE ADP-30FXXXX-TQ64
MICROCHIP	dsPIC30F6012A/PT	WPIC30F.EXE ADP-30FXXXX-TQ64
MICROCHIP	dsPIC30F6014A/PF	WPIC30F.EXE ADP-30F60XX-TQ80
MICROCHIP	rfPIC12F675F	WPIC2.EXE
MICROCHIP	rfPIC12F675H	WPIC2.EXE
MICROCHIP	rfPIC12F675K	WPIC2.EXE
MICRON	MT28F002B1-B	WA28F.EXE ADP-28F008-TS-V2
MICRON	MT28F002B1-T	WA28F.EXE ADP-28F008-TS-V2
MICRON	MT28F002B3VG-B (VPP12V)	WA28F.EXE ADP-28F008-TS-V2
MICRON	MT28F002B3VG-B (VPP5V)	WA28F.EXE ADP-28F008-TS-V2
MICRON	MT28F002B3VG-T (VPP12V)	WA28F.EXE ADP-28F008-TS-V2
MICRON	MT28F002B3VG-T (VPP5V)	WA28F.EXE ADP-28F008-TS-V2

MICRON	MT28F002B5VG-B (VPP12V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F002B5VG-B (VPP5V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F002B5VG-T (VPP12V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F002B5VG-T (VPP5V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F002C5VG-T	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F004B1VG-B	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F004B1VG-T	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F004B3VG-B (VPP12V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F004B3VG-B (VPP5V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F004B3VG-T (VPP12V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F004B3VG-T (VPP5V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F004B5VG-B (VPP12V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F004B5VG-B (VPP5V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F004B5VG-T (VPP12V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F004B5VG-T (VPP5V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F008B1VG-B	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F008B1VG-T	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F008B3VG-B (VPP12V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F008B3VG-B (VPP5V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F008B3VG-T (VPP12V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F008B3VG-T (VPP5V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F008B5VG-B (VPP12V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F008B5VG-B (VPP5V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F008B5VG-T (VPP12V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F008B5VG-T (VPP5V)	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F016S3VG	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F016S5VG	WA28F.EXE	ADP-28F008-TS-V2
MICRON	MT28F128J3-FS-M	WA28F.EXE	ADP-28F128K3-EBG
MICRON	MT28F128J3-RG	WA28F.EXE	ADP-28F128-TS
MICRON	MT28F128J3-RG-M	WA28F.EXE	ADP-28F128-TS
MICRON	MT28F200B1SG-B	WA28F.EXE	ADP-28F400P
MICRON	MT28F200B1SG-T	WA28F.EXE	ADP-28F400P
MICRON	MT28F200B1WG-B	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F200B1WG-B*	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F200B1WG-T	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F200B1WG-T*	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F200B3SG-B (VPP12V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F200B3SG-B (VPP5V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F200B3SG-T (VPP12V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F200B3SG-T (VPP5V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F200B3WG-B (VPP12V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F200B3WG-B (VPP5V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F200B3WG-B* (VPP12V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F200B3WG-B* (VPP5V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F200B3WG-T (VPP12V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F200B3WG-T (VPP5V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F200B3WG-T* (VPP12V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F200B3WG-T* (VPP5V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F200B5SG-B (VPP12V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F200B5SG-B (VPP5V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F200B5SG-T (VPP12V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F200B5SG-T (VPP5V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F200B5WG-B (VPP12V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F200B5WG-B (VPP5V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F200B5WG-B* (VPP12V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F200B5WG-B* (VPP5V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F200B5WG-T (VPP12V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F200B5WG-T (VPP5V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F200B5WG-T* (VPP12V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F200B5WG-T* (VPP5V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F320J3-FS	WA28F.EXE	ADP-28F128K3-EBG
MICRON	MT28F320J3-FS-M	WA28F.EXE	ADP-28F128K3-EBG
MICRON	MT28F320J3-RG	WA28F.EXE	ADP-28F128-TS
MICRON	MT28F320J3-RG-M	WA28F.EXE	ADP-28F128-TS

MICRON	MT28F400B1SG-B	WA28F.EXE	ADP-28F400P
MICRON	MT28F400B1SG-T	WA28F.EXE	ADP-28F400P
MICRON	MT28F400B1WG-B	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F400B1WG-B*	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F400B1WG-T	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F400B1WG-T*	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F400B3SG-B (VPP12V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F400B3SG-B (VPP5V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F400B3SG-T (VPP12V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F400B3SG-T (VPP5V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F400B3WG-B (VPP12V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F400B3WG-B (VPP5V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F400B3WG-B* (VPP12V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F400B3WG-T (VPP12V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F400B3WG-T (VPP5V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F400B3WG-T* (VPP12V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F400B3WG-T* (VPP5V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F400B5SG-B (VPP12V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F400B5SG-B (VPP5V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F400B5SG-T (VPP12V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F400B5SG-T (VPP5V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F400B5WG-B (VPP12V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F400B5WG-B (VPP5V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F400B5WG-B* (VPP12V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F400B5WG-B* (VPP5V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F400B5WG-T (VPP12V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F400B5WG-T (VPP5V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F400B5WG-T* (VPP12V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F400B5WG-T* (VPP5V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F640J3-FS	WA28F.EXE	ADP-28F128K3-EBG
MICRON	MT28F640J3-FS-M	WA28F.EXE	ADP-28F128K3-EBG
MICRON	MT28F640J3-RG	WA28F.EXE	ADP-28F128-TS
MICRON	MT28F640J3-RG-M	WA28F.EXE	ADP-28F128-TS
MICRON	MT28F640J3-RP	WA28F.EXE	ADP-28F128-TS
MICRON	MT28F800B1SG-B	WA28F.EXE	ADP-28F400P
MICRON	MT28F800B1SG-T	WA28F.EXE	ADP-28F400P
MICRON	MT28F800B1WG-B	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F800B1WG-B*	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F800B1WG-T	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F800B1WG-T*	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F800B3SG-B (VPP12V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F800B3SG-B (VPP5V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F800B3SG-T (VPP12V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F800B3SG-T (VPP5V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F800B3WG-B (VPP12V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F800B3WG-B (VPP5V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F800B3WG-B* (VPP12V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F800B3WG-B* (VPP5V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F800B3WG-T (VPP12V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F800B3WG-T (VPP5V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F800B3WG-T* (VPP12V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F800B3WG-T* (VPP5V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F800B5SG-B (VPP12V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F800B5SG-B (VPP5V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F800B5SG-T (VPP12V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F800B5SG-T (VPP5V)	WA28F.EXE	ADP-28F400P
MICRON	MT28F800B5WG-B (VPP12V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F800B5WG-B (VPP5V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F800B5WG-B* (VPP12V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F800B5WG-B* (VPP5V)	WA28F.EXE	ADP-28F800CV-TS
MICRON	MT28F800B5WG-T (VPP12V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F800B5WG-T (VPP5V)	WA28F.EXE	ADP-28F160-TS
MICRON	MT28F800B5WG-T* (VPP12V)	WA28F.EXE	ADP-28F800CV-TS

MICRON	MT28F800B5WG-T* (VPP5V)	WA28F.EXE	ADP-28F800CV-TS
MITSUBISHI	27128 [21V]	WMEM1.EXE	
MITSUBISHI	27C128K [21V]	WMEM1.EXE	
MITSUBISHI	M5L2716 [25V]	WMEM1.EXE	
MITSUBISHI	M5L2732 [25V]	WMEM1.EXE	
MITSUBISHI	M5L2764 [21V]	WMEM1.EXE	
MITSUBISHI	M5L27C128 [12.5V]	WMEM1.EXE	
MITSUBISHI	M5M27400AP/K	WMEM1.EXE	
MITSUBISHI	M5M27404AK	WMEM1.EXE	
MITSUBISHI	M5M27C100	WMEM1.EXE	
MITSUBISHI	M5M27C101	WMEM1.EXE	
MITSUBISHI	M5M27C102	WMEM1.EXE	
MITSUBISHI	M5M27C201	WMEM1.EXE	
MITSUBISHI	M5M27C202	WMEM1.EXE	
MITSUBISHI	M5M27C256AK [12.5V]	WMEM1.EXE	
MITSUBISHI	M5M27C401	WMEM1.EXE	
MITSUBISHI	M5M27C401AK	WMEM1.EXE	
MITSUBISHI	M5M27C401K	WMEM1.EXE	
MITSUBISHI	M5M27C402	WMEM1.EXE	
MITSUBISHI	M5M27C512A [12.5V]	WMEM1.EXE	
MITSUBISHI	M5M27C512AK [12.5V]	WMEM1.EXE	
MITSUBISHI	M5M28C64	WMEM1.EXE	
MITSUBISHI	M5M28C64A	WMEM1.EXE	
MITSUBISHI	M5M28F101	WMEM1.EXE	
MITSUBISHI	M5M28F102	WMEM1.EXE	
MITSUBISHI	M5M28F102A	WMEM1.EXE	
MITSUBISHI	M5M29GT320VP	WA28F.EXE	ADP-28F160-TS
MITSUBISHI	M30201F6SP	WAMPU2.EXE	ADP-M30201-SD
MITSUBISHI	M30600E8FP	WAMPU2.EXE	ADP-M30600-QB
MITSUBISHI	M30600E8GP	WAMPU2.EXE	ADP-M30600-Q
MITSUBISHI	M30610ECFP	WAMPU2.EXE	ADP-M30600-QB
MITSUBISHI	M30610ECFS	WAMPU2.EXE	ADP-M30600-LC
MITSUBISHI	M30610ECGP	WAMPU2.EXE	ADP-M30600-Q
MITSUBISHI	M30612E4FP	WAMPU2.EXE	ADP-M30600-QB
MITSUBISHI	M30612E4GP	WAMPU2.EXE	ADP-M30600-Q
MITSUBISHI	M30612E8FP	WAMPU2.EXE	ADP-M30600-QB
MITSUBISHI	M30612E8GP	WAMPU2.EXE	ADP-M30600-Q
MITSUBISHI	M30620ECFP	WAMPU2.EXE	ADP-M30600-QB
MITSUBISHI	M30620ECGP	WAMPU2.EXE	ADP-M30600-Q
MITSUBISHI	M30620FCAFP	WAMPU2.EXE	ADP-M30624-Q
MITSUBISHI	M30620FCAGP	WAMPU2.EXE	ADP-M30624-TQ
MITSUBISHI	M30620FCMFP	WAMPU2.EXE	ADP-M30624-Q
MITSUBISHI	M30620FCMGP	WAMPU2.EXE	ADP-M30624-TQ
MITSUBISHI	M30620FCPGP	WAMPU2.EXE	ADP-M30624-TQ
MITSUBISHI	M30624FGAFP	WAMPU2.EXE	ADP-M30624-Q
MITSUBISHI	M30624FGAGP	WAMPU2.EXE	ADP-M30624-TQ
MITSUBISHI	M30624FGFP	WAMPU2.EXE	ADP-M30624-Q
MITSUBISHI	M30624FGGP	WAMPU2.EXE	ADP-M30624-TQ
MITSUBISHI	M30624FGNFP	WAMPU2.EXE	ADP-M30624-Q
MITSUBISHI	M30624FGNGP	WAMPU2.EXE	ADP-M30624-TQ
MITSUBISHI	M306K1F8LRP	WAMPU2.EXE	ADP-M306K1-TQ
MITSUBISHI	M34238EKGP	WAMPU2.EXE	ADP-M34238EK-S
MITSUBISHI	M34250E2FP	WAMPU2.EXE	ADP-M34250E2-S
MITSUBISHI	M34280E1FP	WAMPU2.EXE	ADP-M34280-S
MITSUBISHI	M34513E4FP	WAMPU2.EXE	ADP-M34513-Q
MITSUBISHI	M34513E4SP	WAMPU2.EXE	ADP-M34513-SD
MITSUBISHI	M34513E8FP	WAMPU2.EXE	ADP-M34513-Q
MITSUBISHI	M34514E8FP	WAMPU2.EXE	ADP-M34514-SS
MITSUBISHI	M34515E4FP	WAMPU2.EXE	ADP-M34515-S
MITSUBISHI	M34520E8FP	WAMPU2.EXE	ADP-M34520-Q
MITSUBISHI	M34550E8FP	WAMPU2.EXE	ADP-M34550-Q
MITSUBISHI	M37210E4SP	WAMPU2.EXE	ADP-M37210-SD
MITSUBISHI	M37221EFSP	WAMPU2.EXE	ADP-M37221-SD
MITSUBISHI	M37260E6FP	WAMPU2.EXE	ADP-M37260-Q

MITSUBISHI	M37260E6SP	WAMPU2.EXE	ADP-M37260-SD
MITSUBISHI	M37267EESP	WAMPU2.EXE	ADP-M37267-SD
MITSUBISHI	M37450E4SP	WAMPU2.EXE	ADP-M3745X-SD
MITSUBISHI	M37450E8SP	WAMPU2.EXE	ADP-M3745X-SD
MITSUBISHI	M37451E4FP	WAMPU2.EXE	ADP-M3745X-Q
MITSUBISHI	M37451E4SP	WAMPU2.EXE	ADP-M3745X-SD
MITSUBISHI	M37451E8SP	WAMPU2.EXE	ADP-M3745X-SD
MITSUBISHI	M37451ECSP	WAMPU2.EXE	ADP-M3745X-SD
MITSUBISHI	M37470E4SP	WAMPU2.EXE	ADP-M37470-SD
MITSUBISHI	M37470E8SP	WAMPU2.EXE	ADP-M37470-SD
MITSUBISHI	M37471E4FP	WAMPU2.EXE	ADP-M37471-Q
MITSUBISHI	M37471E4SP	WAMPU2.EXE	ADP-M37471-SD
MITSUBISHI	M37471E8FP	WAMPU2.EXE	ADP-M37471-Q
MITSUBISHI	M37471E8SP	WAMPU2.EXE	ADP-M37471-SD
MITSUBISHI	M37477E8SP	WAMPU2.EXE	ADP-M37470-SD
MITSUBISHI	M37478E8SP	WAMPU2.EXE	ADP-M37471-SD
MITSUBISHI	M37515E4HP	WAMPU2.EXE	ADP-M37515-Q
MITSUBISHI	M37516E6HP	WAMPU2.EXE	ADP-M37515-Q
MITSUBISHI	M37531E4FP	WAMPU2.EXE	ADP-M37531-SS
MITSUBISHI	M37531E4GP	WAMPU2.EXE	ADP-M37531-Q
MITSUBISHI	M37531E4SP	WAMPU2.EXE	ADP-M37531-SD
MITSUBISHI	M37531E8FP	WAMPU2.EXE	ADP-M37531-SS
MITSUBISHI	M37532E8FP	WAMPU2.EXE	ADP-M37531-SS
MITSUBISHI	M37534E4GP	WAMPU2.EXE	ADP-M37531-Q
MITSUBISHI	M37540E8FP	WAMPU2.EXE	ADP-M37531-SS
MITSUBISHI	M37540E8GP	WAMPU2.EXE	ADP-M37531-Q
MITSUBISHI	M37540E8SP	WAMPU2.EXE	ADP-M37531-SD
MITSUBISHI	M37544G2GP	WAMPU2.EXE	ADP-M37544-Q
MITSUBISHI	M37544G2SP	WAMPU2.EXE	ADP-M37544-SD
MITSUBISHI	M37560EFP	WAMPU2.EXE	ADP-M38259-Q
MITSUBISHI	M37560EFGP	WAMPU2.EXE	ADP-M37560-Q
MITSUBISHI	M37632EFP	WAMPU2.EXE	ADP-M37632-TQ
MITSUBISHI	M37640E8FP	WAMPU2.EXE	ADP-M37640-Q
MITSUBISHI	M37702E2BFP	WAMPU2.EXE	ADP-M37702-QB
MITSUBISHI	M37702E2LHP	WAMPU2.EXE	ADP-M37710-TQ
MITSUBISHI	M37702E4BFP	WAMPU2.EXE	ADP-M37702-QB
MITSUBISHI	M37702E6BFP	WAMPU2.EXE	ADP-M37702-QB
MITSUBISHI	M37702E8BFP	WAMPU2.EXE	ADP-M37702-QB
MITSUBISHI	M37705E2ASP	WAMPU2.EXE	ADP-M37705-SD
MITSUBISHI	M37705E4BSP	WAMPU2.EXE	ADP-M37705B-SD
MITSUBISHI	M37710E4BFP	WAMPU2.EXE	ADP-M37710-Q
MITSUBISHI	M37710EFP	WAMPU2.EXE	ADP-M37710-Q
MITSUBISHI	M37710EFHP	WAMPU2.EXE	ADP-M37710-TQ
MITSUBISHI	M37712E4BFP	WAMPU2.EXE	ADP-M37710-Q
MITSUBISHI	M37735EHLHP	WAMPU2.EXE	ADP-M37710-TQ
MITSUBISHI	M38002E2FP	WAMPU2.EXE	ADP-M38002E4-Q
MITSUBISHI	M38002E2SP	WAMPU2.EXE	ADP-M38002E4-SD
MITSUBISHI	M38002E4FP	WAMPU2.EXE	ADP-M38002E4-Q
MITSUBISHI	M38002E4SP	WAMPU2.EXE	ADP-M38002E4-SD
MITSUBISHI	M38004E8FP	WAMPU2.EXE	ADP-M38002E4-Q
MITSUBISHI	M38004E8SP	WAMPU2.EXE	ADP-M38002E4-SD
MITSUBISHI	M38039FFHP	WAMPU2.EXE	ADP-M38039-
TQ/TQV2			
MITSUBISHI	M38063E6FP	WAMPU2.EXE	ADP-M38067-QB
MITSUBISHI	M38063E6GP	WAMPU2.EXE	ADP-M38067-TQ
MITSUBISHI	M38067EC (AFS)	WAMPU2.EXE	ADP-M38067-LC
MITSUBISHI	M38067ECFP	WAMPU2.EXE	ADP-M38067-QB
MITSUBISHI	M38073E4FP	WAMPU2.EXE	ADP-M38067-QB
MITSUBISHI	M38203E4 (FS)	WAMPU2.EXE	ADP-M38067-LC
MITSUBISHI	M38203E4FP	WAMPU2.EXE	ADP-M38067-QB
MITSUBISHI	M38203E4HP	WAMPU2.EXE	ADP-M38067-Q
MITSUBISHI	M38207E8 (FS)	WAMPU2.EXE	ADP-M38067-LC
MITSUBISHI	M38207E8FP	WAMPU2.EXE	ADP-M38067-QB
MITSUBISHI	M38207E8GP	WAMPU2.EXE	ADP-M38067-TQ

MMI	PAL16R6A	WPLD1.EXE
MMI	PAL16R6A-2	WPLD1.EXE
MMI	PAL16R6A-4	WPLD1.EXE
MMI	PAL16R6B-2	WPLD1.EXE
MMI	PAL16R6B-4	WPLD1.EXE
MMI	PAL16R6D/B	WPLD1.EXE
MMI	PAL16R8	WPLD1.EXE
MMI	PAL16R8A	WPLD1.EXE
MMI	PAL16R8A-2	WPLD1.EXE
MMI	PAL16R8A-4	WPLD1.EXE
MMI	PAL16R8B-2	WPLD1.EXE
MMI	PAL16R8B-4	WPLD1.EXE
MMI	PAL16R8D/B	WPLD1.EXE
MMI	PAL16RA8	WPLD1.EXE
MMI	PAL16RP4	WPLD1.EXE
MMI	PAL16RP6	WPLD1.EXE
MMI	PAL16RP8	WPLD1.EXE
MMI	PAL16X4	WPLD1.EXE
MMI	PAL18L4	WPLD1.EXE
MMI	PAL20C1	WPLD1.EXE
MMI	PAL20L10/A	WPLD1.EXE
MMI	PAL20L2	WPLD1.EXE
MMI	PAL20L8-10	WPLD1.EXE
MMI	PAL20L8A/A-2	WPLD1.EXE
MMI	PAL20L8B/B-2	WPLD1.EXE
MMI	PAL20L8D	WPLD1.EXE
MMI	PAL20R4-10	WPLD1.EXE
MMI	PAL20R4A/A-2	WPLD1.EXE
MMI	PAL20R4B/B-2	WPLD1.EXE
MMI	PAL20R4D	WPLD1.EXE
MMI	PAL20R6-10	WPLD1.EXE
MMI	PAL20R6A/A-2	WPLD1.EXE
MMI	PAL20R6B/B-2	WPLD1.EXE
MMI	PAL20R6D	WPLD1.EXE
MMI	PAL20R8-10	WPLD1.EXE
MMI	PAL20R8A/A-2	WPLD1.EXE
MMI	PAL20R8B/B-2	WPLD1.EXE
MMI	PAL20R8D	WPLD1.EXE
MMI	PAL20RA10	WPLD1.EXE
MMI	PAL20X10/A	WPLD1.EXE
MMI	PAL20X4/A	WPLD1.EXE
MMI	PAL20X8/A	WPLD1.EXE
MMI	PALC16L8Z-35	WPLD1.EXE
MMI	PALC16R4Z-35	WPLD1.EXE
MMI	PALC16R6Z-35	WPLD1.EXE
MMI	PALC16R8Z-35	WPLD1.EXE
MMI	PALC20L8Z	WPLD1.EXE
MMI	PALC20R4Z	WPLD1.EXE
MMI	PALC20R6Z	WPLD1.EXE
MMI	PALC20R8Z	WPLD1.EXE
MMI	PALC22V10H-25/-35	WPLD1.EXE
MOSEL	29F080PFTN	WA28F.EXE ADP-29F016-TS/V2
MOSEL	29F400TA	WA28F.EXE ADP-29F800-
TS/TSV2		
MOSEL	29F400TA*	WA28F.EXE ADP-49F800-
TS/TSV2		
MOSEL	MF29F040A	WMEM1.EXE
MOSEL VITELIC	V29C31004B	WMEM1.EXE
MOSEL VITELIC	V29C31004T	WMEM1.EXE
MOSEL VITELIC	V29C51000T	WMEM1.EXE
MOSEL VITELIC	V29C51001B	WMEM1.EXE
MOSEL VITELIC	V29C51001T	WMEM1.EXE
MOSEL VITELIC	V29C51002B	WMEM1.EXE
MOSEL VITELIC	V29C51002T	WMEM1.EXE

MOSEL VITELIC	V29C51004B	WMEM1.EXE
MOSEL VITELIC	V29C51004T	WMEM1.EXE
MOSEL VITELIC	V29LC51000	WMEM1.EXE
MOSEL VITELIC	V29LC51001	WMEM1.EXE
MOSEL VITELIC	V29LC51002	WMEM1.EXE
MOSEL VITELIC	MSU2958	WPGM51.EXE
MOSEL VITELIC	MSU2964	WPGM51.EXE
MOSTEK	27C256[12.75V]	WMEM1.EXE
MOSTEK	27C512[12.75V]	WMEM1.EXE
MOSTEK	27L256[12.75V]	WMEM1.EXE
MOSTEK	27L512[12.75V]	WMEM1.EXE
MOTOROLA	MC68HC705J1 EMUL	WAMMPU.EXE ADP-68HC705J/J2-
S		
MOTOROLA	29F010	WMEM1.EXE
MOTOROLA	29F040	WMEM1.EXE
MOTOROLA	M28F800A2BT	WA28F.EXE ADP-49F800-
TS/TSV2		
MOTOROLA	M28F800A2KBT	WA28F.EXE ADP-49F800-
TS/TSV2		
MOTOROLA	M28F800A2KUT	WA28F.EXE ADP-49F800-
TS/TSV2		
MOTOROLA	M28F800A2UT	WA28F.EXE ADP-49F800-
TS/TSV2		
MOTOROLA	M29F800A2BT	WA28F.EXE ADP-49F800-
TS/TSV2		
MOTOROLA	M29F800A2KBT	WA28F.EXE ADP-49F800-
TS/TSV2		
MOTOROLA	M29F800A2KUT	WA28F.EXE ADP-49F800-
TS/TSV2		
MOTOROLA	M29F800A2UT	WA28F.EXE ADP-49F800-
TS/TSV2		
MOTOROLA	M29F800A3BT	WA28F.EXE ADP-49F800-
TS/TSV2		
MOTOROLA	M29F800A3KBT	WA28F.EXE ADP-49F800-
TS/TSV2		
MOTOROLA	M29F800A3KUT	WA28F.EXE ADP-49F800-
TS/TSV2		
MOTOROLA	M29F800A3UT	WA28F.EXE ADP-49F800-
TS/TSV2		
MOTOROLA	7620/21	WBPPGM.EXE
MOTOROLA	7640/41	WBPPGM.EXE
MOTOROLA	7642/43	WBPPGM.EXE
MOTOROLA	7649	WBPPGM.EXE
MOTOROLA	7680/81	WBPPGM.EXE
MOTOROLA	7684/85	WBPPGM.EXE
MOTOROLA	MC68701	WAMMPU.EXE ADP-68701
MOTOROLA	MC68701U4	WAMMPU.EXE ADP-68701
MOTOROLA	MC68705P3	WAMMPU.EXE ADP-68705P3
MOTOROLA	MC68705P5	WAMMPU.EXE ADP-68705P3
MOTOROLA	MC68705R3	WAMMPU.EXE ADP-68705
MOTOROLA	MC68705R5	WAMMPU.EXE ADP-68705
MOTOROLA	MC68705U3	WAMMPU.EXE ADP-68705
MOTOROLA	MC68705U5	WAMMPU.EXE ADP-68705
MOTOROLA	MC68H(R)C908JK1	WA68908.EXE ADP-68HC908JK3
MOTOROLA	MC68H(R)C908JK1(SOP20)	WA68908.EXE ADP-68HC908JK3-S
MOTOROLA	MC68H(R)C908JK3	WA68908.EXE ADP-68HC908JK3
MOTOROLA	MC68H(R)C908JK3(SOP20)	WA68908.EXE ADP-68HC908JK3-S
MOTOROLA	MC68H(R)C908JL3	WA68908.EXE ADP-68HC908JL3
MOTOROLA	MC68H(R)C908JL3(SOP28)	WA68908.EXE ADP-68HC908JL3-S
MOTOROLA	MC68HC05B6/B8	WAMMPU.EXE ADP-68HC705B5-PL
MOTOROLA	MC68HC11A1(DIP-48)	WAMMPU.EXE ADP-68HC811E2
MOTOROLA	MC68HC11A1(PLCC-52)	WAMMPU.EXE ADP-68HC711E
MOTOROLA	MC68HC11A8(DIP-48)	WAMMPU.EXE ADP-68HC811E2
MOTOROLA	MC68HC11A8(PLCC-52)	WAMMPU.EXE ADP-68HC711E

MOTOROLA	MC68HC11E1	WAMMPU.EXE	ADP-68HC711E/E9-
Q			
MOTOROLA	MC68HC11E20	WAMMPU.EXE	ADP-68HC711E/E9-
Q			
MOTOROLA	MC68HC11E9	WAMMPU.EXE	ADP-68HC711E/E9-
Q			
MOTOROLA	MC68HC11F1 (PLCC68)	WAMMPU.EXE	ADP-68HC11F1
MOTOROLA	MC68HC11F1 (QFP80)	WAMMPU.EXE	ADP-68HC11F1-Q80
MOTOROLA	MC68HC11K4	WAMMPU.EXE	ADP-68HC711/K4-Q
MOTOROLA	MC68HC11KA4	WAMMPU.EXE	ADP-68HC711KA4
MOTOROLA	MC68HC705B16/X16	WAMMPU.EXE	ADP-68HC705B5-
PL/X16-Q			
MOTOROLA	MC68HC705B16N	WAMMPU.EXE	ADP-68HC705B5-
PL/X16-Q			
MOTOROLA	MC68HC705B16N (SDIP56)	WAMMPU.EXE	ADP-68HC705B5-SD
MOTOROLA	MC68HC705B32	WAMMPU.EXE	ADP-68HC705B5-
PL/X16-Q			
MOTOROLA	MC68HC705B32 (SDIP56)	WAMMPU.EXE	ADP-68HC705B5-SD
MOTOROLA	MC68HC705B5	WAMMPU.EXE	ADP-68HC705B5-PL
MOTOROLA	MC68HC705BD3	WAMMPU.EXE	ADP-68HC705BDX
MOTOROLA	MC68HC705BD3 (SDIP42)	WAMMPU.EXE	ADP-68HC705BD-SD
MOTOROLA	MC68HC705BD7	WAMMPU.EXE	ADP-68HC705BDX
MOTOROLA	MC68HC705BD7 (SDIP42)	WAMMPU.EXE	ADP-68HC705BD-SD
MOTOROLA	MC68HC705BD9	WAMMPU.EXE	ADP-68HC705BD9
MOTOROLA	MC68HC705BD9 (SDIP42)	WAMMPU.EXE	ADP-705BD9-SD
MOTOROLA	MC68HC705C12A	WAMMPU.EXE	ADP-68HC705C9/-
PL			
MOTOROLA	MC68HC705C4	WAMMPU.EXE	ADP-68HC705C9/-
PL			
MOTOROLA	MC68HC705C4A	WAMMPU.EXE	ADP-68HC705C9/-
PL			
MOTOROLA	MC68HC705C8	WAMMPU.EXE	ADP-68HC705C9/-
PL			
MOTOROLA	MC68HC705C8A (DIP40)	WAMMPU.EXE	ADP-68HC705C9
MOTOROLA	MC68HC705C8A (PLCC44)	WAMMPU.EXE	ADP-68HC705C9-PL
MOTOROLA	MC68HC705C8A (QFP44)	WAMMPU.EXE	ADP-68HC705C9-Q
MOTOROLA	MC68HC705C8A (SDIP42)	WAMMPU.EXE	ADP-68HC705C9-SD
MOTOROLA	MC68HC705C9	WAMMPU.EXE	ADP-68HC705C9/-
PL			
MOTOROLA	MC68HC705C9A (DIP40)	WAMMPU.EXE	ADP-68HC705C9
MOTOROLA	MC68HC705C9A (PLCC44)	WAMMPU.EXE	ADP-68HC705C9-PL
MOTOROLA	MC68HC705C9A (QFP44)	WAMMPU.EXE	ADP-68HC705C9-Q
MOTOROLA	MC68HC705D32	WAMMPU.EXE	ADP-68HC705C9/-
PL			
MOTOROLA	MC68HC705D32A	WAMMPU.EXE	ADP-68HC705C9/-
PL			
MOTOROLA	MC68HC705D9	WAMMPU.EXE	ADP-68HC705C9/-
PL			
MOTOROLA	MC68HC705E1	WAMMPU.EXE	ADP-68HC705E1/-S
MOTOROLA	MC68HC705J1A	WAMMPU.EXE	ADP-68HC705J1A/-
S			
MOTOROLA	MC68HC705J1A*	WAMMPU.EXE	ADP-68HC705J1AV2
MOTOROLA	MC68HC705J1A* (SOP20)	WAMMPU.EXE	ADP-68HC705J1A-
SV2			
MOTOROLA	MC68HC705J2	WAMMPU.EXE	ADP-68HC705J/J2-
S			
MOTOROLA	MC68HC705JB3	WAMMPU.EXE	ADP-68HC705JB3/-
S			
MOTOROLA	MC68HC705JB4	WAMMPU.EXE	ADP-68HC705JB4/-
S			
MOTOROLA	MC68HC705JJ7	WAMMPU.EXE	ADP-68HC705JJ7/-
S			
MOTOROLA	MC68HC705JP7	WAMMPU.EXE	ADP-68HC705JP7/-
S			

MOTOROLA	MC68HC705K1	WAMMPU.EXE	ADP-68HC705K1/-S
MOTOROLA	MC68HC705KJ1	WAMMPU.EXE	ADP-68HC705KJ1
MOTOROLA	MC68HC705KJ1 (SOP16)	WAMMPU.EXE	ADP-68HC705KJ1-S
MOTOROLA	MC68HC705L16	WAMMPU.EXE	ADP-68HC705L5-Q
MOTOROLA	MC68HC705L5	WAMMPU.EXE	ADP-68HC705L5-Q
MOTOROLA	MC68HC705MC4	WAMMPU.EXE	ADP-68HC705MC4
MOTOROLA	MC68HC705P6	WAMMPU.EXE	ADP-68HC705P
MOTOROLA	MC68HC705P6 (SDIP28)	WAMMPU.EXE	ADP-68HC705P-SD
MOTOROLA	MC68HC705P6 (SOP28)	WAMMPU.EXE	ADP-68HC705P9-S
MOTOROLA	MC68HC705P6A	WAMMPU.EXE	ADP-68HC705P
MOTOROLA	MC68HC705P6A (SDIP28)	WAMMPU.EXE	ADP-68HC705P-SD
MOTOROLA	MC68HC705P6A (SOP28)	WAMMPU.EXE	ADP-68HC705P9-S
MOTOROLA	MC68HC705P9	WAMMPU.EXE	ADP-68HC705P
MOTOROLA	MC68HC705P9 (SDIP28)	WAMMPU.EXE	ADP-68HC705P-SD
MOTOROLA	MC68HC705P9 (SOP28)	WAMMPU.EXE	ADP-68HC705P9-S
MOTOROLA	MC68HC705SR3	WAMMPU.EXE	ADP-
68HC705SR3/SR-SD/SR3-Q			
MOTOROLA	MC68HC705X32	WAMMPU.EXE	ADP-68HC705X16-Q
MOTOROLA	MC68HC705X4	WAMMPU.EXE	ADP-68HC705X4-S
MOTOROLA	MC68HC711D3	WAMMPU.EXE	ADP-68HC711D/D3-
PL/D3-Q			
MOTOROLA	MC68HC711E20	WAMMPU.EXE	ADP-68HC711E/E9-
Q			
MOTOROLA	MC68HC711E9	WAMMPU.EXE	ADP-68HC711E/E9-
Q			
MOTOROLA	MC68HC711EA9	WAMMPU.EXE	ADP-68711EA9-PL
MOTOROLA	MC68HC711G5	WAMMPU.EXE	ADP-68HC711G5-PL
MOTOROLA	MC68HC711K4	WAMMPU.EXE	ADP-68HC711/K4-Q
MOTOROLA	MC68HC711KA4	WAMMPU.EXE	ADP-68HC711KA4
MOTOROLA	MC68HC711L6	WAMMPU.EXE	ADP-68HC711L6
MOTOROLA	MC68HC805B6	WAMMPU.EXE	ADP-68HC705B5-PL
MOTOROLA	MC68HC805P18	WAMMPU.EXE	ADP-68805P18/-S
MOTOROLA	MC68HC811E2	WAMMPU.EXE	ADP-68HC811E2/-
PL			
MOTOROLA	MC68HC908AB32 (QFP64)	WA68908.EXE	ADP-68HC908AB32-
Q			
MOTOROLA	MC68HC908AP16 (LQFP48)	WA68908.EXE	ADP-68HC908AP-
LQ48			
MOTOROLA	MC68HC908AP16 (QFP44)	WA68908.EXE	ADP-68HC908AP-
Q44			
MOTOROLA	MC68HC908AP32 (LQFP48)	WA68908.EXE	ADP-68HC908AP-
LQ48			
MOTOROLA	MC68HC908AP32 (QFP44)	WA68908.EXE	ADP-68HC908AP-
Q44			
MOTOROLA	MC68HC908AP64 (LQFP48)	WA68908.EXE	ADP-68HC908AP-
LQ48			
MOTOROLA	MC68HC908AP64 (QFP44)	WA68908.EXE	ADP-68HC908AP-
Q44			
MOTOROLA	MC68HC908AP8 (LQFP48)	WA68908.EXE	ADP-68HC908AP-
LQ48			
MOTOROLA	MC68HC908AP8 (QFP44)	WA68908.EXE	ADP-68HC908AP-
Q44			
MOTOROLA	MC68HC908BD48	WA68908.EXE	ADP-68HC908BD48
MOTOROLA	MC68HC908EY16 (QFP32)	WA68908.EXE	ADP-68HC908EY-
TQ32			
MOTOROLA	MC68HC908GP20	WA68908.EXE	ADP-68HC908GPX
MOTOROLA	MC68HC908GP20 (QFP44)	WA68908.EXE	ADP-68HC908GPX-Q
MOTOROLA	MC68HC908GP32	WA68908.EXE	ADP-68HC908GPX
MOTOROLA	MC68HC908GP32 (QFP44)	WA68908.EXE	ADP-68HC908GPX-Q
MOTOROLA	MC68HC908GP32 (SDIP42)	WA68908.EXE	ADP-68HC908GTX-
SD			
MOTOROLA	MC68HC908GR4 (QFP32)	WA68908.EXE	ADP-68HC908GR8-Q
MOTOROLA	MC68HC908GR4 (SOP28)	WA68908.EXE	ADP-68HC908GR8-
S28			

MOTOROLA	MC68HC908GR8	WA68908.EXE	ADP-68HC908GR8
MOTOROLA	MC68HC908GR8 (QFP32)	WA68908.EXE	ADP-68HC908GR8-Q
MOTOROLA	MC68HC908GR8 (SOP28)	WA68908.EXE	ADP-68HC908GR8-
S28			
MOTOROLA	MC68HC908GT16 (QFP44)	WA68908.EXE	ADP-68HC908GPX-Q
MOTOROLA	MC68HC908GT8 (SDIP42)	WA68908.EXE	ADP-68HC908GTX-
SD			
MOTOROLA	MC68HC908JB8	WA68908.EXE	ADP-68HC908JB8
MOTOROLA	MC68HC908JB8 (SOP20)	WA68908.EXE	ADP-68HC908JB8-
S20			
MOTOROLA	MC68HC908JB8 (SOP28)	WA68908.EXE	ADP-68HC908JB8-
S28			
MOTOROLA	MC68HC908JK1E	WA68908.EXE	ADP-68HC908JK3
MOTOROLA	MC68HC908JK1E (SOP20)	WA68908.EXE	ADP-68HC908JK3-S
MOTOROLA	MC68HC908JK3E	WA68908.EXE	ADP-68HC908JK3
MOTOROLA	MC68HC908JK3E (SOP20)	WA68908.EXE	ADP-68HC908JK3-S
MOTOROLA	MC68HC908JL16 (DIP28)	WA68908.EXE	ADP-68HC908JL3
MOTOROLA	MC68HC908JL16 (QFP32)	WA68908.EXE	ADP-68HC908JL8-Q
MOTOROLA	MC68HC908JL16 (SDIP32)	WA68908.EXE	ADP-68HC908JL8-
SD			
MOTOROLA	MC68HC908JL16 (SOP28)	WA68908.EXE	ADP-68HC908JL3-S
MOTOROLA	MC68HC908JL3E	WA68908.EXE	ADP-68HC908JL3
MOTOROLA	MC68HC908JL3E (SOP28)	WA68908.EXE	ADP-68HC908JL3-S
MOTOROLA	MC68HC908JL8 (QFP32)	WA68908.EXE	ADP-68HC908JL8-Q
MOTOROLA	MC68HC908JL8 (SDIP32)	WA68908.EXE	ADP-68HC908JL8-
SD			
MOTOROLA	MC68HC908JL8 (SOP28)	WA68908.EXE	ADP-68HC908JL3-S
MOTOROLA	MC68HC908JR32 (QFP64)	WA68908.EXE	ADP-68HC908JR32-
Q64			
MOTOROLA	MC68HC908JW32 (LQFP52)	WA68908.EXE	ADP-68HC908JW32-
LQ52			
MOTOROLA	MC68HC908JW32 (MLF48)	WA68908.EXE	ADP-68HC908JW32-
ML			
MOTOROLA	MC68HC908KX2	WA68908.EXE	ADP-68HC908KX
MOTOROLA	MC68HC908KX2 (SOP16)	WA68908.EXE	ADP-68HC908KX-S
MOTOROLA	MC68HC908KX8	WA68908.EXE	ADP-68HC908KX
MOTOROLA	MC68HC908KX8 (SOP16)	WA68908.EXE	ADP-68HC908KX-S
MOTOROLA	MC68HC908LJ12 (LQFP52)	WA68908.EXE	ADP-68HC908LJ-
LQ52			
MOTOROLA	MC68HC908LJ12 (LQFP64)	WA68908.EXE	ADP-68HC908LJ-
LQ64			
MOTOROLA	MC68HC908LJ12 (QFP64)	WA68908.EXE	ADP-68HC908LJ-
QF64			
MOTOROLA	MC68HC908LJ8 (LQFP52)	WA68908.EXE	ADP-68HC908LJ-
LQ52			
MOTOROLA	MC68HC908MR16 (QFP64)	WA68908.EXE	ADP-68HC908MR32-
Q			
MOTOROLA	MC68HC908MR32 (QFP64)	WA68908.EXE	ADP-68HC908MR32-
Q			
MOTOROLA	MC68HC908MR8	WA68908.EXE	ADP-68HC908MR8
MOTOROLA	MC68HC908MR8 (QFP32)	WA68908.EXE	ADP-68HC908MR8-
Q32			
MOTOROLA	MC68HC908MR8 (SOP28)	WA68908.EXE	ADP-68HC908MR8-S
MOTOROLA	MC68HC908QT1	WA68908.EXE	ADP-68HC908QYX
MOTOROLA	MC68HC908QT1 (SOP8)	WA68908.EXE	ADP-68HC908QYX-
S8			
MOTOROLA	MC68HC908QT2	WA68908.EXE	ADP-68HC908QYX
MOTOROLA	MC68HC908QT2 (SOP8)	WA68908.EXE	ADP-68HC908QYX-
S8			
MOTOROLA	MC68HC908QT4	WA68908.EXE	ADP-68HC908QYX
MOTOROLA	MC68HC908QT4 (SOP8)	WA68908.EXE	ADP-68HC908QYX-
S8			
MOTOROLA	MC68HC908QY1 (SOP16)	WA68908.EXE	ADP-68HC908QYX-S
MOTOROLA	MC68HC908QY1 (TSSOP16)	WA68908.EXE	ADP-68HC908QYX-

TS			
MOTOROLA	MC68HC908QY2	WA68908.EXE	ADP-68HC908QYX
MOTOROLA	MC68HC908QY2 (SOP16)	WA68908.EXE	ADP-68HC908QYX-S
MOTOROLA	MC68HC908QY4	WA68908.EXE	ADP-68HC908QYX
MOTOROLA	MC68HC908QY4 (SOP16)	WA68908.EXE	ADP-68HC908QYX-S
MOTOROLA	MC68HC908QY4 (TSSOP16)	WA68908.EXE	ADP-68HC908QYX-
TS			
MOTOROLA	MC68HC908RF2 (QFP32)	WA68908.EXE	ADP-68HC908RF2-
TQ			
MOTOROLA	MC68HC908SR12 (QFP48)	WA68908.EXE	ADP-68HC908SR12-
Q			
MOTOROLA	MC68HC908SR12 (SDIP42)	WA68908.EXE	ADP-68HC908SR12-
SD			
MOTOROLA	MC68HR705J1A	WAMMPU.EXE	ADP-68HC705J1A/-
S			
MOTOROLA	MC68HRC705J1A	WAMMPU.EXE	ADP-
68HC705J1A/J1A-S			
MOTOROLA	MC68HRC705KJ1	WAMMPU.EXE	ADP-68HC705KJ1/-
S			
MOTOROLA	MC68L11E1	WAMMPU.EXE	ADP-68HC711E
MOTOROLA	MC68S711E9	WAMMPU.EXE	ADP-68HC711E/E9-
Q			
MOTOROLA	S553104T2	WA68908.EXE	ADP-68HC908QYX
MOTOROLA	S553104T2 (SOP8)	WA68908.EXE	ADP-68HC908QYX-
S8			
MOTOROLA	S553104T4 (SOP8)	WA68908.EXE	ADP-68HC908QYX-
S8			
MOTOROLA	S553104Y4	WA68908.EXE	ADP-68HC908QYX
MOTOROLA	S553104Y4 (SOP16)	WA68908.EXE	ADP-68HC908QYX-S
MOTOROLA	S553104Y4 (TSSOP16)	WA68908.EXE	ADP-68HC908QYX-
TS			
MOTOROLA	XC68HC805P18 (SOP28)	WAMMPU.EXE	ADP-68805P18-S
MXIC	MX27C1000	WMEM1.EXE	
MXIC	MX27C1000A	WMEM1.EXE	
MXIC	MX27C1001	WMEM1.EXE	
MXIC	MX27C1024	WMEM1.EXE	
MXIC	MX27C1100	WMEM1.EXE	
MXIC	MX27C1610P	WA28F.EXE	ADP-MX27C1610
MXIC	MX27C2000	WMEM1.EXE	
MXIC	MX27C2000A	WMEM1.EXE	
MXIC	MX27C2048	WMEM1.EXE	
MXIC	MX27C2100	WMEM1.EXE	
MXIC	MX27C256 [12.75V]	WMEM1.EXE	
MXIC	MX27C4000	WMEM1.EXE	
MXIC	MX27C4000A	WMEM1.EXE	
MXIC	MX27C4096	WMEM1.EXE	
MXIC	MX27C4100	WMEM1.EXE	
MXIC	MX27C4111	WMEM1.EXE	
MXIC	MX27C512 [12.75V]	WMEM1.EXE	
MXIC	MX27C8000	WMEM1.EXE	
MXIC	MX27C8100	WAEP42.EXE	ADP-EP42/-PS
MXIC	MX27L1000	WMEM1.EXE	
MXIC	MX27L2000	WMEM1.EXE	
MXIC	MX27L256 [12.75V]	WMEM1.EXE	
MXIC	MX27L4000	WMEM1.EXE	
MXIC	MX27L4096	WMEM1.EXE	
MXIC	MX27L4100	WMEM1.EXE	
MXIC	MX27L512 [12.75V]	WMEM1.EXE	
MXIC	KH29LV040C	WMEM1.EXE	
MXIC	KH29LV160CBT	WA28F.EXE	ADP-49F800-
TS/TSV2			
MXIC	KH29LV320CBT	WA28F.EXE	ADP-49F800-
TS/TSV2			
MXIC	KH29LV400CBT	WA28F.EXE	ADP-49F800-

TS/TSV2		
MXIC	KH29LV800CBT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX26C1000A	WMEM1.EXE
MXIC	MX26C1000B	WMEM1.EXE
MXIC	MX26C1024A	WMEM1.EXE
MXIC	MX26C2000B	WMEM1.EXE
MXIC	MX26C4000	WMEM1.EXE
MXIC	MX26C4000B	WMEM1.EXE
MXIC	MX26C512A	WMEM1.EXE
MXIC	MX26F128J3T	WA28F.EXE ADP-28F128-TS
MXIC	MX26F640J3T	WA28F.EXE ADP-28F128-TS
MXIC	MX26F640J3XCC	WA28F.EXE ADP-28F128K3-EBG
MXIC	MX26L12711M	WA28F.EXE ADP-MX29F1610-PS
MXIC	MX26L12811M	WA28F.EXE ADP-MX29F1610-PS
MXIC	MX26L6419T	WA28F.EXE ADP-28F160-TS
MXIC	MX26L6420M	WA28F.EXE ADP-MX29F1610-PS
MXIC	MX26L6420T	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX26LV004B	WMEM1.EXE
MXIC	MX26LV004BT	WA28F.EXE ADP-29F008-TS
MXIC	MX26LV004T	WMEM1.EXE
MXIC	MX26LV004TT	WA28F.EXE ADP-29F008-TS
MXIC	MX26LV008BT	WA28F.EXE ADP-29F008-TS
MXIC	MX26LV008TT	WA28F.EXE ADP-29F008-TS
MXIC	MX26LV040	WMEM1.EXE
MXIC	MX26LV160ABT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX26LV160ATT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX26LV160BT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX26LV160BXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX26LV160BXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX26LV160TT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX26LV160TXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX26LV160TXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX26LV320TT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX26LV400BT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX26LV400BXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX26LV400BXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX26LV400TT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX26LV400TXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX26LV400TXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX26LV800BT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX26LV800BXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX26LV800BXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX26LV800TT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX26LV800TXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX26LV800TXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX28F002B	WA28F.EXE ADP-28F008-TS-V2
MXIC	MX28F002NT	WA28F.EXE ADP-28F008-TS-V2
MXIC	MX28F002T	WA28F.EXE ADP-28F008-TS-V2
MXIC	MX28F1000	WMEM1.EXE
MXIC	MX28F1000C	WMEM1.EXE
MXIC	MX28F1000P	WMEM1.EXE
MXIC	MX28F160C3BT	WA28F.EXE ADP-28F160-TS
MXIC	MX28F160C3TT	WA28F.EXE ADP-28F160-TS

MXIC	MX28F2000	WMEM1.EXE
MXIC	MX28F2100BM	WA28F.EXE ADP-28F400P
MXIC	MX28F2100BT	WA28F.EXE ADP-28F160-TS
MXIC	MX28F2100BT*	WA28F.EXE ADP-28F800CV-TS
MXIC	MX28F2100TM	WA28F.EXE ADP-28F400P
MXIC	MX28F2100TT	WA28F.EXE ADP-28F160-TS
MXIC	MX28F2100TT*	WA28F.EXE ADP-28F800CV-TS
MXIC	MX28F4000	WMEM1.EXE
MXIC	MX28F640C3BBT	WA28F.EXE ADP-28F160-TS
MXIC	MX28F640C3BBT	WA28F.EXE ADP-28F160-TS
MXIC	MX29F001B	WMEM1.EXE
MXIC	MX29F001T	WMEM1.EXE
MXIC	MX29F002B	WMEM1.EXE
MXIC	MX29F002NT	WMEM1.EXE
MXIC	MX29F002T	WMEM1.EXE
MXIC	MX29F004B	WMEM1.EXE
MXIC	MX29F004T	WMEM1.EXE
MXIC	MX29F016M	WA28F.EXE ADP-29F080-PS
MXIC	MX29F016T	WA28F.EXE ADP-29F016-TS
MXIC	MX29F016T4	WA28F.EXE ADP-29F080-TS
MXIC	MX29F022NT	WMEM1.EXE
MXIC	MX29F040	WMEM1.EXE
MXIC	MX29F040C	WMEM1.EXE
MXIC	MX29F080	WA28F.EXE ADP-29F080-PS/TS
MXIC	MX29F100B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
MXIC	MX29F100B*	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29F100T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
MXIC	MX29F100T*	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29F1610AM	WA28F.EXE ADP-MX29F1610-PS
MXIC	MX29F1610AT	WA28F.EXE ADP-MX29F1610-TS
MXIC	MX29F1610BT	WA28F.EXE ADP-29F1610B-TS
MXIC	MX29F1610M	WA28F.EXE ADP-MX29F1610-PS
MXIC	MX29F1610T	WA28F.EXE ADP-MX29F1610-TS
MXIC	MX29F1615P	WA28F.EXE ADP-MX27C1610
MXIC	MX29F200B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
MXIC	MX29F200BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29F200CBM	WA28F.EXE ADP-29F800-PS
MXIC	MX29F200CBT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29F200CTM	WA28F.EXE ADP-29F800-PS
MXIC	MX29F200CTT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29F200T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
MXIC	MX29F200TT*	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29F4000	WMEM1.EXE
MXIC	MX29F400B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
MXIC	MX29F400BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29F400CB	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29F400CT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29F400T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
MXIC	MX29F400TT*	WA28F.EXE ADP-49F800-

TS/TSV2		
MXIC	MX29F800B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
MXIC	MX29F800BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29F800T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
MXIC	MX29F800TT*	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29F8100M	WA28F.EXE ADP-MX29F1610-PS
MXIC	MX29F8100T	WA28F.EXE ADP-MX29F1610-TS
MXIC	MX29L160BT	WA28F.EXE ADP-MX29L160-TS
MXIC	MX29L160TT	WA28F.EXE ADP-MX29L160-TS
MXIC	MX29L1611G	WA28F.EXE ADP-MX27C1610
MXIC	MX29L1611M	WA28F.EXE ADP-MX29F1610-PS
MXIC	MX29L1611T	WA28F.EXE ADP-29F1610B-TS
MXIC	MX29L3211M	WA28F.EXE ADP-MX29F1610-PS
MXIC	MX29L3211T	WA28F.EXE ADP-29F1610B-TS
MXIC	MX29L8000BT	WA28F.EXE ADP-29F008-TS
MXIC	MX29L8000TT	WA28F.EXE ADP-29F008-TS
MXIC	MX29L8100BT	WA28F.EXE ADP-49F800-TSV2
MXIC	MX29L8100BT*	WA28F.EXE ADP-MX29L8100-TS
MXIC	MX29L8100G	WA28F.EXE ADP-MX29L8100
MXIC	MX29L8100TT	WA28F.EXE ADP-49F800-TSV2
MXIC	MX29L8100TT*	WA28F.EXE ADP-MX29L8100-TS
MXIC	MX29LA128MBT	WA28F.EXE ADP-29LV640-TS
MXIC	MX29LA128MTT	WA28F.EXE ADP-29LV640-TS
MXIC	MX29LA129MHT	WA28F.EXE ADP-28F128-TS
MXIC	MX29LA129MLT	WA28F.EXE ADP-28F128-TS
MXIC	MX29LA320MBT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LA320MBXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LA320MBXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LA320MTT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LA320MTXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LA320MTXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LA321MBXC	WA28F.EXE ADP-28F128K3-EBG
MXIC	MX29LA321MHTC	WA28F.EXE ADP-28F128-TS
MXIC	MX29LA321MHXC	WA28F.EXE ADP-28F128K3-EBG
MXIC	MX29LA321MLT	WA28F.EXE ADP-28F128-TS
MXIC	MX29LA321MLXC	WA28F.EXE ADP-28F128K3-EBG
MXIC	MX29LA321MTT	WA28F.EXE ADP-28F128-TS
MXIC	MX29LA321MTXC	WA28F.EXE ADP-28F128K3-EBG
MXIC	MX29LV002CB	WMEM1.EXE
MXIC	MX29LV002CT	WMEM1.EXE
MXIC	MX29LV002NCB	WMEM1.EXE
MXIC	MX29LV002NCT	WMEM1.EXE
MXIC	MX29LV004B	WMEM1.EXE
MXIC	MX29LV004BT	WA28F.EXE ADP-29F008-TS
MXIC	MX29LV004CB	WMEM1.EXE
MXIC	MX29LV004CBT	WA28F.EXE ADP-29F008-TS
MXIC	MX29LV004CT	WMEM1.EXE
MXIC	MX29LV004CTT	WA28F.EXE ADP-29F008-TS
MXIC	MX29LV004T	WMEM1.EXE
MXIC	MX29LV004TT	WA28F.EXE ADP-29F008-TS
MXIC	MX29LV008BBT	WA28F.EXE ADP-29F008-TS
MXIC	MX29LV008BT	WA28F.EXE ADP-29F008-TS
MXIC	MX29LV008BTT	WA28F.EXE ADP-29F008-TS
MXIC	MX29LV008CBT	WA28F.EXE ADP-29F008-TS
MXIC	MX29LV008CTT	WA28F.EXE ADP-29F008-TS
MXIC	MX29LV008TT	WA28F.EXE ADP-29F008-TS
MXIC	MX29LV017AT	WA28F.EXE ADP-29F008-TS
MXIC	MX29LV017BT	WA28F.EXE ADP-29F008-TS

MXIC	MX29LV033AT	WA28F.EXE	ADP-29F008-TS
MXIC	MX29LV033CT	WA28F.EXE	ADP-29F008-TS
MXIC	MX29LV033MT	WA28F.EXE	ADP-29F008-TS
MXIC	MX29LV033T	WA28F.EXE	ADP-29F008-TS
MXIC	MX29LV040	WMEM1.EXE	
MXIC	MX29LV040C	WMEM1.EXE	
MXIC	MX29LV065BT	WA28F.EXE	ADP-29F065-TS
MXIC	MX29LV065MT	WA28F.EXE	ADP-29F065-TS
MXIC	MX29LV065T	WA28F.EXE	ADP-29F065-TS
MXIC	MX29LV081BT	WA28F.EXE	ADP-29F008-TS
MXIC	MX29LV081T	WA28F.EXE	ADP-29F008-TS
MXIC	MX29LV128MBT	WA28F.EXE	ADP-29LV640-TS
MXIC	MX29LV128MHT	WA28F.EXE	ADP-29LV640-TS
MXIC	MX29LV128MLT	WA28F.EXE	ADP-29LV640-TS
MXIC	MX29LV128MTT	WA28F.EXE	ADP-29LV640-TS
MXIC	MX29LV160ABT	WA28F.EXE	ADP-49F800-
TS/TSV2			
MXIC	MX29LV160ABXB	WA28F.EXE	ADP-MX29LV320-BG
MXIC	MX29LV160ABXE	WA28F.EXE	ADP-49B1614A-BG
MXIC	MX29LV160ATT	WA28F.EXE	ADP-49F800-
TS/TSV2			
MXIC	MX29LV160ATXB	WA28F.EXE	ADP-MX29LV320-BG
MXIC	MX29LV160ATXE	WA28F.EXE	ADP-49B1614A-BG
MXIC	MX29LV160BBM	WA28F.EXE	ADP-49F800-PS
MXIC	MX29LV160BBT	WA28F.EXE	ADP-49F800-
TS/TSV2			
MXIC	MX29LV160BBXB	WA28F.EXE	ADP-MX29LV320-BG
MXIC	MX29LV160BBXE	WA28F.EXE	ADP-49B1614A-BG
MXIC	MX29LV160BM	WA28F.EXE	ADP-49F800-PS
MXIC	MX29LV160BT	WA28F.EXE	ADP-49F800-
TS/TSV2			
MXIC	MX29LV160BTM	WA28F.EXE	ADP-49F800-PS
MXIC	MX29LV160BTT	WA28F.EXE	ADP-49F800-
TS/TSV2			
MXIC	MX29LV160BTXB	WA28F.EXE	ADP-MX29LV320-BG
MXIC	MX29LV160BTXE	WA28F.EXE	ADP-49B1614A-BG
MXIC	MX29LV160CBM	WA28F.EXE	ADP-49F800-PS
MXIC	MX29LV160CBT	WA28F.EXE	ADP-49F800-
TS/TSV2			
MXIC	MX29LV160CBXB	WA28F.EXE	ADP-MX29LV320-BG
MXIC	MX29LV160CBXE	WA28F.EXE	ADP-49B1614A-BG
MXIC	MX29LV160CTM	WA28F.EXE	ADP-49F800-PS
MXIC	MX29LV160CTT	WA28F.EXE	ADP-49F800-
TS/TSV2			
MXIC	MX29LV160CTXB	WA28F.EXE	ADP-MX29LV320-BG
MXIC	MX29LV160CTXE	WA28F.EXE	ADP-49B1614A-BG
MXIC	MX29LV160TM	WA28F.EXE	ADP-49F800-PS
MXIC	MX29LV160TT	WA28F.EXE	ADP-49F800-
TS/TSV2			
MXIC	MX29LV320ABT	WA28F.EXE	ADP-49F800-
TS/TSV2			
MXIC	MX29LV320ABXB	WA28F.EXE	ADP-MX29LV320-BG
MXIC	MX29LV320ABXE	WA28F.EXE	ADP-49B1614A-BG
MXIC	MX29LV320ATT	WA28F.EXE	ADP-49F800-
TS/TSV2			
MXIC	MX29LV320ATXB	WA28F.EXE	ADP-MX29LV320-BG
MXIC	MX29LV320ATXE	WA28F.EXE	ADP-49B1614A-BG
MXIC	MX29LV320BT	WA28F.EXE	ADP-49F800-
TS/TSV2			
MXIC	MX29LV320CBT	WA28F.EXE	ADP-49F800-
TS/TSV2			
MXIC	MX29LV320CBXB	WA28F.EXE	ADP-MX29LV320-BG
MXIC	MX29LV320CBXE	WA28F.EXE	ADP-49B1614A-BG
MXIC	MX29LV320CTT	WA28F.EXE	ADP-49F800-

TS/TSV2		
MXIC	MX29LV320CTXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LV320CTXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LV320MBT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV320MBXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LV320MBXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LV320MHT	WA28F.EXE ADP-29LV640-TS
MXIC	MX29LV320MLT	WA28F.EXE ADP-29LV640-TS
MXIC	MX29LV320MTT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV320MTXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LV320MTXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LV320TT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV400BM	WA28F.EXE ADP-29F800-PS
MXIC	MX29LV400BT	WA28F.EXE ADP-29F800-
TS/TSV2		
MXIC	MX29LV400BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV400BXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LV400BXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LV400CBM	WA28F.EXE ADP-29F800-PS
MXIC	MX29LV400CBT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV400CBXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LV400CBXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LV400CTM	WA28F.EXE ADP-29F800-PS
MXIC	MX29LV400CTT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV400CTXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LV400CTXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LV400TM	WA28F.EXE ADP-29F800-PS
MXIC	MX29LV400TT	WA28F.EXE ADP-29F800-
TS/TSV2		
MXIC	MX29LV400TT*	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV400TXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LV400TXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LV640BBT	WA28F.EXE ADP-49F800-TSV2
MXIC	MX29LV640BT	WA28F.EXE ADP-49F800-TSV2
MXIC	MX29LV640BTT	WA28F.EXE ADP-49F800-TSV2
MXIC	MX29LV640BUT	WA28F.EXE ADP-49F800-TSV2
MXIC	MX29LV640DBT	WA28F.EXE ADP-49F800-TSV2
MXIC	MX29LV640DTT	WA28F.EXE ADP-49F800-TSV2
MXIC	MX29LV640MBT	WA28F.EXE ADP-49F800-TSV2
MXIC	MX29LV640MHT	WA28F.EXE ADP-29LV640-TS
MXIC	MX29LV640MLT	WA28F.EXE ADP-29LV640-TS
MXIC	MX29LV640MTT	WA28F.EXE ADP-49F800-TSV2
MXIC	MX29LV640TT	WA28F.EXE ADP-49F800-TSV2
MXIC	MX29LV641MHT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV641MLT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV800ABT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV800ABXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LV800ABXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LV800ATT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV800ATXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LV800ATXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LV800BBM	WA28F.EXE ADP-29F800-PS
MXIC	MX29LV800BBT	WA28F.EXE ADP-49F800-

TS/TSV2		
MXIC	MX29LV800BBXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LV800BBXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LV800BM	WA28F.EXE ADP-29F800-PS
MXIC	MX29LV800BT	WA28F.EXE ADP-29F800-
TS/TSV2		
MXIC	MX29LV800BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV800BTM	WA28F.EXE ADP-29F800-PS
MXIC	MX29LV800BT T	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV800BTXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LV800BTXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LV800CBM	WA28F.EXE ADP-29F800-PS
MXIC	MX29LV800CBT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV800CBXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LV800CBXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LV800CTM	WA28F.EXE ADP-29F800-PS
MXIC	MX29LV800CTT	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LV800CTXB	WA28F.EXE ADP-MX29LV320-BG
MXIC	MX29LV800CTXE	WA28F.EXE ADP-49B1614A-BG
MXIC	MX29LV800TM	WA28F.EXE ADP-29F800-PS
MXIC	MX29LV800TT	WA28F.EXE ADP-29F800-
TS/TSV2		
MXIC	MX29LV800TT*	WA28F.EXE ADP-49F800-
TS/TSV2		
MXIC	MX29LW160TT	WA28F.EXE ADP-28F160-TS
MXIC	MX29LW320BT	WA28F.EXE ADP-28F160-TS
MXIC	MX29LW320TT	WA28F.EXE ADP-28F160-TS
MXIC	MX69LW164T	WA28F.EXE ADP-K5A3240-BG
MXIC	MX25EL1024	WSPROM.EXE
MXIC	MX25L1005	WSPROM.EXE
MXIC	MX25L1005A	WSPROM.EXE
MXIC	MX25L1602	WSPROM.EXE
MXIC	MX25L1605 (SON8)	WSPROM.EXE
MXIC	MX25L1605 (SOP16)	WSPROM.EXE
MXIC	MX25L1605A (SOP16)	WSPROM.EXE
MXIC	MX25L1605A (SOP8)	WSPROM.EXE
MXIC	MX25L2005	WSPROM.EXE
MXIC	MX25L2025	WSPROM.EXE
MXIC	MX25L3205 (SOP16)	WSPROM.EXE
MXIC	MX25L3205A (SON8)	WSPROM.EXE
MXIC	MX25L3205A (SOP16)	WSPROM.EXE
MXIC	MX25L3205D	WSPROM.EXE
MXIC	MX25L4005	WSPROM.EXE
MXIC	MX25L4005A	WSPROM.EXE
MXIC	MX25L4025A	WSPROM.EXE
MXIC	MX25L512	WSPROM.EXE
MXIC	MX25L6402	WSPROM.EXE
MXIC	MX25L6402A	WSPROM.EXE
MXIC	MX25L6405	WSPROM.EXE
MXIC	MX25L8005	WSPROM.EXE
MXIC	MX25L802	WSPROM.EXE
MXIC	MX25L8025	WSPROM.EXE
MXIC	MX10E8050I	WPGM51.EXE
MXIC	MX10EXA	WASIG.EXE ADP-87C591-
PL/CNV-PLCC-MPU51B		
MXIC	MX10F201FC	WASIG.EXE ADP-MX10F200-Q
MXIC	MX10F202FC	WASIG.EXE ADP-MX10F200-Q
MXIC	MX10FLCDPCB	WPGM51.EXE
MXIC	MX10FMAXD	WPGM51.EXE
MYSON	MTV24C08	WSPROM.EXE

MYSON	CS8954-A1	WPGM51.EXE
MYSON	CS8954-A3	WPGM51.EXE
MYSON	CS8955V	WPGM51.EXE
MYSON	MTV012	WPGM51.EXE
MYSON	MTV112	WPGM51.EXE
MYSON	MTV112M	WPGM51.EXE
MYSON	MTV212MN32	WASIG.EXE ADP-MTV212M-D1
MYSON	MTV212MN64	WASIG.EXE ADP-MTV212M-D1
MYSON	MTV212MN64I	WASIG.EXE ADP-MTV212M-D1
MYSON	MTV212MN64U	WASIG.EXE ADP-MTV212M-D2
MYSON	MTV212MS32	WASIG.EXE ADP-MTV212M-
SD/ADP-MTVX12M-SD		
MYSON	MTV212MS64I	WASIG.EXE ADP-MTVX12M-SD
MYSON	MTV212MS64U	WASIG.EXE ADP-MTV212M-
SD/ADP-MTVX12M-SD		
MYSON	MTV212MV32	WASIG.EXE ADP-MTV212M-
PL/ADP-MTVX12M-PL		
MYSON	MTV212MV64I	WASIG.EXE ADP-MTVX12M-PL
MYSON	MTV212MV64U	WASIG.EXE ADP-MTV212M-
PL/ADP-MTVX12M-PL		
MYSON	MTV230MF	WASIG.EXE ADP-MTV230MF-Q
MYSON	MTV230MS	WASIG.EXE ADP-MTV230MS-SD
MYSON	MTV230MV	WASIG.EXE ADP-MTV230MV-PL
MYSON	MTV312GMV64AJ	WASIG.EXE ADP-MTVX12M-PL
MYSON	MTV312MS64	WASIG.EXE ADP-MTVX12M-SD
MYSON	MTV312MS64AJ	WASIG.EXE ADP-MTVX12M-SD
MYSON	MTV312MV64	WASIG.EXE ADP-MTVX12M-PL
MYSON	MTV312MV64AJ	WASIG.EXE ADP-MTVX12M-PL
MYSON	MTV412GMV128	WASIG.EXE ADP-MTVX12M-PL
MYSON	MTV412MS128	WASIG.EXE ADP-MTVX12M-SD
MYSON	MTV412MV128	WASIG.EXE ADP-MTVX12M-PL
MYSON	MTV415MV	WPGM51.EXE
MYSON	MTV416MV/GMV	WPGM51.EXE
MYSON	MTV512GMG-A1	WPGM51.EXE CNV-QFP48-MTV512
MYSON	MTV512MV/GMV-A1	WPGM51.EXE
MYSON	MTV512MV/GMV-A3	WPGM51.EXE
Mstar	PS25LV512A	WSPROM.EXE
NATIONAL	NM27C010	WMEM1.EXE
NATIONAL	NM27C020	WMEM1.EXE
NATIONAL	NM27C040	WMEM1.EXE
NATIONAL	NM27C1024	WMEM1.EXE
NATIONAL	NM27C128B [12.5V]	WMEM1.EXE
NATIONAL	NM27C128 [12.5V]	WMEM1.EXE
NATIONAL	NM27C2048	WMEM1.EXE
NATIONAL	NM27C210	WMEM1.EXE
NATIONAL	NM27C240	WMEM1.EXE
NATIONAL	NM27C256 [12.75V]	WMEM1.EXE
NATIONAL	NM27C512 [12.75V]	WMEM1.EXE
NATIONAL	NM27LC256 [12.75V]	WMEM1.EXE
NATIONAL	NM27LC512 [12.75V]	WMEM1.EXE
NATIONAL	NM27LC64 [12.5V]	WMEM1.EXE
NATIONAL	NM27LV010	WMEM1.EXE
NATIONAL	NM27LV210	WMEM1.EXE
NATIONAL	NM27LV512 [12.75V]	WMEM1.EXE
NATIONAL	NM27P210V	WMEM1.EXE
NATIONAL	NM27P512 [12.75V]	WMEM1.EXE
NATIONAL	NMC2716 [25V]	WMEM1.EXE
NATIONAL	NMC27C128B [12.5V]	WMEM1.EXE
NATIONAL	NMC27C128 [12.5V]	WMEM1.EXE
NATIONAL	NMC27C16B [13V]	WMEM1.EXE
NATIONAL	NMC27C16 [25V]	WMEM1.EXE
NATIONAL	NMC27C256B [12.75V]	WMEM1.EXE
NATIONAL	NMC27C256 [12.75V]	WMEM1.EXE
NATIONAL	NMC27C32B [12.5V]	WMEM1.EXE

NATIONAL	NMC27C32 [25V]	WMEM1.EXE
NATIONAL	NMC27C512A [12.75V]	WMEM1.EXE
NATIONAL	NMC27C512 [12.75V]	WMEM1.EXE
NATIONAL	NMC27C64B [13V]	WMEM1.EXE
NATIONAL	NMC27C64 [13V]	WMEM1.EXE
NATIONAL	NMC27CP128 [13V]	WMEM1.EXE
NATIONAL	NMC27P040	WMEM1.EXE
NATIONAL	NMC87C257 [12.75V]	WMEM1.EXE
NATIONAL	9816A	WMEM1.EXE
NATIONAL	9817/A	WMEM1.EXE
NATIONAL	98C64	WMEM1.EXE
NATIONAL	NM24C02/NM24C03	WSPROM.EXE
NATIONAL	NM24C04/NM24C05	WSPROM.EXE
NATIONAL	NM24C08/NM24C09	WSPROM.EXE
NATIONAL	NM24C16	WSPROM.EXE
NATIONAL	NM25C04	WSPROM.EXE
NATIONAL	NM93C06	WSPROM.EXE
NATIONAL	NM93C06L	WSPROM.EXE
NATIONAL	NM93C14	WSPROM.EXE
NATIONAL	NM93C46	WSPROM.EXE
NATIONAL	NM93C46A (128*8)	WSPROM.EXE
NATIONAL	NM93C46A (64*16)	WSPROM.EXE
NATIONAL	NM93C46L	WSPROM.EXE
NATIONAL	NM93C56	WSPROM.EXE
NATIONAL	NM93C56L	WSPROM.EXE
NATIONAL	NM93C66	WSPROM.EXE
NATIONAL	NM93C66A (256*16)	WSPROM.EXE
NATIONAL	NM93C66A (512*8)	WSPROM.EXE
NATIONAL	NM93C66L	WSPROM.EXE
NATIONAL	NM93C86A (1024*16)	WSPROM.EXE
NATIONAL	NM93C86A (2048*8)	WSPROM.EXE
NATIONAL	NM93CS06	WSPROM.EXE
NATIONAL	NM93CS06L	WSPROM.EXE
NATIONAL	NM93CS46	WSPROM.EXE
NATIONAL	NM93CS46L	WSPROM.EXE
NATIONAL	NM93CS56	WSPROM.EXE
NATIONAL	NM93CS56L	WSPROM.EXE
NATIONAL	NM93CS66	WSPROM.EXE
NATIONAL	NM93CS66L	WSPROM.EXE
NATIONAL	NMC9306	WSPROM.EXE
NATIONAL	NMC9307	WSPROM.EXE
NATIONAL	NMC9313B	WSPROM.EXE
NATIONAL	NMC9314B	WSPROM.EXE
NATIONAL	NMC9346	WSPROM.EXE
NATIONAL	NMC93CS26	WSPROM.EXE
NATIONAL	DM54LS471	WBPPGM.EXE
NATIONAL	DM54S188/A	WBPPGM.EXE
NATIONAL	DM54S287/A	WBPPGM.EXE
NATIONAL	DM54S288/A	WBPPGM.EXE
NATIONAL	DM54S387/A	WBPPGM.EXE
NATIONAL	DM54S472/A/B	WBPPGM.EXE
NATIONAL	DM54S473/A	WBPPGM.EXE
NATIONAL	DM54S570/A	WBPPGM.EXE
NATIONAL	DM54S571/A/B	WBPPGM.EXE
NATIONAL	DM54S572/A	WBPPGM.EXE
NATIONAL	DM54S573/A/B	WBPPGM.EXE
NATIONAL	DM74LS471	WBPPGM.EXE
NATIONAL	DM74S188/A	WBPPGM.EXE
NATIONAL	DM74S287/A	WBPPGM.EXE
NATIONAL	DM74S288/A	WBPPGM.EXE
NATIONAL	DM74S387/A	WBPPGM.EXE
NATIONAL	DM74S472/A/B	WBPPGM.EXE
NATIONAL	DM74S473/A	WBPPGM.EXE
NATIONAL	DM74S570/A	WBPPGM.EXE

NATIONAL	DM74S571/A/B	WBPPGM.EXE
NATIONAL	DM74S572/A	WBPPGM.EXE
NATIONAL	DM74S573/A/B	WBPPGM.EXE
NATIONAL	DM77S180	WBPPGM.EXE
NATIONAL	DM77S181/A	WBPPGM.EXE
NATIONAL	DM77S184	WBPPGM.EXE
NATIONAL	DM77S185/A/B	WBPPGM.EXE
NATIONAL	DM77S190/A/B	WBPPGM.EXE
NATIONAL	DM77S191/A/B	WBPPGM.EXE
NATIONAL	DM77S195A/B	WBPPGM.EXE
NATIONAL	DM77S280	WBPPGM.EXE
NATIONAL	DM77S281/A	WBPPGM.EXE
NATIONAL	DM77S290/A/B	WBPPGM.EXE
NATIONAL	DM77S291/A/B	WBPPGM.EXE
NATIONAL	DM77S321/A	WBPPGM.EXE
NATIONAL	DM77S421/A	WBPPGM.EXE
NATIONAL	DM77SR474/B	WBPPGM.EXE
NATIONAL	DM87S180	WBPPGM.EXE
NATIONAL	DM87S181/A	WBPPGM.EXE
NATIONAL	DM87S184	WBPPGM.EXE
NATIONAL	DM87S185/A/B	WBPPGM.EXE
NATIONAL	DM87S190/A/B	WBPPGM.EXE
NATIONAL	DM87S191/A/B	WBPPGM.EXE
NATIONAL	DM87S195A/B	WBPPGM.EXE
NATIONAL	DM87S280	WBPPGM.EXE
NATIONAL	DM87S281/A	WBPPGM.EXE
NATIONAL	DM87S290/A/B	WBPPGM.EXE
NATIONAL	DM87S291/A/B	WBPPGM.EXE
NATIONAL	DM87S321/A	WBPPGM.EXE
NATIONAL	DM87S421/A	WBPPGM.EXE
NATIONAL	DM87SR474/B	WBPPGM.EXE
NATIONAL	COP820CJMH	WMPU2.EXE
NATIONAL	COP822CJMH	WMPU2.EXE
NATIONAL	COP840C	WMPU2.EXE
NATIONAL	COP842CMH	WMPU2.EXE
NATIONAL	COP8640CMH	WMPU2.EXE
NATIONAL	COP8642CMH	WMPU2.EXE
NATIONAL	COP8780C	WMPU2.EXE
NATIONAL	COP8781C	WMPU2.EXE
NATIONAL	COP8782C	WMPU2.EXE
NATIONAL	COP8784CF	WMPU2.EXE
NATIONAL	COP8784CL	WMPU2.EXE
NATIONAL	COP8784EG	WMPU2.EXE
NATIONAL	COP8788CF	WMPU2.EXE
NATIONAL	COP8788CL	WMPU2.EXE
NATIONAL	COP8788EG	WMPU2.EXE
NATIONAL	COP87L20	WMPU2.EXE
NATIONAL	COP87L22	WMPU2.EXE
NATIONAL	COP87L40	WMPU2.EXE
NATIONAL	COP87L42	WMPU2.EXE
NATIONAL	COP87L640	WMPU2.EXE
NATIONAL	COP87L642	WMPU2.EXE
NATIONAL	COP87L80	WMPU2.EXE
NATIONAL	COP87L80 (PLCC44)	WMPU2.EXE CNV-PL44-COPL8X
NATIONAL	COP87L81	WMPU2.EXE
NATIONAL	COP87L82	WMPU2.EXE
NATIONAL	COP87L84	WMPU2.EXE
NATIONAL	COP87L84-BC	WMPU2.EXE
NATIONAL	COP87L88	WMPU2.EXE
NATIONAL	COP87L88 (PLCC44)	WMPU2.EXE CNV-PL44-COPL8X
NATIONAL	COP87L88 (PLCC68)	WMPU2.EXE CNV-PL68-COPL88
NATIONAL	COP87L88EBV (PLCC44)	WMPU2.EXE CNV-PL44-COPL8RB
NATIONAL	COP87L88RBV (PLCC44)	WMPU2.EXE CNV-PL44-COPL8RB
NATIONAL	COP880CFMH	WMPU2.EXE

NATIONAL	COP880CMH	WMPU2.EXE
NATIONAL	COP881CMH	WMPU2.EXE
NATIONAL	COP884CFMH	WMPU2.EXE
NATIONAL	COP884CGMH	WMPU2.EXE
NATIONAL	COP884CLMH	WMPU2.EXE
NATIONAL	COP888CGMH	WMPU2.EXE
NATIONAL	COP888CLMH	WMPU2.EXE
NATIONAL	COP8ACC720	WMPU2.EXE
NATIONAL	COP8ACC728	WMPU2.EXE
NATIONAL	COP8CBE9 (PLCC44)	WMPU2.EXE CNV-PL44-COP8X9
NATIONAL	COP8CBR9 (LLP44)	WMPU2.EXE CNV-LLP44-COP8X9
NATIONAL	COP8CBR9 (PLCC44)	WMPU2.EXE CNV-PL44-COP8X9
NATIONAL	COP8CBR9 (PLCC68)	WMPU2.EXE CNV-PL68-COP8X9
NATIONAL	COP8CBR9 (TSSOP56)	WMPU2.EXE CNV-TSS56-COP8X9
NATIONAL	COP8CCR9 (LLP44)	WMPU2.EXE CNV-LLP44-COP8X9
NATIONAL	COP8CCR9 (PLCC44)	WMPU2.EXE CNV-PL44-COP8X9
NATIONAL	COP8CCR9 (PLCC68)	WMPU2.EXE CNV-PL68-COP8X9
NATIONAL	COP8CCR9 (TSSOP56)	WMPU2.EXE CNV-TSS56-COP8X9
NATIONAL	COP8CDR9 (LLP44)	WMPU2.EXE CNV-LLP44-COP8X9
NATIONAL	COP8CDR9 (PLCC44)	WMPU2.EXE CNV-PL44-COP8X9
NATIONAL	COP8CDR9 (PLCC68)	WMPU2.EXE CNV-PL68-COP8X9
NATIONAL	COP8CDR9 (TSSOP56)	WMPU2.EXE CNV-TSS56-COP8X9
NATIONAL	COP8SAA716 (16PIN)	WMPU2.EXE
NATIONAL	COP8SAA720 (20PIN)	WMPU2.EXE
NATIONAL	COP8SAA728 (28PIN)	WMPU2.EXE
NATIONAL	COP8SAB720 (20PIN)	WMPU2.EXE
NATIONAL	COP8SAB728 (28PIN)	WMPU2.EXE
NATIONAL	COP8SAC720 (20PIN)	WMPU2.EXE
NATIONAL	COP8SAC728 (28PIN)	WMPU2.EXE
NATIONAL	COP8SAC740 (40PIN)	WMPU2.EXE
NATIONAL	COP8SAC744V (PLCC)	WMPU2.EXE CNV-PL44-COP8SAX
NATIONAL	COP8SAC744VEJ (QFP)	WMPU2.EXE CNV-Q44-COP8SAX
NATIONAL	COP8SBR9 (LLP44)	WMPU2.EXE CNV-LLP44-COP8X9
NATIONAL	COP8SBR9 (PLCC44)	WMPU2.EXE CNV-PL44-COP8X9
NATIONAL	COP8SBR9 (PLCC68)	WMPU2.EXE CNV-PL68-COP8X9
NATIONAL	COP8SBR9 (TSSOP56)	WMPU2.EXE CNV-TSS56-COP8X9
NATIONAL	COP8SCR9 (LLP44)	WMPU2.EXE CNV-LLP44-COP8X9
NATIONAL	COP8SCR9 (PLCC44)	WMPU2.EXE CNV-PL44-COP8X9
NATIONAL	COP8SCR9 (PLCC68)	WMPU2.EXE CNV-PL68-COP8X9
NATIONAL	COP8SCR9 (TSSOP56)	WMPU2.EXE CNV-TSS56-COP8X9
NATIONAL	COP8SDR9 (LLP44)	WMPU2.EXE CNV-LLP44-COP8X9
NATIONAL	COP8SDR9 (PLCC44)	WMPU2.EXE CNV-PL44-COP8X9
NATIONAL	COP8SDR9 (PLCC68)	WMPU2.EXE CNV-PL68-COP8X9
NATIONAL	COP8SDR9 (TSSOP56)	WMPU2.EXE CNV-TSS56-COP8X9
NATIONAL	COP8SGE720 (20PIN)	WMPU2.EXE
NATIONAL	COP8SGE728 (28PIN)	WMPU2.EXE
NATIONAL	COP8SGE740 (40PIN)	WMPU2.EXE
NATIONAL	COP8SGE744V (PLCC)	WMPU2.EXE CNV-PL44-COP8SAX
NATIONAL	COP8SGE744VEJ (QFP)	WMPU2.EXE CNV-Q44-COP8SAX
NATIONAL	COP8SGR720 (20PIN)	WMPU2.EXE
NATIONAL	COP8SGR728 (28PIN)	WMPU2.EXE
NATIONAL	COP8SGR740 (40PIN)	WMPU2.EXE
NATIONAL	COP8SGR744V (PLCC)	WMPU2.EXE CNV-PL44-COP8SAX
NATIONAL	COP8SGR744VEJ (QFP)	WMPU2.EXE CNV-Q44-COP8SAX
NATIONAL	GAL16V8	WPLD1.EXE
NATIONAL	GAL16V8-10	WPLD1.EXE
NATIONAL	GAL16V8-7	WPLD1.EXE
NATIONAL	GAL16V8A	WPLD1.EXE
NATIONAL	GAL16V8QS	WPLD1.EXE
NATIONAL	GAL20RA10	WPLD1.EXE
NATIONAL	GAL20V8	WPLD1.EXE
NATIONAL	GAL20V8-10	WPLD1.EXE
NATIONAL	GAL20V8-7	WPLD1.EXE
NATIONAL	GAL20V8A	WPLD1.EXE

NATIONAL	GAL20V8QS	WPLD1.EXE
NATIONAL	GAL22CV10	WPLD1.EXE
NATIONAL	GAL22V10	WPLD1.EXE
NATIONAL	GAL22V10B	WPLD1.EXE
NATIONAL	GAL6001	WPLD1.EXE
NATIONAL	PAL10H8/A/A2	WPLD1.EXE
NATIONAL	PAL10L8/A/A2	WPLD1.EXE
NATIONAL	PAL12H6/A/A2	WPLD1.EXE
NATIONAL	PAL12L10/A	WPLD1.EXE
NATIONAL	PAL12L6/A/A2	WPLD1.EXE
NATIONAL	PAL14H4/A/A2	WPLD1.EXE
NATIONAL	PAL14L4/A/A2	WPLD1.EXE
NATIONAL	PAL14L8/A	WPLD1.EXE
NATIONAL	PAL16C1/A/A2	WPLD1.EXE
NATIONAL	PAL16H2/A/A2	WPLD1.EXE
NATIONAL	PAL16L2/A/A2	WPLD1.EXE
NATIONAL	PAL16L6/A	WPLD1.EXE
NATIONAL	PAL16L8	WPLD1.EXE
NATIONAL	PAL16L8A/A2	WPLD1.EXE
NATIONAL	PAL16L8B/B2	WPLD1.EXE
NATIONAL	PAL16R4	WPLD1.EXE
NATIONAL	PAL16R4A/A2	WPLD1.EXE
NATIONAL	PAL16R4B/B2	WPLD1.EXE
NATIONAL	PAL16R6	WPLD1.EXE
NATIONAL	PAL16R6A/A2	WPLD1.EXE
NATIONAL	PAL16R6B/B2	WPLD1.EXE
NATIONAL	PAL16R8	WPLD1.EXE
NATIONAL	PAL16R8A/A2	WPLD1.EXE
NATIONAL	PAL16R8B/B2	WPLD1.EXE
NATIONAL	PAL16RA8	WPLD1.EXE
NATIONAL	PAL18L4/A	WPLD1.EXE
NATIONAL	PAL20C1/A	WPLD1.EXE
NATIONAL	PAL20L10/A	WPLD1.EXE
NATIONAL	PAL20L2/A	WPLD1.EXE
NATIONAL	PAL20L8A/B	WPLD1.EXE
NATIONAL	PAL20R4A/B	WPLD1.EXE
NATIONAL	PAL20R6A/B	WPLD1.EXE
NATIONAL	PAL20R8A/B	WPLD1.EXE
NATIONAL	PAL20RA10	WPLD1.EXE
NATIONAL	PAL20X10/A	WPLD1.EXE
NATIONAL	PAL20X4/A	WPLD1.EXE
NATIONAL	PAL20X8/A	WPLD1.EXE
NEC	D27C8000D	WAEP42.EXE ADP-EP42/-PS
NEC	UPD27128[21V]	WMEM1.EXE
NEC	UPD2716[25V]	WMEM1.EXE
NEC	UPD27256[21V]	WMEM1.EXE
NEC	UPD2732A[21V]	WMEM1.EXE
NEC	UPD2732B[12.5V]	WMEM1.EXE
NEC	UPD2764[21V]	WMEM1.EXE
NEC	UPD27C1000	WMEM1.EXE
NEC	UPD27C1000A	WMEM1.EXE
NEC	UPD27C1001	WMEM1.EXE
NEC	UPD27C1001A	WMEM1.EXE
NEC	UPD27C1024/1024A	WMEM1.EXE
NEC	UPD27C2001	WMEM1.EXE
NEC	UPD27C210A	WMEM1.EXE
NEC	UPD27C240	WMEM1.EXE
NEC	UPD27C256A[12.75V]	WMEM1.EXE
NEC	UPD27C256[21V]	WMEM1.EXE
NEC	UPD27C4000	WMEM1.EXE
NEC	UPD27C4001	WMEM1.EXE
NEC	UPD27C4002	WMEM1.EXE
NEC	UPD27C4040	WMEM1.EXE
NEC	UPD27C4096	WMEM1.EXE

NEC	UPD27C512 [12.75V]	WMEM1.EXE
NEC	UPD27C64 [21V]	WMEM1.EXE
NEC	UPD27C8001	WMEM1.EXE
NEC	UPD28C04	WMEM1.EXE
NEC	UPD28C05	WMEM1.EXE
NEC	UPD28C256	WMEM1.EXE
NEC	UPD28C64/A	WMEM1.EXE
NEC	uPD28F002LGZ-xB-LJH	WA28F.EXE ADP-28F008-TS-V2
NEC	uPD28F002LGZ-xT-LJH	WA28F.EXE ADP-28F008-TS-V2
NEC	uPD28F200GX-B	WA28F.EXE ADP-28F400P
NEC	uPD28F200GX-T	WA28F.EXE ADP-28F400P
NEC	uPD28F400GX-B	WA28F.EXE ADP-28F400P
NEC	uPD28F400GX-T	WA28F.EXE ADP-28F400P
NEC	uPD29F032203ALGZ-BxT-MJH	WA28F.EXE ADP-49F800-
TS/TSV2		
NEC	uPD29F032204ALGZ-BxT-MJH	WA28F.EXE ADP-49F800-
TS/TSV2		
NEC	uPD29F800LGZ-BxB-MJH	WA28F.EXE ADP-49F800-
TS/TSV2		
NEC	UPD27HC65	WBPPGM.EXE
NEC	8755A	WPGM51.EXE
NEC	UPD17P103CX	WAUPD78X.EXE
NEC	UPD17P104CS	WAUPD78X.EXE ADP-UPD17P10X-SD
NEC	UPD17P107CX	WAUPD78X.EXE
NEC	UPD17P108CS	WAUPD78X.EXE ADP-UPD17P10X-SD
NEC	UPD17P132CS	WAUPD78X.EXE ADP-UPD17P133-SD
NEC	UPD17P133ES	WAUPD78X.EXE ADP-UPD17P133-SD
NEC	UPD17P137ACT	WAUPD78X.EXE
NEC	UPD17P149CT	WAUPD78X.EXE ADP-UPD17P149-SD
NEC	UPD17P149GT	WAUPD78X.EXE ADP-UPD17P149-S
NEC	UPD17P202AGF	WAUPD78X.EXE ADP-UPD17P202
NEC	UPD17P207GF	WAUPD78X.EXE ADP-UPD17P207
NEC	UPD70F3210YGC	WAUPD78X.EXE ADP-UPD70F3210-
Q80		
NEC	UPD70F3214YGC	WAUPD78X.EXE ADP-UPD70F3214-
TQ100		
NEC	UPD70F3231M1	WAUPD78X.EXE ADP-UPD70F3231M-
TQ64		
NEC	UPD75CG208E	WAUPD78X.EXE ADP-UPD75P216
NEC	UPD75CG208EA	WAUPD78X.EXE ADP-UPD75P216-Q
NEC	UPD75CG216AE	WAUPD78X.EXE ADP-UPD75P216
NEC	UPD75CG216AEA	WAUPD78X.EXE ADP-UPD75P216-Q
NEC	UPD75P0016CU	WAUPD78X.EXE ADP-UPD75P008
NEC	UPD75P0016GB	WAUPD78X.EXE ADP-UPD75P008QFP
NEC	UPD75P0076CU	WAUPD78X.EXE ADP-UPD75P008
NEC	UPD75P0076GT	WAUPD78X.EXE ADP-UPD75P0076-S
NEC	UPD75P008CU	WAUPD78X.EXE ADP-UPD75P008
NEC	UPD75P008GB	WAUPD78X.EXE ADP-UPD75P008QFP
NEC	UPD75P036CW	WAUPD78X.EXE ADP-UPD75P036
NEC	UPD75P036GC	WAUPD78X.EXE ADP-UPD75P036-Q
NEC	UPD75P068CU	WAUPD78X.EXE ADP-UPD75P008
NEC	UPD75P068GB	WAUPD78X.EXE ADP-UPD75P008QFP
NEC	UPD75P108BCW	WAUPD78X.EXE ADP-UPD75P108
NEC	UPD75P108BGF	WAUPD78X.EXE ADP-UPD75P108QFP
NEC	UPD75P108CW	WAUPD78X.EXE ADP-UPD75P108
NEC	UPD75P108DW	WAUPD78X.EXE ADP-UPD75P108
NEC	UPD75P108GF	WAUPD78X.EXE ADP-UPD75P108QFP
NEC	UPD75P116CW	WAUPD78X.EXE ADP-UPD75P108
NEC	UPD75P116GF	WAUPD78X.EXE ADP-UPD75P108QFP
NEC	UPD75P216ACW	WAUPD78X.EXE ADP-UPD75P216
NEC	UPD75P218CW	WAUPD78X.EXE ADP-UPD75P216
NEC	UPD75P218GF	WAUPD78X.EXE ADP-UPD75P216-Q
NEC	UPD75P3016GK	WAUPD78X.EXE ADP-UPD75P3XXB-Q
NEC	UPD75P3018AGC	WAUPD78X.EXE ADP-UPD75P3XXA-Q

NEC	UPD75P3018AGK	WAUPD78X.EXE	ADP-UPD75P3XXB-Q
NEC	UPD75P3018GC	WAUPD78X.EXE	ADP-UPD75P3XXA-Q
NEC	UPD75P3018GK	WAUPD78X.EXE	ADP-UPD75P3XXB-Q
NEC	UPD75P3036GC	WAUPD78X.EXE	ADP-UPD75P3036-Q
NEC	UPD75P3036GK	WAUPD78X.EXE	ADP-75P3036-TQ
NEC	UPD75P308GF	WAUPD78X.EXE	ADP-UPD75P308
NEC	UPD75P3116GC	WAUPD78X.EXE	ADP-UPD75P3116-Q
NEC	UPD75P3116GK	WAUPD78X.EXE	ADP-75P3116-TQ
NEC	UPD75P316AGF	WAUPD78X.EXE	ADP-UPD75P308
NEC	UPD75P316BGC	WAUPD78X.EXE	ADP-UPD75P3XXA-Q
NEC	UPD75P316BGK	WAUPD78X.EXE	ADP-UPD75P3XXB-Q
NEC	UPD75P3216GT	WAUPD78X.EXE	ADP-UPD75P3216-S
NEC	UPD75P328GC	WAUPD78X.EXE	ADP-UPD75P3XXA-Q
NEC	UPD75P402C	WAUPD78X.EXE	
NEC	UPD75P402CT	WAUPD78X.EXE	
NEC	UPD75P516GF	WAUPD78X.EXE	ADP-UPD75P516
NEC	UPD75P518GF	WAUPD78X.EXE	ADP-UPD75P516
NEC	UPD77P20D	WAUPD78X.EXE	
NEC	UPD77P25C	WAUPD78X.EXE	
NEC	UPD77P25D	WAUPD78X.EXE	
NEC	UPD77P25L	WAUPD78X.EXE	ADP-UPD77P25-
PL44			
NEC	UPD77P56CR	WAUPD78X.EXE	ADP-UPD77P56
NEC	UPD77P56G	WAUPD78X.EXE	ADP-UPD77P56-S
NEC	UPD77P57CR	WAUPD78X.EXE	ADP-UPD77P56
NEC	UPD77P57G	WAUPD78X.EXE	ADP-UPD77P56-S
NEC	UPD78CP14CW	WAUPD78X.EXE	ADP-UPD78CP14-SD
NEC	UPD78CP14GF	WAUPD78X.EXE	ADP-UPD78CP14-Q
NEC	UPD78CP14L	WAUPD78X.EXE	ADP-UPD78CP14-PL
NEC	UPD78CP18CW	WAUPD78X.EXE	ADP-UPD78CP14-SD
NEC	UPD78CP18GF	WAUPD78X.EXE	ADP-UPD78CP14-Q
NEC	UPD78F0034ACW	WAUPD78X.EXE	ADP-UPD78F0034-
SD			
NEC	UPD78F0034AGC	WAUPD78X.EXE	ADP-UPD78F0034-Q
NEC	UPD78F0034AGK	WAUPD78X.EXE	ADP-UPD78F0034-
TQ64			
NEC	UPD78F0034BGC	WAUPD78X.EXE	ADP-UPD78F0034-Q
NEC	UPD78F0034BYGK (A)	WAUPD78X.EXE	ADP-UPD78F0034-
TQ64			
NEC	UPD78F0058GC	WAUPD78X.EXE	ADP-
UPD78F0058GC-Q			
NEC	UPD78F0058GK	WAUPD78X.EXE	ADP-UPD78F0058-
TQ80			
NEC	UPD78F0078GK	WAUPD78X.EXE	ADP-UPD78F0078-
Q64			
NEC	UPD78F0103M5MC	WAUPD78X.EXE	ADP-UPD78F0103-
SS			
NEC	UPD78F0134M5GK	WAUPD78X.EXE	ADP-UPD78F0138-
TQ64			
NEC	UPD78F0138M5GK	WAUPD78X.EXE	ADP-UPD78F0138-
TQ64			
NEC	UPD78F0233GC	WAUPD78X.EXE	ADP-UPD78F0233-Q
NEC	UPD78F0338GC	WAUPD78X.EXE	ADP-UPD78F0338-
TQ			
NEC	UPD78F0354GC	WAUPD78X.EXE	ADP-UPD78F0354-
TQ100			
NEC	UPD78F0703AYGC (A)	WAUPD78X.EXE	ADP-UPD78F0703-Q
NEC	UPD78F0703YGC (A)	WAUPD78X.EXE	ADP-UPD78F0703-Q
NEC	UPD78F0988AGC	WAUPD78X.EXE	ADP-UPD78F0988-
Q64			
NEC	UPD78F4218AGC	WAUPD78X.EXE	ADP-UPD78F4218-
TQ			
NEC	UPD78F4225GC	WAUPD78X.EXE	ADP-UPD78F4225-Q
NEC	UPD78F9026AGB	WAUPD78X.EXE	ADP-UPD78F9026-

TQ44			
NEC	UPD78F9076MC	WAUPD78X.EXE	ADP-UPD78F9076-
SS			
NEC	UPD78F9116AMC	WAUPD78X.EXE	ADP-UPD78F9116-
SS-V2			
NEC	UPD78F9116BMC	WAUPD78X.EXE	ADP-UPD78F9116-
SS-V2			
NEC	UPD78F9136AMC	WAUPD78X.EXE	ADP-UPD78F9116-
SS-V2			
NEC	UPD78F9177AYGB	WAUPD78X.EXE	ADP-UPD78F9177-Q
NEC	UPD78F9177GB	WAUPD78X.EXE	ADP-UPD78F9177-Q
NEC	UPD78F9177YGB	WAUPD78X.EXE	ADP-UPD78F9177-Q
NEC	UPD78F9222MC	WAUPD78X.EXE	ADP-UPD78F9222-
SS20			
NEC	UPD78F9328GB	WAUPD78X.EXE	ADP-UPD78F9328-Q
NEC	UPD78F9418AGC	WAUPD78X.EXE	ADP-UPD78F9418-
Q80			
NEC	UPD78F9456GK	WAUPD78X.EXE	ADP-UPD78F9456-Q
NEC	UPD78P014CW	WAUPD78X.EXE	ADP-UPD78P014-SD
NEC	UPD78P014GC	WAUPD78X.EXE	ADP-UPD78P014-Q
NEC	UPD78P018FCW	WAUPD78X.EXE	ADP-UPD78P018-SD
NEC	UPD78P018FGC	WAUPD78X.EXE	ADP-UPD78P018-Q
NEC	UPD78P018FGK	WAUPD78X.EXE	ADP-78P018GK-TQ
NEC	UPD78P0208GF	WAUPD78X.EXE	ADP-UPD78P0208-Q
NEC	UPD78P0308GC	WAUPD78X.EXE	ADP-UPD78P064-
AQ/AQT			
NEC	UPD78P0308GF	WAUPD78X.EXE	ADP-UPD78P0308-Q
NEC	UPD78P0308YGC	WAUPD78X.EXE	ADP-UPD78P064-
AQ/AQT			
NEC	UPD78P054GC	WAUPD78X.EXE	ADP-UPD78P054-Q
NEC	UPD78P054GK	WAUPD78X.EXE	ADP-UPD78P054-TQ
NEC	UPD78P054KK	WAUPD78X.EXE	ADP-UPD78P054-L
NEC	UPD78P058GC	WAUPD78X.EXE	ADP-UPD78P054-Q
NEC	UPD78P064GC	WAUPD78X.EXE	ADP-UPD78P064-
AQ/AQT			
NEC	UPD78P064GF	WAUPD78X.EXE	ADP-UPD78P064-Q
NEC	UPD78P064KL	WAUPD78X.EXE	ADP-UPD78P064-L
NEC	UPD78P083DU/CU	WAUPD78X.EXE	ADP-UPD78P083-SD
NEC	UPD78P083GB	WAUPD78X.EXE	ADP-UPD78P083-Q
NEC	UPD78P214CW	WAUPD78X.EXE	ADP-UPD78P214
NEC	UPD78P214L	WAUPD78X.EXE	ADP-UPD78P214-PL
NEC	UPD78P218AGC	WAUPD78X.EXE	ADP-UPD78P218A-Q
NEC	UPD78P312ACW	WAUPD78X.EXE	ADP-UPD78P312
NEC	UPD78P312AL	WAUPD78X.EXE	ADP-UPD78P312-PL
NEC	UPD78P328CW	WAUPD78X.EXE	ADP-UPD78P328-SD
NEC	UPD78P328GF	WAUPD78X.EXE	ADP-UPD78P328GF-
Q64			
NEC	UPD78P368AGF	WAUPD78X.EXE	ADP-UPD78P368-
Q80			
NEC	UPD78P4038GC	WAUPD78X.EXE	ADP-78P4038-TQ
NEC	UPD78P9014CT	WAUPD78X.EXE	ADP-78P9014-SD
NEXFLASH	NX29F010	WMEM1.EXE	
NEXFLASH	NX25B40 (Bottom)	WSPROM.EXE	
NEXFLASH	NX25F011B-3S (SOP8)	WABPP.EXE	ADP-AT45DB011-S
NEXFLASH	NX25F011B-3V (TSOP28)	WABPP.EXE	ADP-W45D041-TS
NEXFLASH	NX25F011B-5S (SOP8)	WABPP.EXE	ADP-AT45DB011-S
NEXFLASH	NX25F011B-5V (TSOP28)	WABPP.EXE	ADP-W45D041-TS
NEXFLASH	NX25P10	WSPROM.EXE	
NEXFLASH	NX25P16	WSPROM.EXE	
NEXFLASH	NX25P20	WSPROM.EXE	
NEXFLASH	NX25P40	WSPROM.EXE	
NOVATEK	NT25F271	WAMPU2.EXE	ADP-NT25F271-
TQ48			
NOVATEK	NT25F273	WAMPU2.EXE	ADP-NT25F273-

TQ48			
NOVATEK	NT68F631ALG	WAMPU2.EXE	ADP-NT68F632AL-
PL			
NOVATEK	NT68F632AL	WAMPU2.EXE	ADP-NT68F632L-PL
NOVATEK	NT68F632ALG	WAMPU2.EXE	ADP-NT68F632L-PL
NOVATEK	NT68F632L	WAMPU2.EXE	ADP-NT68F632L-PL
NOVATEK	NT68F633L	WAMPU2.EXE	ADP-NT68F633L-PL
NOVATEK	NT68F636L	WAMPU2.EXE	ADP-NT68F633L-PL
NOVATEK	NT68F63U	WAMPU2.EXE	ADP-NT68F63U-
SDIP42			
NOVATEK	NT68F65U	WAMPU2.EXE	ADP-NT68F63U-
SDIP42			
NOVATEK	NT68P61A	WAMPU2.EXE	ADP-NT68P61
NOVATEK	NT68P62	WAMPU2.EXE	ADP-NT68P61
NOVATEK	NT68P81	WAMPU2.EXE	ADP-NT68P81
OKI	271000	WMEM1.EXE	
OKI	272000	WMEM1.EXE	
OKI	27C101	WMEM1.EXE	
OKI	27C101H	WMEM1.EXE	
OKI	27C401	WMEM1.EXE	
OKI	MR26V1672E	WAEP42.EXE	ADP-EP42-SOJ
OKI	MR27V12800 (TS48)	WAEP42.EXE	ADP-29PL160-TSV2
OKI	MR27V1602D	WAEP42.EXE	ADP-EP42/-PS
OKI	MR27V1602E	WAEP42.EXE	ADP-EP42-TS
OKI	MR27V1652D	WAEP42.EXE	ADP-EP42/-PS
OKI	MR27V1652E	WAEP42.EXE	ADP-EP42-PS
OKI	MR27V3202E	WAEP42.EXE	ADP-EP42-TS
OKI	MR27V3202F	WAEP42.EXE	ADP-EP42-PS
OKI	MR27V3202F (TS48)	WAEP42.EXE	ADP-28F160-TS
OKI	MR27V401E	WMEM1.EXE	
OKI	MR27V402E	WMEM1.EXE	
OKI	MR27V402E (SOJ)	WAEP42.EXE	ADP-EP42-SOJ
OKI	MR27V402E (TSOP)	WAEP42.EXE	ADP-EP42-TS
OKI	MR27V402F (SOJ)	WAEP42.EXE	ADP-EP42-SOJ
OKI	MR27V6402G (SOP44)	WAEP42.EXE	ADP-EP42-PS
OKI	MR27V6402G (TS44)	WAEP42.EXE	ADP-EP42-TS
OKI	MR27V6402G (TS48)	WAEP42.EXE	ADP-28F160-TS
OKI	MR27V802D	WAEP42.EXE	ADP-EP42/-PS
OKI	MR27V802F (TS48)	WAEP42.EXE	ADP-28F160-TS
OKI	MR27V852D	WAEP42.EXE	ADP-EP42
OKI	MR27V852E	WAEP42.EXE	ADP-EP42/-SOJ
OKI	MSM27/C1024AS	WMEM1.EXE	
OKI	MSM27128AS [21V]	WMEM1.EXE	
OKI	MSM27128A [12.5V]	WMEM1.EXE	
OKI	MSM2716 [25V]	WMEM1.EXE	
OKI	MSM27256AS [12.75V]	WMEM1.EXE	
OKI	MSM27256H2B [12.75V]	WMEM1.EXE	
OKI	MSM27256H [12.75V]	WMEM1.EXE	
OKI	MSM272562B [12.75V]	WMEM1.EXE	
OKI	MSM272562C [12.75V]	WMEM1.EXE	
OKI	MSM2764AS [21V]	WMEM1.EXE	
OKI	MSM2764A [12.5V]	WMEM1.EXE	
OKI	MSM27C128AS [21V]	WMEM1.EXE	
OKI	MSM27C1602CZ	WAEP42.EXE	ADP-EP42/-PS
OKI	MSM27C1652CZ	WAEP42.EXE	ADP-EP42/-PS
OKI	MSM27C3252CZ	WAEP42.EXE	ADP-EP42/-PS
OKI	MSM27C401CZ	WMEM1.EXE	
OKI	MSM27C402CZ	WMEM1.EXE	
OKI	MSM27C512AS [12.75V]	WMEM1.EXE	
OKI	MSM27C64AS [21V]	WMEM1.EXE	
OKI	MSM27C802CZ	WAEP42.EXE	ADP-EP42/-PS
OKI	MSM27C822	WAEP42.EXE	ADP-EP42/-PS
OKI	MSM27C852CZ	WAEP42.EXE	ADP-EP42
OKI	MSM2816A	WMEM1.EXE	

OKI	MSM28C16A	WMEM1.EXE
OKI	MSM28C256	WMEM1.EXE
OKI	MSM28C64A/B	WMEM1.EXE
OKI	MSM28F101	WMEM1.EXE
OKI	MSM16911 (128*8)	WSPROM.EXE
OKI	MSM16911 (64*16)	WSPROM.EXE
OMNI-WAVE	27C101	WMEM1.EXE
OMNI-WAVE	27C1024	WMEM1.EXE
OMNI-WAVE	27C256 [12.75V]	WMEM1.EXE
PAION	P51VP704F	WASIG.EXE ADP-P51VP-QFN52
PERFECT	PDT29F010	WMEM1.EXE
PERFECT	PE29F002NT	WMEM1.EXE
PERFECT	PE29F040	WMEM1.EXE
PERFECT	PF29LV160TC-PFTN	WA28F.EXE ADP-49F800-
TS/TSV2		
PFC	PF29SF002NAB	WMEM1.EXE
PHILIPS	27C010	WMEM1.EXE
PHILIPS	27C128 [12.5V]	WMEM1.EXE
PHILIPS	27C210	WMEM1.EXE
PHILIPS	27C240	WMEM1.EXE
PHILIPS	27C256 [12.75V]	WMEM1.EXE
PHILIPS	27C512 [12.75V]	WMEM1.EXE
PHILIPS	27C64A [12.5V]	WMEM1.EXE
PHILIPS	28F010	WMEM1.EXE
PHILIPS	28F512	WMEM1.EXE
PHILIPS	PCA8550	WSPROM.EXE
PHILIPS	PCA8581/C	WSPROM.EXE
PHILIPS	PCA9561	WSPROM.EXE
PHILIPS	PCB2421	WSPROM.EXE
PHILIPS	PCF85103C-2	WSPROM.EXE
PHILIPS	PCF85116-3	WSPROM.EXE
PHILIPS	PCF8581/C	WSPROM.EXE
PHILIPS	PCF8582C-2	WSPROM.EXE
PHILIPS	PCF8582E	WSPROM.EXE
PHILIPS	PCF8594	WSPROM.EXE
PHILIPS	PCF8598C-2	WSPROM.EXE
PHILIPS	27HC641	WBPPGM.EXE
PHILIPS	82HS187	WABPP.EXE ADP-82HS
PHILIPS	82HS189	WABPP.EXE ADP-82HS
PHILIPS	82HS191	WABPP.EXE ADP-82HS
PHILIPS	82HS195	WABPP.EXE ADP-82HS
PHILIPS	82HS321	WABPP.EXE ADP-82HS
PHILIPS	82LHS191	WABPP.EXE ADP-82HS
PHILIPS	82LS115	WBPPGM.EXE
PHILIPS	82LS123	WBPPGM.EXE
PHILIPS	82LS123A	WBPPGM.EXE
PHILIPS	82LS126	WBPPGM.EXE
PHILIPS	82LS126A	WBPPGM.EXE
PHILIPS	82LS129	WBPPGM.EXE
PHILIPS	82LS129A	WBPPGM.EXE
PHILIPS	82LS130	WBPPGM.EXE
PHILIPS	82LS130A	WBPPGM.EXE
PHILIPS	82LS131	WBPPGM.EXE
PHILIPS	82LS131A	WBPPGM.EXE
PHILIPS	82LS135	WBPPGM.EXE
PHILIPS	82LS136	WBPPGM.EXE
PHILIPS	82LS137	WBPPGM.EXE
PHILIPS	82LS137A	WBPPGM.EXE
PHILIPS	82LS140	WBPPGM.EXE
PHILIPS	82LS141	WBPPGM.EXE
PHILIPS	82LS141A	WBPPGM.EXE
PHILIPS	82LS146	WBPPGM.EXE
PHILIPS	82LS147	WBPPGM.EXE
PHILIPS	82LS147A	WBPPGM.EXE

PHILIPS	82LS147B	WBPPGM.EXE
PHILIPS	82LS180	WBPPGM.EXE
PHILIPS	82LS181	WBPPGM.EXE
PHILIPS	82LS181A	WBPPGM.EXE
PHILIPS	82LS182	WBPPGM.EXE
PHILIPS	82LS183	WBPPGM.EXE
PHILIPS	82LS184	WBPPGM.EXE
PHILIPS	82LS185	WBPPGM.EXE
PHILIPS	82LS185A	WBPPGM.EXE
PHILIPS	82LS190	WBPPGM.EXE
PHILIPS	82LS191	WBPPGM.EXE
PHILIPS	82LS191A	WBPPGM.EXE
PHILIPS	82LS191C	WBPPGM.EXE
PHILIPS	82LS195	WBPPGM.EXE
PHILIPS	82LS195A	WBPPGM.EXE
PHILIPS	82LS195B	WBPPGM.EXE
PHILIPS	82LS23	WBPPGM.EXE
PHILIPS	82LS23A	WBPPGM.EXE
PHILIPS	82LS2708	WBPPGM.EXE
PHILIPS	82LS321	WBPPGM.EXE
PHILIPS	82LS641	WBPPGM.EXE
PHILIPS	82LS641A	WBPPGM.EXE
PHILIPS	82LS641B	WBPPGM.EXE
PHILIPS	82S115	WBPPGM.EXE
PHILIPS	82S123	WBPPGM.EXE
PHILIPS	82S123A	WBPPGM.EXE
PHILIPS	82S126	WBPPGM.EXE
PHILIPS	82S126A	WBPPGM.EXE
PHILIPS	82S129	WBPPGM.EXE
PHILIPS	82S129A	WBPPGM.EXE
PHILIPS	82S130	WBPPGM.EXE
PHILIPS	82S130A	WBPPGM.EXE
PHILIPS	82S131	WBPPGM.EXE
PHILIPS	82S131A	WBPPGM.EXE
PHILIPS	82S135	WBPPGM.EXE
PHILIPS	82S136	WBPPGM.EXE
PHILIPS	82S137	WBPPGM.EXE
PHILIPS	82S137A	WBPPGM.EXE
PHILIPS	82S140	WBPPGM.EXE
PHILIPS	82S141	WBPPGM.EXE
PHILIPS	82S141A	WBPPGM.EXE
PHILIPS	82S146	WBPPGM.EXE
PHILIPS	82S147	WBPPGM.EXE
PHILIPS	82S147A	WBPPGM.EXE
PHILIPS	82S147B	WBPPGM.EXE
PHILIPS	82S180	WBPPGM.EXE
PHILIPS	82S181	WBPPGM.EXE
PHILIPS	82S181A	WBPPGM.EXE
PHILIPS	82S182	WBPPGM.EXE
PHILIPS	82S183	WBPPGM.EXE
PHILIPS	82S184	WBPPGM.EXE
PHILIPS	82S185	WBPPGM.EXE
PHILIPS	82S185A	WBPPGM.EXE
PHILIPS	82S190	WBPPGM.EXE
PHILIPS	82S191	WBPPGM.EXE
PHILIPS	82S191A	WBPPGM.EXE
PHILIPS	82S191C	WBPPGM.EXE
PHILIPS	82S195	WBPPGM.EXE
PHILIPS	82S195A	WBPPGM.EXE
PHILIPS	82S195B	WBPPGM.EXE
PHILIPS	82S23	WBPPGM.EXE
PHILIPS	82S23A	WBPPGM.EXE
PHILIPS	82S2708	WBPPGM.EXE
PHILIPS	82S321	WBPPGM.EXE

PHILIPS	82S641	WBPPGM.EXE
PHILIPS	82S641A	WBPPGM.EXE
PHILIPS	82S641B	WBPPGM.EXE
PHILIPS	51XAG17 (PLCC44)	WASIG.EXE ADP-51XA-PL
PHILIPS	51XAG17 (QFP44)	WASIG.EXE ADP-51XA-Q
PHILIPS	51XAG27 (PLCC44)	WASIG.EXE ADP-51XA-PL
PHILIPS	51XAG27 (QFP44)	WASIG.EXE ADP-51XA-Q
PHILIPS	51XAG37 (PLCC44)	WASIG.EXE ADP-51XA-PL
PHILIPS	51XAG37 (QFP44)	WASIG.EXE ADP-51XA-Q
PHILIPS	51XAS37 (PLCC68)	WASIG.EXE ADP-51XAS37-PL
PHILIPS	87C054	WAMPU3.EXE ADP-054
PHILIPS	87C055	WAMPU3.EXE ADP-054
PHILIPS	87C190 (QFP80)	WASIG.EXE ADP-87C695-Q
PHILIPS	87C190 (SDIP56)	WASIG.EXE ADP-87C390-SD
PHILIPS	87C234	WASIG.EXE ADP-P87C234-Q
PHILIPS	87C290 (QFP80)	WASIG.EXE ADP-87C695-Q
PHILIPS	87C290 (SDIP56)	WASIG.EXE ADP-87C390-SD
PHILIPS	87C380	WAMPU3.EXE ADP-87C180-SD
PHILIPS	87C390 (QFP80)	WASIG.EXE ADP-87C695-Q
PHILIPS	87C390 (SDIP56)	WASIG.EXE ADP-87C390-SD
PHILIPS	87C391	WASIG.EXE ADP-87C390-SD
PHILIPS	87C395 (QFP80)	WASIG.EXE ADP-87C695-Q
PHILIPS	87C395 (SDIP64)	WASIG.EXE ADP-87C695-SD
PHILIPS	87C451	WASIG.EXE ADP-451
PHILIPS	87C453	WASIG.EXE ADP-451
PHILIPS	87C495 (QFP80)	WASIG.EXE ADP-87C695-Q
PHILIPS	87C495 (SDIP64)	WASIG.EXE ADP-87C695-SD
PHILIPS	87C504	WPGM51.EXE
PHILIPS	87C508	WPGM51.EXE
PHILIPS	87C51	WPGM51.EXE
PHILIPS	87C51FA	WPGM51.EXE
PHILIPS	87C51FB	WPGM51.EXE
PHILIPS	87C51FC	WPGM51.EXE
PHILIPS	87C51MB2	WPGM51.EXE CNV-PLCC-
MPU51A/B		
PHILIPS	87C51MC2	WPGM51.EXE CNV-PLCC-
MPU51A/B		
PHILIPS	87C51RA+	WPGM51.EXE
PHILIPS	87C51RA2	WPGM51.EXE
PHILIPS	87C51RB+	WPGM51.EXE
PHILIPS	87C51RB2	WPGM51.EXE
PHILIPS	87C51RC+	WPGM51.EXE
PHILIPS	87C51RC2	WPGM51.EXE
PHILIPS	87C51RD+	WPGM51.EXE
PHILIPS	87C51RD2	WPGM51.EXE
PHILIPS	87C51X2	WPGM51.EXE
PHILIPS	87C52	WPGM51.EXE
PHILIPS	87C524	WPGM51.EXE
PHILIPS	87C528	WPGM51.EXE
PHILIPS	87C52X2	WPGM51.EXE
PHILIPS	87C54	WPGM51.EXE
PHILIPS	87C542	WAMPU3.EXE ADP-542-PL
PHILIPS	87C54X2	WPGM51.EXE
PHILIPS	87C550	WPGM51.EXE
PHILIPS	87C552 (PLCC68)	WASIG.EXE ADP-552
PHILIPS	87C552 (QFP80)	WASIG.EXE ADP-552-QFP
PHILIPS	87C554 (PLCC68)	WASIG.EXE ADP-552
PHILIPS	87C554 (QFP64)	WASIG.EXE ADP-554-LQ64
PHILIPS	87C554 (QFP80)	WASIG.EXE ADP-552-QFP
PHILIPS	87C557E8	WASIG.EXE ADP-CE598-Q
PHILIPS	87C575	WPGM51.EXE
PHILIPS	87C576	WPGM51.EXE
PHILIPS	87C58	WPGM51.EXE
PHILIPS	87C58X2	WPGM51.EXE

PHILIPS	87C591	WASIG.EXE	ADP-87C591-
PL/CNV-PLCC-MPU51B			
PHILIPS	87C592	WASIG.EXE	ADP-87C592
PHILIPS	87C652	WPGM51.EXE	
PHILIPS	87C654	WPGM51.EXE	
PHILIPS	87C654X2	WPGM51.EXE	
PHILIPS	87C660X2	WPGM51.EXE	
PHILIPS	87C661X2	WPGM51.EXE	
PHILIPS	87C690 (QFP80)	WASIG.EXE	ADP-87C695-Q
PHILIPS	87C690 (SDIP56)	WASIG.EXE	ADP-87C390-SD
PHILIPS	87C695 (QFP80)	WASIG.EXE	ADP-87C695-Q
PHILIPS	87C695 (SDIP64)	WASIG.EXE	ADP-87C695-SD
PHILIPS	87C748	WAMPU3.EXE	ADP-751 (V2)
PHILIPS	87C748 (PLCC)	WAMPU3.EXE	ADP-751-PL
PHILIPS	87C749	WAMPU3.EXE	ADP-751 (V2)
PHILIPS	87C749 (PLCC)	WAMPU3.EXE	ADP-752-PL
PHILIPS	87C749 (SSOP)	WAMPU3.EXE	ADP-751-SS (V2)
PHILIPS	87C750	WAMPU3.EXE	ADP-751 (V2)
PHILIPS	87C750 (PLCC)	WAMPU3.EXE	ADP-751-PL
PHILIPS	87C750 (SSOP)	WAMPU3.EXE	ADP-751-SS (V2)
PHILIPS	87C751	WAMPU3.EXE	ADP-751 (V2)
PHILIPS	87C751 (PLCC)	WAMPU3.EXE	ADP-751-PL
PHILIPS	87C751 (SSOP)	WAMPU3.EXE	ADP-751-SS (V2)
PHILIPS	87C752	WAMPU3.EXE	ADP-751 (V2)
PHILIPS	87C752 (PLCC)	WAMPU3.EXE	ADP-752-PL
PHILIPS	87C752 (SSOP)	WAMPU3.EXE	ADP-751-SS (V2)
PHILIPS	87C766 (OSD EPROM)	WAMPU3.EXE	ADP-87C766-SD
PHILIPS	87C766 (PROGRAM EPROM)	WAMPU3.EXE	ADP-87C766-SD
PHILIPS	87C770 (OSD EPROM)	WAMPU3.EXE	ADP-87C770-SD
PHILIPS	87C770 (SYSTEM EPROM)	WAMPU3.EXE	ADP-87C770-SD
PHILIPS	87CE560	WASIG.EXE	ADP-CE598-Q
PHILIPS	87CE598	WASIG.EXE	ADP-CE598-Q
PHILIPS	87CL52X2	WPGM51.EXE	
PHILIPS	87CL54X2	WPGM51.EXE	
PHILIPS	87L51FA	WPGM51.EXE	
PHILIPS	87L51FB	WPGM51.EXE	
PHILIPS	87LPC760	WASIG.EXE	
PHILIPS	87LPC761	WASIG.EXE	
PHILIPS	87LPC762 (DIP20)	WASIG.EXE	ADP-87LPC764
PHILIPS	87LPC762 (PLCC44)	WASIG.EXE	ADP-87LPC764-PL
PHILIPS	87LPC762 (SOP20)	WASIG.EXE	ADP-87LPC764-S
PHILIPS	87LPC762 (TSSOP20)	WASIG.EXE	ADP-87LPC764-TS
PHILIPS	87LPC764 (DIP20)	WASIG.EXE	ADP-87LPC764
PHILIPS	87LPC764 (PLCC44)	WASIG.EXE	ADP-87LPC764-PL
PHILIPS	87LPC764 (SOP20)	WASIG.EXE	ADP-87LPC764-S
PHILIPS	87LPC764 (TSSOP20)	WASIG.EXE	ADP-87LPC764-TS
PHILIPS	87LPC767	WASIG.EXE	ADP-87LPC764/-S
PHILIPS	87LPC768 (DIP20)	WASIG.EXE	ADP-87LPC764
PHILIPS	87LPC768 (SOP20)	WASIG.EXE	ADP-87LPC764-S
PHILIPS	87LPC769 (SOP20)	WASIG.EXE	ADP-87LPC764-S
PHILIPS	87LPC778	WASIG.EXE	ADP-87LPC764-TS
PHILIPS	87LPC779	WASIG.EXE	
PHILIPS	89C132	WPGM51.EXE	
PHILIPS	89C138	WPGM51.EXE	
PHILIPS	89C238	WPGM51.EXE	
PHILIPS	89C380	WAMPU3.EXE	ADP-89C380-SD
PHILIPS	89C51Bx	WPGM51.EXE	
PHILIPS	89C51RA2xx	WPGM51.EXE	
PHILIPS	89C51RB2Hxxx	WPGM51.EXE	
PHILIPS	89C51RB2xx	WPGM51.EXE	
PHILIPS	89C51RC+	WPGM51.EXE	
PHILIPS	89C51RC2Hxxx	WPGM51.EXE	
PHILIPS	89C51RC2xx	WPGM51.EXE	
PHILIPS	89C51RD+	WPGM51.EXE	

PHILIPS	89C51RD2Hxxx	WPGM51.EXE
PHILIPS	89C51RD2xx	WPGM51.EXE
PHILIPS	89C51Uxxx	WPGM51.EXE
PHILIPS	89C51X2	WPGM51.EXE
PHILIPS	89C52Bx	WPGM51.EXE
PHILIPS	89C52Uxxx	WPGM51.EXE
PHILIPS	89C52X2	WPGM51.EXE
PHILIPS	89C535	WPGM51.EXE
PHILIPS	89C536	WPGM51.EXE
PHILIPS	89C538	WPGM51.EXE
PHILIPS	89C54Bx	WPGM51.EXE
PHILIPS	89C54Uxxx	WPGM51.EXE
PHILIPS	89C54X2	WPGM51.EXE
PHILIPS	89C557E4	WASIG.EXE ADP-CE598-Q
PHILIPS	89C58Bx	WPGM51.EXE
PHILIPS	89C58Uxxx	WPGM51.EXE
PHILIPS	89C58X2	WPGM51.EXE
PHILIPS	89C60X2	WPGM51.EXE
PHILIPS	89C61X2	WPGM51.EXE
PHILIPS	89C638	WPGM51.EXE
PHILIPS	89C660	WPGM51.EXE
PHILIPS	89C662	WPGM51.EXE
PHILIPS	89C664	WPGM51.EXE
PHILIPS	89C668	WPGM51.EXE
PHILIPS	89C669	WPGM51.EXE CNV-PLCC-
MPU51A/B		
PHILIPS	89C738	WPGM51.EXE
PHILIPS	89C838	WPGM51.EXE
PHILIPS	89CE558	WASIG.EXE ADP-CE598-Q
PHILIPS	89LPC901 (DIP8)	WASIG.EXE
PHILIPS	89LPC901 (SOP8)	WASIG.EXE ADP-89LPC90X-S
PHILIPS	89LPC902 (DIP8)	WASIG.EXE
PHILIPS	89LPC902 (SOP8)	WASIG.EXE ADP-89LPC90X-S
PHILIPS	89LPC903	WASIG.EXE ADP-89LPC90X-S
PHILIPS	89LPC904	WASIG.EXE ADP-89LPC90X-S
PHILIPS	89LPC906	WASIG.EXE ADP-89LPC90X-S
PHILIPS	89LPC907	WASIG.EXE ADP-89LPC90X-S
PHILIPS	89LPC908	WASIG.EXE ADP-89LPC90X-S
PHILIPS	89LPC9107 (DIP14)	WASIG.EXE
PHILIPS	89LPC9107 (TSSOP14)	WASIG.EXE CNV-TSSOP-
DIP16/-DIP28		
PHILIPS	89LPC912	WASIG.EXE CNV-TSSOP-
DIP16/-DIP28		
PHILIPS	89LPC913	WASIG.EXE CNV-TSSOP-
DIP16/-DIP28		
PHILIPS	89LPC914	WASIG.EXE CNV-TSSOP-
DIP16/-DIP28		
PHILIPS	89LPC915	WASIG.EXE CNV-TSSOP-
DIP16/-DIP28		
PHILIPS	89LPC916	WASIG.EXE CNV-TSSOP-
DIP16/-DIP28		
PHILIPS	89LPC917	WASIG.EXE CNV-TSSOP-
DIP16/-DIP28		
PHILIPS	89LPC920	WASIG.EXE ADP-89LPC932-
SS28V2		
PHILIPS	89LPC921	WASIG.EXE ADP-89LPC932-
SS28V2		
PHILIPS	89LPC922 (DIP20)	WASIG.EXE ADP-89LPC922-
DIP20		
PHILIPS	89LPC922 (TSSOP20)	WASIG.EXE ADP-89LPC932-
SS28V2		
PHILIPS	89LPC9221 (DIP20)	WASIG.EXE ADP-89LPC922-
DIP20		
PHILIPS	89LPC9221 (TSSOP20)	WASIG.EXE ADP-89LPC932-

SS28V2			
PHILIPS	89LPC924		WASIG.EXE ADP-89LPC932-
SS28V2			
PHILIPS	89LPC925		WASIG.EXE ADP-89LPC932-
SS28V2			
PHILIPS	89LPC925 (DIP20)		WASIG.EXE ADP-89LPC922-
DIP20			
PHILIPS	89LPC930		WASIG.EXE ADP-89LPC932-
SS28/-SS28V2			
PHILIPS	89LPC931		WASIG.EXE ADP-89LPC932-
SS28V2			
PHILIPS	89LPC9311		WASIG.EXE ADP-89LPC932-
SS28V2			
PHILIPS	89LPC932		WASIG.EXE ADP-89LPC932-
PL28/-SS28/-SS28V2			
PHILIPS	89LPC932 (CP3231)		WASIG.EXE ADP-89LPC932-
PL28/-SS28V2			
PHILIPS	89LPC932 (CP3235)		WASIG.EXE ADP-89LPC932-
PL28/-SS28V2			
PHILIPS	89LPC932A1		WASIG.EXE ADP-89LPC932-
PL28/-SS28V2/-QFN			
PHILIPS	89LPC933		WASIG.EXE ADP-89LPC932-
SS28V2			
PHILIPS	89LPC934		WASIG.EXE ADP-89LPC932-
SS28V2			
PHILIPS	89LPC935		WASIG.EXE ADP-89LPC932-
PL28/-SS28V2/-QFN			
PHILIPS	89LPC936		WASIG.EXE ADP-89LPC932-
PL28/-SS28V2			
PHILIPS	89LPC938		WASIG.EXE ADP-89LPC932-
PL28/-SS28V2/-QFN			
PHILIPS	89LPC9401		WASIG.EXE ADP-89LPC9401-Q
PHILIPS	89LPC9408		WASIG.EXE ADP-89LPC9401-Q
PHILIPS	89LPC952		WASIG.EXE CNV-PLCC-MPU51B
PHILIPS	89LV51RB2		WPGM51.EXE
PHILIPS	89LV51RC2		WPGM51.EXE
PHILIPS	89LV51RD2		WPGM51.EXE
PHILIPS	89V51RB2		WPGM51.EXE
PHILIPS	89V51RC2		WPGM51.EXE
PHILIPS	89V51RD2		WPGM51.EXE
PHILIPS	89V660		WPGM51.EXE
PHILIPS	89V662		WPGM51.EXE
PHILIPS	89V664		WPGM51.EXE
PHILIPS	PCD3755A		WMPU2.EXE
PHILIPS	PSD301		WAPSD3.EXE ADP-PSD301
PHILIPS	PSD301L		WAPSD3.EXE ADP-PSD301
PHILIPS	PSD302		WAPSD3.EXE ADP-PSD301
PHILIPS	PSD302L		WAPSD3.EXE ADP-PSD301
PHILIPS	PSD303		WAPSD3.EXE ADP-PSD301
PHILIPS	PSD303L		WAPSD3.EXE ADP-PSD301
PHILIPS	PSD311		WAPSD3.EXE ADP-PSD301
PHILIPS	PSD311L		WAPSD3.EXE ADP-PSD301
PHILIPS	PSD312		WAPSD3.EXE ADP-PSD301
PHILIPS	PSD312L		WAPSD3.EXE ADP-PSD301
PHILIPS	PSD313		WAPSD3.EXE ADP-PSD301
PHILIPS	PSD313L		WAPSD3.EXE ADP-PSD301
PHILIPS	PXAC37 (PLCC44)		WASIG.EXE ADP-51XA-PL
PHILIPS	PXAC37 (QFP44)		WASIG.EXE ADP-51XA-Q
PHILIPS	PXAG37 (PLCC44)		WASIG.EXE ADP-51XA-PL
PHILIPS	PXAG37 (QFP44)		WASIG.EXE ADP-51XA-Q
PHILIPS	PXAG39		WASIG.EXE ADP-87C591-
PL/CNV-PLCC-MPU51B			
PHILIPS	PXAG49 (PLCC44)		WASIG.EXE ADP-87C591-
PL/CNV-PLCC-MPU51B			

PHILIPS	PXAG49 (QFP44)	WASIG.EXE	CNV-QFP-MPU51B
PHILIPS	PXAS37	WASIG.EXE	ADP-51XAS37-PL/-
Q			
PHILIPS	SAA4849PS	WASAA.EXE	ADP-SAA4849-SD56
PHILIPS	ABT (PLQ) 22V10	WPLD1.EXE	
PHILIPS	LVT (P3Q) 22V10	WPLD1.EXE	
PHILIPS	P3C18V8Z	WPLD1.EXE	
PHILIPS	P3Z22V10	WPLD1.EXE	
PHILIPS	P5Z22V10	WPLD1.EXE	
PHILIPS	PHD16N8-5	WPLD1.EXE	
PHILIPS	PL22V10	WPLD1.EXE	
PHILIPS	PLC153	WPLD1.EXE	
PHILIPS	PLC16V8	WPLD1.EXE	
PHILIPS	PLC18V8Z	WPLD1.EXE	
PHILIPS	PLC20V8	WPLD1.EXE	
PHILIPS	PLC22V8Z	WPLD1.EXE	
PHILIPS	PLC415-16	WPLD1.EXE	
PHILIPS	PLC42VA12	WPLD1.EXE	
PHILIPS	PLHS16L8A/B	WPLD1.EXE	
PHILIPS	PLHS18P8A/B	WPLD1.EXE	
PHILIPS	PLS104/A/105/A	WPLD1.EXE	
PHILIPS	PLS152/153/A	WPLD1.EXE	
PHILIPS	PLS155	WPLD1.EXE	
PHILIPS	PLS157	WPLD1.EXE	
PHILIPS	PLS159A	WPLD1.EXE	
PHILIPS	PLS167/A	WPLD1.EXE	
PHILIPS	PLS168/A	WPLD1.EXE	
PHILIPS	PLS173	WPLD1.EXE	
PHILIPS	PLS179	WPLD1.EXE	
PHILIPS	PLUS105-45/-55	WPLD1.EXE	
PHILIPS	PLUS153B/D/-10	WPLD1.EXE	
PHILIPS	PLUS16L8-7	WPLD1.EXE	
PHILIPS	PLUS16L8D	WPLD1.EXE	
PHILIPS	PLUS16R4-7	WPLD1.EXE	
PHILIPS	PLUS16R4D	WPLD1.EXE	
PHILIPS	PLUS16R6-7	WPLD1.EXE	
PHILIPS	PLUS16R6D	WPLD1.EXE	
PHILIPS	PLUS16R8-7	WPLD1.EXE	
PHILIPS	PLUS16R8D	WPLD1.EXE	
PHILIPS	PLUS173B/D/-10	WPLD1.EXE	
PHILIPS	PLUS20L8-7	WPLD1.EXE	
PHILIPS	PLUS20L8D	WPLD1.EXE	
PHILIPS	PLUS20R4-7	WPLD1.EXE	
PHILIPS	PLUS20R4D	WPLD1.EXE	
PHILIPS	PLUS20R6-7	WPLD1.EXE	
PHILIPS	PLUS20R6D	WPLD1.EXE	
PHILIPS	PLUS20R8-7	WPLD1.EXE	
PHILIPS	PLUS20R8D	WPLD1.EXE	
PHILIPS	PLUS405-37/-45/-55	WPLD1.EXE	
PHILIPS	PLV2500	WPLD1.EXE	
PHILIPS	PLV750	WPLD1.EXE	
PHILIPS	PZ3032	WAPZ5000.EXE	ADP-PZ5000-PL44
PHILIPS	PZ3032 (TQFP44)	WAPZ5000.EXE	ADP-PZ5000-Q44
PHILIPS	PZ3032CS (PLCC 44)	WAPZ5000.EXE	ADP-PZ5000-PL44
PHILIPS	PZ3032CS (TQFP 44)	WAPZ5000.EXE	ADP-PZ5000-Q44
PHILIPS	PZ3032NS (PLCC 44)	WAPZ5000.EXE	ADP-PZ5000-PL44
PHILIPS	PZ3032NS (TQFP 44)	WAPZ5000.EXE	ADP-PZ5000-Q44
PHILIPS	PZ3064 (PLCC 44)	WAPZ5000.EXE	ADP-PZ5000-PL44
PHILIPS	PZ3064 (PLCC 68)	WAPZ5000.EXE	ADP-PZ5064-PL68
PHILIPS	PZ3064 (PLCC 84)	WAPZ5000.EXE	ADP-PZ5064-PL84
PHILIPS	PZ3064 (PQFP100)	WAPZ5000.EXE	ADP-PZ5128-PQ100
PHILIPS	PZ3064 (TQFP44)	WAPZ5000.EXE	ADP-PZ5000-Q44
PHILIPS	PZ3128	WAPZ5000.EXE	ADP-PZ5064-PL84
PHILIPS	PZ3128 (LQFP128)	WAPZ5000.EXE	ADP-PZ5128-Q128

PHILIPS	PZ3128 (PQFP100)	WAPZ5000.EXE	ADP-PZ5128-PQ100
PHILIPS	PZ3128 (TQFP100)	WAPZ5000.EXE	ADP-PZ5128-TQ100
PHILIPS	PZ5032	WAPZ5000.EXE	ADP-PZ5000-PL44
PHILIPS	PZ5032 (TQFP44)	WAPZ5000.EXE	ADP-PZ5000-Q44
PHILIPS	PZ5032CS (PLCC 44)	WAPZ5000.EXE	ADP-PZ5000-PL44
PHILIPS	PZ5032CS (TQFP 44)	WAPZ5000.EXE	ADP-PZ5000-Q44
PHILIPS	PZ5032NS (PLCC 44)	WAPZ5000.EXE	ADP-PZ5000-PL44
PHILIPS	PZ5032NS (TQFP 44)	WAPZ5000.EXE	ADP-PZ5000-Q44
PHILIPS	PZ5064 (PLCC 44)	WAPZ5000.EXE	ADP-PZ5000-PL44
PHILIPS	PZ5064 (PLCC 68)	WAPZ5000.EXE	ADP-PZ5064-PL68
PHILIPS	PZ5064 (PLCC 84)	WAPZ5000.EXE	ADP-PZ5064-PL84
PHILIPS	PZ5064 (PQFP100)	WAPZ5000.EXE	ADP-PZ5128-PQ100
PHILIPS	PZ5064 (TQFP44)	WAPZ5000.EXE	ADP-PZ5000-Q44
PHILIPS	PZ5064CS (PLCC 44)	WAPZ5000.EXE	ADP-PZ5000-PL44
PHILIPS	PZ5064CS (TQFP 100)	WAPZ5000.EXE	ADP-PZ5128-TQ100
PHILIPS	PZ5064CS (TQFP 44)	WAPZ5000.EXE	ADP-PZ5000-Q44
PHILIPS	PZ5064NS (PLCC 44)	WAPZ5000.EXE	ADP-PZ5000-PL44
PHILIPS	PZ5064NS (TQFP 100)	WAPZ5000.EXE	ADP-PZ5128-TQ100
PHILIPS	PZ5064NS (TQFP 44)	WAPZ5000.EXE	ADP-PZ5000-Q44
PHILIPS	PZ5128	WAPZ5000.EXE	ADP-PZ5064-PL84
PHILIPS	PZ5128 (LQFP128)	WAPZ5000.EXE	ADP-PZ5128-Q128
PHILIPS	PZ5128 (PQFP100)	WAPZ5000.EXE	ADP-PZ5128-PQ100
PHILIPS	PZ5128 (TQFP100)	WAPZ5000.EXE	ADP-PZ5128-TQ100
PHILIPS	PZ5128CS (LQFP 128)	WAPZ5000.EXE	ADP-PZ5128-Q128
PHILIPS	PZ5128CS (TQFP 100)	WAPZ5000.EXE	ADP-PZ5128-TQ100
PHILIPS	PZ5128NS (LQFP 128)	WAPZ5000.EXE	ADP-PZ5128-Q128
PHILIPS	PZ5128NS (TQFP 100)	WAPZ5000.EXE	ADP-PZ5128-TQ100
PJ	PJ24C02	WSPROM.EXE	
PMC	PM28LV64	WMEM1.EXE	
PMC	PM29F002B	WMEM1.EXE	
PMC	PM29F002T	WMEM1.EXE	
PMC	PM29F004B	WMEM1.EXE	
PMC	PM29F004T	WMEM1.EXE	
PMC	PM29LV004T	WMEM1.EXE	
PMC	PM29LV104RB	WMEM1.EXE	
PMC	PM29LV104RT	WMEM1.EXE	
PMC	PM37LV512	WMEM1.EXE	
PMC	PM39F010	WMEM1.EXE	
PMC	PM39F020	WMEM1.EXE	
PMC	PM39F040	WMEM1.EXE	
PMC	PM39LV010	WMEM1.EXE	
PMC	PM39LV010R	WMEM1.EXE	
PMC	PM39LV020	WMEM1.EXE	
PMC	PM39LV040	WMEM1.EXE	
PMC	PM39LV512	WMEM1.EXE	
PMC	PM39LV512R	WMEM1.EXE	
PMC	PM49FL002T	WMEM1.EXE	
PMC	PM49FL004T	WMEM1.EXE	
PMC	PM49LP002T	WMEM1.EXE	
PMC	PM25LV010	WSPROM.EXE	
PMC	PM25LV010A	WSPROM.EXE	
PMC	PM25LV020	WSPROM.EXE	
PMC	PM25LV040	WSPROM.EXE	
PMC	PM25LV080	WSPROM.EXE	
PMC	PM25LV512	WSPROM.EXE	
PMC	PM25LV512A	WSPROM.EXE	
POINTCHIPS	PP2105 (QFP48)	WASIG.EXE	ADP-PP2105-Q48
POINTCHIPS	PP2105 (SDIP42)	WASIG.EXE	ADP-PP2105-SD42
PRIMARION	PX3538	WAPWM.EXE	ADP-PX3538-QFN48
PSS	PS29FS001	WMEM1.EXE	
PSS	PS29LP001-90	WMEM1.EXE	
PSS	PS16128	WSPROM.EXE	
PSS	PS16256	WSPROM.EXE	
PSS	PS24C256	WSPROM.EXE	

PTC	PT28C020	WMEM1.EXE
PTC	PT28C010	WMEM1.EXE
PTC	PT28C020Y	WMEM1.EXE
PTC	PT28C040	WMEM1.EXE
PTC	PT29C020	WMEM1.EXE
PTC	PT29C040	WMEM1.EXE
PTC	PT29L800UV	WA28F.EXE ADP-49F800-
TS/TSV2		
PTC	PT8936	WPGM51.EXE
RAMTRON	FM1608	WMEM1.EXE
RAMTRON	FM1808	WMEM1.EXE
RAMTRON	FM18L08	WMEM1.EXE
RAMTRON	FM20L08	WMEM1.EXE
RAMTRON	FM24C04A	WSPROM.EXE
RAMTRON	FM24C16A	WSPROM.EXE
RAMTRON	FM24C256	WSPROM.EXE
RAMTRON	FM24C512	WSPROM.EXE
RAMTRON	FM24C64	WSPROM.EXE
RAMTRON	FM24CL04	WSPROM.EXE
RAMTRON	FM24CL16	WSPROM.EXE
RAMTRON	FM24CL64	WSPROM.EXE
RAMTRON	FM25040	WSPROM.EXE
RAMTRON	FM25160	WSPROM.EXE
RAMTRON	FM25256	WSPROM.EXE
RAMTRON	FM25640	WSPROM.EXE
RAMTRON	FM25C160	WSPROM.EXE
RAMTRON	FM25CL04	WSPROM.EXE
RAMTRON	FM25CL64	WSPROM.EXE
RAMTRON	FM25L16	WSPROM.EXE
RAMTRON	FM25L256	WSPROM.EXE
RAMTRON	FM25L512	WSPROM.EXE
RAMTRON	FM25W256	WSPROM.EXE
RAMTRON	FM31256	WSPROM.EXE
RAMTRON	VMX51C900	WPGM51.EXE
RAMTRON	VRS51C1000	WPGM51.EXE
RAMTRON	VRS51C1100	WPGM51.EXE
RAMTRON	VRS51C540	WPGM51.EXE
RAMTRON	VRS51C550	WPGM51.EXE
RAMTRON	VRS51C560	WPGM51.EXE
RAMTRON	VRS51C570	WPGM51.EXE
RAMTRON	VRS51L1050	WPGM51.EXE
RCA	CDP18U42CD[20V]	WMEM1.EXE
REALTEK	RTD2120L(LQFP48)	WASIG.EXE ADP-RTD2120-Q48
REALTEK	RTD2120S(PLCC44)	WASIG.EXE ADP-RTD2120-PL44
RENESAS	27128[21V]	WMEM1.EXE
RENESAS	27256G[12.5V]	WMEM1.EXE
RENESAS	27512G[12.5V]	WMEM1.EXE
RENESAS	27512P[12.5V]	WMEM1.EXE
RENESAS	27C128K[21V]	WMEM1.EXE
RENESAS	27C256AG[12.5V]	WMEM1.EXE
RENESAS	27C256HG[12.5V]	WMEM1.EXE
RENESAS	27C512G[12.5V]	WMEM1.EXE
RENESAS	462716[25V]	WMEM1.EXE
RENESAS	462732A[21V]	WMEM1.EXE
RENESAS	462732[25V]	WMEM1.EXE
RENESAS	4827128[21V]	WMEM1.EXE
RENESAS	482732A[21V]	WMEM1.EXE
RENESAS	482764[21V]	WMEM1.EXE
RENESAS	4827C64[21V]	WMEM1.EXE
RENESAS	HN27128AG[12.5V]	WMEM1.EXE
RENESAS	HN27C101	WMEM1.EXE
RENESAS	HN27C101A	WMEM1.EXE
RENESAS	HN27C1024	WMEM1.EXE
RENESAS	HN27C301	WMEM1.EXE

RENESAS	HN27C4000	WMEM1.EXE
RENESAS	HN27C4001	WMEM1.EXE
RENESAS	HN27C4096	WMEM1.EXE
RENESAS	HN27C64 [21V]	WMEM1.EXE
RENESAS	M5L2716 [25V]	WMEM1.EXE
RENESAS	M5L2732 [25V]	WMEM1.EXE
RENESAS	M5L2764 [21V]	WMEM1.EXE
RENESAS	M5L27C128 [12.5V]	WMEM1.EXE
RENESAS	M5M27400AP/K	WMEM1.EXE
RENESAS	M5M27404AK	WMEM1.EXE
RENESAS	M5M27C100	WMEM1.EXE
RENESAS	M5M27C101	WMEM1.EXE
RENESAS	M5M27C102	WMEM1.EXE
RENESAS	M5M27C201	WMEM1.EXE
RENESAS	M5M27C202	WMEM1.EXE
RENESAS	M5M27C256AK [12.5V]	WMEM1.EXE
RENESAS	M5M27C401	WMEM1.EXE
RENESAS	M5M27C401AK	WMEM1.EXE
RENESAS	M5M27C401K	WMEM1.EXE
RENESAS	M5M27C402	WMEM1.EXE
RENESAS	M5M27C512AK [12.5V]	WMEM1.EXE
RENESAS	HN28F101	WMEM1.EXE
RENESAS	HN29C101	WMEM1.EXE
RENESAS	HN29C101B	WMEM1.EXE
RENESAS	HN58064	WMEM1.EXE
RENESAS	HN58C1000	WMEM1.EXE
RENESAS	HN58C1001	WMEM1.EXE
RENESAS	HN58C256	WMEM1.EXE
RENESAS	HN58C257	WMEM1.EXE
RENESAS	HN58C65	WMEM1.EXE
RENESAS	HN58C66	WMEM1.EXE
RENESAS	HN58V1001	WMEM1.EXE
RENESAS	HN58V257	WMEM1.EXE
RENESAS	M5M28C64AP/FP	WMEM1.EXE
RENESAS	M5M28C64VP/RV	WMEM1.EXE
RENESAS	M5M28F101	WMEM1.EXE
RENESAS	M5M28F102AVP	WMEM1.EXE
RENESAS	M5M28F102VP	WMEM1.EXE
RENESAS	M5M29GB320VP	WA28F.EXE ADP-28F160-TS
RENESAS	M5M29GT320VP	WA28F.EXE ADP-28F160-TS
RENESAS	M5M29KE131BVP	WA28F.EXE ADP-49F800-TSV2
RENESAS	M5M29KT331AVP	WA28F.EXE ADP-49F800-
TS/TSV2		
RENESAS	M5M29KT641AVP	WA28F.EXE ADP-49F800-TSV2
RENESAS	HN58X2402I	WSPROM.EXE
RENESAS	HN58X2402SI	WSPROM.EXE
RENESAS	HN58X2404SI	WSPROM.EXE
RENESAS	HN58X2408I	WSPROM.EXE
RENESAS	HD4074008C	WAHMPU.EXE ADP-4019
RENESAS	HD4074008F	WAHMPU.EXE ADP-4019-Q
RENESAS	HD4074008S	WAHMPU.EXE ADP-4019
RENESAS	HD4074019C	WAHMPU.EXE ADP-4019
RENESAS	HD4074019F	WAHMPU.EXE ADP-4019-Q
RENESAS	HD4074019H	WAHMPU.EXE ADP-4019H-Q
RENESAS	HD4074019S	WAHMPU.EXE ADP-4019
RENESAS	HD4074054H	WAHMPU.EXE ADP-4654-Q
RENESAS	HD4074054S	WAHMPU.EXE ADP-4654-SD
RENESAS	HD4074094H	WAHMPU.EXE ADP-4654-Q
RENESAS	HD4074094S	WAHMPU.EXE ADP-4654-SD
RENESAS	HD4074224S	WAHMPU.EXE ADP-4224-SD
RENESAS	HD4074308C	WAHMPU.EXE ADP-4308
RENESAS	HD4074308P	WAHMPU.EXE ADP-4308
RENESAS	HD4074308S	WAHMPU.EXE ADP-4308-SD
RENESAS	HD4074318H	WAHMPU.EXE ADP-4318-Q

RENESAS	HD4074318S	WAHMPU.EXE	ADP-4318-SD
RENESAS	HD4074329C	WAHMPU.EXE	ADP-4329
RENESAS	HD4074329FS	WAHMPU.EXE	ADP-4329-Q
RENESAS	HD4074329S	WAHMPU.EXE	ADP-4329
RENESAS	HD4074339S	WAHMPU.EXE	ADP-4339
RENESAS	HD4074344FP	WAHMPU.EXE	ADP-4344-S28
RENESAS	HD4074344S	WAHMPU.EXE	ADP-4344-SD
RENESAS	HD4074394FP	WAHMPU.EXE	ADP-4344-S28
RENESAS	HD4074394S	WAHMPU.EXE	ADP-4344-SD
RENESAS	HD4074408C	WAHMPU.EXE	ADP-4418
RENESAS	HD4074408F	WAHMPU.EXE	ADP-4418-Q
RENESAS	HD4074408S	WAHMPU.EXE	ADP-4418
RENESAS	HD4074418C	WAHMPU.EXE	ADP-4418
RENESAS	HD4074418F	WAHMPU.EXE	ADP-4418-Q
RENESAS	HD4074418S	WAHMPU.EXE	ADP-4418
RENESAS	HD4074459H	WAHMPU.EXE	ADP-4459-Q
RENESAS	HD4074608FS	WAHMPU.EXE	ADP-4618
RENESAS	HD4074608H	WAHMPU.EXE	ADP-4618A
RENESAS	HD4074618FS	WAHMPU.EXE	ADP-4618
RENESAS	HD4074618H	WAHMPU.EXE	ADP-4618A
RENESAS	HD4074629FS	WAHMPU.EXE	ADP-4629-Q
RENESAS	HD4074629H	WAHMPU.EXE	ADP-4629-TQ
RENESAS	HD4074629TF	WAHMPU.EXE	ADP-4629-TQ
RENESAS	HD4074654H	WAHMPU.EXE	ADP-4654-Q
RENESAS	HD4074654S	WAHMPU.EXE	ADP-4654-SD
RENESAS	HD4074808FS	WAHMPU.EXE	ADP-4618
RENESAS	HD4074808H	WAHMPU.EXE	ADP-4618A
RENESAS	HD4074818FS	WAHMPU.EXE	ADP-4618
RENESAS	HD4074818H	WAHMPU.EXE	ADP-4618A
RENESAS	HD4074889H	WAHMPU.EXE	ADP-4889-Q
RENESAS	HD4074889TE	WAHMPU.EXE	ADP-4889-TQ
RENESAS	HD4074899TE	WAHMPU.EXE	ADP-4889-TQ
RENESAS	HD407A4069H	WAHMPU.EXE	ADP-4669-Q
RENESAS	HD407A4374FT	WAHMPU.EXE	ADP-4384-S
RENESAS	HD407A4384FT	WAHMPU.EXE	ADP-4384-S
RENESAS	HD407A4384S	WAHMPU.EXE	ADP-4384-SD
RENESAS	HD407A4389FT	WAHMPU.EXE	ADP-4389-S
RENESAS	HD407A4639RF	WAHMPU.EXE	ADP-4639-Q
RENESAS	HD407A4669H	WAHMPU.EXE	ADP-4669-Q
RENESAS	HD407C4389FT	WAHMPU.EXE	ADP-4389-S
RENESAS	HD407L4808FS	WAHMPU.EXE	ADP-4618
RENESAS	HD407L4808H	WAHMPU.EXE	ADP-4618A
RENESAS	HD407L4818FS	WAHMPU.EXE	ADP-4618
RENESAS	HD407L4818H	WAHMPU.EXE	ADP-4618A
RENESAS	HD647180X0CP	WAHMPU.EXE	ADP-647180-PL
RENESAS	HD647180X0FS	WAHMPU.EXE	ADP-647180-Q
RENESAS	HD647180X0P	WAHMPU.EXE	ADP-647180
RENESAS	HD6472237F	WAHMPU.EXE	ADP-6472237-QA
RENESAS	HD6472237TE	WAHMPU.EXE	ADP-6472237-QB
RENESAS	HD6472237TF	WAHMPU.EXE	ADP-6472237-TQ
RENESAS	HD6472246F	WAHMPU.EXE	ADP-6472246-Q
RENESAS	HD6472246TE	WAHMPU.EXE	ADP-6472246-Q
RENESAS	HD6473032F	WAHMPU.EXE	ADP-H8/3032-Q
RENESAS	HD6473035F	WAHMPU.EXE	ADP-6473035-Q
RENESAS	HD6473035TE	WAHMPU.EXE	ADP-6473035-TQ
RENESAS	HD6473042F	WAHMPU.EXE	ADP-H8/3048-Q
RENESAS	HD6473042FP	WAHMPU.EXE	ADP-6473042FP-QA
RENESAS	HD6473042TF	WAHMPU.EXE	ADP-H8/3048-Q
RENESAS	HD6473048F	WAHMPU.EXE	ADP-H8/3048-Q
RENESAS	HD6473048TF	WAHMPU.EXE	ADP-H8/3048-Q
RENESAS	HD6473214F	WAHMPU.EXE	ADP-H8/3217-Q
RENESAS	HD6473214P	WAHMPU.EXE	ADP-H8/3217-SD
RENESAS	HD6473217F	WAHMPU.EXE	ADP-H8/3217-Q
RENESAS	HD6473217P	WAHMPU.EXE	ADP-H8/3217-SD

RENESAS	HD6473228CP
RENESAS	HD6473228F
RENESAS	HD6473228P
RENESAS	HD6473238CP
RENESAS	HD6473238F
RENESAS	HD6473238P
RENESAS	HD6473256CP
RENESAS	HD6473256F
RENESAS	HD6473256P
RENESAS	HD6473257C
RENESAS	HD6473257CP
RENESAS	HD6473257F
RENESAS	HD6473257P
RENESAS	HD6473258CP
RENESAS	HD6473258F
RENESAS	HD6473258P
RENESAS	HD6473278F
RENESAS	HD6473294F
RENESAS	HD6473297F
RENESAS	HD6473298P
RENESAS	HD6473308CP
RENESAS	HD6473308F
RENESAS	HD6473332CP
RENESAS	HD6473332TF
RENESAS	HD6473334F
RENESAS	HD6473334TF
RENESAS	HD6473337CP
RENESAS	HD6473337F
RENESAS	HD6473337TF
RENESAS	HD6473378CP
RENESAS	HD6473378F
RENESAS	HD6473378VCP
RENESAS	HD6473378VF
RENESAS	HD6473388CP
RENESAS	HD6473388F
RENESAS	HD6473388VCP
RENESAS	HD6473388VF
RENESAS	HD6473434F
RENESAS	HD6473434TF
RENESAS	HD6473614H
RENESAS	HD6473644H
RENESAS	HD6473644P
RENESAS	HD6473657H
RENESAS	HD6473657W
RENESAS	HD6473657X
RENESAS	HD6473714H
RENESAS	HD6473714P
RENESAS	HD6473724F
RENESAS	HD6473724H
RENESAS	HD6473726H
RENESAS	HD64738024H
RENESAS	HD64738024W
RENESAS	HD6473802FP
RENESAS	HD6473802H
RENESAS	HD6473827H
RENESAS	HD6473827RH
RENESAS	HD6473827W
RENESAS	HD6473834F
RENESAS	HD6473834H
RENESAS	HD6473834X
RENESAS	HD6473837F
RENESAS	HD6473837H
RENESAS	HD6473837X
RENESAS	HD6473847H

WAHMPU.EXE	ADP-H8/325-PL
WAHMPU.EXE	ADP-H8/325-Q
WAHMPU.EXE	ADP-H8/325
WAHMPU.EXE	ADP-H8/325-PL
WAHMPU.EXE	ADP-H8/325-Q
WAHMPU.EXE	ADP-H8/325
WAHMPU.EXE	ADP-H8/3257-PL
WAHMPU.EXE	ADP-H8/3217-Q
WAHMPU.EXE	ADP-H8/3217-SD
WAHMPU.EXE	ADP-H8/3217-SD
WAHMPU.EXE	ADP-H8/3257-PL
WAHMPU.EXE	ADP-H8/3217-Q
WAHMPU.EXE	ADP-H8/3217-SD
WAHMPU.EXE	ADP-H8/325-PL
WAHMPU.EXE	ADP-H8/325-Q
WAHMPU.EXE	ADP-H8/325
WAHMPU.EXE	ADP-6473278-Q
WAHMPU.EXE	ADP-H8/3297-Q
WAHMPU.EXE	ADP-H8/3297-Q
WAHMPU.EXE	ADP-6473298-SD
WAHMPU.EXE	ADP-H8/330
WAHMPU.EXE	ADP-H8/330-Q
WAHMPU.EXE	ADP-H8/3332
WAHMPU.EXE	ADP-H8/3332-Q
WAHMPU.EXE	ADP-6473334-Q
WAHMPU.EXE	ADP-6473334-TQ
WAHMPU.EXE	ADP-6473337-PL
WAHMPU.EXE	ADP-6473334-Q
WAHMPU.EXE	ADP-6473334-TQ
WAHMPU.EXE	ADP-H8/330
WAHMPU.EXE	ADP-H8/330-Q
WAHMPU.EXE	ADP-H8/330
WAHMPU.EXE	ADP-H8/330-Q
WAHMPU.EXE	ADP-H8/330
WAHMPU.EXE	ADP-H8/330-Q
WAHMPU.EXE	ADP-H8/330
WAHMPU.EXE	ADP-H8/330-Q
WAHMPU.EXE	ADP-H8/330-Q
WAHMPU.EXE	ADP-H8/3434-Q
WAHMPU.EXE	ADP-H8/3434-Q
WAHMPU.EXE	ADP-6473614-Q
WAHMPU.EXE	ADP-H8/3644-Q
WAHMPU.EXE	ADP-H8/3644-SD
WAHMPU.EXE	ADP-6473657-QA
WAHMPU.EXE	ADP-6473657-TQ
WAHMPU.EXE	ADP-6473657-TQF
WAHMPU.EXE	ADP-H8/3714-Q
WAHMPU.EXE	ADP-H8/3714-SD
WAHMPU.EXE	ADP-6473724-QB
WAHMPU.EXE	ADP-6473724-QA
WAHMPU.EXE	ADP-6473724-QA
WAHMPU.EXE	ADP-64738024-QA
WAHMPU.EXE	ADP-64738024-TQ
WAHMPU.EXE	ADP-6473802-QE
WAHMPU.EXE	ADP-6473802-Q
WAHMPU.EXE	ADP-6473827-Q
WAHMPU.EXE	ADP-6473827-Q
WAHMPU.EXE	ADP-6473827-TQ
WAHMPU.EXE	ADP-H8/3834-QA
WAHMPU.EXE	ADP-H8/3834-Q
WAHMPU.EXE	ADP-H8/3834-Q
WAHMPU.EXE	ADP-6473837-QA
WAHMPU.EXE	ADP-6473837-Q
WAHMPU.EXE	ADP-6473837-Q
WAHMPU.EXE	ADP-6473847-Q

RENESAS	HD6473847RH	WAHMPU.EXE	ADP-6473847-Q
RENESAS	HD6473867W	WAHMPU.EXE	ADP-6473827-TQ
RENESAS	HD6473927X	WAHMPU.EXE	ADP-6473927-TQ
RENESAS	HD6473937X	WAHMPU.EXE	ADP-6473937-TQ
RENESAS	HD6475208C	WAHMPU.EXE	ADP-H8/520
RENESAS	HD6475208CP	WAHMPU.EXE	ADP-H8/520-PL
RENESAS	HD6475208F	WAHMPU.EXE	ADP-H8/520-Q
RENESAS	HD6475208P	WAHMPU.EXE	ADP-H8/520
RENESAS	HD6475328CP	WAHMPU.EXE	ADP-H8/532
RENESAS	HD6475328F	WAHMPU.EXE	ADP-H8/532-Q
RENESAS	HD6475348CP	WAHMPU.EXE	ADP-H8/532
RENESAS	HD6475348SF	WAHMPU.EXE	ADP-H8/532-Q
RENESAS	HD6475368CP	WAHMPU.EXE	ADP-H8/532
RENESAS	HD6475368F	WAHMPU.EXE	ADP-H8/532-Q
RENESAS	HD6475378F	WAHMPU.EXE	ADP-H8/532-Q
RENESAS	HD6475388F	WAHMPU.EXE	ADP-6475388-Q
RENESAS	HD6475398F	WAHMPU.EXE	ADP-6475388-Q
RENESAS	HD6477034F	WAHMPU.EXE	ADP-6477034F
RENESAS	HD6477042F	WAHMPU.EXE	ADP-6477042-Q
RENESAS	HD6477043F	WAHMPU.EXE	ADP-6477043-Q
RENESAS	HD64F2110BVTE	WAHMPU.EXE	ADP-64F2148-TQ
RENESAS	HD64F2111BTE	WAHMPU.EXE	ADP-64F2169ATE-
TQ			
RENESAS	HD64F2116BG	WAHMPU.EXE	ADP-64F2116-BG
RENESAS	HD64F2116VTE	WAHMPU.EXE	ADP-64F2116-TQ
RENESAS	HD64F2132F	WAHMPU.EXE	ADP-64F2134-Q/V2
RENESAS	HD64F2134AFA	WAHMPU.EXE	ADP-64F2134-Q/V2
RENESAS	HD64F2134BFA	WAHMPU.EXE	ADP-64F2134-QV2
RENESAS	HD64F2134F	WAHMPU.EXE	ADP-64F2134-Q/V2
RENESAS	HD64F2140BVTE	WAHMPU.EXE	ADP-64F2148-TQ
RENESAS	HD64F2142FA	WAHMPU.EXE	ADP-64F2148-TQ
RENESAS	HD64F2144TE	WAHMPU.EXE	ADP-64F2148-TQ
RENESAS	HD64F2145BFA	WAHMPU.EXE	ADP-64F2148-TQ
RENESAS	HD64F2145BTE	WAHMPU.EXE	ADP-64F2148-TQ
RENESAS	HD64F2148AFA	WAHMPU.EXE	ADP-64F2148-TQ
RENESAS	HD64F2148FA	WAHMPU.EXE	ADP-64F2148-TQ
RENESAS	HD64F2148VTE	WAHMPU.EXE	ADP-64F2148-TQ
RENESAS	HD64F2149TE	WAHMPU.EXE	ADP-64F2148-TQ
RENESAS	HD64F2149YVTE	WAHMPU.EXE	ADP-64F2148-TQ
RENESAS	HD64F2161BVTE	WAHMPU.EXE	ADP-64F2169ATE-
TQ			
RENESAS	HD64F2166VTE	WAHMPU.EXE	ADP-64F2166-TQ
RENESAS	HD64F2167VTE	WAHMPU.EXE	ADP-64F2166-TQ
RENESAS	HD64F2168VTE	WAHMPU.EXE	ADP-64F2166-TQ
RENESAS	HD64F2169YVTE	WAHMPU.EXE	ADP-64F2169ATE-
TQ			
RENESAS	HD64F2177VTE	WAHMPU.EXE	ADP-64F2166-TQ
RENESAS	HD64F2212UFP	WAHMPU.EXE	ADP-64F2212-TQ
RENESAS	HD64F2215TE	WAHMPU.EXE	ADP-64F2215-Q
RENESAS	HD64F2215U	WAHMPU.EXE	ADP-64F2215-Q
RENESAS	HD64F2218TF	WAHMPU.EXE	ADP-64F2218-TQ
RENESAS	HD64F2238BFA	WAHMPU.EXE	ADP-64F2238-TQ
RENESAS	HD64F2258FA	WAHMPU.EXE	ADP-64F2238-TQ
RENESAS	HD64F2268FA	WAHMPU.EXE	ADP-64F2268-
Q100B			
RENESAS	HD64F2268TF	WAHMPU.EXE	ADP-64F2268-TQ
RENESAS	HD64F2315VTE	WAHMPU.EXE	ADP-64F2315-TQ
RENESAS	HD64F2317VTE	WAHMPU.EXE	ADP-64F2315-TQ
RENESAS	HD64F2318TE	WAHMPU.EXE	ADP-64F2315-TQ
RENESAS	HD64F2328F	WAHMPU.EXE	ADP-64F2328-
QA128			
RENESAS	HD64F2345TE	WAHMPU.EXE	ADP-64F2345-TQ
RENESAS	HD64F2357F	WAHMPU.EXE	ADP-64F2357F-Q
RENESAS	HD64F2398F	WAHMPU.EXE	ADP-64F2328-

QA128

RENESAS	HD64F2437F	WAHMPU.EXE	ADP-64F2437-Q
RENESAS	HD64F2623FA	WAHMPU.EXE	ADP-64F2623-Q
RENESAS	HD64F3029F	WAHMPU.EXE	ADP-64F3069-Q
RENESAS	HD64F3039F	WAHMPU.EXE	ADP-64F3039-Q
RENESAS	HD64F3039TE	WAHMPU.EXE	ADP-64F3039-TQ
RENESAS	HD64F3048BF-ONE (5V)	WAHMPU.EXE	ADP-64F3064-TQ
RENESAS	HD64F3048F	WAHMPU.EXE	ADP-H8/3048F-Q
RENESAS	HD64F3048TF	WAHMPU.EXE	ADP-H8/3048F-Q
RENESAS	HD64F3062ATE	WAHMPU.EXE	ADP-64F3064-TQ
RENESAS	HD64F3062BF	WAHMPU.EXE	ADP-64F3062-TQ
RENESAS	HD64F3062F	WAHMPU.EXE	ADP-64F3062-TQ
RENESAS	HD64F3062TE	WAHMPU.EXE	ADP-64F3062-TQ
RENESAS	HD64F3064F	WAHMPU.EXE	ADP-64F3064-TQ
RENESAS	HD64F3064TE	WAHMPU.EXE	ADP-64F3064-TQ
RENESAS	HD64F3067F	WAHMPU.EXE	ADP-64F3062-TQ
RENESAS	HD64F3068F	WAHMPU.EXE	ADP-64F3064-TQ
RENESAS	HD64F3069RF	WAHMPU.EXE	ADP-64F3069-Q
RENESAS	HD64F3334CP	WAHMPU.EXE	ADP-H8/3334-PL
RENESAS	HD64F3334F	WAHMPU.EXE	ADP-H8/3334-Q
RENESAS	HD64F3334TF	WAHMPU.EXE	ADP-H8/3334-TQ
RENESAS	HD64F3337CP	WAHMPU.EXE	ADP-H8/3334-PL
RENESAS	HD64F3337F	WAHMPU.EXE	ADP-H8/3334-Q
RENESAS	HD64F3337TF	WAHMPU.EXE	ADP-H8/3334-TQ
RENESAS	HD64F3434F	WAHMPU.EXE	ADP-H8/3434F-
Q(2-3)			
RENESAS	HD64F3434TF	WAHMPU.EXE	ADP-H8/3434F-
Q(2-3)			
RENESAS	HD64F3437F	WAHMPU.EXE	ADP-H8/3434F-
Q(2-3)			
RENESAS	HD64F3437STF	WAHMPU.EXE	ADP-H8/3434F-
Q(1-2)			
RENESAS	HD64F36049HV	WAHMPU.EXE	ADP-64F36049-Q
RENESAS	HD64F36057GHJ	WAHMPU.EXE	ADP-64F3687-Q
RENESAS	HD64F36057H	WAHMPU.EXE	ADP-64F3687-Q
RENESAS	HD64F36064GFPV	WAHMPU.EXE	ADP-64F3687-TQ
RENESAS	HD64F36077GFZ	WAHMPU.EXE	ADP-64F3687-TQ
RENESAS	HD64F36077GHV	WAHMPU.EXE	ADP-64F3687-Q
RENESAS	HD64F3642AH	WAHMPU.EXE	ADP-64F3644-Q
RENESAS	HD64F3642AP	WAHMPU.EXE	ADP-64F3644-SD
RENESAS	HD64F3643H	WAHMPU.EXE	ADP-64F3644-Q
RENESAS	HD64F3644H	WAHMPU.EXE	ADP-64F3644-Q
RENESAS	HD64F3644P	WAHMPU.EXE	ADP-64F3644-SD
RENESAS	HD64F3644W	WAHMPU.EXE	ADP-64F3644-TQ
RENESAS	HD64F3664BP	WAHMPU.EXE	ADP-64F3664-SD
RENESAS	HD64F3664FP	WAHMPU.EXE	ADP-64F3664-QE
RENESAS	HD64F3664FY	WAHMPU.EXE	ADP-64F3664-Q48
RENESAS	HD64F3664H	WAHMPU.EXE	ADP-64F3664-Q
RENESAS	HD64F3684FP	WAHMPU.EXE	ADP-64F3687-TQ
RENESAS	HD64F3684GFP	WAHMPU.EXE	ADP-64F3687-TQ
RENESAS	HD64F3684GHV	WAHMPU.EXE	ADP-64F3687-Q
RENESAS	HD64F3687FP	WAHMPU.EXE	ADP-64F3687-TQ
RENESAS	HD64F3687GFP	WAHMPU.EXE	ADP-64F3687-TQ
RENESAS	HD64F3687H	WAHMPU.EXE	ADP-64F3687-Q
RENESAS	HD64F3694FP	WAHMPU.EXE	ADP-64F3664-QE
RENESAS	HD64F3694GH	WAHMPU.EXE	ADP-64F3664-Q
RENESAS	HD64F38004FP	WAHMPU.EXE	ADP-64F38004-
Q/V2			
RENESAS	HD64F38024F	WAHMPU.EXE	ADP-64F38024-QB
RENESAS	HD64F38024H	WAHMPU.EXE	ADP-64F38024-Q
RENESAS	HD64F38024RHV	WAHMPU.EXE	ADP-64F38024-Q
RENESAS	HD64F38024W	WAHMPU.EXE	ADP-64F38024-TQ
RENESAS	HD64F38076RH	WAHMPU.EXE	ADP-64F38076-Q
RENESAS	HD64F38076W	WAHMPU.EXE	ADP-64F38076-TQ

RENESAS	HD64F38102FPV	WAHMPU.EXE	ADP-64F38004-QV2
RENESAS	HD64F38102HV	WAHMPU.EXE	ADP-64F38104-Q
RENESAS	HD64F38104H	WAHMPU.EXE	ADP-64F38104-Q
RENESAS	HD64F38124H	WAHMPU.EXE	ADP-64F38024-Q
RENESAS	HD64F38124W	WAHMPU.EXE	ADP-64F38024-TQ
RENESAS	HD64F38327H	WAHMPU.EXE	ADP-64F38327-Q
RENESAS	HD64F38327WV	WAHMPU.EXE	ADP-64F38327-TQ
RENESAS	HD64F38344H	WAHMPU.EXE	ADP-64F38347-Q
RENESAS	HD64F38347H	WAHMPU.EXE	ADP-64F38347-Q
RENESAS	HD64F5388F	WAHMPU.EXE	ADP-64F5388-Q
RENESAS	HD64F7044F	WAHMPU.EXE	ADP-64F7044-Q
RENESAS	HD64F7045F	WAHMPU.EXE	ADP-64F7045-Q
RENESAS	HD64F7046F	WAHMPU.EXE	ADP-64F7046-Q80
RENESAS	HD64F7047F	WAHMPU.EXE	ADP-64F7047-TQ
RENESAS	HD64F7410F	WAHMPU.EXE	ADP-64F7410-Q
RENESAS	HD64N3664FP	WAHMPU.EXE	ADP-64F3664-QE
RENESAS	M30201F6SP	WAMPU2.EXE	ADP-M30201-SD
RENESAS	M30260F8AGP	WAMPU2.EXE	ADP-M302A0-TQ
RENESAS	M30260F8TGP	WAMPU2.EXE	ADP-M302A0-TQ
RENESAS	M30262F6GP	WAMPU2.EXE	ADP-M302A0-TQ
RENESAS	M30262F8GP	WAMPU2.EXE	ADP-M302A0-TQ
RENESAS	M30280FAHP	WAMPU2.EXE	ADP-M30280-TQ
RENESAS	M30280FCHP	WAMPU2.EXE	ADP-M30280-TQ
RENESAS	M30281F8HP	WAMPU2.EXE	ADP-M30281-TQ
RENESAS	M30291FCHP	WAMPU2.EXE	ADP-M30281-TQ
RENESAS	M302A0F2HP	WAMPU2.EXE	ADP-M302A0-TQ
RENESAS	M30600E8FP	WAMPU2.EXE	ADP-M30600-QB
RENESAS	M30600E8GP	WAMPU2.EXE	ADP-M30600-Q
RENESAS	M30610ECFP	WAMPU2.EXE	ADP-M30600-QB
RENESAS	M30610ECFS	WAMPU2.EXE	ADP-M30600-LC
RENESAS	M30610ECGP	WAMPU2.EXE	ADP-M30600-Q
RENESAS	M30612E4FP	WAMPU2.EXE	ADP-M30600-QB
RENESAS	M30612E4GP	WAMPU2.EXE	ADP-M30600-Q
RENESAS	M30612E8FP	WAMPU2.EXE	ADP-M30600-QB
RENESAS	M30612E8GP	WAMPU2.EXE	ADP-M30600-Q
RENESAS	M30620ECFP	WAMPU2.EXE	ADP-M30600-QB
RENESAS	M30620ECGP	WAMPU2.EXE	ADP-M30600-Q
RENESAS	M30620FCAFP	WAMPU2.EXE	ADP-M30624-Q
RENESAS	M30620FCAGP	WAMPU2.EXE	ADP-M30624-TQ
RENESAS	M30620FCMFP	WAMPU2.EXE	ADP-M30624-Q
RENESAS	M30620FCMGP	WAMPU2.EXE	ADP-M30624-TQ
RENESAS	M30620FCPFP	WAMPU2.EXE	ADP-M30624-Q
RENESAS	M30620FCPGP	WAMPU2.EXE	ADP-M30624-TQ
RENESAS	M30624FGAFP	WAMPU2.EXE	ADP-M30624-Q
RENESAS	M30624FGAGP	WAMPU2.EXE	ADP-M30624-TQ
RENESAS	M30624FGFP	WAMPU2.EXE	ADP-M30624-Q
RENESAS	M30624FGGP	WAMPU2.EXE	ADP-M30624-TQ
RENESAS	M30624FGMGP	WAMPU2.EXE	ADP-M30624-TQ
RENESAS	M30624FGNFP	WAMPU2.EXE	ADP-M30624-Q
RENESAS	M30624FGNGP	WAMPU2.EXE	ADP-M30624-TQ
RENESAS	M30624FGPFP	WAMPU2.EXE	ADP-M30624-Q
RENESAS	M30624FGPGP	WAMPU2.EXE	ADP-M30624-TQ
RENESAS	M30625FGPGP	WAMPU2.EXE	ADP-M30625-Q
RENESAS	M30626FHPFP	WAMPU2.EXE	ADP-M30624-Q
RENESAS	M30626FJPGP	WAMPU2.EXE	ADP-M30624-TQ
RENESAS	M306K1F8LRP	WAMPU2.EXE	ADP-M306K1-TQ
RENESAS	M306NAFGTFP	WAMPU2.EXE	ADP-M30624-Q
RENESAS	M34238EKGP	WAMPU2.EXE	ADP-M34238EK-S
RENESAS	M34250E2FP	WAMPU2.EXE	ADP-M34250E2-S
RENESAS	M34280E1FP	WAMPU2.EXE	ADP-M34280-S
RENESAS	M34282E2GP	WAMPU2.EXE	ADP-M34282-S
RENESAS	M34283G2GP	WAMPU2.EXE	ADP-M34282-S
RENESAS	M34508G4GP	WAMPU2.EXE	ADP-M34508-SS
RENESAS	M34513E4FP	WAMPU2.EXE	ADP-M34513-Q

RENESAS	M34513E4SP
RENESAS	M34513E8FP
RENESAS	M34514E8FP
RENESAS	M34515E4FP
RENESAS	M34520E8FP
RENESAS	M34550E8FP
RENESAS	M37210E4SP
RENESAS	M37221EFSP
RENESAS	M37260E6FP
RENESAS	M37260E6SP
RENESAS	M37267EESP
RENESAS	M37450E4SP
RENESAS	M37450E8SP
RENESAS	M37451E4FP
RENESAS	M37451E4SP
RENESAS	M37451E8SP
RENESAS	M37451ECSP
RENESAS	M37470E4SP
RENESAS	M37470E8SP
RENESAS	M37471E4FP
RENESAS	M37471E4SP
RENESAS	M37471E8FP
RENESAS	M37471E8SP
RENESAS	M37477E8SP
RENESAS	M37478E8SP
RENESAS	M37515E4HP
RENESAS	M37516E6HP
RENESAS	M37531E4FP
RENESAS	M37531E4GP
RENESAS	M37531E4SP
RENESAS	M37531E8FP
RENESAS	M37532E8FP
RENESAS	M37534E4GP
RENESAS	M37534E8FP
RENESAS	M37540E8FP
RENESAS	M37540E8GP
RENESAS	M37540E8SP
RENESAS	M37542F8GP
RENESAS	M37542F8SP
RENESAS	M37544G2AGP
RENESAS	M37544G2ASP
RENESAS	M37544G2GP
RENESAS	M37544G2SP
RENESAS	M37546G4SP
RENESAS	M37560EFPF
RENESAS	M37560EFGP
RENESAS	M37632EFPF
RENESAS	M37640E8FP
RENESAS	M37702E2BFP
RENESAS	M37702E2LHP
RENESAS	M37702E4AFP
RENESAS	M37702E4BFP
RENESAS	M37702E6BFP
RENESAS	M37702E8BFP
RENESAS	M37705E2ASP
RENESAS	M37705E4BSP
RENESAS	M37710E4BFP
RENESAS	M37710EFPF
RENESAS	M37710EFHP
RENESAS	M37712E4BFP
RENESAS	M37735EHLHP
RENESAS	M37751E6CFP
RENESAS	M38002E2FP
RENESAS	M38002E2SP

WAMPU2.EXE	ADP-M34513-SD
WAMPU2.EXE	ADP-M34513-Q
WAMPU2.EXE	ADP-M34514-SS
WAMPU2.EXE	ADP-M34515-S
WAMPU2.EXE	ADP-M34520-Q
WAMPU2.EXE	ADP-M34550-Q
WAMPU2.EXE	ADP-M37210-SD
WAMPU2.EXE	ADP-M37221-SD
WAMPU2.EXE	ADP-M37260-Q
WAMPU2.EXE	ADP-M37260-SD
WAMPU2.EXE	ADP-M37267-SD
WAMPU2.EXE	ADP-M3745X-SD
WAMPU2.EXE	ADP-M3745X-SD
WAMPU2.EXE	ADP-M3745X-Q
WAMPU2.EXE	ADP-M3745X-SD
WAMPU2.EXE	ADP-M3745X-SD
WAMPU2.EXE	ADP-M3745X-SD
WAMPU2.EXE	ADP-M37470-SD
WAMPU2.EXE	ADP-M37470-SD
WAMPU2.EXE	ADP-M37471-Q
WAMPU2.EXE	ADP-M37471-SD
WAMPU2.EXE	ADP-M37471-Q
WAMPU2.EXE	ADP-M37471-SD
WAMPU2.EXE	ADP-M37470-SD
WAMPU2.EXE	ADP-M37471-SD
WAMPU2.EXE	ADP-M37515-Q
WAMPU2.EXE	ADP-M37515-Q
WAMPU2.EXE	ADP-M37531-SS
WAMPU2.EXE	ADP-M37531-Q
WAMPU2.EXE	ADP-M37531-SD
WAMPU2.EXE	ADP-M37531-SS
WAMPU2.EXE	ADP-M37531-SS
WAMPU2.EXE	ADP-M37531-Q
WAMPU2.EXE	ADP-M37531-SS
WAMPU2.EXE	ADP-M37531-SS
WAMPU2.EXE	ADP-M37531-Q
WAMPU2.EXE	ADP-M37531-SD
WAMPU2.EXE	ADP-M37542-Q
WAMPU2.EXE	ADP-M37542-SD
WAMPU2.EXE	ADP-M37544-Q
WAMPU2.EXE	ADP-M37544-SD
WAMPU2.EXE	ADP-M37544-Q
WAMPU2.EXE	ADP-M37544-SD
WAMPU2.EXE	ADP-M38259-Q
WAMPU2.EXE	ADP-M37560-Q
WAMPU2.EXE	ADP-M37632-TQ
WAMPU2.EXE	ADP-M37640-Q
WAMPU2.EXE	ADP-M37702-QB
WAMPU2.EXE	ADP-M37710-TQ
WAMPU2.EXE	ADP-M37702-QB
WAMPU2.EXE	ADP-M37702-QB
WAMPU2.EXE	ADP-M37702-QB
WAMPU2.EXE	ADP-M37702-QB
WAMPU2.EXE	ADP-M37705-SD
WAMPU2.EXE	ADP-M37705B-SD
WAMPU2.EXE	ADP-M37710-Q
WAMPU2.EXE	ADP-M37710-Q
WAMPU2.EXE	ADP-M37710-TQ
WAMPU2.EXE	ADP-M37710-Q
WAMPU2.EXE	ADP-M37710-TQ
WAMPU2.EXE	ADP-M37702-QB
WAMPU2.EXE	ADP-M38002E4-Q
WAMPU2.EXE	ADP-M38002E4-SD

RENESAS	M38002E4FP	WAMPU2.EXE	ADP-M38002E4-Q
RENESAS	M38002E4SP	WAMPU2.EXE	ADP-M38002E4-SD
RENESAS	M38004E8FP	WAMPU2.EXE	ADP-M38002E4-Q
RENESAS	M38004E8SP	WAMPU2.EXE	ADP-M38002E4-SD
RENESAS	M38039FFFP	WAMPU2.EXE	ADP-M38039-Q
RENESAS	M38039FFHHP	WAMPU2.EXE	ADP-M38039-TQV2
RENESAS	M38039FFHP	WAMPU2.EXE	ADP-M38039-
TQ/TQV2			
RENESAS	M38039GCHKP	WAMPU2.EXE	ADP-M38039S-TQ
RENESAS	M38063E6FP	WAMPU2.EXE	ADP-M38067-QB
RENESAS	M38063E6GP	WAMPU2.EXE	ADP-M38067-TQ
RENESAS	M38067EC (AFS)	WAMPU2.EXE	ADP-M38067-LC
RENESAS	M38067ECFP	WAMPU2.EXE	ADP-M38067-QB
RENESAS	M38073E4FP	WAMPU2.EXE	ADP-M38067-QB
RENESAS	M38203E4 (FS)	WAMPU2.EXE	ADP-M38067-LC
RENESAS	M38203E4FP	WAMPU2.EXE	ADP-M38067-QB
RENESAS	M38203E4HP	WAMPU2.EXE	ADP-M38067-Q
RENESAS	M38207E8 (FS)	WAMPU2.EXE	ADP-M38067-LC
RENESAS	M38207E8FP	WAMPU2.EXE	ADP-M38067-QB
RENESAS	M38207E8GP	WAMPU2.EXE	ADP-M38067-TQ
RENESAS	M38207E8HP	WAMPU2.EXE	ADP-M38067-Q
RENESAS	M38223E4FP	WAMPU2.EXE	ADP-M38067-QB
RENESAS	M38223E4GP	WAMPU2.EXE	ADP-M38067-TQ
RENESAS	M38223E4HP	WAMPU2.EXE	ADP-M38067-Q
RENESAS	M38227ECFP	WAMPU2.EXE	ADP-M38067-QB
RENESAS	M38227ECHP	WAMPU2.EXE	ADP-M38067-Q
RENESAS	M38234G4FP	WAMPU2.EXE	ADP-M3823A-Q
RENESAS	M38234G4HP	WAMPU2.EXE	ADP-M3823A-TQ
RENESAS	M38235G6FP	WAMPU2.EXE	ADP-M3823A-Q
RENESAS	M38238G8FP	WAMPU2.EXE	ADP-M3823A-Q
RENESAS	M38238G8HP	WAMPU2.EXE	ADP-M3823A-TQ
RENESAS	M38239GCFP	WAMPU2.EXE	ADP-M3823A-Q
RENESAS	M3823AGFFP	WAMPU2.EXE	ADP-M3823A-Q
RENESAS	M3823AGFHP	WAMPU2.EXE	ADP-M3823A-TQ
RENESAS	M38503E4FP	WAMPU2.EXE	ADP-M38503-SS
RENESAS	M38503E4SP	WAMPU2.EXE	ADP-M38503-SD
RENESAS	M38503G4AFP	WAMPU2.EXE	ADP-M38503A-SS
RENESAS	M38503G4ASP	WAMPU2.EXE	ADP-M38503A-SD
RENESAS	M38504E6FP	WAMPU2.EXE	ADP-M38503-SS
RENESAS	M38507F8FP	WAMPU2.EXE	ADP-M38507-SS
RENESAS	M38507F8SP	WAMPU2.EXE	ADP-M38507-SD
RENESAS	M38514E6FP	WAMPU2.EXE	ADP-M38503-SS
RENESAS	M38588GCFP	WAMPU2.EXE	ADP-M38503A-SS
RENESAS	M38588GCSP	WAMPU2.EXE	ADP-M38503A-SD
RENESAS	M38802E2HP	WAMPU2.EXE	ADP-M388-Q
RENESAS	M38813E4HP	WAMPU2.EXE	ADP-M388-Q
RENESAS	M38859FFHP	WAMPU2.EXE	ADP-M38859-TQ
RENESAS	M38867E8HP	WAMPU2.EXE	ADP-M38067-Q
RENESAS	M38869FFAGP	WAMPU2.EXE	ADP-M38869-Q
RENESAS	M38869FFAHP (Parallel)	WAMPU2.EXE	ADP-M38869-TQ
RENESAS	M38869FFAHP (Serial)	WAMPU2.EXE	ADP-M38869-TQ
RENESAS	M38C13E6HP	WAMPU2.EXE	ADP-M38C13-TQ
RENESAS	M38C29FFAHP	WAMPU2.EXE	ADP-M38C29-TQ
RENESAS	M38C29FFHP	WAMPU2.EXE	ADP-M38C29-TQ
RENESAS	M38C37ECMFP	WAMPU2.EXE	ADP-M38C37-Q
RENESAS	R4F2116VTE	WAHMPU.EXE	ADP-64F2116-TQ
RENESAS	R5F21104FP	WAMPU2.EXE	ADP-R8C1013-TQ
RENESAS	R5F21112FP	WAMPU2.EXE	ADP-R8C1013-TQ
RENESAS	R5F21114FP	WAMPU2.EXE	ADP-R8C1013-TQ
RENESAS	R5F21134FP	WAMPU2.EXE	ADP-R8C1013-TQ
RENESAS	R5F21172SP	WAMPU2.EXE	ADP-R8C1417-SS
RENESAS	R5F21181SP	WAMPU2.EXE	ADP-R8C1417-SS
RENESAS	R5F21182SP	WAMPU2.EXE	ADP-R8C1417-SS
RENESAS	R5F211A1SP	WAMPU2.EXE	ADP-R8C1417-SS

RENESAS	R5F211A4SP	WAMPU2.EXE	ADP-R8C1417-SS
RENESAS	R5F211B1SP	WAMPU2.EXE	ADP-R8C1417-SS
RENESAS	R5F211B4SP	WAMPU2.EXE	ADP-R8C1417-SS
RENESAS	R5F21246SNFP	WAMPU2.EXE	ADP-R8C2425-TQ
RENESAS	R5F21248SNFP	WAMPU2.EXE	ADP-R8C2425-TQ
RENESAS	R5F61664N50FPV	WAHMPU.EXE	ADP-R5F6166-TQ
RENESAS	R5F71494A	WAHMPU.EXE	ADP-R5F7149-TQ
RICOH	27C256[12.75V]	WMEM1.EXE	
RICOH	27C32[21V]	WMEM1.EXE	
RICOH	27C64[21V]	WMEM1.EXE	
RICOH	EPL10P8B	WPLD1.EXE	
RICOH	EPL12P6B	WPLD1.EXE	
RICOH	EPL14P4B	WPLD1.EXE	
RICOH	EPL16P2B	WPLD1.EXE	
RICOH	EPL16P8B	WPLD1.EXE	
RICOH	EPL16RP4B	WPLD1.EXE	
RICOH	EPL16RP6B	WPLD1.EXE	
RICOH	EPL16RP8B	WPLD1.EXE	
ROCKWELL	2816A	WMEM1.EXE	
ROHM	BR24C01AFV-W	WSPROM.EXE	
ROHM	BR24C02/F	WSPROM.EXE	
ROHM	BR24C21/F	WSPROM.EXE	
ROHM	BR24L04	WSPROM.EXE	
ROHM	BR24L08	WSPROM.EXE	
ROHM	BR24L16	WSPROM.EXE	
ROHM	BR24L32	WSPROM.EXE	
ROHM	BR24L64	WSPROM.EXE	
ROHM	BR25L040	WSPROM.EXE	
ROHM	BR9020	WSPROM.EXE	
ROHM	BR9040	WSPROM.EXE	
ROHM	BR9080	WSPROM.EXE	
ROHM	BR9080A	WSPROM.EXE	
ROHM	BR93L46	WSPROM.EXE	
ROHM	BR93L56	WSPROM.EXE	
ROHM	BR93L86	WSPROM.EXE	
ROHM	BR93LC46	WSPROM.EXE	
ROHM	BR93LC56	WSPROM.EXE	
ROHM	BR93LC66	WSPROM.EXE	
SAIFUN	SA24C1024	WSPROM.EXE	
SAIFUN	SA24C512	WSPROM.EXE	
SAIFUN	SA25C020	WSPROM.EXE	
SAIFUN	SA25C1024H	WSPROM.EXE	
SAIFUN	SA25C1024L	WSPROM.EXE	
SAIFUN	SA25C512H	WSPROM.EXE	
SAIFUN	SA25C512L	WSPROM.EXE	
SAIFUN	SA25F005	WSPROM.EXE	
SAIFUN	SA25F010	WSPROM.EXE	
SAIFUN	SA25F020	WSPROM.EXE	
SAIFUN	SA25F040	WSPROM.EXE	
SAIFUN	SA25F160	WSPROM.EXE	
SAMSUNG	K5A3240YBA-T	WA28F.EXE	ADP-K5A3240-BG
SAMSUNG	K5A3240YBB-T	WA28F.EXE	ADP-K5A3240-BG
SAMSUNG	K5A3240YTA-T	WA28F.EXE	ADP-K5A3240-BG
SAMSUNG	K5A3280YTM-T	WA28F.EXE	ADP-KAC070010-BG
SAMSUNG	K8D1616UBA-T	WA28F.EXE	ADP-K8D1616-BG
SAMSUNG	K8D1616UBA-Y	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	K8D1616UTA-T	WA28F.EXE	ADP-K8D1616-BG
SAMSUNG	K8D1616UTA-Y	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	K8D1716UBC-P	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	K8D1716UBC-Y	WA28F.EXE	ADP-49F800-
TS/TSV2			

SAMSUNG	K8D1716UTC-D	WA28F.EXE	ADP-K8D1616-BG
SAMSUNG	K8D1716UTC-F	WA28F.EXE	ADP-K8D1616-BG
SAMSUNG	K8D1716UTC-Y	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	K8D3216UBB-Y	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	K8D3216UBC-P	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	K8D3216UBC-Y	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	K8D3216UBM-Y	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	K8D3216UTB-T	WA28F.EXE	ADP-K8D6316-BG
SAMSUNG	K8D3216UTB-Y	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	K8D3216UTC-Y	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	K8D3216UTM-Y	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	K8D3316UBA-Y	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	K8D6316UBM-P	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	K8D6316UBM-T	WA28F.EXE	ADP-K8D6316-BG
SAMSUNG	K8D6316UBM-Y	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	K8D6316UTM-Y	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	KAC070010M-T	WA28F.EXE	ADP-KAC070010-BG
SAMSUNG	KAD070300M-T	WA28F.EXE	ADP-KADXX0300-BG
SAMSUNG	KM2816A	WMEM1.EXE	
SAMSUNG	KM2817A	WMEM1.EXE	
SAMSUNG	KM2864AH	WMEM1.EXE	
SAMSUNG	KM2865AH	WMEM1.EXE	
SAMSUNG	KM28C16	WMEM1.EXE	
SAMSUNG	KM28C17	WMEM1.EXE	
SAMSUNG	KM28C256	WMEM1.EXE	
SAMSUNG	KM28C64	WMEM1.EXE	
SAMSUNG	KM28C65	WMEM1.EXE	
SAMSUNG	KM28U160-B	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	KM28U160-T	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	KM28U800 (I) (G/T) -B	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SAMSUNG	KM28U800 (I) (G/T) -T	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SAMSUNG	KM28U800 (I) T-B	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	KM28U800 (I) T-T	WA28F.EXE	ADP-49F800-
TS/TSV2			
SAMSUNG	KM29N040	WA29F.EXE	ADP-29N16000
SAMSUNG	KM29N16000ATS	WA29F.EXE	ADP-29N16000
SAMSUNG	KM29N32000TS	WA29F.EXE	ADP-29N16000
SAMSUNG	KM29N64000T	WA29F.EXE	ADP-29N16000
SAMSUNG	KM29W16000ATS	WA29F.EXE	ADP-29N16000
SAMSUNG	KM93C06	WSPROM.EXE	
SAMSUNG	KM93C07	WSPROM.EXE	
SAMSUNG	KM93C46	WSPROM.EXE	
SAMSUNG	KS24C010	WSPROM.EXE	
SAMSUNG	KS24C011	WSPROM.EXE	
SAMSUNG	KS24C020	WSPROM.EXE	
SAMSUNG	KS24C021	WSPROM.EXE	
SAMSUNG	KS24C040	WSPROM.EXE	

SAMSUNG	KS24C041	WSPROM.EXE
SAMSUNG	KS24C080	WSPROM.EXE
SAMSUNG	KS24C081	WSPROM.EXE
SAMSUNG	KS24L161	WSPROM.EXE
SAMSUNG	KS24L321	WSPROM.EXE
SAMSUNG	KS24L641	WSPROM.EXE
SAMSUNG	S524A40X21	WSPROM.EXE
SAMSUNG	S524A40X41	WSPROM.EXE
SAMSUNG	S524A60X51	WSPROM.EXE
SAMSUNG	S524AB0XB1	WSPROM.EXE
SAMSUNG	S524C20D21	WSPROM.EXE
SAMSUNG	S524C80D41	WSPROM.EXE
SAMSUNG	S524C80D81	WSPROM.EXE
SAMSUNG	S524L50X51	WSPROM.EXE
SAMSUNG	S524LB0X91	WSPROM.EXE
SAMSUNG	S524LB0XB1	WSPROM.EXE
SAMSUNG	KS86P4304	WMPU2.EXE
SAMSUNG	KS88P6116	WAMPU2.EXE ADP-S3P8615-SD
SAMSUNG	S3F84BB	WAMPU2.EXE ADP-S3P825A-TQ
SAMSUNG	S3P7234	WAMPU2.EXE ADP-S3P7234-Q
SAMSUNG	S3P7235	WAMPU2.EXE ADP-S3P8245-Q
SAMSUNG	S3P72N4	WAMPU2.EXE ADP-S3P7234-Q
SAMSUNG	S3P72k8	WAMPU2.EXE ADP-S3P8245-Q
SAMSUNG	S3P7324	WAMPU2.EXE ADP-S3P7234-Q
SAMSUNG	S3P7414	WAMPU2.EXE ADP-S3P863A-QV2
SAMSUNG	S3P8245 (QFP)	WAMPU2.EXE ADP-S3P8245-Q
SAMSUNG	S3P8245 (TQFP)	WAMPU2.EXE ADP-S3P825A-TQ
SAMSUNG	S3P8249	WAMPU2.EXE ADP-S3P8245-Q
SAMSUNG	S3P825A	WAMPU2.EXE ADP-S3P825A-TQ
SAMSUNG	S3P8469 (QFP)	WAMPU2.EXE ADP-S3P7234-Q
SAMSUNG	S3P8469 (SDIP)	WAMPU2.EXE ADP-S3P8469-SD
SAMSUNG	S3P863A	WAMPU2.EXE ADP-S3P863A-Q
SAMSUNG	S3P863A (SDIP42)	WAMPU2.EXE ADP-S3P863A-SD
SAMSUNG	S3P9228	WAMPU2.EXE ADP-S3P863A-QV2
SAMSUNG	S3P9688	WAMPU2.EXE ADP-S3P863A-QV2
SAMSUNG	CPL16L8	WPLD1.EXE
SAMSUNG	CPL16R4	WPLD1.EXE
SAMSUNG	CPL16R6	WPLD1.EXE
SAMSUNG	CPL16R8	WPLD1.EXE
SAMSUNG	CPL20L10	WPLD1.EXE
SAMSUNG	CPL20L8	WPLD1.EXE
SAMSUNG	CPL20R4	WPLD1.EXE
SAMSUNG	CPL20R6	WPLD1.EXE
SAMSUNG	CPL20R8	WPLD1.EXE
SAMSUNG	PALC22V10H-25/-35	WPLD1.EXE
SANYO	LE28DW8163T-T	WA28F.EXE ADP-29F800-
TS/TSV2		
SANYO	LE28DW8163T-T*	WA28F.EXE ADP-49F800-
TS/TSV2		
SANYO	LE28F4001	WMEM1.EXE
SANYO	LE28FV1101T	WMEM1.EXE
SANYO	LE28FV2001A	WMEM1.EXE
SANYO	LE28FV4101T-T	WA28F.EXE ADP-29F800-
TS/TSV2		
SANYO	LE28FV4101T-T*	WA28F.EXE ADP-49F800-
TS/TSV2		
SANYO	LE28FW4003N	WMEM1.EXE
SANYO	LE28FW8201T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
SANYO	LE28FW8203T-B	WA28F.EXE ADP-49F800-
TS/TSV2		
SANYO	LE28FW8203T-T	WA28F.EXE ADP-49F800-
TS/TSV2		
SANYO	LE25FW106	WSPROM.EXE

SANYO	LE25FW106A	WSPROM.EXE
SANYO	LE25FW406	WSPROM.EXE
SANYO	LC87F5664A (QIP64E)	WMEM1.EXE W87F56256Q
SANYO	LC87F5664A (SQFP64)	WMEM1.EXE W87F56256SQ
SANYO	LC87F5CC8A (SQFP100)	WMEM1.EXE W87F52256SQ
SEEQ	82005 [21V]	WMEM1.EXE
SEEQ	82025 [21V]	WMEM1.EXE
SEEQ	86063 [12.75V]	WMEM1.EXE
SEEQ	DQ27128 [21V]	WMEM1.EXE
SEEQ	DQ2764 [21V]	WMEM1.EXE
SEEQ	DQ27C256 [12.75V]	WMEM1.EXE
SEEQ	DQ2804A	WMEM1.EXE
SEEQ	DQ2816A (AH)	WMEM1.EXE
SEEQ	DQ2817A (AH)	WMEM1.EXE
SEEQ	DQ28256	WMEM1.EXE
SEEQ	DQ2864/H	WMEM1.EXE
SEEQ	DQ28C010	WMEM1.EXE
SEEQ	DQ28C256 (A)	WMEM1.EXE
SEEQ	DQ28C64/A	WMEM1.EXE
SEEQ	DQ28C65	WMEM1.EXE
SEEQ	DQ28HC256	WMEM1.EXE
SEEQ	DQ28HC64/H	WMEM1.EXE
SEEQ	DQ36C16	WMEM1.EXE
SEEQ	DQ36C32	WMEM1.EXE
SEEQ	DQ38C16	WMEM1.EXE
SEEQ	DQ38C32	WMEM1.EXE
SEEQ	DQ5516A (AH)	WMEM1.EXE
SEEQ	DQ5517A (AH)	WMEM1.EXE
SEEQ	DQM28C010	WMEM1.EXE
SEEQ	DQM28C010A	WMEM1.EXE
SEEQ	PQ20RA10Z-45	WPLD1.EXE
SEIKO	S2812A	WMEM1.EXE
SEIKO	S2817A	WMEM1.EXE
SEIKO	S2840A/R	WMEM1.EXE
SEIKO	S2860A	WMEM1.EXE
SEIKO	S2864A	WMEM1.EXE
SEIKO	S28F512A	WMEM1.EXE
SEIKO	S-24C02A	WSPROM.EXE
SEIKO	S-24CC02A	WSPROM.EXE
SEIKO	S-24CS01A	WSPROM.EXE
SEIKO	S-24CS02A	WSPROM.EXE
SEIKO	S-24CS04A	WSPROM.EXE
SEIKO	S-24CS08A	WSPROM.EXE
SEIKO	S-24CS16A	WSPROM.EXE
SEIKO	S-24CS64A	WSPROM.EXE
SEIKO	S-24S/H45	WSPROM.EXE
SEIKO	S-29131A	WSPROM.EXE
SEIKO	S-2933CR/I	WSPROM.EXE
SEIKO	S-29L394A	WSPROM.EXE
SEIKO	S-93C46A	WSPROM.EXE
SEIKO	S-93C46B	WSPROM.EXE
SEIKO	S-93C56A	WSPROM.EXE
SEIKO	S-93C56B	WSPROM.EXE
SEIKO	S-93C66A	WSPROM.EXE
SEIKO	S-93C66B	WSPROM.EXE
SEIKO	S-93C76A	WSPROM.EXE
SEIKO	S-93C86B	WSPROM.EXE
SEIKO	S-93CC46B	WSPROM.EXE
SEIKO	S-93CC56B	WSPROM.EXE
SEIKO	S-93L56A	WSPROM.EXE
SEIKO	S-93L66A	WSPROM.EXE
SGS-THOMSON	2716 [25V]	WMEM1.EXE
SGS-THOMSON	2764A [12.5V]	WMEM1.EXE
SGS-THOMSON	27C16 [25V]	WMEM1.EXE

SGS-THOMSON	27C64A[12.5V]	WMEM1.EXE
SGS-THOMSON	M27128A[12.5V]	WMEM1.EXE
SGS-THOMSON	M27256[12.75V]	WMEM1.EXE
SGS-THOMSON	M2732A[21V]	WMEM1.EXE
SGS-THOMSON	M27512[12.75V]	WMEM1.EXE
SGS-THOMSON	M27C1000	WMEM1.EXE
SGS-THOMSON	M27C1001	WMEM1.EXE
SGS-THOMSON	M27C1024	WMEM1.EXE
SGS-THOMSON	M27C128A[12.5V]	WMEM1.EXE
SGS-THOMSON	M27C160	WAEP42.EXE ADP-EP42/-PS
SGS-THOMSON	M27C2001	WMEM1.EXE
SGS-THOMSON	M27C202	WMEM1.EXE
SGS-THOMSON	M27C256B[12.75V]	WMEM1.EXE
SGS-THOMSON	M27C322	WAEP42.EXE ADP-EP42
SGS-THOMSON	M27C400	WMEM1.EXE
SGS-THOMSON	M27C4001	WMEM1.EXE
SGS-THOMSON	M27C4002	WMEM1.EXE
SGS-THOMSON	M27C405	WMEM1.EXE
SGS-THOMSON	M27C512[12.75V]	WMEM1.EXE
SGS-THOMSON	M27C513[12.5V]	WMEM1.EXE
SGS-THOMSON	M27C516	WMEM1.EXE
SGS-THOMSON	M27C800	WAEP42.EXE ADP-EP42/-PS/-PL
SGS-THOMSON	M27C801	WMEM1.EXE
SGS-THOMSON	M27V101	WMEM1.EXE
SGS-THOMSON	M27V102	WMEM1.EXE
SGS-THOMSON	M27V160	WAEP42.EXE ADP-EP42/-PS
SGS-THOMSON	M27V201	WMEM1.EXE
SGS-THOMSON	M27V256[12.75V]	WMEM1.EXE
SGS-THOMSON	M27V322	WAEP42.EXE ADP-EP42
SGS-THOMSON	M27V401	WMEM1.EXE
SGS-THOMSON	M27V402	WMEM1.EXE
SGS-THOMSON	M27V512[12.75V]	WMEM1.EXE
SGS-THOMSON	M27V800	WAEP42.EXE ADP-EP42/-PS/-PL
SGS-THOMSON	M27V801	WMEM1.EXE
SGS-THOMSON	M27W101	WMEM1.EXE
SGS-THOMSON	M27W102	WMEM1.EXE
SGS-THOMSON	M27W201	WMEM1.EXE
SGS-THOMSON	M27W322	WAEP42.EXE ADP-EP42
SGS-THOMSON	M27W401	WMEM1.EXE
SGS-THOMSON	M27W402	WMEM1.EXE
SGS-THOMSON	M27W512[12.75V]	WMEM1.EXE
SGS-THOMSON	M27W801	WMEM1.EXE
SGS-THOMSON	M87C257[12.75V]	WMEM1.EXE
SGS-THOMSON	M87C512[12.75V]	WMEM1.EXE
SGS-THOMSON	TS2732[25V]	WMEM1.EXE
SGS-THOMSON	TS2764[21V]	WMEM1.EXE
SGS-THOMSON	TS27C32[25V]	WMEM1.EXE
SGS-THOMSON	M26C201	WMEM1.EXE
SGS-THOMSON	M28256	WMEM1.EXE
SGS-THOMSON	M28C17	WMEM1.EXE
SGS-THOMSON	M28C64	WMEM1.EXE
SGS-THOMSON	M28C64-A	WMEM1.EXE
SGS-THOMSON	M28C64-xxW	WMEM1.EXE
SGS-THOMSON	M28C64C	WMEM1.EXE
SGS-THOMSON	M28F/V410M	WA28F.EXE ADP-28F400P
SGS-THOMSON	M28F/V410N	WA28F.EXE ADP-28F400-TS
SGS-THOMSON	M28F/V411N	WA28F.EXE ADP-28F008-TS-V2
SGS-THOMSON	M28F/V420M	WA28F.EXE ADP-28F400P
SGS-THOMSON	M28F/V420N	WA28F.EXE ADP-28F400-TS
SGS-THOMSON	M28F/V421N	WA28F.EXE ADP-28F008-TS-V2
SGS-THOMSON	M28F/V841M	WA28F.EXE ADP-28F008S-PS
SGS-THOMSON	M28F/V841N	WA28F.EXE ADP-28F008-TS-V2
SGS-THOMSON	M28F101	WMEM1.EXE
SGS-THOMSON	M28F101A	WMEM1.EXE

SGS-THOMSON	M28F101B	WMEM1.EXE
SGS-THOMSON	M28F102	WMEM1.EXE
SGS-THOMSON	M28F201	WMEM1.EXE
SGS-THOMSON	M28F201A	WMEM1.EXE
SGS-THOMSON	M28F211N	WA28F.EXE ADP-28F008-TS-V2
SGS-THOMSON	M28F220M	WA28F.EXE ADP-28F400P
SGS-THOMSON	M28F220N	WA28F.EXE ADP-28F160-TS
SGS-THOMSON	M28F220N*	WA28F.EXE ADP-28F800CV-TS
SGS-THOMSON	M28F221N	WA28F.EXE ADP-28F008-TS-V2
SGS-THOMSON	M28F256	WMEM1.EXE
SGS-THOMSON	M28F256A	WMEM1.EXE
SGS-THOMSON	M28F512	WMEM1.EXE
SGS-THOMSON	M28LV64	WMEM1.EXE
SGS-THOMSON	M28V101A	WMEM1.EXE
SGS-THOMSON	M28V201A	WMEM1.EXE
SGS-THOMSON	M28W160B	WA28F.EXE ADP-28F160-TS
SGS-THOMSON	M28W160B*	WA28F.EXE ADP-28F800CV-TS
SGS-THOMSON	M28W160CB-N	WA28F.EXE ADP-28F160-TS
SGS-THOMSON	M28W160CT-N	WA28F.EXE ADP-28F160-TS
SGS-THOMSON	M28W160T	WA28F.EXE ADP-28F160-TS
SGS-THOMSON	M28W160T*	WA28F.EXE ADP-28F800CV-TS
SGS-THOMSON	M28W320CB-N	WA28F.EXE ADP-28F160-TS
SGS-THOMSON	M28W320CT-N	WA28F.EXE ADP-28F160-TS
SGS-THOMSON	M28W800B	WA28F.EXE ADP-28F160-TS
SGS-THOMSON	M28W800B*	WA28F.EXE ADP-28F800CV-TS
SGS-THOMSON	M28W800CB-N	WA28F.EXE ADP-28F160-TS
SGS-THOMSON	M28W800CT-N	WA28F.EXE ADP-28F160-TS
SGS-THOMSON	M28W800T	WA28F.EXE ADP-28F160-TS
SGS-THOMSON	M28W800T*	WA28F.EXE ADP-28F800CV-TS
SGS-THOMSON	M29F002B	WMEM1.EXE
SGS-THOMSON	M29F002BB	WMEM1.EXE
SGS-THOMSON	M29F002BT	WMEM1.EXE
SGS-THOMSON	M29F002NT	WMEM1.EXE
SGS-THOMSON	M29F002T	WMEM1.EXE
SGS-THOMSON	M29F010B	WMEM1.EXE
SGS-THOMSON	M29F040	WMEM1.EXE
SGS-THOMSON	M29F040B	WMEM1.EXE
SGS-THOMSON	M29F080A	WA28F.EXE ADP-29F080-PS/TS
SGS-THOMSON	M29F100B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SGS-THOMSON	M29F100T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SGS-THOMSON	M29F102B	WMEM1.EXE
SGS-THOMSON	M29F160BB-N	WA28F.EXE ADP-49F800-
TS/TSV2		
SGS-THOMSON	M29F160BT-N	WA28F.EXE ADP-49F800-
TS/TSV2		
SGS-THOMSON	M29F200B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SGS-THOMSON	M29F200T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SGS-THOMSON	M29F400B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SGS-THOMSON	M29F400BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SGS-THOMSON	M29F400BT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SGS-THOMSON	M29F400T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SGS-THOMSON	M29F800AB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SGS-THOMSON	M29F800AT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SGS-THOMSON	M29W004B	WA28F.EXE ADP-29F008-PS/TS

SGS-THOMSON	M29W004BB	WA28F.EXE	ADP-29F008-PS/TS
SGS-THOMSON	M29W004BT	WA28F.EXE	ADP-29F008-PS/TS
SGS-THOMSON	M29W004T	WA28F.EXE	ADP-29F008-PS/TS
SGS-THOMSON	M29W008AB	WA28F.EXE	ADP-29F008-PS/TS
SGS-THOMSON	M29W008AT	WA28F.EXE	ADP-29F008-PS/TS
SGS-THOMSON	M29W008B	WA28F.EXE	ADP-29F008-PS/TS
SGS-THOMSON	M29W008T	WA28F.EXE	ADP-29F008-PS/TS
SGS-THOMSON	M29W040	WMEM1.EXE	
SGS-THOMSON	M29W102BB	WMEM1.EXE	
SGS-THOMSON	M29W102BT	WMEM1.EXE	
SGS-THOMSON	M29W160BB-M	WA28F.EXE	ADP-49F800-PS
SGS-THOMSON	M29W160BB-N	WA28F.EXE	ADP-49F800-
TS/TSV2			
SGS-THOMSON	M29W160BB-ZA	WA28F.EXE	ADP-29F160-BG
SGS-THOMSON	M29W160BT-M	WA28F.EXE	ADP-49F800-PS
SGS-THOMSON	M29W160BT-N	WA28F.EXE	ADP-49F800-
TS/TSV2			
SGS-THOMSON	M29W160BT-ZA	WA28F.EXE	ADP-29F160-BG
SGS-THOMSON	M29W400B	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SGS-THOMSON	M29W400BB	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SGS-THOMSON	M29W400BT	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SGS-THOMSON	M29W400T	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SGS-THOMSON	M29W800AB	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SGS-THOMSON	M29W800AT	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SGS-THOMSON	M29W800B	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SGS-THOMSON	M29W800T	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SGS-THOMSON	M48Z58	WMEM1.EXE	
SGS-THOMSON	M48Z59	WMEM1.EXE	
SGS-THOMSON	M50FW040 (PLCC)	WMEM1.EXE	
SGS-THOMSON	MK/M48T02/B	WMEM1.EXE	
SGS-THOMSON	MK/M48T08/B	WMEM1.EXE	
SGS-THOMSON	MK/M48T12/B	WMEM1.EXE	
SGS-THOMSON	MK/M48T18/B	WMEM1.EXE	
SGS-THOMSON	MK/M48Z02/B	WMEM1.EXE	
SGS-THOMSON	MK/M48Z08	WMEM1.EXE	
SGS-THOMSON	MK/M48Z09	WMEM1.EXE	
SGS-THOMSON	MK/M48Z12/B	WMEM1.EXE	
SGS-THOMSON	MK/M48Z18	WMEM1.EXE	
SGS-THOMSON	MK/M48Z19	WMEM1.EXE	
SGS-THOMSON	MK48C02A	WMEM1.EXE	
SGS-THOMSON	MK48C12A	WMEM1.EXE	
SGS-THOMSON	MK48Z128/Y	WMEM1.EXE	
SGS-THOMSON	MK48Z256/Y	WMEM1.EXE	
SGS-THOMSON	MK48Z30/Y	WMEM1.EXE	
SGS-THOMSON	MK48Z32/Y	WMEM1.EXE	
SGS-THOMSON	MK48Z512/Y	WMEM1.EXE	
SGS-THOMSON	MKI48Z02	WMEM1.EXE	
SGS-THOMSON	MKI48Z12	WMEM1.EXE	
SGS-THOMSON	MKI48Z18	WMEM1.EXE	
SGS-THOMSON	M24128	WSPROM.EXE	
SGS-THOMSON	M24128A	WSPROM.EXE	
SGS-THOMSON	M24128B	WSPROM.EXE	
SGS-THOMSON	M24256	WSPROM.EXE	
SGS-THOMSON	M24C02	WSPROM.EXE	
SGS-THOMSON	M24C08	WSPROM.EXE	
SGS-THOMSON	M24C64	WSPROM.EXE	

SGS-THOMSON	M25P05	WSPROM.EXE
SGS-THOMSON	M25P10	WSPROM.EXE
SGS-THOMSON	M35560P	WSPROM.EXE
SGS-THOMSON	M93C46 (128*8)	WSPROM.EXE
SGS-THOMSON	M93C46 (64*16)	WSPROM.EXE
SGS-THOMSON	M93C56 (128*16)	WSPROM.EXE
SGS-THOMSON	M93C56 (256*8)	WSPROM.EXE
SGS-THOMSON	M93C66 (256*16)	WSPROM.EXE
SGS-THOMSON	M93C66 (512*8)	WSPROM.EXE
SGS-THOMSON	M93C86 (1024*16)	WSPROM.EXE
SGS-THOMSON	M93C86 (2048*8)	WSPROM.EXE
SGS-THOMSON	M93S46	WSPROM.EXE
SGS-THOMSON	M93S56	WSPROM.EXE
SGS-THOMSON	M93S66	WSPROM.EXE
SGS-THOMSON	M95128	WSPROM.EXE
SGS-THOMSON	M95160	WSPROM.EXE
SGS-THOMSON	M95640	WSPROM.EXE
SGS-THOMSON	ST24128	WSPROM.EXE
SGS-THOMSON	ST24256	WSPROM.EXE
SGS-THOMSON	ST24C01	WSPROM.EXE
SGS-THOMSON	ST24C02	WSPROM.EXE
SGS-THOMSON	ST24C02A	WSPROM.EXE
SGS-THOMSON	ST24C04/ST25C04	WSPROM.EXE
SGS-THOMSON	ST24C04C/ST25C04C	WSPROM.EXE
SGS-THOMSON	ST24C08	WSPROM.EXE
SGS-THOMSON	ST24C16/ST24W16	WSPROM.EXE
SGS-THOMSON	ST24C32	WSPROM.EXE
SGS-THOMSON	ST24C64	WSPROM.EXE
SGS-THOMSON	ST24E16	WSPROM.EXE
SGS-THOMSON	ST24E32	WSPROM.EXE
SGS-THOMSON	ST24E64D	WSPROM.EXE
SGS-THOMSON	ST24FC21	WSPROM.EXE
SGS-THOMSON	ST24FW21	WSPROM.EXE
SGS-THOMSON	ST24LC21	WSPROM.EXE
SGS-THOMSON	ST24LC21B	WSPROM.EXE
SGS-THOMSON	ST24LW21	WSPROM.EXE
SGS-THOMSON	ST24W04C/ST25W04C	WSPROM.EXE
SGS-THOMSON	ST25C02A	WSPROM.EXE
SGS-THOMSON	ST25C08	WSPROM.EXE
SGS-THOMSON	ST25E64D	WSPROM.EXE
SGS-THOMSON	ST93C06 (16*16)	WSPROM.EXE
SGS-THOMSON	ST93C06 (32*8)	WSPROM.EXE
SGS-THOMSON	ST93C46A (128*8)	WSPROM.EXE
SGS-THOMSON	ST93C46A (64*16)	WSPROM.EXE
SGS-THOMSON	ST93C56 (128*16)	WSPROM.EXE
SGS-THOMSON	ST93C56 (256*8)	WSPROM.EXE
SGS-THOMSON	ST93C66 (256*16)	WSPROM.EXE
SGS-THOMSON	ST93C66 (512*8)	WSPROM.EXE
SGS-THOMSON	ST93CS46	WSPROM.EXE
SGS-THOMSON	ST93CS47	WSPROM.EXE
SGS-THOMSON	ST93CS56	WSPROM.EXE
SGS-THOMSON	ST93CS57	WSPROM.EXE
SGS-THOMSON	ST93CS66	WSPROM.EXE
SGS-THOMSON	ST93CS67	WSPROM.EXE
SGS-THOMSON	ST95010	WSPROM.EXE
SGS-THOMSON	ST95020	WSPROM.EXE
SGS-THOMSON	ST95022	WSPROM.EXE
SGS-THOMSON	ST95040	WSPROM.EXE
SGS-THOMSON	ST95160	WSPROM.EXE
SGS-THOMSON	ST95P02	WSPROM.EXE
SGS-THOMSON	ST95P04	WSPROM.EXE
SGS-THOMSON	ST95P08	WSPROM.EXE
SGS-THOMSON	M27HC641	WBPPGM.EXE
SGS-THOMSON	M27HC642	WBPPGM.EXE

SGS-THOMSON	ST62T/E00	WST62.EXE
SGS-THOMSON	ST62T/E00C	WST62.EXE
SGS-THOMSON	ST62T/E01	WST62.EXE
SGS-THOMSON	ST62T/E01C	WST62.EXE
SGS-THOMSON	ST62T/E03	WST62.EXE
SGS-THOMSON	ST62T/E08C	WST62.EXE
SGS-THOMSON	ST62T/E09	WST62.EXE
SGS-THOMSON	ST62T/E09C	WST62.EXE
SGS-THOMSON	ST62T/E10	WST62.EXE
SGS-THOMSON	ST62T/E10C	WST62.EXE
SGS-THOMSON	ST62T/E15	WAST62.EXE ADP-ST62X5/-S
SGS-THOMSON	ST62T/E15C	WAST62.EXE ADP-ST62X5/-S
SGS-THOMSON	ST62T/E18C	WST62.EXE
SGS-THOMSON	ST62T/E20	WST62.EXE
SGS-THOMSON	ST62T/E20C	WST62.EXE
SGS-THOMSON	ST62T/E25	WAST62.EXE ADP-ST62X5/-S
SGS-THOMSON	ST62T/E25C	WAST62.EXE ADP-ST62X5/-S
SGS-THOMSON	ST62T/E28C	WAST62.EXE ADP-ST62X5/-S
SGS-THOMSON	ST62T/E30B	WAST62.EXE ADP-ST62X5/-S
SGS-THOMSON	ST62T/E32B	WAST62.EXE ADP-ST62T32-SD
SGS-THOMSON	ST62T/E35B	WAST62.EXE ADP-ST62T32-Q
SGS-THOMSON	ST62T/E40	WAST62.EXE ADP-ST6240-Q
SGS-THOMSON	ST62T/E40B	WAST62.EXE ADP-ST6240-Q
SGS-THOMSON	ST62T/E42B	WAST62.EXE ADP-ST62T42-Q
SGS-THOMSON	ST62T/E45B	WAST62.EXE ADP-ST62T32-Q
SGS-THOMSON	ST62T/E52B	WST62.EXE
SGS-THOMSON	ST62T/E52C	WST62.EXE
SGS-THOMSON	ST62T/E53B	WST62.EXE
SGS-THOMSON	ST62T/E53C	WST62.EXE
SGS-THOMSON	ST62T/E55B	WAST62.EXE ADP-ST62X5/-S
SGS-THOMSON	ST62T/E55C	WAST62.EXE ADP-ST62X5/-S
SGS-THOMSON	ST62T/E60	WST62.EXE
SGS-THOMSON	ST62T/E60B	WST62.EXE
SGS-THOMSON	ST62T/E60C	WST62.EXE
SGS-THOMSON	ST62T/E62B	WST62.EXE
SGS-THOMSON	ST62T/E62C	WST62.EXE
SGS-THOMSON	ST62T/E63B	WST62.EXE
SGS-THOMSON	ST62T/E63C	WST62.EXE
SGS-THOMSON	ST62T/E65B	WAST62.EXE ADP-ST62X5/-S
SGS-THOMSON	ST62T/E65C	WAST62.EXE ADP-ST62X5/-S
SGS-THOMSON	ST62T/E80B	WAST62.EXE ADP-ST62T80-Q
SGS-THOMSON	ST62T03C	WST62.EXE
SGS-THOMSON	Z86E11	WST62.EXE
SGS-THOMSON	Z86E21	WST62.EXE
SGS-THOMSON	GAL16AS	WPLD1.EXE
SGS-THOMSON	GAL16V8	WPLD1.EXE
SGS-THOMSON	GAL16V8A	WPLD1.EXE
SGS-THOMSON	GAL16V8AS	WPLD1.EXE
SGS-THOMSON	GAL16V8S	WPLD1.EXE
SGS-THOMSON	GAL20AS	WPLD1.EXE
SGS-THOMSON	GAL20V8	WPLD1.EXE
SGS-THOMSON	GAL20V8A	WPLD1.EXE
SGS-THOMSON	GAL20V8AS	WPLD1.EXE
SGS-THOMSON	GAL20V8S	WPLD1.EXE
SGS-THOMSON	GAL6001	WPLD1.EXE
SHARP	LH5763 [12.5V]	WMEM1.EXE
SHARP	LH28F004SUT	WA28F.EXE ADP-28F008-TS-V2
SHARP	LH28F008BJT-BTLZ1	WA28F.EXE ADP-28F008-TS-V2
SHARP	LH28F008BVT-B	WA28F.EXE ADP-28F008-TS-V2
SHARP	LH28F008SA	WA28F.EXE ADP-28F008S-PS
SHARP	LH28F008SAN	WA28F.EXE ADP-28F008S-PS
SHARP	LH28F008SCHT-TL	WA28F.EXE ADP-28F008-TS-V2
SHARP	LH28F008SCN	WA28F.EXE ADP-28F008S-PS
SHARP	LH28F008SCT	WA28F.EXE ADP-28F008-TS-V2

SHARP	LH28F016SAT	WA28F.EXE	ADP-28F016-TS-V2
SHARP	LH28F016SCT-L	WA28F.EXE	ADP-28F008-TS-V2
SHARP	LH28F016SU	WA28F.EXE	ADP-28F016-TS-V2
SHARP	LH28F020SUU-N10	WMEM1.EXE	
SHARP	LH28F032SUTD	WA28F.EXE	ADP-28F016-TS-V2
SHARP	LH28F128BFHT-PBTL	WA28F.EXE	ADP-29LV640-TS
SHARP	LH28F128BFHT-PTTL	WA28F.EXE	ADP-29LV640-TS
SHARP	LH28F128SPHTD-PTL	WA28F.EXE	ADP-28F128-TS
SHARP	LH28F160BGE-T	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F160BGE-T*	WA28F.EXE	ADP-28F800CV-TS
SHARP	LH28F160BJE-BTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F160BJE-TTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F160BJHE-BTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F160BVE-B	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F160BVHE-TTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F160S3	WA28F.EXE	ADP-28F016-TS-V2
SHARP	LH28F160S5NS-L	WA28F.EXE	ADP-28F640-SS
SHARP	LH28F160S5T-L	WA28F.EXE	ADP-28F016-TS-V2
SHARP	LH28F160SK	WA28F.EXE	ADP-28F016-TS-V2
SHARP	LH28F320BFE-PTTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F320BFHE-PBTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F320BFHE-PBTLZ2	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F320BJE-PBTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F320BJE-PTTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F320S3NS	WA28F.EXE	ADP-28F640-SS
SHARP	LH28F320S3TD-L	WA28F.EXE	ADP-28F016-TS-V2
SHARP	LH28F400BGE-T	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F400BGE-T*	WA28F.EXE	ADP-28F800CV-TS
SHARP	LH28F400BGHE-T	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F400BGHE-T*	WA28F.EXE	ADP-28F800CV-TS
SHARP	LH28F400BVE-B	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F400BVE-B*	WA28F.EXE	ADP-28F800CV-TS
SHARP	LH28F400BVE-T	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F400BVE-T*	WA28F.EXE	ADP-28F800CV-TS
SHARP	LH28F400SUE-N	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F400SUN	WA28F.EXE	ADP-28F400P
SHARP	LH28F400SUT	WA28F.EXE	ADP-28F400-TS
SHARP	LH28F640BFE-PBTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F640BFHE-PTTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F640BFN-PTTL	WA28F.EXE	ADP-28F640-PS
SHARP	LH28F640SPHT-PTL	WA28F.EXE	ADP-28F128-TS
SHARP	LH28F800BGHE-B	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F800BGHE-B*	WA28F.EXE	ADP-28F800CV-TS
SHARP	LH28F800BGHE-T	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F800BGHE-T*	WA28F.EXE	ADP-28F800CV-TS
SHARP	LH28F800BJE-PBTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F800BJE-PTTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F800BJHE-PBTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F800BJHR-PBTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F800BJR-PBTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F800BVE-BTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F800BVE-BTL*	WA28F.EXE	ADP-28F800CV-TS
SHARP	LH28F800BVE-TTLZ1	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F800BVHE-BTL	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F800BVHE-BTL*	WA28F.EXE	ADP-28F800CV-TS
SHARP	LH28F800SGHE	WA28F.EXE	ADP-28F160-TS
SHARP	LH28F800SGHE*	WA28F.EXE	ADP-28F800CV-TS
SHARP	LH28F800SGN	WA28F.EXE	ADP-28F400P
SHARP	LH28F800SUT	WA28F.EXE	ADP-28F016-TS-V2
SHARP	LHF00L04 (TSOP40)	WMEM1.EXE	
SHARP	LHF00L06 (TSOP40)	WMEM1.EXE	
SHARP	LHF00L19	WMEM1.EXE	
SHARP	LHF00L29	WA28F.EXE	ADP-28F160-TS
SHARP	LHF00L41 (TSOP40)	WMEM1.EXE	

SHARP	LRS1306B	WA28F.EXE	ADP-LRS1306-TS
SIEMENS	SDA2506	WSPROM.EXE	
SIEMENS	SDA2516/-5	WSPROM.EXE	
SIEMENS	SDA2526/-5	WSPROM.EXE	
SIEMENS	SDA2546/-5	WSPROM.EXE	
SIEMENS	SDA2586/-5	WSPROM.EXE	
SIEMENS	SDA25x16/-5	WSPROM.EXE	
SIEMENS	SDA25x26/-5	WSPROM.EXE	
SIEMENS	SDA25x46/-5	WSPROM.EXE	
SIEMENS	SDA25x86/-5	WSPROM.EXE	
SIEMENS	SDE2506	WSPROM.EXE	
SIEMENS	SLA24C01	WSPROM.EXE	
SIEMENS	SLA24C02	WSPROM.EXE	
SIEMENS	SLA24C04	WSPROM.EXE	
SIEMENS	SLA24C08	WSPROM.EXE	
SIEMENS	SLA24C16	WSPROM.EXE	
SIEMENS	SLA24C164	WSPROM.EXE	
SIEMENS	SAB-C501G-1E	WPGM51.EXE	
SIEMENS	SAB-C504-2E	WASIG.EXE	ADP-SABC504-Q
SIEMENS	SAB-C508-4E (QFP64)	WASIG.EXE	ADP-C508-Q
SIEMENS	SAB-C508-4E (SDIP64)	WASIG.EXE	ADP-C508-SD
SIEMENS	SAB-C540U (PLCC44)	WASIG.EXE	ADP-C541-PL
SIEMENS	SAB-C540U (SDIP52)	WASIG.EXE	ADP-C541-SD
SIEMENS	SAB-C541U (PLCC44)	WASIG.EXE	ADP-C541-PL
SIEMENS	SAB-C541U (SDIP52)	WASIG.EXE	ADP-C541-SD
SIEMENS	SAF-C164CI-8E (Segment 0)	WASIG.EXE	ADP-C164CI-Q
SIEMENS	SAF-C164CI-8E (Segment 1)	WASIG.EXE	ADP-C164CI-Q
SIEMENS	SAF-C504-2E	WASIG.EXE	ADP-SABC504-Q
SIEMENS	SAF-C505CA-4E	WASIG.EXE	ADP-SABC504-Q
SIEMENS	SAF-C505L-4E	WASIG.EXE	ADP-C505L-Q
SIEMENS	SAF-C513A-2E	WPGM51.EXE	
SIEMENS	SAF-C513A-2E (PLCC)	WPGM51.EXE	ADP-C541-PL
SIEMENS	SAF-C513A-2E (QFP)	WPGM51.EXE	ADP-SABC504-Q
SIEMENS	SAF-C513A-H	WPGM51.EXE	
SIEMENS	SAF-C515C-8E	WASIG.EXE	ADP-C515C-Q
SIEMENS	SAK-C164CI-8E (Segment 0)	WASIG.EXE	ADP-C164CI-Q
SIEMENS	SAK-C164CI-8E (Segment 1)	WASIG.EXE	ADP-C164CI-Q
SIEMENS	SAK-C164CM-4E (Segment 0)	WASIG.EXE	ADP-C164CM/SM-TQ
SIEMENS	SAK-C164CM-4E (Segment 1)	WASIG.EXE	ADP-C164CM/SM-TQ
SIEMENS	SAK-C505CA-4E	WASIG.EXE	ADP-SABC504-Q
SIEMENS	SDA545XOTP	WASIG.EXE	ADP-SDA545X-SD
SIERRA	SC22101	WMEM1.EXE	
SIERRA	SC22201	WMEM1.EXE	
SIMTEK	STK12C68	WMEM1.EXE	
SIMTEK	STK15C88	WMEM1.EXE	
SIMTEK	STK25C48	WMEM1.EXE	
SMARTCHIP	SMC57C1051	WASIG.EXE	ADP-97C2051/-S
SMARTCHIP	SMC57C2051	WASIG.EXE	ADP-97C2051/-S
SMARTCHIP	SMC57C51	WPGM51.EXE	
SMARTCHIP	SMC57C52	WPGM51.EXE	
SMARTCHIP	SMC57C58	WPGM51.EXE	
SMARTCHIP	SMC57L51	WPGM51.EXE	
SMOS	27C128H[12.5V]	WMEM1.EXE	
SMOS	27C256H[12.75V]	WMEM1.EXE	
SMOS	27C64H[12.5V]	WMEM1.EXE	
SMSC	KBC1021	WATMP9.EXE	ADP-KBC1021-TQ
SMSC	LPC47N250	WATMP9.EXE	ADP-LPC47N250-
TQ/ADP-KBC1021-TQ			
SMSC	LPC47N350	WATMP9.EXE	ADP-LPC47N350-TQ
SONY	CXK27C1000	WMEM1.EXE	
SONY	CXK27C1001	WMEM1.EXE	
SONY	CXK27C256[12.75V]	WMEM1.EXE	
SONY	CXK27C512[12.75V]	WMEM1.EXE	
SONY	CXK1011	WSPROM.EXE	

SONY	CXK1012	WSPROM.EXE
SONY	CXK1013	WSPROM.EXE
SPANSION	AM2817A	WMEM1.EXE
SPANSION	AM2864AE/A	WMEM1.EXE
SPANSION	AM2864BE/B	WMEM1.EXE
SPANSION	AM28C256	WMEM1.EXE
SPANSION	AM28F010	WMEM1.EXE
SPANSION	AM28F010A	WMEM1.EXE
SPANSION	AM28F020	WMEM1.EXE
SPANSION	AM28F020A	WMEM1.EXE
SPANSION	AM28F256	WMEM1.EXE
SPANSION	AM28F256A	WMEM1.EXE
SPANSION	AM28F512	WMEM1.EXE
SPANSION	AM28F512A	WMEM1.EXE
SPANSION	AM29BL162CB	WA28F.EXE ADP-29BL162-SS
SPANSION	AM29BL802CB	WA28F.EXE ADP-29BL162-SS
SPANSION	AM29DL161DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL161DB-WC	WA28F.EXE ADP-29F160-BG
SPANSION	AM29DL161DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL161DT-WC	WA28F.EXE ADP-29F160-BG
SPANSION	AM29DL162CB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL162CB-WC	WA28F.EXE ADP-29F160-BG
SPANSION	AM29DL162CT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL162CT-WC	WA28F.EXE ADP-29F160-BG
SPANSION	AM29DL162DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL162DB-WC	WA28F.EXE ADP-29F160-BG
SPANSION	AM29DL162DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL162DT-VR	WA28F.EXE ADP-S29PL064J-BG
SPANSION	AM29DL162DT-WC	WA28F.EXE ADP-29F160-BG
SPANSION	AM29DL163CB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL163CB-WC	WA28F.EXE ADP-29F160-BG
SPANSION	AM29DL163CT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL163CT-WC	WA28F.EXE ADP-29F160-BG
SPANSION	AM29DL163DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL163DB-WC	WA28F.EXE ADP-29F160-BG
SPANSION	AM29DL163DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL163DT-WC	WA28F.EXE ADP-29F160-BG
SPANSION	AM29DL164DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL164DB-WC	WA28F.EXE ADP-29F160-BG
SPANSION	AM29DL164DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL164DT-WC	WA28F.EXE ADP-29F160-BG
SPANSION	AM29DL316CB-E	WA28F.EXE ADP-29F008-TS
SPANSION	AM29DL316CT-E	WA28F.EXE ADP-29F008-TS
SPANSION	AM29DL320GB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL320GT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL322CB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL322CT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL322DB-E	WA28F.EXE ADP-49F800-

TS/TSV2		
SPANSION	AM29DL322DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL322GB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL322GT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL323CB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL323CT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL323DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL323DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL323GB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL323GB-WM	WA28F.EXE ADP-29F320-BG
SPANSION	AM29DL323GT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL323GT-WM	WA28F.EXE ADP-29F320-BG
SPANSION	AM29DL324DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL324DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL324GB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL324GT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL400BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29DL400BB*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL400BT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29DL400BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL640D-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL640G-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL640H-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL800B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29DL800B*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL800BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29DL800BB*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL800BB-WB	WA28F.EXE ADP-29F800-BG
SPANSION	AM29DL800BB-WB*	WA28F.EXE ADP-K8D6316-BG
SPANSION	AM29DL800BT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29DL800BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29DL800BT-WB	WA28F.EXE ADP-29F800-BG
SPANSION	AM29DL800BT-WB*	WA28F.EXE ADP-K8D6316-BG
SPANSION	AM29DL800T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29DL800T*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F002B	WMEM1.EXE

SPANSION	AM29F002BB	WMEM1.EXE
SPANSION	AM29F002BT	WMEM1.EXE
SPANSION	AM29F002NB	WMEM1.EXE
SPANSION	AM29F002NBB	WMEM1.EXE
SPANSION	AM29F002NBT	WMEM1.EXE
SPANSION	AM29F002NT	WMEM1.EXE
SPANSION	AM29F002T	WMEM1.EXE
SPANSION	AM29F004BB	WMEM1.EXE
SPANSION	AM29F004BT	WMEM1.EXE
SPANSION	AM29F010	WMEM1.EXE
SPANSION	AM29F010A	WMEM1.EXE
SPANSION	AM29F010B	WMEM1.EXE
SPANSION	AM29F016-E	WA28F.EXE ADP-29F016-TS
SPANSION	AM29F016-F	WA28F.EXE ADP-29F016-TSR
SPANSION	AM29F016-S	WA28F.EXE ADP-29F080-PS
SPANSION	AM29F016B-E	WA28F.EXE ADP-29F016-TS
SPANSION	AM29F016B-E4	WA28F.EXE ADP-29F080-TS
SPANSION	AM29F016B-F	WA28F.EXE ADP-29F016-TSR
SPANSION	AM29F016B-S	WA28F.EXE ADP-29F080-PS
SPANSION	AM29F016D-E	WA28F.EXE ADP-29F016-TS
SPANSION	AM29F016D-E4	WA28F.EXE ADP-29F080-TS
SPANSION	AM29F016D-EF	WA28F.EXE ADP-29F016-TS
SPANSION	AM29F016D-F	WA28F.EXE ADP-29F016-TSR
SPANSION	AM29F016D-S	WA28F.EXE ADP-29F080-PS
SPANSION	AM29F017B-E	WA28F.EXE ADP-29F016-TS
SPANSION	AM29F017B-E4	WA28F.EXE ADP-29F080-TS
SPANSION	AM29F017D-E	WA28F.EXE ADP-29F016-TS
SPANSION	AM29F017D-E4	WA28F.EXE ADP-29F080-TS
SPANSION	AM29F017D-F	WA28F.EXE ADP-29F016-TSR
SPANSION	AM29F032B-F	WA28F.EXE ADP-29F080-TSR
SPANSION	AM29F032B-S/E	WA28F.EXE ADP-29F080-PS/TS
SPANSION	AM29F040	WMEM1.EXE
SPANSION	AM29F040B	WMEM1.EXE
SPANSION	AM29F080/B	WA28F.EXE ADP-29F080-PS/TS
SPANSION	AM29F100B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F100B*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F100T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F100T*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F160DB-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F160DT-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F160DU-E	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F200AB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F200AB*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F200AT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F200AT*/BT	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F200B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F200B*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F200BB	WA28F.EXE ADP-29F800-
TS/TSV2		
SPANSION	AM29F200BB*	WA28F.EXE ADP-49F800-
TS/TSV2		

SPANSION TS/TSV2	AM29F200BT	WA28F.EXE ADP-49F800-
SPANSION	AM29F200BT*	WA28F.EXE ADP-29F800-PS
SPANSION	AM29F200T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F200T*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F400AB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F400AB*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F400AT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F400AT*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F400B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F400B*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F400BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F400BB*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F400BT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F400BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F400T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F400T*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F800B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F800B*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F800BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F800BB*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F800BT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F800BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29F800T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
SPANSION	AM29F800T*	WA28F.EXE ADP-49F800-
TS/TSV2		
SPANSION	AM29LV001BB	WMEM1.EXE
SPANSION	AM29LV001BT	WMEM1.EXE
SPANSION	AM29LV002B	WA28F.EXE ADP-29F008-PS/TS
SPANSION	AM29LV002BB	WA28F.EXE ADP-29F008-PS/TS
SPANSION	AM29LV002BT	WA28F.EXE ADP-29F008-PS/TS
SPANSION	AM29LV002T	WA28F.EXE ADP-29F008-PS/TS
SPANSION	AM29LV004B	WA28F.EXE ADP-29F008-PS/TS
SPANSION	AM29LV004BB-E	WA28F.EXE ADP-29F008-TS
SPANSION	AM29LV004BT-E	WA28F.EXE ADP-29F008-TS
SPANSION	AM29LV004T	WA28F.EXE ADP-29F008-PS/TS
SPANSION	AM29LV008B/BB	WA28F.EXE ADP-29F008-PS/TS
SPANSION	AM29LV008T/BT	WA28F.EXE ADP-29F008-PS/TS
SPANSION	AM29LV010B	WMEM1.EXE
SPANSION	AM29LV017B-E	WA28F.EXE ADP-29F008-TS
SPANSION	AM29LV017B-F	WA28F.EXE ADP-29F008-TSR
SPANSION	AM29LV017D-E	WA28F.EXE ADP-29F008-TS
SPANSION	AM29LV017D-F	WA28F.EXE ADP-29F008-TSR

SPANSION	AM29LV033C-E	WA28F.EXE	ADP-29F008-TS
SPANSION	AM29LV033MU-E	WA28F.EXE	ADP-29F008-TS
SPANSION	AM29LV040B	WMEM1.EXE	
SPANSION	AM29LV065DU-E	WA28F.EXE	ADP-29F065-TS
SPANSION	AM29LV081B-E	WA28F.EXE	ADP-29F008-TS
SPANSION	AM29LV081B-F	WA28F.EXE	ADP-29F008-TSR
SPANSION	AM29LV116BB-E	WA28F.EXE	ADP-29F008-TS
SPANSION	AM29LV116BT-E	WA28F.EXE	ADP-29F008-TS
SPANSION	AM29LV116DB-E	WA28F.EXE	ADP-29F008-TS
SPANSION	AM29LV116DB-F	WA28F.EXE	ADP-29F008-TSR
SPANSION	AM29LV116DT-E	WA28F.EXE	ADP-29F008-TS
SPANSION	AM29LV116DT-F	WA28F.EXE	ADP-29F008-TSR
SPANSION	AM29LV160BB-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV160BB-S	WA28F.EXE	ADP-49F800-PS
SPANSION	AM29LV160BB-WC	WA28F.EXE	ADP-29F160-BG
SPANSION	AM29LV160BT-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV160BT-S	WA28F.EXE	ADP-49F800-PS
SPANSION	AM29LV160BT-WC	WA28F.EXE	ADP-29F160-BG
SPANSION	AM29LV160DB-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV160DB-S	WA28F.EXE	ADP-49F800-PS
SPANSION	AM29LV160DB-WC	WA28F.EXE	ADP-29F160-BG
SPANSION	AM29LV160DT-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV160DT-S	WA28F.EXE	ADP-49F800-PS
SPANSION	AM29LV200B	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	AM29LV200B*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV200BB	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	AM29LV200BB*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV200BT	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	AM29LV200BT*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV200T	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	AM29LV200T*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV320DB-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV320DB-WM	WA28F.EXE	ADP-29F320-BG
SPANSION	AM29LV320DT-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV320DT-WM	WA28F.EXE	ADP-29F320-BG
SPANSION	AM29LV400B	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	AM29LV400B*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV400BB	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	AM29LV400BB*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV400BB-WA	WA28F.EXE	ADP-29F400-BG
SPANSION	AM29LV400BB-WA*	WA28F.EXE	ADP-49B1614A-BG
SPANSION	AM29LV400BT	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	AM29LV400BT*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV400BT-WA	WA28F.EXE	ADP-29F400-BG

SPANSION	AM29LV400BT-WA*	WA28F.EXE	ADP-49B1614A-BG
SPANSION	AM29LV400T	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	AM29LV400T*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV641DH-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV641DL-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV641GH-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV800B	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	AM29LV800B*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV800B-WB	WA28F.EXE	ADP-29F800-BG
SPANSION	AM29LV800B-WB*	WA28F.EXE	ADP-K8D6316-BG
SPANSION	AM29LV800BB	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	AM29LV800BB*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV800BB-WB	WA28F.EXE	ADP-29F800-BG
SPANSION	AM29LV800BB-WB*	WA28F.EXE	ADP-K8D6316-BG
SPANSION	AM29LV800BT	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	AM29LV800BT*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV800BT-WB	WA28F.EXE	ADP-29F800-BG
SPANSION	AM29LV800BT-WB*	WA28F.EXE	ADP-K8D6316-BG
SPANSION	AM29LV800DB-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV800DB-S	WA28F.EXE	ADP-29F800-PS
SPANSION	AM29LV800DB-WB	WA28F.EXE	ADP-K8D6316-BG
SPANSION	AM29LV800DT-E	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV800DT-S	WA28F.EXE	ADP-29F800-PS
SPANSION	AM29LV800DT-WB	WA28F.EXE	ADP-K8D6316-BG
SPANSION	AM29LV800T	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	AM29LV800T*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	AM29LV800T-WB	WA28F.EXE	ADP-29F800-BG
SPANSION	AM29LV800T-WB*	WA28F.EXE	ADP-K8D6316-BG
SPANSION	AM29PL160CB-E	WA28F.EXE	ADP-29PL160-
TS/TSV2			
SPANSION	AM29PL160CB-S	WA28F.EXE	ADP-MX29F1610-PS
SPANSION	AM29PL160CT-E	WA28F.EXE	ADP-29PL160-
TS/TSV2			
SPANSION	AM29PL160CT-S	WA28F.EXE	ADP-MX29F1610-PS
SPANSION	AM29SL160CB-E	WA28F.EXE	ADP-29SL800-TS
SPANSION	AM29SL160CT-E	WA28F.EXE	ADP-29SL800-TS
SPANSION	AM29SL400CB-E	WA28F.EXE	ADP-29SL800-TS
SPANSION	AM29SL400CT-E	WA28F.EXE	ADP-29SL800-TS
SPANSION	AM29SL800CB-E	WA28F.EXE	ADP-29SL800-TS
SPANSION	AM29SL800CT-E	WA28F.EXE	ADP-29SL800-TS
SPANSION	AM29SL800DB-E	WA28F.EXE	ADP-29SL800-TS
SPANSION	AM29SL800DT-E	WA28F.EXE	ADP-29SL800-TS
SPANSION	AM41DL1634DT	WA28F.EXE	ADP-41DL1644-BG
SPANSION	AM41DL1644DB	WA28F.EXE	ADP-41DL1644-BG
SPANSION	AM41DL3224GB	WA28F.EXE	ADP-41DL1644-BG
SPANSION	AM41DL3224GT	WA28F.EXE	ADP-41DL1644-BG
SPANSION	AM41DL3234GB	WA28F.EXE	ADP-41DL1644-BG
SPANSION	AM41DL3244GB	WA28F.EXE	ADP-41DL1644-BG
SPANSION	AM41DL3244GT	WA28F.EXE	ADP-41DL1644-BG

SPANSION	AM41DL6408G	WA28F.EXE	ADP-41DL1644-BG
SPANSION	AM42DL640AG	WA28F.EXE	ADP-41DL1644-BG
SPANSION	AM49DL640AG	WA28F.EXE	ADP-41DL1644-BG
SPANSION	AM9864	WMEM1.EXE	
SPANSION	DS42546	WA28F.EXE	ADP-41DL1644-BG
SPANSION	MB84VD21194DA	WA28F.EXE	ADP-K5A3240-BG
SPANSION	MBM28C64	WMEM1.EXE	
SPANSION	MBM28C65	WMEM1.EXE	
SPANSION	MBM28F010	WMEM1.EXE	
SPANSION	MBM29DL161BD-PBT	WA28F.EXE	ADP-29F160-BG
SPANSION	MBM29DL161BD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL161TD-PBT	WA28F.EXE	ADP-29F160-BG
SPANSION	MBM29DL161TD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL162BD-PBT	WA28F.EXE	ADP-29F160-BG
SPANSION	MBM29DL162BD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL162TD-PBT	WA28F.EXE	ADP-29F160-BG
SPANSION	MBM29DL162TD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL162TE-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL163BD-PBT	WA28F.EXE	ADP-29F160-BG
SPANSION	MBM29DL163BD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL163BE-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL163TD-PBT	WA28F.EXE	ADP-29F160-BG
SPANSION	MBM29DL163TD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL164BD-PBT	WA28F.EXE	ADP-29F160-BG
SPANSION	MBM29DL164BD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL164BE-PFCN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL164TD-PBT	WA28F.EXE	ADP-29F160-BG
SPANSION	MBM29DL164TD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL321BD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL321TD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL322BD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL322TD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL322TE-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL323BD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL323BE-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL323TD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL323TE-PBT	WA28F.EXE	ADP-M29DW32X-BG
SPANSION	MBM29DL323TE-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL324BD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL324BE-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29DL324TD-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			

SPANSION TS/TSV2	MBM29DL324TE-PFTN	WA28F.EXE ADP-49F800-
SPANSION	MBM29DL32BF-PBT	WA28F.EXE ADP-K8D6316-BG
SPANSION TS/TSV2	MBM29DL32BF-PFTN	WA28F.EXE ADP-49F800-
SPANSION TS/TSV2	MBM29DL32TF-PFTN	WA28F.EXE ADP-49F800-
SPANSION TS/TSV2	MBM29DL34TF-PFTN	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29DL400BB	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29DL400BB*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29DL400TB	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29DL400TB*	WA28F.EXE ADP-49F800-
SPANSION TS/TSV2	MBM29DL640E-TN	WA28F.EXE ADP-49F800-
SPANSION TS/TSV2	MBM29DL640F-TN	WA28F.EXE ADP-49F800-
SPANSION	MBM29DL64DF-PBT	WA28F.EXE ADP-29DL64DF-BG
SPANSION	MBM29DL64DF-TN	WA28F.EXE ADP-49F800-TSV2
SPANSION PS/TS/TSV2	MBM29DL800B	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29DL800B*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29DL800BB	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29DL800BB*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29DL800T	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29DL800T*	WA28F.EXE ADP-49F800-
SPANSION TS/TSV2	MBM29DL800TA-PFTN	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29DL800TB	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29DL800TB*	WA28F.EXE ADP-49F800-
SPANSION	MBM29F002B	WMEM1.EXE
SPANSION	MBM29F002NB	WMEM1.EXE
SPANSION	MBM29F002NT	WMEM1.EXE
SPANSION	MBM29F002SB	WMEM1.EXE
SPANSION	MBM29F002ST	WMEM1.EXE
SPANSION	MBM29F002T	WMEM1.EXE
SPANSION	MBM29F016	WA28F.EXE ADP-29F016-TS
SPANSION	MBM29F016A	WA28F.EXE ADP-29F016-TS
SPANSION	MBM29F017A-PFTN	WA28F.EXE ADP-29F016-TS
SPANSION	MBM29F033C-PTN	WA28F.EXE ADP-29F080-TS
SPANSION	MBM29F040	WMEM1.EXE
SPANSION	MBM29F040A	WMEM1.EXE
SPANSION	MBM29F040B	WMEM1.EXE
SPANSION	MBM29F040C	WMEM1.EXE
SPANSION	MBM29F080A-PF	WA28F.EXE ADP-29F080-PS
SPANSION	MBM29F080A-PFTN	WA28F.EXE ADP-29F016-TS
SPANSION	MBM29F080A-PTN	WA28F.EXE ADP-29F080-TS
SPANSION	MBM29F080PF	WA28F.EXE ADP-29F080-PS
SPANSION	MBM29F080PFTN	WA28F.EXE ADP-29F016-TS
SPANSION TS/TSV2	MBM29F160BE-PFTN	WA28F.EXE ADP-49F800-
SPANSION TS/TSV2	MBM29F160DB-PFTN	WA28F.EXE ADP-49F800-

SPANSION TS/TSV2	MBM29F160DT-PFTN	WA28F.EXE ADP-49F800-
SPANSION TS/TSV2	MBM29F160TE-PFTN	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29F200B	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29F200B*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29F200BC	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29F200BC*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29F200T	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29F200T*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29F200TC	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29F200TC*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29F400B	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29F400B*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29F400BB	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29F400BB*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29F400BC	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29F400BC*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29F400T	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29F400T*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29F400TB	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29F400TB*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29F400TC	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29F400TC*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29F800B	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29F800B*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29F800BA	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29F800BA*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29F800T	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29F800T*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29F800TA	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29F800TA*	WA28F.EXE ADP-49F800-
SPANSION	MBM29LV001BC	WMEM1.EXE
SPANSION	MBM29LV001TC	WMEM1.EXE
SPANSION	MBM29LV002B	WA28F.EXE ADP-29F008-PS/TS
SPANSION	MBM29LV002T	WA28F.EXE ADP-29F008-PS/TS

SPANSION	MBM29LV004B	WA28F.EXE	ADP-29F008-PS/TS
SPANSION	MBM29LV004T	WA28F.EXE	ADP-29F008-PS/TS
SPANSION	MBM29LV008B	WA28F.EXE	ADP-29F008-PS/TS
SPANSION	MBM29LV008T	WA28F.EXE	ADP-29F008-PS/TS
SPANSION	MBM29LV016B	WA28F.EXE	ADP-29F008-TS
SPANSION	MBM29LV016T	WA28F.EXE	ADP-29F008-TS
SPANSION	MBM29LV017-PTN	WA28F.EXE	ADP-29F008-TS
SPANSION	MBM29LV017-PTR	WA28F.EXE	ADP-29F008-TSR
SPANSION	MBM29LV040B	WMEM1.EXE	
SPANSION	MBM29LV080A-PFTN	WA28F.EXE	ADP-29F008-TS
SPANSION	MBM29LV080A-PFTR	WA28F.EXE	ADP-29F008-TSR
SPANSION	MBM29LV160B-PBT	WA28F.EXE	ADP-29F160-BG
SPANSION	MBM29LV160B-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV160BE-PBT	WA28F.EXE	ADP-49B1614A-BG
SPANSION	MBM29LV160BE-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV160T-PBT	WA28F.EXE	ADP-29F160-BG
SPANSION	MBM29LV160T-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV160TE-PBT	WA28F.EXE	ADP-49B1614A-BG
SPANSION	MBM29LV160TE-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV160TM-TN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV200B	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	MBM29LV200B*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV200T	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	MBM29LV200T*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV320BE-TN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV320TE-TN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV400B	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	MBM29LV400B*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV400BB	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	MBM29LV400BB*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV400BC	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV400BC-PBT	WA28F.EXE	ADP-49B1614A-BG
SPANSION	MBM29LV400T	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	MBM29LV400T*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV400TB	WA28F.EXE	ADP-29F800-
PS/TS/TSV2			
SPANSION	MBM29LV400TB*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV400TC	WA28F.EXE	ADP-29F800-TS
SPANSION	MBM29LV400TC*	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV400TC-PBT	WA28F.EXE	ADP-49B1614A-BG
SPANSION	MBM29LV650UE-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	MBM29LV651UE-PFTN	WA28F.EXE	ADP-49F800-
TS/TSV2			

SPANSION PS/TS/TSV2	MBM29LV800B	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29LV800B*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29LV800BA	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29LV800BA*	WA28F.EXE ADP-49F800-
SPANSION	MBM29LV800BA-PB	WA28F.EXE ADP-29F800-BG
SPANSION	MBM29LV800BA-PBT*	WA28F.EXE ADP-K8D6316-BG
SPANSION PS/TS/TSV2	MBM29LV800BB	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29LV800BB*	WA28F.EXE ADP-49F800-
SPANSION	MBM29LV800BE-PBT	WA28F.EXE ADP-49B1614A-BG
SPANSION TS/TSV2	MBM29LV800BE-PFTN	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29LV800T	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29LV800T*	WA28F.EXE ADP-49F800-
SPANSION PS/TS/TSV2	MBM29LV800TA	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29LV800TA*	WA28F.EXE ADP-49F800-
SPANSION	MBM29LV800TA-PB	WA28F.EXE ADP-29F800-BG
SPANSION	MBM29LV800TA-PBT*	WA28F.EXE ADP-K8D6316-BG
SPANSION PS/TS/TSV2	MBM29LV800TB	WA28F.EXE ADP-29F800-
SPANSION TS/TSV2	MBM29LV800TB*	WA28F.EXE ADP-49F800-
SPANSION TS/TSV2	MBM29LV800TE-PFTN	WA28F.EXE ADP-49F800-
SPANSION	MBM29PL12LM	WA28F.EXE ADP-29LV640-TS
SPANSION	MBM29PL160BD-PF	WA28F.EXE ADP-49F800-PS
SPANSION TS/TSV2	MBM29PL160BD-PFTN	WA28F.EXE ADP-29PL160-
SPANSION TS/TSV2	MBM29PL160TD-PFTN	WA28F.EXE ADP-29PL160-
SPANSION TS/TSV2	MBM29PL32BM-TN	WA28F.EXE ADP-49F800-
SPANSION	MBM29PL64LM-TN	WA28F.EXE ADP-49F800-TSV2
SPANSION TS/TSV2	MBM29PL65LM-TN	WA28F.EXE ADP-49F800-
SPANSION	S29AL004D-BA-01	WA28F.EXE ADP-S29PL064J-BG
SPANSION	S29AL004D-BF-01	WA28F.EXE ADP-S29PL064J-BG
SPANSION	S29AL004D-BF-02	WA28F.EXE ADP-S29PL064J-BG
SPANSION TS/TSV2	S29AL004D-TA-01	WA28F.EXE ADP-49F800-
SPANSION TS/TSV2	S29AL004D-TA-02	WA28F.EXE ADP-49F800-
SPANSION TS/TSV2	S29AL004D-TF-01	WA28F.EXE ADP-49F800-
SPANSION TS/TSV2	S29AL004D-TF-02	WA28F.EXE ADP-49F800-
SPANSION	S29AL008D-BA-01	WA28F.EXE ADP-S29PL064J-BG
SPANSION	S29AL008D-BF-01	WA28F.EXE ADP-S29PL064J-BG
SPANSION	S29AL008D-BF-02	WA28F.EXE ADP-S29PL064J-BG
SPANSION TS/TSV2	S29AL008D-TA-01	WA28F.EXE ADP-49F800-
SPANSION TS/TSV2	S29AL008D-TA-02	WA28F.EXE ADP-49F800-
SPANSION TS/TSV2	S29AL008D-TF-01	WA28F.EXE ADP-49F800-

SPANSION	S29AL008D-TF-02	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL008D-TF-R1	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL016D-BA-01	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29AL016D-BA-02	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29AL016D-BF-01	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29AL016D-BF-02	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29AL016D-MF-01	WA28F.EXE	ADP-49F800-PS
SPANSION	S29AL016D-MF-02	WA28F.EXE	ADP-49F800-PS
SPANSION	S29AL016D-TA-01	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL016D-TA-02	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL016D-TF-01	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL016D-TF-02	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL016M-BA-01	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29AL016M-BA-02	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29AL016M-BA-R1	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29AL016M-BA-R2	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29AL016M-BF-01	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29AL016M-BF-02	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29AL016M-BF-R1	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29AL016M-TA-01	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL016M-TA-02	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL016M-TA-R1	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL016M-TA-R2	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL016M-TF-01	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL016M-TF-02	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL016M-TF-R1	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL016M-TF-R2	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL032D-TA-00	WA28F.EXE	ADP-29F008-TS
SPANSION	S29AL032D-TA-03	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL032D-TA-04	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL032D-TF-00	WA28F.EXE	ADP-29F008-TS
SPANSION	S29AL032D-TF-03	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29AL032D-TF-04	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL016A-TF-03	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL016A-TF-04	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL016A-TF-R1	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL016A-TF-R2	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL032A-BA-R3	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29GL032A-BA-R4	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29GL032A-BF-R4	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29GL032A-FA-S3	WA28F.EXE	ADP-28F128K3-EBG
SPANSION	S29GL032A-FA-S4	WA28F.EXE	ADP-28F128K3-EBG

SPANSION	S29GL032A-FF-S3	WA28F.EXE	ADP-28F128K3-EBG
SPANSION	S29GL032A-TA-R1	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL032A-TA-R2	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL032A-TA-R3	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL032A-TA-R4	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL032A-TF-R4	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL032M-BA-R3	WA28F.EXE	ADP-29F160-BG
SPANSION	S29GL032M-BA-R4	WA28F.EXE	ADP-29F160-BG
SPANSION	S29GL032M-TA-R1	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL032M-TA-R2	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL032M-TA-R3	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL032M-TA-R4	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL032M-TC-R3	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL032M-TC-R4	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL032M-TF-R1	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL032M-TF-R3	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL032M-TF-R4	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL064A-FA-S3	WA28F.EXE	ADP-28F128K3-EBG
SPANSION	S29GL064A-FA-S4	WA28F.EXE	ADP-28F128K3-EBG
SPANSION	S29GL064A-TA-R1	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL064A-TA-R2	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL064A-TA-R3	WA28F.EXE	ADP-49F800-TSV2
SPANSION	S29GL064A-TA-R4	WA28F.EXE	ADP-49F800-TSV2
SPANSION	S29GL064A-TF-R1	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL064A-TF-R2	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL064A-TF-R3	WA28F.EXE	ADP-49F800-TSV2
SPANSION	S29GL064A-TF-R4	WA28F.EXE	ADP-49F800-TSV2
SPANSION	S29GL064A-TF-R6	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL064A-TF-R7	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL064A-TF-R9	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL064M-TA-R0	WA28F.EXE	ADP-29F065-TS
SPANSION	S29GL064M-TA-R1	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL064M-TA-R2	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL064M-TA-R3	WA28F.EXE	ADP-49F800-TSV2
SPANSION	S29GL064M-TA-R4	WA28F.EXE	ADP-49F800-TSV2
SPANSION	S29GL064M-TA-R6	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL064M-TA-R7	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL064M-TC-R2	WA28F.EXE	ADP-49F800-TSV2
SPANSION	S29GL064M-TF-R2	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL064M-TF-R3	WA28F.EXE	ADP-49F800-TSV2
SPANSION	S29GL064M-TF-R4	WA28F.EXE	ADP-49F800-TSV2
SPANSION	S29GL064M-TF-R7	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29GL128M-TA-R1	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL128M-TA-R2	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL128M-TD-R9	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL128N-FA-IH	WA28F.EXE	ADP-28F128K3-EBG
SPANSION	S29GL128N-TA-01	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL128N-TA-02	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL128N-TF-01	WA28F.EXE	ADP-29LV640-TS

SPANSION	S29GL128N-TF-02	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL128N-TF-V2	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL256M-TA-R1	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL256M-TA-R2	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL256N-TA-01	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL256N-TA-02	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL256N-TA-V1	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL256N-TF-01	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL256N-TF-02	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL256N-TF-R2	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL256N-TF-V1	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL256N-TF-V2	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL512N-TA-01	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL512N-TA-02	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29GL512N-TF-01	WA28F.EXE	ADP-29LV640-TS
SPANSION	S29JL032H-TA-01	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TA-02	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TA-21	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TA-22	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TA-31	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TA-32	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TA-41	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TA-42	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TC-01	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TC-02	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TC-21	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TC-22	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TC-31	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TC-32	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TC-41	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TC-42	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TF-01	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TF-02	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TF-21	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TF-31	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TF-32	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL032H-TF-42	WA28F.EXE	ADP-49F800-
TS/TSV2			
SPANSION	S29JL064H-TA-00	WA28F.EXE	ADP-49F800-TSV2
SPANSION	S29JL064H-TF-00	WA28F.EXE	ADP-49F800-TSV2
SPANSION	S29PL032JxxBA-12	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29PL032JxxBF-12	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S29PL064JxxBA-12	WA28F.EXE	ADP-S29PL064J-BG

SPANSION	S29PL064JxxBF-12	WA28F.EXE	ADP-S29PL064J-BG
SPANSION	S71GL016A-BA-3J	WA28F.EXE	ADP-S71PL064J-BG
SPANSION	S71GL016A-BF-3J	WA28F.EXE	ADP-S71PL064J-BG
SPANSION	S71GL032M-BA-BQ	WA28F.EXE	ADP-S71PL064J-BG
SPANSION	S71GL032M-BA-FQ	WA28F.EXE	ADP-S71PL064J-BG
SPANSION	S71PL032JxxBA	WA28F.EXE	ADP-S71PL064J-BG
SPANSION	S71PL064JxxBF	WA28F.EXE	ADP-S71PL064J-BG
SPANSION	S71PL064JxxBF	WA28F.EXE	ADP-S71PL064J-BG
SPANSION	S71PL127JxxBA	WA28F.EXE	ADP-S71PL127J-BG
SPANSION	S71PL129JxxBA	WA28F.EXE	ADP-S71PL127J-BG
SPANSION	S99-50048	WA28F.EXE	ADP-28F128K3-EBG
SPANSION	S99-50052	WA28F.EXE	ADP-28F128K3-EBG
SPANSION	S99-50183	WA28F.EXE	ADP-28F128K3-EBG
SPANSION	AM25FL005D	WSPROM.EXE	
SPANSION	AM25FL010D	WSPROM.EXE	
SPANSION	AM25FL020D	WSPROM.EXE	
SPANSION	S25FL001D	WSPROM.EXE	
SPANSION	S25FL004A	WSPROM.EXE	
SPANSION	S25FL004D	WSPROM.EXE	
SPANSION	S25FL008A	WSPROM.EXE	
SPANSION	S25FL016A (16PIN)	WSPROM.EXE	
SPANSION	S25FL016A (8PIN)	WSPROM.EXE	
SPANSION	S25FL032A (16PIN)	WSPROM.EXE	
SPANSION	S25FL040A-MA-01	WSPROM.EXE	
SPANSION	S25FL040A-MA-02	WSPROM.EXE	
SPANSION	S25FL040A-MF-01	WSPROM.EXE	
SPANSION	S25FL040A-MF-02	WSPROM.EXE	
SPANSION	S25FL040A-VA-00	WSPROM.EXE	
SPANSION	S25FL040A-VA-01	WSPROM.EXE	
SPANSION	S25FL040A-VA-02	WSPROM.EXE	
SPANSION	S25FL040A-VF-00	WSPROM.EXE	
SPANSION	S25FL040A-VF-01	WSPROM.EXE	
SPANSION	S25FL040A-VF-02	WSPROM.EXE	
SPANSION	S25FL064A (16PIN)	WSPROM.EXE	
SST	27SF010	WMEM1.EXE	
SST	27SF020	WMEM1.EXE	
SST	27SF256	WMEM1.EXE	
SST	27SF512	WMEM1.EXE	
SST	27SF512 (TSOP)	WMEM1.EXE	CNV-TSOP-EP1M32A
SST	27VF020	WMEM1.EXE	
SST	28LF040	WMEM1.EXE	
SST	28SF040	WMEM1.EXE	
SST	28SF040A	WMEM1.EXE	
SST	28VF040	WMEM1.EXE	
SST	28VF040A	WMEM1.EXE	
SST	29EE010	WMEM1.EXE	
SST	29EE020	WMEM1.EXE	
SST	29EE512	WMEM1.EXE	
SST	29LE010	WMEM1.EXE	
SST	29LE020	WMEM1.EXE	
SST	29LE512	WMEM1.EXE	
SST	29SF040	WMEM1.EXE	
SST	29VE010	WMEM1.EXE	
SST	29VE020	WMEM1.EXE	
SST	29VE512	WMEM1.EXE	
SST	29VF010	WMEM1.EXE	
SST	29VF020	WMEM1.EXE	
SST	29VF040	WMEM1.EXE	
SST	31LF021	WMEM1.EXE	
SST	31LF041	WMEM1.EXE	
SST	31LF041A	WMEM1.EXE	
SST	35LH021	WMEM1.EXE	
SST	37VF010	WMEM1.EXE	
SST	37VF020	WMEM1.EXE	

SST	37VF040	WMEM1.EXE
SST	37VF512	WMEM1.EXE
SST	39LF010	WMEM1.EXE
SST	39LF020	WMEM1.EXE
SST	39LF040	WMEM1.EXE
SST	39LF100	WMEM1.EXE
SST	39LF512	WMEM1.EXE
SST	39SF010	WMEM1.EXE
SST	39SF010A	WMEM1.EXE
SST	39SF020	WMEM1.EXE
SST	39SF020A	WMEM1.EXE
SST	39SF020P	WMEM1.EXE
SST	39SF040	WMEM1.EXE
SST	39SF040P	WMEM1.EXE
SST	39SF512	WMEM1.EXE
SST	39VF010	WMEM1.EXE
SST	39VF020	WMEM1.EXE
SST	39VF020P	WMEM1.EXE
SST	39VF040	WMEM1.EXE
SST	39VF040P	WMEM1.EXE
SST	39VF100	WMEM1.EXE
SST	39VF512	WMEM1.EXE
SST	49LF002A (PLCC32)	WMEM1.EXE
SST	49LF002A (TSOP32)	WMEM1.EXE
SST	49LF002B (PLCC32)	WMEM1.EXE
SST	49LF003A (PLCC32)	WMEM1.EXE
SST	49LF003A (TSOP32)	WMEM1.EXE
SST	49LF003B (PLCC32)	WMEM1.EXE
SST	49LF003B (TSOP32)	WMEM1.EXE
SST	49LF004 (PLCC32)	WMEM1.EXE
SST	49LF004 (TSOP32)	WMEM1.EXE
SST	49LF004A (PLCC32)	WMEM1.EXE
SST	49LF004A (TSOP32)	WMEM1.EXE
SST	49LF004B (PLCC32)	WMEM1.EXE
SST	49LF004B (TSOP40)	WMEM1.EXE
SST	49LF004C (PLCC32)	WMEM1.EXE
SST	49LF004C (TSOP32)	WMEM1.EXE
SST	49LF008A (PLCC32)	WMEM1.EXE
SST	49LF008A (TSOP32)	WMEM1.EXE
SST	49LF008A (TSOP40)	WMEM1.EXE
SST	49LF008C (PLCC32)	WMEM1.EXE
SST	49LF008C (TSOP32)	WMEM1.EXE
SST	49LF016C (PLCC32)	WMEM1.EXE
SST	49LF016C (TSOP32)	WMEM1.EXE
SST	49LF016C (TSOP40)	WMEM1.EXE
SST	49LF020 (PLCC32)	WMEM1.EXE
SST	49LF020 (TSOP32)	WMEM1.EXE
SST	49LF020A (PLCC32)	WMEM1.EXE
SST	49LF020A (TSOP32)	WMEM1.EXE
SST	49LF030A (PLCC32)	WMEM1.EXE
SST	49LF030A (TSOP32)	WMEM1.EXE
SST	49LF040 (PLCC32)	WMEM1.EXE
SST	49LF040 (TSOP32)	WMEM1.EXE
SST	49LF040A (PLCC32)	WMEM1.EXE
SST	49LF040A (TSOP32)	WMEM1.EXE
SST	49LF040B (PLCC32)	WMEM1.EXE
SST	49LF040B (TSOP40)	WMEM1.EXE
SST	49LF080A (PLCC32)	WMEM1.EXE
SST	49LF080A (TSOP32)	WMEM1.EXE
SST	49LF160C (PLCC32)	WMEM1.EXE
SST	49LF160C (TSOP32)	WMEM1.EXE
SST	SST34HF1601B	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST36VF1601	WA28F.EXE ADP-49F800-

TS/TSV2		
SST	SST36VF1601-BK	WA28F.EXE ADP-36VF160-BG
SST	SST36VF1601C	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST36VF1601E	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST36VF1601E-B3KE	WA28F.EXE ADP-49B1614A-BG
SST	SST36VF1601E-EKE	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST36VF1602C	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST36VF1602E	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST36VF1602E-B3KE	WA28F.EXE ADP-49B1614A-BG
SST	SST36VF3203	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST36VF3204	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST38UF166 (EEPROM Bank)	WA28F.EXE ADP-38UF166-TS
SST	SST38UF166 (Flash Bank 1)	WA28F.EXE ADP-38UF166-TS
SST	SST38UF166 (Flash Bank 2)	WA28F.EXE ADP-38UF166-TS
SST	SST38VF166 (EEPROM Bank)	WA28F.EXE ADP-38UF166-TS
SST	SST38VF166 (Flash Bank 1)	WA28F.EXE ADP-38UF166-TS
SST	SST38VF166 (Flash Bank 2)	WA28F.EXE ADP-38UF166-TS
SST	SST39LF080	WA28F.EXE ADP-29F008-TS
SST	SST39LF160	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST39LF400A	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST39LF400A-BK	WA28F.EXE ADP-36VF160-BG
SST	SST39LF800A	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST39LF800A-BK	WA28F.EXE ADP-36VF160-BG
SST	SST39VF016	WA28F.EXE ADP-29F008-TS
SST	SST39VF016Q	WA28F.EXE ADP-29F008-TS
SST	SST39VF080	WA28F.EXE ADP-29F008-TS
SST	SST39VF080Q	WA28F.EXE ADP-29F008-TS
SST	SST39VF088	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST39VF160	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST39VF160-BK	WA28F.EXE ADP-36VF160-BG
SST	SST39VF1601	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST39VF1601-B3K	WA28F.EXE ADP-49B1614A-BG
SST	SST39VF1602	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST39VF160Q	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST39VF1681	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST39VF1682	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST39VF200A	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST39VF200A-B3K	WA28F.EXE ADP-49B1614A-BG
SST	SST39VF320	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST39VF3201	WA28F.EXE ADP-49F800-
TS/TSV2		
SST	SST39VF3201-B3K	WA28F.EXE ADP-49B1614A-BG
SST	SST39VF3201-B3KE	WA28F.EXE ADP-49B1614A-BG
SST	SST39VF3202	WA28F.EXE ADP-49F800-
TS/TSV2		

SST	SST39VF3202-B3K	WA28F.EXE	ADP-49B1614A-BG
SST	SST39VF400A	WA28F.EXE	ADP-49F800-
TS/TSV2			
SST	SST39VF400A-B2K	WA28F.EXE	ADP-49B1614A-BG
SST	SST39VF400A-B3K	WA28F.EXE	ADP-49B1614A-BG
SST	SST39VF400A-BK	WA28F.EXE	ADP-36VF160-BG
SST	SST39VF6401	WA28F.EXE	ADP-49F800-TSV2
SST	SST39VF6401B	WA28F.EXE	ADP-49F800-TSV2
SST	SST39VF6402	WA28F.EXE	ADP-49F800-TSV2
SST	SST39VF6402B	WA28F.EXE	ADP-49F800-TSV2
SST	SST39VF800	WA28F.EXE	ADP-49F800-
TS/TSV2			
SST	SST39VF800A	WA28F.EXE	ADP-49F800-
TS/TSV2			
SST	SST39VF800A-B2K	WA28F.EXE	ADP-49B1614A-BG
SST	SST39VF800A-B3K	WA28F.EXE	ADP-49B1614A-BG
SST	SST39VF800A-BK	WA28F.EXE	ADP-36VF160-BG
SST	SST39VF800Q	WA28F.EXE	ADP-49F800-
TS/TSV2			
SST	SST25LF020A	WSPROM.EXE	
SST	SST25LF040A	WSPROM.EXE	
SST	SST25LF080A	WSPROM.EXE	
SST	SST25VF010	WSPROM.EXE	
SST	SST25VF010A	WSPROM.EXE	
SST	SST25VF016B	WSPROM.EXE	
SST	SST25VF020	WSPROM.EXE	
SST	SST25VF032B	WSPROM.EXE	
SST	SST25VF040	WSPROM.EXE	
SST	SST25VF040B	WSPROM.EXE	
SST	SST25VF080B	WSPROM.EXE	
SST	SST25VF512	WSPROM.EXE	
SST	SST25VF512A	WSPROM.EXE	
SST	SST45LF010	WSPROM.EXE	
SST	SST45VF010	WSPROM.EXE	
SST	SST65P542R	WST62.EXE	
SST	SST89C54	WPGM51.EXE	
SST	SST89C58	WPGM51.EXE	
SST	SST89E516M	WPGM51.EXE	
SST	SST89E516RD	WPGM51.EXE	
SST	SST89E516RD2	WPGM51.EXE	
SST	SST89E52RC	WPGM51.EXE	
SST	SST89E52RD	WPGM51.EXE	
SST	SST89E52RD2	WPGM51.EXE	
SST	SST89E54RC	WPGM51.EXE	
SST	SST89E54RD	WPGM51.EXE	
SST	SST89E54RD2	WPGM51.EXE	
SST	SST89E554RC	WPGM51.EXE	
SST	SST89E564RD	WPGM51.EXE	
SST	SST89E58RD	WPGM51.EXE	
SST	SST89E58RD2	WPGM51.EXE	
SST	SST89F54	WPGM51.EXE	
SST	SST89F58	WPGM51.EXE	
SST	SST89V52RD	WPGM51.EXE	
SST	SST89V52RD2	WPGM51.EXE	
SST	SST89V54RD	WPGM51.EXE	
SST	SST89V54RD2	WPGM51.EXE	
SST	SST89V554RC	WPGM51.EXE	
SST	SST89V564RD	WPGM51.EXE	
SST	SST89V58RD	WPGM51.EXE	
SST	SST89V58RD2	WPGM51.EXE	
STM	2716[25V]	WMEM1.EXE	
STM	2764A[12.5V]	WMEM1.EXE	
STM	27C16[25V]	WMEM1.EXE	
STM	27C64A[12.5V]	WMEM1.EXE	

STM	M27128A[12.5V]	WMEM1.EXE
STM	M27256[12.75V]	WMEM1.EXE
STM	M2732A[21V]	WMEM1.EXE
STM	M27512[12.75V]	WMEM1.EXE
STM	M27C1000	WMEM1.EXE
STM	M27C1001	WMEM1.EXE
STM	M27C1024	WMEM1.EXE
STM	M27C128A[12.5V]	WMEM1.EXE
STM	M27C160	WAEP42.EXE ADP-EP42/-PS/-PL
STM	M27C2001	WMEM1.EXE
STM	M27C202	WMEM1.EXE
STM	M27C256B[12.75V]	WMEM1.EXE
STM	M27C320	WAEP42.EXE ADP-EP42-PS
STM	M27C322	WAEP42.EXE ADP-EP42
STM	M27C400	WMEM1.EXE
STM	M27C4001	WMEM1.EXE
STM	M27C4002	WMEM1.EXE
STM	M27C405	WMEM1.EXE
STM	M27C512[12.75V]	WMEM1.EXE
STM	M27C513[12.5V]	WMEM1.EXE
STM	M27C516	WMEM1.EXE
STM	M27C800	WAEP42.EXE ADP-EP42/-PS/-PL
STM	M27C801	WMEM1.EXE
STM	M27V101	WMEM1.EXE
STM	M27V102	WMEM1.EXE
STM	M27V160	WAEP42.EXE ADP-EP42/-PS/-PL
STM	M27V201	WMEM1.EXE
STM	M27V256[12.75V]	WMEM1.EXE
STM	M27V322	WAEP42.EXE ADP-EP42
STM	M27V401	WMEM1.EXE
STM	M27V402	WMEM1.EXE
STM	M27V512[12.75V]	WMEM1.EXE
STM	M27V800	WAEP42.EXE ADP-EP42/-PS/-PL
STM	M27V801	WMEM1.EXE
STM	M27W016	WAEP42.EXE ADP-29PL160-TSV2
STM	M27W032	WAEP42.EXE ADP-29PL160-TSV2
STM	M27W064	WAEP42.EXE ADP-29PL160-TSV2
STM	M27W101	WMEM1.EXE
STM	M27W102	WMEM1.EXE
STM	M27W201	WMEM1.EXE
STM	M27W322	WAEP42.EXE ADP-EP42
STM	M27W401	WMEM1.EXE
STM	M27W402	WMEM1.EXE
STM	M27W512[12.75V]	WMEM1.EXE
STM	M27W801	WMEM1.EXE
STM	M87C257[12.75V]	WMEM1.EXE
STM	M87C512[12.75V]	WMEM1.EXE
STM	TS2732[25V]	WMEM1.EXE
STM	TS2764[21V]	WMEM1.EXE
STM	TS27C32[25V]	WMEM1.EXE
STM	TS27C64A	WMEM1.EXE
STM	M26C201	WMEM1.EXE
STM	M28256	WMEM1.EXE
STM	M28C17	WMEM1.EXE
STM	M28C64	WMEM1.EXE
STM	M28C64-A	WMEM1.EXE
STM	M28C64-xxW	WMEM1.EXE
STM	M28C64C	WMEM1.EXE
STM	M28F/V410M	WA28F.EXE ADP-28F400P
STM	M28F/V410N	WA28F.EXE ADP-28F400-TS
STM	M28F/V411N	WA28F.EXE ADP-28F008-TS-V2
STM	M28F/V420M	WA28F.EXE ADP-28F400P
STM	M28F/V420N	WA28F.EXE ADP-28F400-TS
STM	M28F/V421N	WA28F.EXE ADP-28F008-TS-V2

STM	M28F/V841M	WA28F.EXE	ADP-28F008S-PS
STM	M28F/V841N	WA28F.EXE	ADP-28F008-TS-V2
STM	M28F101	WMEM1.EXE	
STM	M28F101A	WMEM1.EXE	
STM	M28F101B	WMEM1.EXE	
STM	M28F102	WMEM1.EXE	
STM	M28F201	WMEM1.EXE	
STM	M28F201A	WMEM1.EXE	
STM	M28F211N	WA28F.EXE	ADP-28F008-TS-V2
STM	M28F220M	WA28F.EXE	ADP-28F400P
STM	M28F220N	WA28F.EXE	ADP-28F160-TS
STM	M28F220N*	WA28F.EXE	ADP-28F800CV-TS
STM	M28F221N	WA28F.EXE	ADP-28F008-TS-V2
STM	M28F256	WMEM1.EXE	
STM	M28F256A	WMEM1.EXE	
STM	M28F512	WMEM1.EXE	
STM	M28LV64	WMEM1.EXE	
STM	M28V101A	WMEM1.EXE	
STM	M28V201A	WMEM1.EXE	
STM	M28W160B	WA28F.EXE	ADP-28F160-TS
STM	M28W160B*	WA28F.EXE	ADP-28F800CV-TS
STM	M28W160BT	WA28F.EXE	ADP-28F160-TS
STM	M28W160CB-N	WA28F.EXE	ADP-28F160-TS
STM	M28W160CT-N	WA28F.EXE	ADP-28F160-TS
STM	M28W160T	WA28F.EXE	ADP-28F160-TS
STM	M28W160T*	WA28F.EXE	ADP-28F800CV-TS
STM	M28W320CB-N	WA28F.EXE	ADP-28F160-TS
STM	M28W320CT-N	WA28F.EXE	ADP-28F160-TS
STM	M28W320FSB-ZA	WA28F.EXE	ADP-28F128K3-
EBG/ADP-28F128-EBG			
STM	M28W320FST-ZA	WA28F.EXE	ADP-28F128K3-
EBG/ADP-28F128-EBG			
STM	M28W320FSU-ZA	WA28F.EXE	ADP-28F128K3-
EBG/ADP-28F128-EBG			
STM	M28W640ECB-N	WA28F.EXE	ADP-28F160-TS
STM	M28W640ECT-N	WA28F.EXE	ADP-28F160-TS
STM	M28W640FCB-N	WA28F.EXE	ADP-28F160-TS
STM	M28W640FCT-N	WA28F.EXE	ADP-28F160-TS
STM	M28W640FSB-ZA	WA28F.EXE	ADP-28F128K3-
EBG/ADP-28F128-EBG			
STM	M28W640FST-ZA	WA28F.EXE	ADP-28F128K3-
EBG/ADP-28F128-EBG			
STM	M28W640FSU-ZA	WA28F.EXE	ADP-28F128K3-
EBG/ADP-28F128-EBG			
STM	M28W800B	WA28F.EXE	ADP-28F160-TS
STM	M28W800B*	WA28F.EXE	ADP-28F800CV-TS
STM	M28W800BB-N	WA28F.EXE	ADP-28F160-TS
STM	M28W800CB-N	WA28F.EXE	ADP-28F160-TS
STM	M28W800CT-N	WA28F.EXE	ADP-28F160-TS
STM	M28W800T	WA28F.EXE	ADP-28F160-TS
STM	M28W800T*	WA28F.EXE	ADP-28F800CV-TS
STM	M29DW128F-NF	WA28F.EXE	ADP-29LV640-TS
STM	M29DW323DB-N	WA28F.EXE	ADP-49F800-
TS/TSV2			
STM	M29DW323DB-ZA	WA28F.EXE	ADP-M29DW32X-BG
STM	M29DW323DB-ZE	WA28F.EXE	ADP-M29DW32X-BG
STM	M29DW323DT-N	WA28F.EXE	ADP-49F800-
TS/TSV2			
STM	M29DW323DT-ZA	WA28F.EXE	ADP-M29DW32X-BG
STM	M29DW324DB-N	WA28F.EXE	ADP-49F800-
TS/TSV2			
STM	M29DW324DT-N	WA28F.EXE	ADP-49F800-
TS/TSV2			
STM	M29DW640D-N	WA28F.EXE	ADP-49F800-TSV2

STM	M29DW640D-ZA	WA28F.EXE ADP-M29DW32X-BG
STM	M29F002B	WMEM1.EXE
STM	M29F002BB	WMEM1.EXE
STM	M29F002BNB	WMEM1.EXE
STM	M29F002BT	WMEM1.EXE
STM	M29F002NT	WMEM1.EXE
STM	M29F002T	WMEM1.EXE
STM	M29F010B	WMEM1.EXE
STM	M29F016D-N	WA28F.EXE ADP-29F080-TS
STM	M29F032D-N	WA28F.EXE ADP-29F080-TS
STM	M29F040	WMEM1.EXE
STM	M29F040B	WMEM1.EXE
STM	M29F080A	WA28F.EXE ADP-29F080-PS/TS
STM	M29F080D	WA28F.EXE ADP-29F080-TS
STM	M29F100B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29F100B*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F100T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29F100T*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F102B	WMEM1.EXE
STM	M29F102BB (TSOP)	WMEM1.EXE
STM	M29F160BB-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F160BT-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F200B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29F200B*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F200BB-M	WA28F.EXE ADP-29F800-PS
STM	M29F200BB-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F200T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29F200T*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F400B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29F400B*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F400BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29F400BB*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F400BT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29F400BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F400T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29F400T*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F800AB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29F800AB*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F800AT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29F800AT*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F800DB	WA28F.EXE ADP-29F800-

TS/TSV2		
STM	M29F800DB*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F800DB-M	WA28F.EXE ADP-49F800-PS
STM	M29F800DT	WA28F.EXE ADP-29F800-
TS/TSV2		
STM	M29F800DT*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29F800DT-M	WA28F.EXE ADP-49F800-PS
STM	M29KW016E-N	WA28F.EXE ADP-49F800-TSV2
STM	M29KW016E-N*	WA28F.EXE ADP-MX29L8100-TS
STM	M29KW032E-N	WA28F.EXE ADP-49F800-TSV2
STM	M29KW064E-N	WA28F.EXE ADP-49F800-TSV2
STM	M29W004B	WA28F.EXE ADP-29F008-PS/TS
STM	M29W004BB	WA28F.EXE ADP-29F008-PS/TS
STM	M29W004BT	WA28F.EXE ADP-29F008-PS/TS
STM	M29W004T	WA28F.EXE ADP-29F008-PS/TS
STM	M29W008AB	WA28F.EXE ADP-29F008-PS/TS
STM	M29W008AT	WA28F.EXE ADP-29F008-PS/TS
STM	M29W008B	WA28F.EXE ADP-29F008-PS/TS
STM	M29W008DB	WA28F.EXE ADP-29F008-TS
STM	M29W008EB-N	WA28F.EXE ADP-29F008-TS
STM	M29W008T	WA28F.EXE ADP-29F008-PS/TS
STM	M29W010B	WMEM1.EXE
STM	M29W022BT	WMEM1.EXE
STM	M29W040	WMEM1.EXE
STM	M29W040B	WMEM1.EXE
STM	M29W102BB	WMEM1.EXE
STM	M29W102BT	WMEM1.EXE
STM	M29W128FH-N	WA28F.EXE ADP-29LV640-TS
STM	M29W128FL-N	WA28F.EXE ADP-29LV640-TS
STM	M29W160BB-M	WA28F.EXE ADP-49F800-PS
STM	M29W160BB-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W160BB-ZA	WA28F.EXE ADP-29F160-BG
STM	M29W160BT-M	WA28F.EXE ADP-49F800-PS
STM	M29W160BT-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W160BT-ZA	WA28F.EXE ADP-29F160-BG
STM	M29W160DB-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W160DT-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W160DT-ZA	WA28F.EXE ADP-29F160-BG
STM	M29W160EB-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W160EB-ZA	WA28F.EXE ADP-49B1614A-BG
STM	M29W160ET-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W160ET-ZA	WA28F.EXE ADP-49B1614A-BG
STM	M29W200BB-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W320DB-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W320DT-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W320EB-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W320EB-ZE	WA28F.EXE ADP-49B1614A-BG
STM	M29W320ET-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W400B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29W400B*	WA28F.EXE ADP-49F800-

TS/TSV2		
STM	M29W400BB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29W400BB*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W400BB-ZA	WA28F.EXE ADP-K8D6316-BG
STM	M29W400BT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29W400BT*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W400DB-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W400DB-ZE	WA28F.EXE ADP-K8D6316-BG
STM	M29W400DT-N	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W400T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29W400T*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W512B	WMEM1.EXE
STM	M29W640DB-N	WA28F.EXE ADP-49F800-TSV2
STM	M29W640DB-NA	WA28F.EXE ADP-49F800-TSV2
STM	M29W640DT-N	WA28F.EXE ADP-49F800-TSV2
STM	M29W640FB-N	WA28F.EXE ADP-49F800-TSV2
STM	M29W640FT-N	WA28F.EXE ADP-49F800-TSV2
STM	M29W800AB	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29W800AB*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W800AT	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29W800AT*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W800B	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29W800B*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W800DB-N	WA28F.EXE ADP-29F800-
TS/TSV2		
STM	M29W800DB-N*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W800DB-ZA	WA28F.EXE ADP-29F800-BG
STM	M29W800DB-ZA*	WA28F.EXE ADP-K8D6316-BG
STM	M29W800DB-ZE	WA28F.EXE ADP-49B1614A-BG
STM	M29W800DT-N	WA28F.EXE ADP-29F800-
TS/TSV2		
STM	M29W800DT-N*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M29W800DT-ZA	WA28F.EXE ADP-29F800-BG
STM	M29W800DT-ZA*	WA28F.EXE ADP-K8D6316-BG
STM	M29W800T	WA28F.EXE ADP-29F800-
PS/TS/TSV2		
STM	M29W800T*	WA28F.EXE ADP-49F800-
TS/TSV2		
STM	M30LW128D-N	WA28F.EXE ADP-28F128-TS
STM	M30LW128D-ZA	WA28F.EXE ADP-28F128-EBG
STM	M30LW128D-ZA*	WA28F.EXE ADP-28F128K3-EBG
STM	M48T128/Y	WMEM1.EXE
STM	M48T129V	WMEM1.EXE
STM	M48T129Y	WMEM1.EXE
STM	M48T35/Y	WMEM1.EXE
STM	M48T512Y	WMEM1.EXE
STM	M48T58/Y	WMEM1.EXE
STM	M48T59Y	WMEM1.EXE

STM	M48T86	WMEM1.EXE
STM	M48Z129V	WMEM1.EXE
STM	M48Z35/Y	WMEM1.EXE
STM	M48Z512A/Y	WMEM1.EXE
STM	M48Z58/Y	WMEM1.EXE
STM	M48Z59	WMEM1.EXE
STM	M50FLW040A (PLCC)	WMEM1.EXE
STM	M50FLW040A (TSOP)	WMEM1.EXE
STM	M50FLW040B (PLCC)	WMEM1.EXE
STM	M50FLW080A (PLCC)	WMEM1.EXE
STM	M50FLW080A (TSOP)	WMEM1.EXE
STM	M50FW002	WMEM1.EXE
STM	M50FW016 (TSOP)	WMEM1.EXE
STM	M50FW020	WMEM1.EXE
STM	M50FW040 (PLCC)	WMEM1.EXE
STM	M50FW040 (TSOP)	WMEM1.EXE
STM	M50FW080 (PLCC)	WMEM1.EXE
STM	M50FW080 (TSOP)	WMEM1.EXE
STM	M50LPW002	WMEM1.EXE
STM	M50LPW012	WMEM1.EXE
STM	M50LPW020	WMEM1.EXE
STM	M50LPW040 (PLCC)	WMEM1.EXE
STM	M50LPW041	WMEM1.EXE
STM	M50LPW080 (PLCC)	WMEM1.EXE
STM	M50LPW080 (TSOP)	WMEM1.EXE
STM	M50LPW116 (TSOP)	WMEM1.EXE
STM	M58LT128GSB-ZA	WA28F.EXE ADP-28F128K3-
EBG/ADP-28F128-EBG		
STM	M58LT128HSB-ZA	WA28F.EXE ADP-28F128K3-
EBG/ADP-28F128-EBG		
STM	M58LW032A-N	WA28F.EXE ADP-28F128-TS
STM	M58LW032A-ZA	WA28F.EXE ADP-28F128K3-EBG
STM	M58LW032A-ZA*	WA28F.EXE ADP-28F128-EBG
STM	M58LW032C-N	WA28F.EXE ADP-28F128-TS
STM	M58LW032C-ZA	WA28F.EXE ADP-28F128K3-EBG
STM	M58LW032D-N	WA28F.EXE ADP-28F128-TS
STM	M58LW032D-ZA	WA28F.EXE ADP-28F128-EBG
STM	M58LW032D-ZA*	WA28F.EXE ADP-28F128K3-EBG
STM	M58LW064D-N	WA28F.EXE ADP-28F128-TS
STM	M58LW064D-ZA	WA28F.EXE ADP-28F128-EBG
STM	M58LW064D-ZA*	WA28F.EXE ADP-28F128K3-EBG
STM	M58LW128A-N	WA28F.EXE ADP-28F128-TS
STM	M59PW064-N	WA28F.EXE ADP-MX29F1610-PS
STM	MK/M48T02/B	WMEM1.EXE
STM	MK/M48T08/B	WMEM1.EXE
STM	MK/M48T12/B	WMEM1.EXE
STM	MK/M48T18/B	WMEM1.EXE
STM	MK/M48Z02/B	WMEM1.EXE
STM	MK/M48Z08	WMEM1.EXE
STM	MK/M48Z09	WMEM1.EXE
STM	MK/M48Z12/B	WMEM1.EXE
STM	MK/M48Z18	WMEM1.EXE
STM	MK/M48Z19	WMEM1.EXE
STM	MK48C02A	WMEM1.EXE
STM	MK48C12A	WMEM1.EXE
STM	MK48Z256/Y	WMEM1.EXE
STM	MK48Z30/Y	WMEM1.EXE
STM	MK48Z32/Y	WMEM1.EXE
STM	MK48Z512/Y	WMEM1.EXE
STM	MKI48Z02	WMEM1.EXE
STM	MKI48Z12	WMEM1.EXE
STM	MKI48Z18	WMEM1.EXE
STM	M24128	WSPROM.EXE
STM	M24128A	WSPROM.EXE

STM	M24128B	WSPROM.EXE
STM	M24256	WSPROM.EXE
STM	M24256-A	WSPROM.EXE
STM	M24256-B	WSPROM.EXE
STM	M24256-W	WSPROM.EXE
STM	M24512	WSPROM.EXE
STM	M24C01	WSPROM.EXE
STM	M24C02	WSPROM.EXE
STM	M24C04	WSPROM.EXE
STM	M24C08	WSPROM.EXE
STM	M24C16	WSPROM.EXE
STM	M24C32	WSPROM.EXE
STM	M24C64	WSPROM.EXE
STM	M25P05	WSPROM.EXE
STM	M25P05-A	WSPROM.EXE
STM	M25P10	WSPROM.EXE
STM	M25P10-A	WSPROM.EXE
STM	M25P128 (16PIN)	WSPROM.EXE
STM	M25P128 (8PIN)	WSPROM.EXE
STM	M25P16 (16PIN)	WSPROM.EXE
STM	M25P16 (8PIN)	WSPROM.EXE
STM	M25P20	WSPROM.EXE
STM	M25P32 (16PIN)	WSPROM.EXE
STM	M25P32 (8PIN)	WSPROM.EXE
STM	M25P40	WSPROM.EXE
STM	M25P64 (16PIN)	WSPROM.EXE
STM	M25P64 (8PIN)	WSPROM.EXE
STM	M25P80 (16PIN)	WSPROM.EXE
STM	M25P80 (8PIN)	WSPROM.EXE
STM	M25PE10	WSPROM.EXE
STM	M25PE20	WSPROM.EXE
STM	M25PE40	WSPROM.EXE
STM	M25PE80	WSPROM.EXE
STM	M34A02	WSPROM.EXE
STM	M34C02	WSPROM.EXE
STM	M35080	WSPROM.EXE
STM	M35560P	WSPROM.EXE
STM	M45PE10 (SON8)	WABPP.EXE ADP-W45B012-SON
STM	M45PE10 (SOP8)	WABPP.EXE
STM	M45PE20 (SOP8)	WABPP.EXE
STM	M45PE40 (SON8)	WABPP.EXE ADP-W45B012-SON
STM	M45PE80 (SON8)	WABPP.EXE ADP-W45B012-SON
STM	M93C46 (128*8)	WSPROM.EXE
STM	M93C46 (64*16)	WSPROM.EXE
STM	M93C56 (128*16)	WSPROM.EXE
STM	M93C56 (256*8)	WSPROM.EXE
STM	M93C66 (256*16)	WSPROM.EXE
STM	M93C66 (512*8)	WSPROM.EXE
STM	M93C76 (1024*8)	WSPROM.EXE
STM	M93C76 (512*16)	WSPROM.EXE
STM	M93C86 (1024*16)	WSPROM.EXE
STM	M93C86 (2048*8)	WSPROM.EXE
STM	M93S46	WSPROM.EXE
STM	M93S56	WSPROM.EXE
STM	M93S66	WSPROM.EXE
STM	M95010	WSPROM.EXE
STM	M95020	WSPROM.EXE
STM	M95040	WSPROM.EXE
STM	M95080	WSPROM.EXE
STM	M95128	WSPROM.EXE
STM	M95160	WSPROM.EXE
STM	M95256	WSPROM.EXE
STM	M95320	WSPROM.EXE
STM	M95512	WSPROM.EXE

STM	M95640	WSPROM.EXE
STM	ST24128	WSPROM.EXE
STM	ST24256	WSPROM.EXE
STM	ST24C01	WSPROM.EXE
STM	ST24C02	WSPROM.EXE
STM	ST24C02A	WSPROM.EXE
STM	ST24C04/ST25C04	WSPROM.EXE
STM	ST24C04C/ST25C04C	WSPROM.EXE
STM	ST24C08	WSPROM.EXE
STM	ST24C16/ST24W16	WSPROM.EXE
STM	ST24C32	WSPROM.EXE
STM	ST24C64	WSPROM.EXE
STM	ST24E16	WSPROM.EXE
STM	ST24E32	WSPROM.EXE
STM	ST24E64D	WSPROM.EXE
STM	ST24FC21	WSPROM.EXE
STM	ST24FW21	WSPROM.EXE
STM	ST24LC21	WSPROM.EXE
STM	ST24LC21B	WSPROM.EXE
STM	ST24LW21	WSPROM.EXE
STM	ST24W04C/ST25W04C	WSPROM.EXE
STM	ST25C02A	WSPROM.EXE
STM	ST25C08	WSPROM.EXE
STM	ST25E64D	WSPROM.EXE
STM	ST93C06 (16*16)	WSPROM.EXE
STM	ST93C06 (32*8)	WSPROM.EXE
STM	ST93C46A (128*8)	WSPROM.EXE
STM	ST93C46A (64*16)	WSPROM.EXE
STM	ST93C56 (128*16)	WSPROM.EXE
STM	ST93C56 (256*8)	WSPROM.EXE
STM	ST93C66 (256*16)	WSPROM.EXE
STM	ST93C66 (512*8)	WSPROM.EXE
STM	ST93CS46	WSPROM.EXE
STM	ST93CS47	WSPROM.EXE
STM	ST93CS56	WSPROM.EXE
STM	ST93CS57	WSPROM.EXE
STM	ST93CS66	WSPROM.EXE
STM	ST93CS67	WSPROM.EXE
STM	ST95010	WSPROM.EXE
STM	ST95020	WSPROM.EXE
STM	ST95022	WSPROM.EXE
STM	ST95040	WSPROM.EXE
STM	ST95160	WSPROM.EXE
STM	ST95P02	WSPROM.EXE
STM	ST95P04	WSPROM.EXE
STM	ST95P08	WSPROM.EXE
STM	M27HC641	WBPPGM.EXE
STM	M27HC642	WBPPGM.EXE
STM	DSM2150F5V (TQFP80)	WAPSD4.EXE ADP-PSD835G-TQ80
STM	DSM2180F3	WAPSD4.EXE ADP-PSD8XX-PL
STM	DSM2180F3V	WAPSD4.EXE ADP-PSD8XX-PL
STM	DSM2190F4V	WAPSD4.EXE ADP-PSD8XX-PL
STM	M8803F2W	WAPSD4.EXE ADP-PSD8XX-PL
STM	M8803F2Y	WAPSD4.EXE ADP-PSD8XX-PL
STM	M8803F3W	WAPSD4.EXE ADP-PSD8XX-PL
STM	M8803F3Y	WAPSD4.EXE ADP-PSD8XX-PL
STM	M8813F1W	WAPSD4.EXE ADP-PSD8XX-PL
STM	M8813F1Y	WAPSD4.EXE ADP-PSD8XX-PL
STM	M8813F2W	WAPSD4.EXE ADP-PSD8XX-PL
STM	M8813F2Y	WAPSD4.EXE ADP-PSD8XX-PL
STM	M8813F3W	WAPSD4.EXE ADP-PSD8XX-PL
STM	M8813F3Y	WAPSD4.EXE ADP-PSD8XX-PL
STM	PSD301B	WAPSD3.EXE ADP-PSD301
STM	PSD312B	WAPSD3.EXE ADP-PSD301

STM	PSD4235G2V	WAPSD4.EXE	ADP-PSD835G-TQ80
STM	PSD4256G6V	WAPSD4.EXE	ADP-PSD4256G-
TQ80			
STM	PSD835G2	WAPSD4.EXE	ADP-PSD835G-TQ80
STM	PSD854F2 (QFP52)	WAPSD4.EXE	ADP-PSD8XX-Q52
STM	ST62T/E00	WST62.EXE	
STM	ST62T/E00C	WST62.EXE	
STM	ST62T/E01	WST62.EXE	
STM	ST62T/E01C	WST62.EXE	
STM	ST62T/E03	WST62.EXE	
STM	ST62T/E08C	WST62.EXE	
STM	ST62T/E09	WST62.EXE	
STM	ST62T/E09C	WST62.EXE	
STM	ST62T/E10	WST62.EXE	
STM	ST62T/E10C	WST62.EXE	
STM	ST62T/E15	WAST62.EXE	ADP-ST62X5/-S
STM	ST62T/E15C	WAST62.EXE	ADP-ST62X5/-S
STM	ST62T/E18C	WST62.EXE	
STM	ST62T/E20	WST62.EXE	
STM	ST62T/E20C	WST62.EXE	
STM	ST62T/E25	WAST62.EXE	ADP-ST62X5/-S
STM	ST62T/E25C	WAST62.EXE	ADP-ST62X5/-S
STM	ST62T/E28C	WAST62.EXE	ADP-ST62X5/-S
STM	ST62T/E30B	WAST62.EXE	ADP-ST62X5/-S
STM	ST62T/E32B	WAST62.EXE	ADP-ST62T32-SD
STM	ST62T/E35B	WAST62.EXE	ADP-ST62T32-Q
STM	ST62T/E40	WAST62.EXE	ADP-ST6240-Q
STM	ST62T/E40B	WAST62.EXE	ADP-ST6240-Q
STM	ST62T/E42B	WAST62.EXE	ADP-ST62T42-Q
STM	ST62T/E45B	WAST62.EXE	ADP-ST62T32-Q
STM	ST62T/E52B	WST62.EXE	
STM	ST62T/E52C	WST62.EXE	
STM	ST62T/E53B	WST62.EXE	
STM	ST62T/E53C	WST62.EXE	
STM	ST62T/E55B	WAST62.EXE	ADP-ST62X5/-S
STM	ST62T/E55C	WAST62.EXE	ADP-ST62X5/-S
STM	ST62T/E60	WST62.EXE	
STM	ST62T/E60B	WST62.EXE	
STM	ST62T/E60C	WST62.EXE	
STM	ST62T/E62B	WST62.EXE	
STM	ST62T/E62C	WST62.EXE	
STM	ST62T/E63B	WST62.EXE	
STM	ST62T/E63C	WST62.EXE	
STM	ST62T/E65B	WAST62.EXE	ADP-ST62X5/-S
STM	ST62T/E65C	WAST62.EXE	ADP-ST62X5/-S
STM	ST62T/E80B	WAST62.EXE	ADP-ST62T80-Q
STM	ST62T03C	WST62.EXE	
STM	ST72C215G2	WAST72.EXE	ADP-ST72C215-
SD32/SO28			
STM	ST72C216G1	WAST72.EXE	ADP-ST72C215-
SD32/SO28			
STM	ST72C334J2	WAST72.EXE	ADP-ST72T311-
SD42			
STM	ST72C334J4	WAST72.EXE	ADP-ST72T311-
SD42			
STM	ST72C334N2	WAST72.EXE	ADP-ST72C334-
SD56			
STM	ST72C334N2 (TQFP)	WAST72.EXE	ADP-ST72C334-
TQ64			
STM	ST72C334N4	WAST72.EXE	ADP-ST72C334-
SD56			
STM	ST72C334N4 (TQFP)	WAST72.EXE	ADP-ST72C334-
TQ64			
STM	ST72F260G1	WAST72.EXE	ADP-ST72F26X-S28

STM	ST72F264G2	WAST72.EXE ADP-ST72F26X-S28
STM	ST72F321J7	WAST72.EXE ADP-ST72F324-Q44
STM	ST72F321J9	WAST72.EXE ADP-ST72F324-Q44
STM	ST72F321R6	WAST72.EXE ADP-
ST72F521AR/R-Q64		
STM	ST72F321R9	WAST72.EXE ADP-ST72F521AR-
Q64		
STM	ST72F324BJ6	WAST72.EXE ADP-ST72F324-
SD42		
STM	ST72F324J4	WAST72.EXE ADP-ST72F324-
Q44/SD42		
STM	ST72F324J6	WAST72.EXE ADP-ST72F324-Q44
STM	ST72F324K2	WAST72.EXE ADP-ST72F324-Q32
STM	ST72F324K4	WAST72.EXE ADP-ST72F324-Q32
STM	ST72F324K6	WAST72.EXE ADP-ST72F324-Q32
STM	ST72F521R9	WAST72.EXE ADP-
ST72F521AR/R-Q64		
STM	ST72F561J6	WAST72.EXE ADP-ST72F561-Q44
STM	ST72F621J4	WAST72.EXE ADP-ST72F62X-
QF44		
STM	ST72F621K4	WAST72.EXE ADP-ST72F62X-
SD32		
STM	ST72F621L4	WAST72.EXE ADP-ST72F62X-
SO34		
STM	ST72F63BK4	WAST72.EXE ADP-ST72F63B-
SO34		
STM	ST72T101G1	WAST72.EXE ADP-ST72C215-
SD32		
STM	ST72T101G2	WAST72.EXE ADP-ST72C215-
SD32		
STM	ST72T121J4	WAST72.EXE ADP-ST72T311-
SD42		
STM	ST72T213G1	WAST72.EXE ADP-ST72C215-
SD32		
STM	ST72T251G1	WAST72.EXE ADP-ST72C215-
SD32		
STM	ST72T251G2	WAST72.EXE ADP-ST72C215-
SD32/SO28		
STM	ST72T311J2	WAST72.EXE ADP-ST72T311-
SD42		
STM	ST72T311J4	WAST72.EXE ADP-ST72T311-
SD42		
STM	ST72T331J2	WAST72.EXE ADP-ST72T311-
SD42		
STM	ST72T331J4	WAST72.EXE ADP-ST72T311-
SD42		
STM	ST7FLITE05B6	WAST72.EXE ADP-ST72FLITE0X-
DP16		
STM	ST7FLITE05M6	WAST72.EXE ADP-ST7FLITE0X-
S16		
STM	ST7FLITE05M6*	WAST72.EXE ADP-ST7FLITEXX-
S16		
STM	ST7FLITE09M6	WAST72.EXE ADP-ST7FLITE0X-
S16		
STM	ST7FLITE09M6*	WAST72.EXE ADP-ST7FLITEXX-
S16		
STM	ST7FLITE19B1	WAST72.EXE ADP-ST7FLITE3X-
DP20/SO20		
STM	ST7FLITE25F2M6	WAST72.EXE ADP-ST7FLITE3X-
SO20		
STM	ST7FLITE29M6	WAST72.EXE ADP-ST7FLITE3X-
SO20		
STM	ST7FLITE39	WAST72.EXE ADP-ST7FLITE3X-
DP20/SO20		

STM	ST7FLITES2	WAST72.EXE ADP-ST7FLITE0X-
S16		
STM	ST7FLITES2*	WAST72.EXE ADP-ST7FLITEXX-
S16		
STM	ST7FLITES5	WAST72.EXE ADP-ST72FLITE0X-
DP16		
STM	ST90T158M9Q6	WAST92.EXE ADP-ST90T158-Q
STM	ST92E163N4D0	WAST92.EXE ADP-ST92E163-SD
STM	ST92E163N4D0L	WAST92.EXE ADP-ST92E163-SD
STM	ST92T163E (QFP64)	WAST92.EXE ADP-ST92T163-Q64
STM	ST92T163L (QFP64)	WAST92.EXE ADP-ST92T163-Q64
STM	UPSD3212A (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52 (V2)		
STM	UPSD3212A (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80 (V2)		
STM	UPSD3212C (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52 (V2)		
STM	UPSD3212C (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80 (V2)		
STM	UPSD3212CV (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52 (V2)		
STM	UPSD3212CV (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80 (V2)		
STM	UPSD3233B (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52 (V2)		
STM	UPSD3233B (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80 (V2)		
STM	UPSD3233BV (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52 (V2)		
STM	UPSD3233BV (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80 (V2)		
STM	UPSD3234A (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52 (V2)		
STM	UPSD3234A (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80 (V2)		
STM	UPSD3234BV (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80 (V2)		
STM	UPSD3253B (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52 (V2)		
STM	UPSD3253B (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80 (V2)		
STM	UPSD3253BV (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52 (V2)		
STM	UPSD3253BV (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80 (V2)		
STM	UPSD3254A (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52 (V2)		
STM	UPSD3254A (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80 (V2)		
STM	UPSD3254BV (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80 (V2)		
STM	UPSD3312D (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52V2		
STM	UPSD3312DV (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52V2		
STM	UPSD3333D (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52V2		
STM	UPSD3333D (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80V2		
STM	UPSD3333DV (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52V2		
STM	UPSD3333DV (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80V2		
STM	UPSD3334D (TQFP80)	WAPSD4.EXE ADP-UPSD3200-

TQ80V2		
STM	UPSD3334DV (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80V2		
STM	UPSD3354D (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52V2		
STM	UPSD3354D (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80V2		
STM	UPSD3354DV (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52V2		
STM	UPSD3354DV (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80V2		
STM	UPSD3422E (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52V2		
STM	UPSD3422E (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80V2		
STM	UPSD3422EV (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52V2		
STM	UPSD3422EV (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80V2		
STM	UPSD3433E (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52V2		
STM	UPSD3433E (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80V2		
STM	UPSD3433EV (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52V2		
STM	UPSD3433EV (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80V2		
STM	UPSD3434E (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52V2		
STM	UPSD3434E (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80V2		
STM	UPSD3434EV (TQFP52)	WAPSD4.EXE ADP-UPSD3200-
TQ52V2		
STM	UPSD3434EV (TQFP80)	WAPSD4.EXE ADP-UPSD3200-
TQ80V2		
STM	Z86E11	WST62.EXE
STM	Z86E21	WST62.EXE
STM	ZPSD301B	WAPSD3.EXE ADP-PSD301
STM	ZPSD302B	WAPSD3.EXE ADP-PSD301
STM	ZPSD303B	WAPSD3.EXE ADP-PSD301
STM	GAL16AS	WPLD1.EXE
STM	GAL16V8	WPLD1.EXE
STM	GAL16V8A	WPLD1.EXE
STM	GAL16V8AS	WPLD1.EXE
STM	GAL16V8S	WPLD1.EXE
STM	GAL20AS	WPLD1.EXE
STM	GAL20V8	WPLD1.EXE
STM	GAL20V8A	WPLD1.EXE
STM	GAL20V8AS	WPLD1.EXE
STM	GAL20V8S	WPLD1.EXE
STM	GAL6001	WPLD1.EXE
SUMMIT	S93WD663	WSPROM.EXE
SUMMIT	S39421	WMPU1.EXE
SUNPLUS	SPCE061A	WAHT48R.EXE ADP-PA7647-PL84
SUNPLUS	SPMC65P2102A-DP18	WAMPU2.EXE
SUNPLUS	SPMC65P2104A-DP18	WAMPU2.EXE
SUNPLUS	SPMC65P2202A-DP20	WAMPU2.EXE
SUNPLUS	SPMC65P2204A-DP20	WAMPU2.EXE
SUNPLUS	SPMC65P2404A-DP20	WAMPU2.EXE
SUNPLUS	SPMC65P2404A-DP28	WAMPU2.EXE
SUNPLUS	SPMC65P2408A-DP28	WAMPU2.EXE
SUNPLUS	SPMC75F2313A-SD42	WAMPU2.EXE ADP-
SPMC75F2313A-SD42		
SYNCMOS	F29C31004B	WMEM1.EXE

SYNCMOS	F29C31004T	WMEM1.EXE
SYNCMOS	F29C31400T	WA28F.EXE ADP-29F800-
TS/TSV2		
SYNCMOS	F29C31400T*	WA28F.EXE ADP-49F800-
TS/TSV2		
SYNCMOS	F29C51000T	WMEM1.EXE
SYNCMOS	F29C51001B	WMEM1.EXE
SYNCMOS	F29C51001T	WMEM1.EXE
SYNCMOS	F29C51002B	WMEM1.EXE
SYNCMOS	F29C51002T	WMEM1.EXE
SYNCMOS	F29C51004B	WMEM1.EXE
SYNCMOS	F29C51004T	WMEM1.EXE
SYNCMOS	F29LC51000	WMEM1.EXE
SYNCMOS	F29LC51001	WMEM1.EXE
SYNCMOS	F29LC51002	WMEM1.EXE
SYNCMOS	S29C31001T	WMEM1.EXE
SYNCMOS	S29C31004T	WMEM1.EXE
SYNCMOS	S29C51001T	WMEM1.EXE
SYNCMOS	S29C51002T	WMEM1.EXE
SYNCMOS	S29C51004T	WMEM1.EXE
SYNCMOS	SM2952	WPGM51.EXE
SYNCMOS	SM2958	WPGM51.EXE
SYNCMOS	SM2964	WPGM51.EXE
SYNCMOS	SM2965	WPGM51.EXE
SYNCMOS	SM59128	WPGM51.EXE
SYNCMOS	SM59264	WPGM51.EXE
SYNCMOS	SM5964	WPGM51.EXE
SYNCMOS	SM5964A	WPGM51.EXE
SYNCMOS	SM79108	WPGM51.EXE
SYNCMOS	SM79164	WPGM51.EXE
SYNCMOS	SM894051	WPGM51.EXE
SYNCMOS	SM8951	WPGM51.EXE
SYNCMOS	SM89516	WPGM51.EXE
SYNCMOS	SM89516A	WPGM51.EXE
SYNCMOS	SM8951A	WPGM51.EXE
SYNCMOS	SM8951B	WPGM51.EXE
SYNCMOS	SM8952	WPGM51.EXE
SYNCMOS	SM8952A	WPGM51.EXE
SYNCMOS	SM8954	WPGM51.EXE
SYNCMOS	SM8954A	WPGM51.EXE
SYNCMOS	SM8958	WPGM51.EXE
SYNCMOS	SM8958A	WPGM51.EXE
SYNCMOS	SM89S16R1	WPGM51.EXE
SYNCMOS	SM89T16R1	WPGM51.EXE
SYNTEK	STK6006	WMPU1.EXE ADP-STK6006-
DIP40/-SDIP42/-PL		
SYNTEK	STK6011-3V	WPGM51.EXE CNV-PLCC-
MPU51A/B		
SYNTEK	STK6011-5V	WPGM51.EXE CNV-PLCC-
MPU51A/B		
SYNTEK	STK6012-3V	WPGM51.EXE CNV-PLCC-
MPU51A/B		
SYNTEK	STK6012-5V	WPGM51.EXE CNV-PLCC-
MPU51A/B		
SYNTEK	STK6012B-5V	WPGM51.EXE CNV-PLCC-
MPU51A/B		
SYNTEK	STK6021-3V	WPGM51.EXE CNV-PLCC-
MPU51A/B		
SYNTEK	STK99110N18P	WMPU1.EXE
SYNTEK	STK99110N20P	WMPU1.EXE
SYNTEK	STKUSB97DV03A	WMPU1.EXE
Silicon Labs	C8051F005	WASIG.EXE ADP-C8051F023-
Q64		
Silicon Labs	C8051F020	WASIG.EXE ADP-C8051FXXX-

Q100			
Silicon Labs	C8051F022	WASIG.EXE	ADP-C8051FXXX-
Q100			
Silicon Labs	C8051F023	WASIG.EXE	ADP-C8051F023-
Q64			
Silicon Labs	C8051F126	WASIG.EXE	ADP-C8051FXXX-
Q100			
Silicon Labs	C8051F130	WASIG.EXE	ADP-C8051FXXX-
Q100			
Silicon Labs	C8051F133	WASIG.EXE	ADP-C8051F023-
Q64			
Silicon Labs	C8051F206	WASIG.EXE	ADP-C8051F226-
Q48			
Silicon Labs	C8051F226	WASIG.EXE	ADP-C8051F226-
Q48			
Silicon Labs	C8051F230	WASIG.EXE	ADP-C8051F226-
Q48			
Silicon Labs	C8051F236	WASIG.EXE	ADP-C8051F226-
Q48			
Silicon Labs	C8051F310	WASIG.EXE	ADP-C8051F320-
Q/-QV2			
Silicon Labs	C8051F311	WASIG.EXE	ADP-C8051F321-
QFN			
Silicon Labs	C8051F312	WASIG.EXE	ADP-C8051F320-
QV2			
Silicon Labs	C8051F313	WASIG.EXE	ADP-C8051F321-
QFN			
Silicon Labs	C8051F314	WASIG.EXE	ADP-C8051F320-
Q/-QV2			
Silicon Labs	C8051F315	WASIG.EXE	ADP-C8051F321-
QFN			
Silicon Labs	C8051F320	WASIG.EXE	ADP-C8051F320-
Q/-QV2			
Silicon Labs	C8051F321	WASIG.EXE	ADP-C8051F321-
QFN			
Silicon Labs	C8051F327	WASIG.EXE	ADP-C8051F321-
QFN			
Silicon Labs	C8051F330	WASIG.EXE	ADP-C8051F33X-
QFN			
Silicon Labs	C8051F331	WASIG.EXE	ADP-C8051F33X-
QFN			
Silicon Labs	C8051F346	WASIG.EXE	ADP-C8051F320-
QV2			
Silicon Labs	C8051F350	WASIG.EXE	ADP-C8051F320-
QV2			
Silicon Labs	C8051F351	WASIG.EXE	ADP-C8051F321-
QFN			
TEMIC	T87C5101	WPGM51.EXE	
TEMIC	T89C51RD2	WPGM51.EXE	
TEMIC	TS87C51RA2	WPGM51.EXE	
TEMIC	TS87C51RB2	WPGM51.EXE	
TEMIC	TS87C51RC2	WPGM51.EXE	
TEMIC	TS87C51RD2	WPGM51.EXE	
TEMIC	TS87C51U2	WPGM51.EXE	
TEMIC	TS87C52X2	WPGM51.EXE	
TEMIC	TS87C54X2	WPGM51.EXE	
TEMIC	TS87C58X2	WPGM51.EXE	
TEMIC	TSC87251A1	WPGM51.EXE	CNV-PLCC-87251A1
TEMIC	TSC87251G1	WPGM51.EXE	
TEMIC	TSC87251G1A	WPGM51.EXE	
TEMIC	TSC87251G2	WPGM51.EXE	
TEMIC	TSC87251G2D	WPGM51.EXE	
TEMIC	TSC87251G2D_L	WPGM51.EXE	
TEMIC	TSC8751C3	WPGM51.EXE	

TEMIC	TSC8751I2	WPGM51.EXE
TEMIC	TSC8754	WPGM51.EXE
TEMIC	TSC8758	WPGM51.EXE
TEMIC	TSC87C51	WPGM51.EXE
TEMIC	TSC87C52	WPGM51.EXE
TI	TMS2516 [25V]	WMEM1.EXE
TI	TMS2532A [21V]	WMEM1.EXE
TI	TMS2532 [25V]	WMEM1.EXE
TI	TMS2564 [25V]	WMEM1.EXE
TI	TMS27128 [21V]	WMEM1.EXE
TI	TMS2732A [21V]	WMEM1.EXE
TI	TMS2732 [25V]	WMEM1.EXE
TI	TMS2764 [21V]	WMEM1.EXE
TI	TMS27C010A	WMEM1.EXE
TI	TMS27C020	WMEM1.EXE
TI	TMS27C040	WMEM1.EXE
TI	TMS27C128 [13V]	WMEM1.EXE
TI	TMS27C210	WMEM1.EXE
TI	TMS27C240	WMEM1.EXE
TI	TMS27C256 [13V]	WMEM1.EXE
TI	TMS27C32 [13V]	WMEM1.EXE
TI	TMS27C512 [13V]	WMEM1.EXE
TI	TMS27C64 [13V]	WMEM1.EXE
TI	TMS27PC010A	WMEM1.EXE
TI	TMS27PC040	WMEM1.EXE
TI	TMS27PC128 [13V]	WMEM1.EXE
TI	TMS27PC210	WMEM1.EXE
TI	TMS27PC240	WMEM1.EXE
TI	TMS27PC256 [13V]	WMEM1.EXE
TI	TMS27PC32 [13V]	WMEM1.EXE
TI	TMS27PC512 [13V]	WMEM1.EXE
TI	TMS27PC64 [13V]	WMEM1.EXE
TI	TMS87C110	WMEM1.EXE
TI	TMS87C257 [13V]	WMEM1.EXE
TI	TMS87C510	WMEM1.EXE
TI	TMS28F010	WMEM1.EXE
TI	TMS28F020	WMEM1.EXE
TI	TMS28F040	WMEM1.EXE
TI	TMS28F200AEB	WA28F.EXE ADP-28F400P
TI	TMS28F200AEB-CD	WA28F.EXE ADP-28F160-TS
TI	TMS28F200AEB-CD*	WA28F.EXE ADP-28F800CV-TS
TI	TMS28F200AET	WA28F.EXE ADP-28F400P
TI	TMS28F200AET-CD	WA28F.EXE ADP-28F160-TS
TI	TMS28F200AET-CD*	WA28F.EXE ADP-28F800CV-TS
TI	TMS28F200AFB	WA28F.EXE ADP-28F400P
TI	TMS28F200AFB-CD	WA28F.EXE ADP-28F160-TS
TI	TMS28F200AFB-CD*	WA28F.EXE ADP-28F800CV-TS
TI	TMS28F200AFT	WA28F.EXE ADP-28F400P
TI	TMS28F200AFT-CD	WA28F.EXE ADP-28F160-TS
TI	TMS28F200AFT-CD*	WA28F.EXE ADP-28F800CV-TS
TI	TMS28F200AMB	WA28F.EXE ADP-28F400P
TI	TMS28F200AMB-CD	WA28F.EXE ADP-28F160-TS
TI	TMS28F200AMB-CD*	WA28F.EXE ADP-28F800CV-TS
TI	TMS28F200AMT	WA28F.EXE ADP-28F400P
TI	TMS28F200AMT-CD	WA28F.EXE ADP-28F160-TS
TI	TMS28F200AMT-CD*	WA28F.EXE ADP-28F800CV-TS
TI	TMS28F200ASB	WA28F.EXE ADP-28F400P
TI	TMS28F200ASB-CD	WA28F.EXE ADP-28F160-TS
TI	TMS28F200ASB-CD*	WA28F.EXE ADP-28F800CV-TS
TI	TMS28F200AST	WA28F.EXE ADP-28F400P
TI	TMS28F200AST-CD	WA28F.EXE ADP-28F160-TS
TI	TMS28F200AST-CD*	WA28F.EXE ADP-28F800CV-TS
TI	TMS28F200AZB	WA28F.EXE ADP-28F400P
TI	TMS28F200AZB-CD	WA28F.EXE ADP-28F160-TS

TI	TMS28F200AZB-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F200AZT	WA28F.EXE	ADP-28F400P
TI	TMS28F200AZT-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F200AZT-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F210	WMEM1.EXE	
TI	TMS28F400AEB	WA28F.EXE	ADP-28F400P
TI	TMS28F400AEB-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F400AEB-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F400AET	WA28F.EXE	ADP-28F400P
TI	TMS28F400AET-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F400AET-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F400AFB	WA28F.EXE	ADP-28F400P
TI	TMS28F400AFB-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F400AFB-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F400AFT	WA28F.EXE	ADP-28F400P
TI	TMS28F400AFT-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F400AFT-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F400AMB	WA28F.EXE	ADP-28F400P
TI	TMS28F400AMB-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F400AMB-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F400AMT	WA28F.EXE	ADP-28F400P
TI	TMS28F400AMT-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F400AMT-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F400ASB	WA28F.EXE	ADP-28F400P
TI	TMS28F400ASB-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F400ASB-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F400AST	WA28F.EXE	ADP-28F400P
TI	TMS28F400AST-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F400AST-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F400AZB	WA28F.EXE	ADP-28F400P
TI	TMS28F400AZB-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F400AZB-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F400AZT	WA28F.EXE	ADP-28F400P
TI	TMS28F400AZT-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F400AZT-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F400BZB	WA28F.EXE	ADP-28F400P
TI	TMS28F400BZT	WA28F.EXE	ADP-28F400P
TI	TMS28F512	WMEM1.EXE	
TI	TMS28F800AEB	WA28F.EXE	ADP-28F400P
TI	TMS28F800AEB-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F800AEB-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F800AET	WA28F.EXE	ADP-28F400P
TI	TMS28F800AET-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F800AET-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F800ALB	WA28F.EXE	ADP-28F400P
TI	TMS28F800ALB-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F800ALB-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F800ALT	WA28F.EXE	ADP-28F400P
TI	TMS28F800ALT-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F800ALT-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F800ASB	WA28F.EXE	ADP-28F400P
TI	TMS28F800ASB-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F800ASB-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F800AST	WA28F.EXE	ADP-28F400P
TI	TMS28F800AST-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F800AST-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F800AVB	WA28F.EXE	ADP-28F400P
TI	TMS28F800AVB-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F800AVB-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F800AVT	WA28F.EXE	ADP-28F400P
TI	TMS28F800AVT-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F800AVT-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F800AZB	WA28F.EXE	ADP-28F400P
TI	TMS28F800AZB-CD	WA28F.EXE	ADP-28F160-TS

TI	TMS28F800AZB-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS28F800AZT	WA28F.EXE	ADP-28F400P
TI	TMS28F800AZT-CD	WA28F.EXE	ADP-28F160-TS
TI	TMS28F800AZT-CD*	WA28F.EXE	ADP-28F800CV-TS
TI	TMS29F010	WMEM1.EXE	
TI	TMS29F040	WMEM1.EXE	
TI	TMS29LF040	WMEM1.EXE	
TI	TBP18S030	WBPPGM.EXE	
TI	TBP18SA030	WBPPGM.EXE	
TI	TBP24S10	WBPPGM.EXE	
TI	TBP24S166	WBPPGM.EXE	
TI	TBP24S41	WBPPGM.EXE	
TI	TBP24S81	WBPPGM.EXE	
TI	TBP24SA10	WBPPGM.EXE	
TI	TBP24SA166	WBPPGM.EXE	
TI	TBP24SA41	WBPPGM.EXE	
TI	TBP24SA81	WBPPGM.EXE	
TI	TBP28L166	WBPPGM.EXE	
TI	TBP28L22	WBPPGM.EXE	
TI	TBP28L42	WBPPGM.EXE	
TI	TBP28L45	WBPPGM.EXE	
TI	TBP28L85	WBPPGM.EXE	
TI	TBP28L86	WBPPGM.EXE	
TI	TBP28LA22	WBPPGM.EXE	
TI	TBP28S165	WBPPGM.EXE	
TI	TBP28S166	WBPPGM.EXE	
TI	TBP28S2708	WBPPGM.EXE	
TI	TBP28S42	WBPPGM.EXE	
TI	TBP28S45	WBPPGM.EXE	
TI	TBP28S46	WBPPGM.EXE	
TI	TBP28S85	WBPPGM.EXE	
TI	TBP28S86	WBPPGM.EXE	
TI	TBP28SA166	WBPPGM.EXE	
TI	TBP28SA42	WBPPGM.EXE	
TI	TBP28SA46	WBPPGM.EXE	
TI	TBP28SA86	WBPPGM.EXE	
TI	TMS27C291	WBPPGM.EXE	
TI	TMS27C292	WBPPGM.EXE	
TI	MSC1210Y2	WASIG.EXE	ADP-MSC1210-TQ
TI	MSC1210Y3	WASIG.EXE	ADP-MSC1210-TQ
TI	MSC1210Y4	WASIG.EXE	ADP-MSC1210-TQ
TI	MSC1210Y5	WASIG.EXE	ADP-MSC1210-TQ
TI	MSP430F1101AIDW	WAMSP.EXE	ADP-M430F11X1-
S20			
TI	MSP430F1101AIPW	WAMSP.EXE	ADP-M430F2XXX-
SS20			
TI	MSP430F1111AIPW	WAMSP.EXE	ADP-M430F2XXX-
SS20			
TI	MSP430F1121AIDW	WAMSP.EXE	ADP-M430F11X1-
S20			
TI	MSP430F1121AIPW	WAMSP.EXE	ADP-M430F2XXX-
SS20			
TI	MSP430F1121IDW	WAMSP.EXE	ADP-M430F11X1-
S20			
TI	MSP430F1122IPW	WAMSP.EXE	ADP-M430F2XXX-
SS20			
TI	MSP430F1222IRHB	WAMSP.EXE	ADP-M430F12X2-
MLF32			
TI	MSP430F1232IDW	WAMSP.EXE	ADP-M430F12X2-
S28			
TI	MSP430F1232IPW	WAMSP.EXE	ADP-M430F12X2-
SS28			
TI	MSP430F1232IRHB	WAMSP.EXE	ADP-M430F12X2-
MLF32			

TI	MSP430F133IPM	WAMSP.EXE ADP-M430F1XX-Q64
TI	MSP430F135IPM	WAMSP.EXE ADP-M430F1XX-Q64
TI	MSP430F1471IPM	WAMSP.EXE ADP-M430F1XX-Q64
TI	MSP430F147IPM	WAMSP.EXE ADP-M430F1XX-Q64
TI	MSP430F1481IRTD	WAMSP.EXE ADP-M430F1XX1-
MLF64		
TI	MSP430F148IPM	WAMSP.EXE ADP-M430F1XX-Q64
TI	MSP430F149IPAG	WAMSP.EXE ADP-M430F1XX-Q64
TI	MSP430F149IPM	WAMSP.EXE ADP-M430F1XX-Q64
TI	MSP430F155IPM	WAMSP.EXE ADP-M430F1XX-Q64
TI	MSP430F167IPM	WAMSP.EXE ADP-M430F1XX-Q64
TI	MSP430F2001IPW	WAMSP.EXE ADP-M430F2XXX-
SS20		
TI	MSP430F2003IPW	WAMSP.EXE ADP-M430F2XXX-
SS20		
TI	MSP430F2013IPW	WAMSP.EXE ADP-M430F2XXX-
SS20		
TI	MSP430F2101IPW	WAMSP.EXE ADP-M430F2XXX-
SS20		
TI	MSP430F2111IDW	WAMSP.EXE ADP-M430F11X1-
S20		
TI	MSP430F2111IPW	WAMSP.EXE ADP-M430F2XXX-
SS20		
TI	MSP430F413IPM	WAMSP.EXE ADP-M430F1XX-Q64
TI	MSP430F415IPM	WAMSP.EXE ADP-M430F1XX-Q64
TI	MSP430F447IPZ	WAMSP.EXE ADP-M430F1XX-
Q100		
TI	MSP430F448IPZ	WAMSP.EXE ADP-M430F1XX-
Q100		
TI	MSP430F449IPZ	WAMSP.EXE ADP-M430F1XX-
Q100		
TI	MSP430P325AIFN	WAMSP.EXE ADP-M430P325A-
PL68		
TI	MSP430P325IPG	WAMSP.EXE ADP-M430P325-Q64
TI	MSP430P325IPM	WAMSP.EXE ADP-M430F1XX-Q64
TI	TMS320E14	WATMP9.EXE ADP-TMS320E14
TI	TMS320E15	WMPU2.EXE
TI	TMS320E15 PL44	WATMP9.EXE ADP-TMS320E1P
TI	TMS320E17	WMPU2.EXE
TI	TMS320E17 PL44	WATMP9.EXE ADP-TMS320E1P
TI	TMS320E25	WATMP9.EXE ADP-TMS320E
TI	TMS320P14	WATMP9.EXE ADP-TMS320E14
TI	TMS320P15	WMPU2.EXE
TI	TMS320P15 PL44	WATMP9.EXE ADP-TMS320E1P
TI	TMS320P17	WMPU2.EXE
TI	TMS320P17 PL44	WATMP9.EXE ADP-TMS320E1P
TI	TMS320P25	WATMP9.EXE ADP-TMS320E
TI	TMS370C610/A	WAMPU5.EXE ADP-370CX1X
TI	TMS370C610/A (PLCC28)	WAMPU5.EXE ADP-370CX1X-PL
TI	TMS370C702	WAMPU5.EXE ADP-370CX1X
TI	TMS370C702 (PLCC28)	WAMPU5.EXE ADP-370CX1X-PL
TI	TMS370C710/A	WAMPU5.EXE ADP-370CX1X
TI	TMS370C710/A (PLCC28)	WAMPU5.EXE ADP-370CX1X-PL
TI	TMS370C712/A	WAMPU5.EXE ADP-370CX1X
TI	TMS370C712/A (PLCC28)	WAMPU5.EXE ADP-370CX1X-PL
TI	TMS370C742/A	WAMPU5.EXE ADP-370CX4X
TI	TMS370C742/A (PLCC44)	WAMPU5.EXE ADP-370CX4X-PL
TI	TMS370C756/A (PLCC68)	WAMPU5.EXE ADP-370CX5X-PL
TI	TMS370C758A (PLCC68)	WAMPU5.EXE ADP-370CX5X-PL
TI	TMS77C82	WMPU2.EXE
TI	EP1810	WA1810.EXE ADP-1810PLCC
TI	EP1830	WA1810.EXE ADP-1810PLCC
TI	EP330	WEPLD1.EXE
TI	EP610	WEPLD1.EXE

TI	EP610-XXT	WEPLD1.EXE
TI	EP630	WEPLD1.EXE
TI	EP630-XXT	WEPLD1.EXE
TI	EP910	WEPLD1.EXE
TI	TI82S105A/B	WPLD1.EXE
TI	TIB82S167	WPLD1.EXE
TI	TIBFPLS506	WPLD1.EXE
TI	TIBPAD16N8-7	WPLD1.EXE
TI	TIBPAD18N8-6	WPLD1.EXE
TI	TIBPAL16L8-10	WPLD1.EXE
TI	TIBPAL16L8-12	WPLD1.EXE
TI	TIBPAL16L8-15	WPLD1.EXE
TI	TIBPAL16L8-25	WPLD1.EXE
TI	TIBPAL16L8-5	WPLD1.EXE
TI	TIBPAL16L8-7	WPLD1.EXE
TI	TIBPAL16L8H-15	WPLD1.EXE
TI	TIBPAL16R4-10	WPLD1.EXE
TI	TIBPAL16R4-12	WPLD1.EXE
TI	TIBPAL16R4-15	WPLD1.EXE
TI	TIBPAL16R4-25	WPLD1.EXE
TI	TIBPAL16R4-5	WPLD1.EXE
TI	TIBPAL16R4-7	WPLD1.EXE
TI	TIBPAL16R4H-15	WPLD1.EXE
TI	TIBPAL16R6-10	WPLD1.EXE
TI	TIBPAL16R6-12	WPLD1.EXE
TI	TIBPAL16R6-15	WPLD1.EXE
TI	TIBPAL16R6-25	WPLD1.EXE
TI	TIBPAL16R6-5	WPLD1.EXE
TI	TIBPAL16R6-7	WPLD1.EXE
TI	TIBPAL16R6H-15	WPLD1.EXE
TI	TIBPAL16R8-10	WPLD1.EXE
TI	TIBPAL16R8-12	WPLD1.EXE
TI	TIBPAL16R8-15	WPLD1.EXE
TI	TIBPAL16R8-25	WPLD1.EXE
TI	TIBPAL16R8-5	WPLD1.EXE
TI	TIBPAL16R8-7	WPLD1.EXE
TI	TIBPAL16R8H-15	WPLD1.EXE
TI	TIBPAL20L10	WPLD1.EXE
TI	TIBPAL20L8-10	WPLD1.EXE
TI	TIBPAL20L8-15	WPLD1.EXE
TI	TIBPAL20L8-25	WPLD1.EXE
TI	TIBPAL20L8-5	WPLD1.EXE
TI	TIBPAL20L8-7	WPLD1.EXE
TI	TIBPAL20R4-10	WPLD1.EXE
TI	TIBPAL20R4-15	WPLD1.EXE
TI	TIBPAL20R4-25	WPLD1.EXE
TI	TIBPAL20R4-5	WPLD1.EXE
TI	TIBPAL20R4-7	WPLD1.EXE
TI	TIBPAL20R6-10	WPLD1.EXE
TI	TIBPAL20R6-15	WPLD1.EXE
TI	TIBPAL20R6-25	WPLD1.EXE
TI	TIBPAL20R6-5	WPLD1.EXE
TI	TIBPAL20R6-7	WPLD1.EXE
TI	TIBPAL20R8-10	WPLD1.EXE
TI	TIBPAL20R8-15	WPLD1.EXE
TI	TIBPAL20R8-25	WPLD1.EXE
TI	TIBPAL20R8-5	WPLD1.EXE
TI	TIBPAL20R8-7	WPLD1.EXE
TI	TIBPAL20X10	WPLD1.EXE
TI	TIBPAL20X4	WPLD1.EXE
TI	TIBPAL20X8	WPLD1.EXE
TI	TIBPAL22V10	WPLD1.EXE
TI	TIBPAL22V10-10	WPLD1.EXE
TI	TIBPAL22V10-15	WPLD1.EXE

TI	TIBPAL22V10-7	WPLD1.EXE
TI	TIBPAL22V10A	WPLD1.EXE
TI	TIBPAL22VP10-20	WPLD1.EXE
TI	TIBPAL22VP10-25	WPLD1.EXE
TI	TIBPSG507	WPLD1.EXE
TI	TICPAL16R4-55	WATIC.EXE ADP-TICPAL
TI	TICPAL22V10Z (TURBO)	WPLD1.EXE
TI	TICPAL22V10Z (ZERO)	WPLD1.EXE
TMC	24A02	WSPROM.EXE
TMC	24A02 (SOT25)	WSPROM.EXE
TMC	24A02 (T)	WSPROM.EXE
TMC	24A08	WSPROM.EXE
TMC	24A08 (SOT25)	WSPROM.EXE
TMC	24A16	WSPROM.EXE
TMC	24A16 (SOT25)	WSPROM.EXE
TMC	24A32	WSPROM.EXE
TMC	24A64	WSPROM.EXE
TMC	93LC46	WSPROM.EXE
TMC	93LC46M/MA	WSPROM.EXE
TMC	93LC46M/MB	WSPROM.EXE
TMC	93LC56M/MA	WSPROM.EXE
TMC	93LC56M/MB	WSPROM.EXE
TMC	93LC66M/MA	WSPROM.EXE
TMC	93LC66M/MB	WSPROM.EXE
TOPRO	TP2804H	WPGM51.EXE
TOPRO	TP2804L	WPGM51.EXE
TOPRO	TP2808H	WPGM51.EXE
TOPRO	TP2808L	WPGM51.EXE
TOSHIBA	27256A[12.75V]	WMEM1.EXE
TOSHIBA	N3001-016	WAEP42.EXE ADP-EP42
TOSHIBA	TC532000	WMEM1.EXE
TOSHIBA	TC534000	WMEM1.EXE
TOSHIBA	TC541000	WMEM1.EXE
TOSHIBA	TC541001	WMEM1.EXE
TOSHIBA	TC54256AP[12.75V]	WMEM1.EXE
TOSHIBA	TC544200P/F	WMEM1.EXE
TOSHIBA	TC54512AP[12.75V]	WMEM1.EXE
TOSHIBA	TC54H1001	WMEM1.EXE
TOSHIBA	TC54H1024AP/AF	WMEM1.EXE
TOSHIBA	TC571000	WMEM1.EXE
TOSHIBA	TC571001	WMEM1.EXE
TOSHIBA	TC571024	WMEM1.EXE
TOSHIBA	TC5716200D	WAEP42.EXE ADP-EP42
TOSHIBA	TC572000	WMEM1.EXE
TOSHIBA	TC57256AD[12.75V]	WMEM1.EXE
TOSHIBA	TC57256D[12.75V]	WMEM1.EXE
TOSHIBA	TC574000	WMEM1.EXE
TOSHIBA	TC574096D	WMEM1.EXE
TOSHIBA	TC574200D	WMEM1.EXE
TOSHIBA	TC57512AD[12.75V]	WMEM1.EXE
TOSHIBA	TC578200D	WAEP42.EXE ADP-EP42
TOSHIBA	TC57C1025A	WMEM1.EXE
TOSHIBA	TC57H1000	WMEM1.EXE
TOSHIBA	TC57H1001	WMEM1.EXE
TOSHIBA	TC57H1024/A	WMEM1.EXE
TOSHIBA	TC57H1025AD	WMEM1.EXE
TOSHIBA	THA16P0100	WAEP42.EXE ADP-EP42
TOSHIBA	TMM27128A[12.5V]	WMEM1.EXE
TOSHIBA	TMM27128D[21V]	WMEM1.EXE
TOSHIBA	TMM27256D[21V]	WMEM1.EXE
TOSHIBA	TMM2732[25V]	WMEM1.EXE
TOSHIBA	TMM27512[12.75V]	WMEM1.EXE
TOSHIBA	TMM2764A[12.5V]	WMEM1.EXE
TOSHIBA	TMM2764D[21V]	WMEM1.EXE

TOSHIBA	TC58F010	WMEM1.EXE
TOSHIBA	TC58F400F	WA28F.EXE ADP-29F800-PS
TOSHIBA	TC58F400FT	WA28F.EXE ADP-29F800-
TS/TSV2		
TOSHIBA	TC58F400FT*	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58F401F	WA28F.EXE ADP-29F800-PS
TOSHIBA	TC58F401FT	WA28F.EXE ADP-29F800-
TS/TSV2		
TOSHIBA	TC58F401FT*	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVB004FT	WA28F.EXE ADP-29F008-TS
TOSHIBA	TC58FVB160FT	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVB321FT	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVB321FT (Hidden ROM)	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVB641FT	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVB641FT (Hidden ROM)	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVB800F	WA28F.EXE ADP-29F800-PS
TOSHIBA	TC58FVB800FT	WA28F.EXE ADP-29F800-
TS/TSV2		
TOSHIBA	TC58FVB800FT*	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVM5B2ATG	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVM5B3AFT	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVM5T2ATG	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVM6B2AFT	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVM6B2AFTG	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVM6B5BTG	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVM6T2AFT	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVM6T5BTG	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVM7B2ATG	WA28F.EXE ADP-29LV640-TS
TOSHIBA	TC58FVM7T2AFT	WA28F.EXE ADP-29LV640-TS
TOSHIBA	TC58FVM7T5BTG	WA28F.EXE ADP-29LV640-TS
TOSHIBA	TC58FVT004FT	WA28F.EXE ADP-29F008-TS
TOSHIBA	TC58FVT160AFT	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVT160FT	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVT321FT	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVT321FT (Hidden ROM)	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVT400FT	WA28F.EXE ADP-29F800-
TS/TSV2		
TOSHIBA	TC58FVT400FT*	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVT641FT	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVT641FT (Hidden ROM)	WA28F.EXE ADP-49F800-
TS/TSV2		
TOSHIBA	TC58FVT800F	WA28F.EXE ADP-29F800-PS

TOSHIBA TS/TSV2	TC58FVT800FT	WA28F.EXE ADP-29F800-
TOSHIBA TS/TSV2	TC58FVT800FT*	WA28F.EXE ADP-49F800-
TOSHIBA	TC89101P(128*8)	WSPROM.EXE
TOSHIBA	TC89101P(64*16)	WSPROM.EXE
TOSHIBA	TC89102P(128*16)	WSPROM.EXE
TOSHIBA	TC89102P(256*8)	WSPROM.EXE
TOSHIBA	TC89122P	WSPROM.EXE
TOSHIBA	8755A	WPGM51.EXE
TOSHIBA	TMP1940FDBF	WATMP9.EXE ADP-TMP1940FDBF-
TQ		
TOSHIBA	TMP47P1637VN	WATMP9.EXE ADP-TMP47P1637-
SD		
TOSHIBA	TMP47P201VP	WATMP9.EXE ADP-TMP47P201
TOSHIBA	TMP47P202VM	WATMP9.EXE ADP-TMP47P202-S
TOSHIBA	TMP47P202VP	WATMP9.EXE ADP-TMP47P202
TOSHIBA	TMP47P241VM	WATMP9.EXE ADP-47P241-S
TOSHIBA	TMP47P241VN	WATMP9.EXE ADP-47P241-SD
TOSHIBA	TMP47P242VN	WATMP9.EXE ADP-TMP47P242-SD
TOSHIBA	TMP47P400VF	WATMP9.EXE ADP-47P400-Q
TOSHIBA	TMP47P400VN	WATMP9.EXE ADP-47P400-SD
TOSHIBA	TMP47P403VM	WATMP9.EXE ADP-47P403-S
TOSHIBA	TMP47P403VN	WATMP9.EXE ADP-47P403-SD
TOSHIBA	TMP47P422VF	WATMP9.EXE ADP-TMP47P422-Q
TOSHIBA	TMP47P422VN	WATMP9.EXE ADP-TMP47P422-SD
TOSHIBA	TMP47P422VU	WATMP9.EXE ADP-TMP47P422-TQ
TOSHIBA	TMP47P443VN	WATMP9.EXE ADP-TMP47P443-SD
TOSHIBA	TMP47P857VF	WATMP9.EXE ADP-TMP47P857-Q
TOSHIBA	TMP47P862VN	WATMP9.EXE ADP-TMP47P862-SD
TOSHIBA	TMP68HC11A1	WAMMPU.EXE ADP-68HC711E
TOSHIBA	TMP86F409NG	WATMP9.EXE ADP-TMP86FH09N-
SD		
TOSHIBA	TMP86F807NG	WATMP8.EXE ADP-TMP86F807-
SD28		
TOSHIBA	TMP86F808NG	WATMP8.EXE ADP-TMP86F808-
SD30		
TOSHIBA	TMP86F809NG	WATMP9.EXE ADP-TMP86FH09N-
SD		
TOSHIBA	TMP86FH09NG	WATMP9.EXE ADP-TMP86FH09N-
SD		
TOSHIBA	TMP86FH12MG	WATMP9.EXE ADP-TMP86FH12M-
SS		
TOSHIBA	TMP86FH46ANG	WATMP9.EXE ADP-TMP86FH46AN-
SD		
TOSHIBA	TMP86FH46N	WATMP8.EXE ADP-TMP86FH46N
TOSHIBA	TMP86FH47ADUG	WATMP9.EXE ADP-
TMP86FH47ADU-TQ		
TOSHIBA	TMP86FH47AUG	WATMP9.EXE ADP-TMP86FH47AU-
TQ		
TOSHIBA	TMP86FH47UG	WATMP8.EXE ADP-TMP86FH47U-
TQ		
TOSHIBA	TMP86FM29UG	WATMP8.EXE ADP-TMP86FM29UG-
Q64		
TOSHIBA	TMP86FM48FG	WATMP8.EXE ADP-TMP86FM48FG-
Q64		
TOSHIBA	TMP86FS23UG	WATMP9.EXE ADP-TMP86FS23U-
TQ		
TOSHIBA	TMP86FS28DFG	WATMP9.EXE ADP-TMP86FS28DF-
TQ		
TOSHIBA	TMP86FS28FG	WATMP9.EXE ADP-TMP86FS28F-Q
TOSHIBA	TMP86FS49AFG	WATMP9.EXE ADP-TMP86FS49-Q
TOSHIBA	TMP86FS49AUG	WATMP9.EXE ADP-TMP86FS49-TQ
TOSHIBA	TMP86FS49FG	WATMP9.EXE ADP-TMP86FS49-Q

TOSHIBA	TMP86FS49NG	WATMP9.EXE	ADP-TMP86FS49-SD
TOSHIBA	TMP86FS49UG	WATMP9.EXE	ADP-TMP86FS49-TQ
TOSHIBA	TMP86FS64FG	WATMP9.EXE	ADP-TMP86FS64F-
TQ			
TOSHIBA	TMP86P202M	WATMP9.EXE	ADP-TMP86P202-S
TOSHIBA	TMP86P202P	WATMP9.EXE	ADP-TMP86P202
TOSHIBA	TMP86P807N	WATMP9.EXE	ADP-TMP86P807-SD
TOSHIBA	TMP86P820U	WATMP9.EXE	ADP-TMP86PM29-
TQV2			
TOSHIBA	TMP86PM23U	WATMP9.EXE	ADP-TMP86PM23-TQ
TOSHIBA	TMP86PM29AF	WATMP9.EXE	ADP-TMP86PM29-Q
TOSHIBA	TMP86PM29AU	WATMP9.EXE	ADP-TMP86PM29-
TQV2			
TOSHIBA	TMP86PM46N	WATMP9.EXE	ADP-TMP86PM46-SD
TOSHIBA	TMP86PM47AUG	WATMP9.EXE	ADP-TMP86PM47-Q
TOSHIBA	TMP86PM47U	WATMP9.EXE	ADP-TMP86PM47-Q
TOSHIBA	TMP86PM72FG	WATMP9.EXE	ADP-TMP86PM72-Q
TOSHIBA	TMP87P808LN	WATMP9.EXE	ADP-TMP87P808-SD
TOSHIBA	TMP87P808M	WATMP9.EXE	ADP-TMP87P808-S
TOSHIBA	TMP87P808N	WATMP9.EXE	ADP-TMP87P808-SD
TOSHIBA	TMP87P809M	WATMP9.EXE	ADP-TMP87P808-S
TOSHIBA	TMP87P809N	WATMP9.EXE	ADP-TMP87P808-SD
TOSHIBA	TMP87P844N	WATMP9.EXE	ADP-TMP87P844-SD
TOSHIBA	TMP87PH00N	WATMP9.EXE	ADP-TMP87PH40-SD
TOSHIBA	TMP87PH40AF	WATMP9.EXE	ADP-TMP87PH40-Q
TOSHIBA	TMP87PH40AN	WATMP9.EXE	ADP-TMP87PH40-SD
TOSHIBA	TMP87PH46N	WATMP9.EXE	ADP-TMP87PH46-SD
TOSHIBA	TMP87PH47U	WATMP9.EXE	ADP-TMP87PH47-Q
TOSHIBA	TMP87PM14N	WATMP9.EXE	ADP-TMP87PM14-SD
TOSHIBA	TMP87PM36N	WATMP9.EXE	ADP-TMP87PM36-SD
TOSHIBA	TMP87PM40AF	WATMP9.EXE	ADP-TMP87PH40-Q
TOSHIBA	TMP87PM40AN	WATMP9.EXE	ADP-TMP87PH40-SD
TOSHIBA	TMP87PM41F	WATMP9.EXE	ADP-TMP87PH40-Q
TOSHIBA	TMP87PM41N	WATMP9.EXE	ADP-TMP87PM41-SD
TOSHIBA	TMP87PM41U	WATMP9.EXE	ADP-TMP87PM41-TQ
TOSHIBA	TMP87PM53F	WATMP9.EXE	ADP-TMP87PM53-Q
TOSHIBA	TMP87PM74ZFG	WATMP9.EXE	ADP-TMP87PM74Z-
Q80			
TOSHIBA	TMP87PP21DF	WATMP9.EXE	ADP-TMP87PS68-TQ
TOSHIBA	TMP87PP21F	WATMP9.EXE	ADP-TMP87PP21-Q
TOSHIBA	TMP87PP23F	WATMP9.EXE	ADP-TMP87PS64-Q
TOSHIBA	TMP87PS38F	WATMP9.EXE	ADP-TMP87PS38-Q
TOSHIBA	TMP87PS64F	WATMP9.EXE	ADP-TMP87PS64-Q
TOSHIBA	TMP87PS68DF	WATMP9.EXE	ADP-TMP87PS68-TQ
TOSHIBA	TMP88FW44FG	WATMP9.EXE	ADP-TMP88FW44-Q
TOSHIBA	TMP88FW45FG	WATMP9.EXE	ADP-TMP88FW45-Q
TOSHIBA	TMP88PH40N	WATMP9.EXE	ADP-TMP88PH40-SD
TOSHIBA	TMP88PH47FG	WATMP9.EXE	ADP-TMP88PH47F-
Q44			
TOSHIBA	TMP88PH47N	WATMP9.EXE	ADP-TMP88PH47-SD
TOSHIBA	TMP88PS42NG	WATMP9.EXE	ADP-TMP88PS42N-
SD			
TOSHIBA	TMP90PH44N	WATMP9.EXE	ADP-TMP90PH44N-
SD			
TOSHIBA	TMP90PM40F	WATMP9.EXE	ADP-TMP9-Q
TOSHIBA	TMP90PM40N	WATMP9.EXE	ADP-TMP9-SD
TOSHIBA	TMP91FW60DFG	WATMP9.EXE	ADP-TMP91FW60DF-
Q			
TOSHIBA	TMP91FW60FG	WATMP9.EXE	ADP-TMP91FY42F-Q
TOSHIBA	TMP91P640E-10	WATMP9.EXE	ADP-TMP9-SD
TOSHIBA	TMP91P640F-10	WATMP9.EXE	ADP-TMP9-Q
TOSHIBA	TMP91P640N-10	WATMP9.EXE	ADP-TMP9-SD
TOSHIBA	TMP92FD23ADFG	WATMP9.EXE	ADP-
TMP92FD23ADF-Q			

TOSHIBA	TMP92FD23AFG	WATMP9.EXE ADP-TMP92FD23AF-
Q		
TOSHIBA	TMP92FD54AIF	WATMP9.EXE ADP-
TMP92FD54AIF-Q		
TOSHIBA	TMP93PS40F	WATMP9.EXE ADP-TMP93PS40F-
Q100		
TURBO IC	28C256	WMEM1.EXE
TURBO IC	28C64	WMEM1.EXE
TURBO IC	TU24C02	WSPROM.EXE
TURBO IC	TU24C04	WSPROM.EXE
TURBO IC	TU24C08	WSPROM.EXE
TURBO IC	TU24C16	WSPROM.EXE
TURBO IC	TU24C32	WSPROM.EXE
UBICOM	IP2022/PQ80	WAIP.EXE ADP-IP2022-QFP80
UBICOM	SX18AC/DP	WMPU1.EXE
UBICOM	SX18AC/SO	WMPU1.EXE
UBICOM	SX20AC/SS	WMPU1.EXE
UBICOM	SX28AC/DP	WMPU1.EXE
UBICOM	SX28AC/SO	WMPU1.EXE
UBICOM	SX28AC/SS	WMPU1.EXE
UBICOM	SX48BD/TQ	WAMPU8.EXE ADP-SX48BD-Q
UBICOM	SX52BD/PQ	WAMPU8.EXE ADP-SX52BD-Q
URM	U29LV040	WMEM1.EXE
USI	USI29F325B-T	WA28F.EXE ADP-49F800-
TS/TSV2		
UTI	UTI29LV017BT	WA28F.EXE ADP-49F800-
TS/TSV2		
UTI	UTI29LV040AT	WA28F.EXE ADP-49F800-
TS/TSV2		
UTI	UTI29LV040BT	WA28F.EXE ADP-49F800-
TS/TSV2		
UTI	UTI29LV040T	WA28F.EXE ADP-49F800-
TS/TSV2		
UTI	UTI29LV081AT	WA28F.EXE ADP-49F800-
TS/TSV2		
UTI	UTI29LV160ATT	WA28F.EXE ADP-49F800-
TS/TSV2		
UTI	UTI29LV160BTT	WA28F.EXE ADP-49F800-
TS/TSV2		
UTI	UTI29LV320BTT	WA28F.EXE ADP-49F800-
TS/TSV2		
UTI	UTI29LV400ATT	WA28F.EXE ADP-49F800-
TS/TSV2		
UTI	UTI29LV400BTT	WA28F.EXE ADP-49F800-
TS/TSV2		
UTI	UTI29LV400TT	WA28F.EXE ADP-49F800-
TS/TSV2		
UTI	UTI29LV800ATT	WA28F.EXE ADP-49F800-
TS/TSV2		
UTI	UTI29LV800BTT	WA28F.EXE ADP-49F800-
TS/TSV2		
UTI	UTI29LV800TT	WA28F.EXE ADP-49F800-
TS/TSV2		
VANTIS	AmPAL20RP10	WPLD1.EXE
VANTIS	AmPAL20RP4	WPLD1.EXE
VANTIS	AmPAL20RP6	WPLD1.EXE
VANTIS	AmPAL20RP8	WPLD1.EXE
VANTIS	AmPAL22P10	WPLD1.EXE
VANTIS	AmPAL22V10A/-15/-20	WPLD1.EXE
VANTIS	M4-128/64-VC	WAMACH1.EXE ADP-MACH231SP-TQ
VANTIS	M4-128/64-YC	WAMACH1.EXE ADP-MACH445
VANTIS	M4-128N/64-JC	WAMACH1.EXE ADP-MACH1
VANTIS	M4-192/96-VC	WAMACH1.EXE ADP-M4/192-TQ144
VANTIS	M4-256/128-YC	WAMACH1.EXE ADP-MACH465-Q

VANTIS	M4-96/48-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
VANTIS	M4LV-128/64-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
VANTIS	M4LV-128/64-YC	WAMACH1.EXE	ADP-MACH445
VANTIS	M4LV-128N/64-JC	WAMACH1.EXE	ADP-MACH1
VANTIS	M4LV-192/96-VC	WAMACH1.EXE	ADP-M4/192-TQ144
VANTIS	M4LV-256/128-YC	WAMACH1.EXE	ADP-MACH465-Q
VANTIS	M4LV-96/48-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
VANTIS	M5-128/120 YC/1	WAMACH5.EXE	ADP-MACH5-Q160
VANTIS	M5-128/68 VC/1	WAMACH5.EXE	ADP-MACH5-TQ100
VANTIS	M5-128/68 YC/1	WAMACH5.EXE	ADP-MACH5-Q100
VANTIS	M5-192/120 YC/1	WAMACH5.EXE	ADP-MACH5-Q160
VANTIS	M5-192/68 VC/1	WAMACH5.EXE	ADP-MACH5-TQ100
VANTIS	M5-256/68 VC/1	WAMACH5.EXE	ADP-MACH5-TQ100
VANTIS	MACH110	WAMACH.EXE	ADP-MACH
VANTIS	MACH111	WAMACH.EXE	ADP-MACH/-TQ
VANTIS	MACH111SP	WAMACH.EXE	ADP-MACH/-TQ
VANTIS	MACH120	WAMACH1.EXE	ADP-MACH2
VANTIS	MACH130	WAMACH1.EXE	ADP-MACH1
VANTIS	MACH131	WAMACH1.EXE	ADP-MACH1
VANTIS	MACH131/1	WAMACH1.EXE	ADP-MACH1
VANTIS	MACH131SP	WAMACH1.EXE	ADP-MACH445
VANTIS	MACH131SP-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
VANTIS	MACH210/A/AQ	WAMACH.EXE	ADP-MACH
VANTIS	MACH211	WAMACH.EXE	ADP-MACH/-TQ
VANTIS	MACH211SP	WAMACH.EXE	ADP-MACH/-TQ
VANTIS	MACH215	WAMACH.EXE	ADP-MACH
VANTIS	MACH220	WAMACH1.EXE	ADP-MACH2
VANTIS	MACH221	WAMACH1.EXE	ADP-MACH2
VANTIS	MACH221/1	WAMACH1.EXE	ADP-MACH2
VANTIS	MACH221SP	WAMACH1.EXE	ADP-MACH445
VANTIS	MACH221SP-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
VANTIS	MACH230	WAMACH1.EXE	ADP-MACH1
VANTIS	MACH231	WAMACH1.EXE	ADP-MACH1
VANTIS	MACH231/1	WAMACH1.EXE	ADP-MACH1
VANTIS	MACH231SP	WAMACH1.EXE	ADP-MACH445
VANTIS	MACH231SP-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
VANTIS	MACH355/Q	WAMACH1.EXE	ADP-MACH355-Q
VANTIS	MACH435	WAMACH1.EXE	ADP-MACH1
VANTIS	MACH436	WAMACH1.EXE	ADP-MACH1
VANTIS	MACH445/Q	WAMACH1.EXE	ADP-MACH445
VANTIS	MACH446	WAMACH1.EXE	ADP-MACH445
VANTIS	MACH465/Q	WAMACH1.EXE	ADP-MACH465-Q
VANTIS	MACH466	WAMACH1.EXE	ADP-MACH465-Q
VANTIS	MACH5-128/104	WAMACH5.EXE	ADP-MACH5-Q144
VANTIS	MACH5-128/120	WAMACH5.EXE	ADP-MACH5-Q160
VANTIS	MACH5-128/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
VANTIS	MACH5-192/104	WAMACH5.EXE	ADP-MACH5-Q144
VANTIS	MACH5-192/120	WAMACH5.EXE	ADP-MACH5-Q160
VANTIS	MACH5-192/160	WAMACH5.EXE	ADP-MACH5-Q208
VANTIS	MACH5-192/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
VANTIS	MACH5-256/104	WAMACH5.EXE	ADP-MACH5-Q144
VANTIS	MACH5-256/120	WAMACH5.EXE	ADP-MACH5-Q160
VANTIS	MACH5-256/160	WAMACH5.EXE	ADP-MACH5-Q208
VANTIS	MACH5-256/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
VANTIS	MACH5-320/120	WAMACH5.EXE	ADP-MACH5-Q160
VANTIS	MACH5-320/160	WAMACH5.EXE	ADP-MACH5-Q208
VANTIS	MACH5-320/184	WAMACH5.EXE	ADP-MACH5-Q240
VANTIS	MACH5-320/192	WAMACH5.EXE	ADP-MACH5-BG256
VANTIS	MACH5-384/120	WAMACH5.EXE	ADP-MACH5-Q160
VANTIS	MACH5-384/160	WAMACH5.EXE	ADP-MACH5-Q208
VANTIS	MACH5-384/184	WAMACH5.EXE	ADP-MACH5-Q240

VANTIS	MACH5-384/192	WAMACH5.EXE	ADP-MACH5-BG256
VANTIS	MACH5-512/120	WAMACH5.EXE	ADP-MACH5-Q160
VANTIS	MACH5-512/160	WAMACH5.EXE	ADP-MACH5-Q208
VANTIS	MACH5-512/184	WAMACH5.EXE	ADP-MACH5-Q240
VANTIS	MACH5-512/192	WAMACH5.EXE	ADP-MACH5-BG256
VANTIS	MACH5-512/256	WAMACH5.EXE	ADP-MACH5-BG352
VANTIS	MACH5LV-128/104	WAMACH5.EXE	ADP-MACH5-
Q144/TQ144			
VANTIS	MACH5LV-128/120	WAMACH5.EXE	ADP-MACH5-Q160
VANTIS	MACH5LV-128/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
VANTIS	MACH5LV-128/74	WAMACH5.EXE	ADP-MACH5-TQ100
VANTIS	MACH5LV-256/104	WAMACH5.EXE	ADP-MACH5-
Q144/TQ144			
VANTIS	MACH5LV-256/120	WAMACH5.EXE	ADP-MACH5-Q160
VANTIS	MACH5LV-256/160	WAMACH5.EXE	ADP-MACH5-Q208
VANTIS	MACH5LV-256/68	WAMACH5.EXE	ADP-MACH5-
Q100/TQ100			
VANTIS	MACH5LV-256/74	WAMACH5.EXE	ADP-MACH5-TQ100
VANTIS	MACH5LV-320/120	WAMACH5.EXE	ADP-MACH5-Q160
VANTIS	MACH5LV-320/160	WAMACH5.EXE	ADP-MACH5-Q208
VANTIS	MACH5LV-320/184	WAMACH5.EXE	ADP-MACH5-Q240
VANTIS	MACH5LV-320/192	WAMACH5.EXE	ADP-MACH5-BG256
VANTIS	MACH5LV-384/120	WAMACH5.EXE	ADP-MACH5-Q160
VANTIS	MACH5LV-384/160	WAMACH5.EXE	ADP-MACH5-Q208
VANTIS	MACH5LV-384/184	WAMACH5.EXE	ADP-MACH5-Q240
VANTIS	MACH5LV-384/192	WAMACH5.EXE	ADP-MACH5-BG256
VANTIS	MACH5LV-512/120	WAMACH5.EXE	ADP-MACH5-Q160
VANTIS	MACH5LV-512/160	WAMACH5.EXE	ADP-MACH5-Q208
VANTIS	MACH5LV-512/184	WAMACH5.EXE	ADP-MACH5-Q240
VANTIS	MACH5LV-512/192	WAMACH5.EXE	ADP-MACH5-BG256
VANTIS	MACH5LV-512/256	WAMACH5.EXE	ADP-MACH5-BG352
VANTIS	MACHLV210/A	WAMACH.EXE	ADP-MACH
VANTIS	MACHLV436	WAMACH1.EXE	ADP-MACH1
VANTIS	MACHLV446	WAMACH1.EXE	ADP-MACH445
VANTIS	MACHLV466	WAMACH1.EXE	ADP-MACH465-Q
VANTIS	PAL22V10-7/-10/-15	WPLD1.EXE	
VANTIS	iM4-32/32	WAMACH.EXE	ADP-MACH/-TQ/-
TQ48			
VANTIS	iM4-64/32	WAMACH.EXE	ADP-MACH/-TQ/-
TQ48			
VANTIS	iM4A3-128/64-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
VANTIS	iM4A3-128/64-YC	WAMACH1.EXE	ADP-MACH445
VANTIS	iM4A3-192/96-VC	WAMACH1.EXE	ADP-M4/192-TQ144
VANTIS	iM4A3-32/32 (PLCC44)	WAMACH.EXE	ADP-MACH
VANTIS	iM4A3-32/32 (TQFP44)	WAMACH.EXE	ADP-MACH-TQ
VANTIS	iM4A3-32/32 (TQFP48)	WAMACH.EXE	ADP-MACH-TQ48
VANTIS	iM4A3-384/160	WAMACH1.EXE	ADP-MACH465-Q
VANTIS	iM4A3-384/192	WAMACH1.EXE	ADP-MACH4-BG256
VANTIS	iM4A3-64/32 (PLCC44)	WAMACH.EXE	ADP-MACH
VANTIS	iM4A3-64/32 (TQFP44)	WAMACH.EXE	ADP-MACH-TQ
VANTIS	iM4A3-64/32 (TQFP48)	WAMACH.EXE	ADP-MACH-TQ48
VANTIS	iM4A3-64/64-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
VANTIS	iM4A3-96/48-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
VANTIS	iM4A5-128/64-VC	WAMACH1.EXE	ADP-MACH231SP-TQ
VANTIS	iM4A5-128/64-YC	WAMACH1.EXE	ADP-MACH445
VANTIS	iM4A5-192/96-VC	WAMACH1.EXE	ADP-M4/192-TQ144
VANTIS	iM4A5-32/32 (PLCC44)	WAMACH.EXE	ADP-MACH
VANTIS	iM4A5-32/32 (TQFP44)	WAMACH.EXE	ADP-MACH-TQ
VANTIS	iM4A5-32/32 (TQFP48)	WAMACH.EXE	ADP-MACH-TQ48
VANTIS	iM4A5-64/32 (PLCC44)	WAMACH.EXE	ADP-MACH
VANTIS	iM4A5-64/32 (TQFP44)	WAMACH.EXE	ADP-MACH-TQ
VANTIS	iM4A5-64/32 (TQFP48)	WAMACH.EXE	ADP-MACH-TQ48
VANTIS	iM4A5-96/48-VC	WAMACH1.EXE	ADP-MACH231SP-TQ

VANTIS TQ48	iM4LV-32/32	WAMACH.EXE ADP-MACH/-TQ/-
VANTIS TQ48	iM4LV-64/32	WAMACH.EXE ADP-MACH/-TQ/-
VLSI	VT27C128 [12.5V]	WMEM1.EXE
VLSI	VT27C256 [12.75V]	WMEM1.EXE
VLSI	VT27C512 [12.75V]	WMEM1.EXE
VLSI	VT27C64 [12.5V]	WMEM1.EXE
VLSI	28HC64	WMEM1.EXE
VLSI	VP16V8	WPLD1.EXE
VLSI	VP20V8	WPLD1.EXE
VersaChips	V87C54	WPGM51.EXE
VersaChips	V87C58	WPGM51.EXE
WHITE MICRO	WMF128K8	WMEM1.EXE
WHITE MICRO	WMF512K8	WMEM1.EXE
WIN VIRTUE	V29C3S032T	WA28F.EXE ADP-49F800-
TS/TSV2		
WINBOND	W27F256 [12.75V]	WMEM1.EXE
WINBOND	W27F512 [12.75V]	WMEM1.EXE
WINBOND	27E010	WMEM1.EXE
WINBOND	27E257	WMEM1.EXE
WINBOND	27E512	WMEM1.EXE
WINBOND	29EE010	WMEM1.EXE
WINBOND	29EE011	WMEM1.EXE
WINBOND	29EE512	WMEM1.EXE
WINBOND	W19B160ATT	WA28F.EXE ADP-49F800-
TS/TSV2		
WINBOND	W19B320ABB	WA28F.EXE ADP-19B320-BG
WINBOND	W19B320ABT	WA28F.EXE ADP-49F800-TSV2
WINBOND	W19B320ATB	WA28F.EXE ADP-19B320-BG
WINBOND	W19B320ATT	WA28F.EXE ADP-49F800-TSV2
WINBOND	W19B320SBB	WA28F.EXE ADP-19B320-BG
WINBOND	W19B320SBT	WA28F.EXE ADP-49F800-TSV2
WINBOND	W19B320STB	WA28F.EXE ADP-19B320-BG
WINBOND	W19B320STT	WA28F.EXE ADP-49F800-TSV2
WINBOND	W19B322MBT	WA28F.EXE ADP-49F800-TSV2
WINBOND	W19B322MTT	WA28F.EXE ADP-49F800-TSV2
WINBOND	W19B323MBT	WA28F.EXE ADP-49F800-TSV2
WINBOND	W19B323MTT	WA28F.EXE ADP-49F800-TSV2
WINBOND	W19B324MBT	WA28F.EXE ADP-49F800-TSV2
WINBOND	W19B324MTT	WA28F.EXE ADP-49F800-TSV2
WINBOND	W19B800ATT	WA28F.EXE ADP-49F800-
TS/TSV2		
WINBOND	W19L320SBB	WA28F.EXE ADP-19B320-BG
WINBOND	W19L320SBT	WA28F.EXE ADP-49F800-TSV2
WINBOND	W19L320STB	WA28F.EXE ADP-19B320-BG
WINBOND	W19L320STT	WA28F.EXE ADP-49F800-TSV2
WINBOND	W27C01	WMEM1.EXE
WINBOND	W27C010	WMEM1.EXE
WINBOND	W27C02	WMEM1.EXE
WINBOND	W27C020/M	WMEM1.EXE
WINBOND	W27C257	WMEM1.EXE
WINBOND	W27C512	WMEM1.EXE
WINBOND	W27C520	WMEM1.EXE
WINBOND	W27E01	WMEM1.EXE
WINBOND	W27E02	WMEM1.EXE
WINBOND	W27E020	WMEM1.EXE
WINBOND	W27E040	WMEM1.EXE
WINBOND	W27E4096	WMEM1.EXE
WINBOND	W27E520	WMEM1.EXE
WINBOND	W27L01	WMEM1.EXE
WINBOND	W27L010	WMEM1.EXE
WINBOND	W27L02	WMEM1.EXE
WINBOND	W27L520	WMEM1.EXE

WINBOND	W28F321TT	WA28F.EXE	ADP-28F160-TS
WINBOND	W28F641TT	WA28F.EXE	ADP-28F160-TS
WINBOND	W28J160BT	WA28F.EXE	ADP-28F160-TS
WINBOND	W28J160TT	WA28F.EXE	ADP-28F160-TS
WINBOND	W28J320BT	WA28F.EXE	ADP-28F160-TS
WINBOND	W28J320TT	WA28F.EXE	ADP-28F160-TS
WINBOND	W28J800BT	WA28F.EXE	ADP-28F160-TS
WINBOND	W28J800TT	WA28F.EXE	ADP-28F160-TS
WINBOND	W28V400BT	WA28F.EXE	ADP-28F160-TS
WINBOND	W28V400TT	WA28F.EXE	ADP-28F160-TS
WINBOND	W29C010	WMEM1.EXE	
WINBOND	W29C010M	WMEM1.EXE	
WINBOND	W29C011A	WMEM1.EXE	
WINBOND	W29C020/C	WMEM1.EXE	
WINBOND	W29C040	WMEM1.EXE	
WINBOND	W29C042	WMEM1.EXE	
WINBOND	W29C101	WMEM1.EXE	
WINBOND	W29C102	WMEM1.EXE	
WINBOND	W29C512A	WMEM1.EXE	
WINBOND	W29C512M	WMEM1.EXE	
WINBOND	W29F002/B	WMEM1.EXE	
WINBOND	W29F002U/N	WMEM1.EXE	
WINBOND	W29F102	WMEM1.EXE	
WINBOND	W29F400T	WA28F.EXE	ADP-49F800-
TS/TSV2			
WINBOND	W39D040A	WMEM1.EXE	
WINBOND	W39F010	WMEM1.EXE	
WINBOND	W39L010	WMEM1.EXE	
WINBOND	W39L020	WMEM1.EXE	
WINBOND	W39L020A	WMEM1.EXE	
WINBOND	W39L040	WMEM1.EXE	
WINBOND	W39L040A	WMEM1.EXE	
WINBOND	W39L040B	WMEM1.EXE	
WINBOND	W39L040C	WMEM1.EXE	
WINBOND	W39L512	WMEM1.EXE	
WINBOND	W39V040A	WMEM1.EXE	
WINBOND	W39V040B	WMEM1.EXE	
WINBOND	W39V040C	WMEM1.EXE	
WINBOND	W39V040FA	WMEM1.EXE	
WINBOND	W39V040FB	WMEM1.EXE	
WINBOND	W39V040FC	WMEM1.EXE	
WINBOND	W39V080A	WMEM1.EXE	
WINBOND	W39V080A (TSOP40)	WMEM1.EXE	
WINBOND	W39V080FA	WMEM1.EXE	
WINBOND	W39V080FA (TSOP40)	WMEM1.EXE	
WINBOND	W49F002U	WMEM1.EXE	
WINBOND	W49F020	WMEM1.EXE	
WINBOND	W49F102	WMEM1.EXE	
WINBOND	W49L102	WMEM1.EXE	
WINBOND	W49L201T	WA28F.EXE	ADP-29F800-
TS/TSV2			
WINBOND	W49L401T	WA28F.EXE	ADP-29F800-
TS/TSV2			
WINBOND	W49L401T*	WA28F.EXE	ADP-49F800-
TS/TSV2			
WINBOND	W49V002	WMEM1.EXE	
WINBOND	W49V002A	WMEM1.EXE	
WINBOND	W49V002F	WMEM1.EXE	
WINBOND	W49V002FA	WMEM1.EXE	
WINBOND	W15B020L	WSPROM.EXE	
WINBOND	W15B020M	WSPROM.EXE	
WINBOND	W15B040L	WSPROM.EXE	
WINBOND	W15B040M	WSPROM.EXE	
WINBOND	W25B20	WSPROM.EXE	

WINBOND	W25B40	WSPROM.EXE
WINBOND	W25B40A	WSPROM.EXE
WINBOND	W25D40	WSPROM.EXE
WINBOND	W25D80	WSPROM.EXE
WINBOND	W25P10	WSPROM.EXE
WINBOND	W25P16 (SOP16)	WSPROM.EXE
WINBOND	W25P16 (SOP8)	WSPROM.EXE
WINBOND	W25P20	WSPROM.EXE
WINBOND	W25P40	WSPROM.EXE
WINBOND	W25P80	WSPROM.EXE
WINBOND	W25X10	WSPROM.EXE
WINBOND	W25X16	WSPROM.EXE
WINBOND	W25X20	WSPROM.EXE
WINBOND	W25X32	WSPROM.EXE
WINBOND	W25X40	WSPROM.EXE
WINBOND	W25X80	WSPROM.EXE
WINBOND	W45B012 (SON8)	WABPP.EXE ADP-W45B012-SON
WINBOND	W45B512 (SON8)	WABPP.EXE ADP-W45B012-SON
WINBOND	W45D041 (TSOP28)	WABPP.EXE ADP-W45D041-TS
WINBOND	W55F05B	WSPROM.EXE
WINBOND	W55F10A	WSPROM.EXE
WINBOND	W55F20	WSPROM.EXE
WINBOND	W541E261 (QFP80)	WAW741E2.EXE ADP-W741E260-Q
WINBOND	W541E480 (QFP80)	WAW741E2.EXE ADP-W741E260-Q
WINBOND	W741E201 (DIP18)	WAW741E2.EXE ADP-W741E20X
WINBOND	W741E202 (DIP28)	WAW741E2.EXE ADP-W741E20X
WINBOND	W741E260 (QFP80)	WAW741E2.EXE ADP-W741E260-Q
WINBOND	W77E058A	WPGM51.EXE
WINBOND	W77E468	WPGM51.EXE CNV-QFP-W77E468
WINBOND	W77E516	WPGM51.EXE
WINBOND	W77E516A	WPGM51.EXE
WINBOND	W77E532	WPGM51.EXE
WINBOND	W77E532A	WPGM51.EXE
WINBOND	W77E58	WPGM51.EXE
WINBOND	W77I058A	WPGM51.EXE
WINBOND	W77IE58	WPGM51.EXE
WINBOND	W77L058A	WPGM51.EXE
WINBOND	W77LE516	WPGM51.EXE
WINBOND	W77LE532	WPGM51.EXE
WINBOND	W77LE58	WPGM51.EXE
WINBOND	W78E051B	WPGM51.EXE
WINBOND	W78E051C	WPGM51.EXE
WINBOND	W78E052B	WPGM51.EXE
WINBOND	W78E052C	WPGM51.EXE
WINBOND	W78E054C	WPGM51.EXE
WINBOND	W78E058B	WPGM51.EXE
WINBOND	W78E065A	WPGM51.EXE
WINBOND	W78E354	WPGM51.EXE
WINBOND	W78E365	WPGM51.EXE
WINBOND	W78E365A	WPGM51.EXE
WINBOND	W78E374E	WPGM51.EXE
WINBOND	W78E378	WPGM51.EXE
WINBOND	W78E378E	WPGM51.EXE CNV-DIP-W78E378E
WINBOND	W78E51	WPGM51.EXE
WINBOND	W78E512	WPGM51.EXE
WINBOND	W78E516	WPGM51.EXE
WINBOND	W78E516B	WPGM51.EXE
WINBOND	W78E51B	WPGM51.EXE
WINBOND	W78E51C	WPGM51.EXE
WINBOND	W78E52	WPGM51.EXE
WINBOND	W78E52B	WPGM51.EXE
WINBOND	W78E52C	WPGM51.EXE
WINBOND	W78E54	WPGM51.EXE
WINBOND	W78E54B	WPGM51.EXE

WINBOND	W78E54C	WPGM51.EXE
WINBOND	W78E58	WPGM51.EXE
WINBOND	W78E58B	WPGM51.EXE
WINBOND	W78E61	WPGM51.EXE
WINBOND	W78E62	WPGM51.EXE
WINBOND	W78E62B	WPGM51.EXE
WINBOND	W78E65	WPGM51.EXE
WINBOND	W78E858	WPGM51.EXE
WINBOND	W78ERD2	WPGM51.EXE
WINBOND	W78ERD2A	WPGM51.EXE
WINBOND	W78IE52	WPGM51.EXE
WINBOND	W78IE54	WPGM51.EXE
WINBOND	W78IRD2A	WPGM51.EXE
WINBOND	W78L051C	WPGM51.EXE
WINBOND	W78L052A	WPGM51.EXE
WINBOND	W78L052C	WPGM51.EXE
WINBOND	W78L054C	WPGM51.EXE
WINBOND	W78L058A	WPGM51.EXE
WINBOND	W78L365A	WPGM51.EXE
WINBOND	W78L516A	WPGM51.EXE
WINBOND	W78L812A	WPGM51.EXE
WINBOND	W78LE365	WPGM51.EXE
WINBOND	W78LE51	WPGM51.EXE
WINBOND	W78LE516	WPGM51.EXE
WINBOND	W78LE51C	WPGM51.EXE
WINBOND	W78LE52	WPGM51.EXE
WINBOND	W78LE52C	WPGM51.EXE
WINBOND	W78LE54	WPGM51.EXE
WINBOND	W78LE54C	WPGM51.EXE
WINBOND	W78LE58	WPGM51.EXE
WINBOND	W78LE812	WPGM51.EXE
WINBOND	W79E201	WASIG.EXE ADP-W79E201-PL44
WINBOND	W79E201A	WASIG.EXE ADP-W79E201-PL44
WINBOND	W79E532	WPGM51.EXE
WINBOND	W79E532A	WPGM51.EXE
WINBOND	W79E549A	WASIG.EXE ADP-W79E648-PL68
WINBOND	W79E632A	WPGM51.EXE
WINBOND	W79E633A	WPGM51.EXE
WINBOND	W79E648	WASIG.EXE ADP-W79E648-PL68
WINBOND	W79E649	WASIG.EXE ADP-W79E648-PL68
WINBOND	W79E658A	WASIG.EXE ADP-W79E658-Q100
WINBOND	W79E659A (PLCC68)	WASIG.EXE ADP-W79E648-PL68
WINBOND	W79E659A (QFP100)	WASIG.EXE ADP-W79E658-Q100
WINBOND	W79L532A	WPGM51.EXE
WINBOND	W79L548A	WASIG.EXE ADP-W79E648-PL68
WINBOND	W79L549A	WASIG.EXE ADP-W79E648-PL68
WINBOND	W79L632A	WPGM51.EXE
WINBOND	W79L649A	WASIG.EXE ADP-W79E648-PL68
WINBOND	W83L950D	WAMPU2.EXE ADP-W83L950D-TQ
WINBOND	W83L951D	WAMPU2.EXE ADP-W83L951D-TQ
WINBOND	W83L951F	WAMPU2.EXE ADP-W83L951F-Q
WSI	27C128F[13.5V]	WMEM1.EXE
WSI	27C256F[12.5V]	WMEM1.EXE
WSI	27C256L[12.5V]	WMEM1.EXE
WSI	27C512F[12.75V]	WMEM1.EXE
WSI	27C512L[12.75V]	WMEM1.EXE
WSI	27C64F[13.5V]	WMEM1.EXE
WSI	57C128FB[12.75V]	WMEM1.EXE
WSI	57C128F[13.5V]	WMEM1.EXE
WSI	57C256F[12.5V]	WMEM1.EXE
WSI	57C64F[13.5V]	WMEM1.EXE
WSI	WC27C010F	WMEM1.EXE
WSI	WC27C010L	WMEM1.EXE
WSI	WS27C210F	WMEM1.EXE

WSI	WS27C210L	WMEM1.EXE
WSI	57C191	WBPPGM.EXE
WSI	57C191B	WBPPGM.EXE
WSI	57C191C	WBPPGM.EXE
WSI	57C291	WBPPGM.EXE
WSI	57C291B	WBPPGM.EXE
WSI	57C291C	WBPPGM.EXE
WSI	57C43	WBPPGM.EXE
WSI	57C43B	WBPPGM.EXE
WSI	57C43C	WBPPGM.EXE
WSI	57C45	WBPPGM.EXE
WSI	57C45C	WBPPGM.EXE
WSI	57C49	WBPPGM.EXE
WSI	57C49B	WBPPGM.EXE
WSI	57C49C	WBPPGM.EXE
WSI	57C51	WBPPGM.EXE
WSI	57C51B	WBPPGM.EXE
WSI	57C51C	WBPPGM.EXE
WSI	57C71C	WBPPGM.EXE
WSI	PSD211R	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD211RB	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD301	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD301B	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD301L	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD302	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD302B	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD302L	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD303	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD303B	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD303L	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD304	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD311	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD311B	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD311L	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD312	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD312B	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD312L	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD313	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD313B	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD313L	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD314	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	PSD401A1	WAPSD4.EXE ADP-PSD4XX

WSI	PSD401A2	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD402A1	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD402A2	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD403A1	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD403A2	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD411A1	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD411A2	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD412A1	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD412A2	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD413A1	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD413A2	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD4235G2	WAPSD4.EXE	ADP-PSD835G-TQ80
WSI	PSD4235G2V	WAPSD4.EXE	ADP-PSD835G-TQ80
WSI	PSD501B1	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD502B1	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD503B1	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD511B1	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD512B1	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD513B1	WAPSD4.EXE	ADP-PSD4XX
WSI	PSD813F1	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD813F1V	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD813F2 (PLCC52)	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD813F2 (QFP52)	WAPSD4.EXE	ADP-PSD8XX-Q52
WSI	PSD813F2 (TQFP64)	WAPSD4.EXE	ADP-PSD8XX-TQ64
WSI	PSD813F2V (PLCC52)	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD813F2V (QFP52)	WAPSD4.EXE	ADP-PSD8XX-Q52
WSI	PSD813F3	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD813F3V	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD813F4	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD813F4V	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD813F5	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD813F5V	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD833F2 (PLCC52)	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD833F2 (QFP52)	WAPSD4.EXE	ADP-PSD8XX-Q52
WSI	PSD833F2V	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD834F2	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD834F2V	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD853F2	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD853F2V	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD854F2	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD854F2V	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD913F1	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD913F1V	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD913F2	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD913F2V	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD933F2	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD933F2V	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD934F2	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD934F2V	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD953F2	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD953F2V	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD954F2	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	PSD954F2V	WAPSD4.EXE	ADP-PSD8XX-PL
WSI	ZPSD211R	WAPSD3.EXE	ADP-PSD301/-
Q/Q44/Q44A			
WSI	ZPSD211RV	WAPSD3.EXE	ADP-PSD301/-
Q/Q44/Q44A			
WSI	ZPSD301B	WAPSD3.EXE	ADP-PSD301/-
Q/Q44/Q44A			
WSI	ZPSD301V	WAPSD3.EXE	ADP-PSD301/-
Q/Q44/Q44A			
WSI	ZPSD302B	WAPSD3.EXE	ADP-PSD301/-
Q/Q44/Q44A			
WSI	ZPSD302V	WAPSD3.EXE	ADP-PSD301/-

Q/Q44/Q44A		
WSI	ZPSD303B	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	ZPSD303V	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	ZPSD311B	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	ZPSD311V	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	ZPSD312B	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	ZPSD312V	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	ZPSD313B	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
WSI	ZPSD313V	WAPSD3.EXE ADP-PSD301/-
Q/Q44/Q44A		
XICOR	X2004D	WMEM1.EXE
XICOR	X20C04	WMEM1.EXE
XICOR	X20C05	WMEM1.EXE
XICOR	X28 (C) 256/B	WMEM1.EXE
XICOR	X28 (C) 256I	WMEM1.EXE
XICOR	X2804C	WMEM1.EXE
XICOR	X2816A/AI	WMEM1.EXE
XICOR	X2816B/BI	WMEM1.EXE
XICOR	X2816C/CI	WMEM1.EXE
XICOR	X28256	WMEM1.EXE
XICOR	X2864A/AI	WMEM1.EXE
XICOR	X2864H/HI	WMEM1.EXE
XICOR	X28C010	WMEM1.EXE
XICOR	X28C16	WMEM1.EXE
XICOR	X28C512/I	WMEM1.EXE
XICOR	X28C513	WMEM1.EXE
XICOR	X28C64/B	WMEM1.EXE
XICOR	X28C64I/BI	WMEM1.EXE
XICOR	X28HC16	WMEM1.EXE
XICOR	X28HC256	WMEM1.EXE
XICOR	X28HC64	WMEM1.EXE
XICOR	X28LC512	WMEM1.EXE
XICOR	X28VC256	WMEM1.EXE
XICOR	X68C64	WMEM1.EXE
XICOR	X88C64	WMEM1.EXE
XICOR	X22C10	WSPROM.EXE
XICOR	X22C12	WSPROM.EXE
XICOR	X24012	WSPROM.EXE
XICOR	X24022	WSPROM.EXE
XICOR	X24042	WSPROM.EXE
XICOR	X24128	WSPROM.EXE
XICOR	X24164	WSPROM.EXE
XICOR	X24165	WSPROM.EXE
XICOR	X24256	WSPROM.EXE
XICOR	X24320	WSPROM.EXE
XICOR	X24325	WSPROM.EXE
XICOR	X24641	WSPROM.EXE
XICOR	X24645	WSPROM.EXE
XICOR	X24C00	WSPROM.EXE
XICOR	X24C01/I	WSPROM.EXE
XICOR	X24C01A	WSPROM.EXE
XICOR	X24C02/I	WSPROM.EXE
XICOR	X24C04/I	WSPROM.EXE
XICOR	X24C08	WSPROM.EXE
XICOR	X24C16	WSPROM.EXE
XICOR	X24C44	WSPROM.EXE
XICOR	X24F016	WSPROM.EXE

XICOR	X24F032	WSPROM.EXE
XICOR	X24F064	WSPROM.EXE
XICOR	X24F128	WSPROM.EXE
XICOR	X25020	WSPROM.EXE
XICOR	X25040	WSPROM.EXE
XICOR	X25043	WSPROM.EXE
XICOR	X25045	WSPROM.EXE
XICOR	X25057	WSPROM.EXE
XICOR	X25080	WSPROM.EXE
XICOR	X25128	WSPROM.EXE
XICOR	X25160	WSPROM.EXE
XICOR	X25320	WSPROM.EXE
XICOR	X25330	WSPROM.EXE
XICOR	X25640/X25642	WSPROM.EXE
XICOR	X25650	WSPROM.EXE
XICOR	X25C02	WSPROM.EXE
XICOR	X25F008	WSPROM.EXE
XICOR	X25F016	WSPROM.EXE
XICOR	X25F032	WSPROM.EXE
XICOR	X25F047	WSPROM.EXE
XICOR	X25F064	WSPROM.EXE
XICOR	X25F087	WSPROM.EXE
XICOR	X25F128	WSPROM.EXE
XICOR	X4043	WSPROM.EXE
XICOR	X4045	WSPROM.EXE
XICOR	X4C105	WSPROM.EXE
XICOR	X5043	WSPROM.EXE
XICOR	X5045	WSPROM.EXE
XICOR	X5083	WSPROM.EXE
XICOR	X76F101	WSPROM.EXE
XICOR	X76F400	WSPROM.EXE
XICOR	X84041	WSPROM.EXE
XICOR	X84129	WSPROM.EXE
XICOR	X84641	WSPROM.EXE
XILINX	XC1701	WSPROM.EXE
XILINX	XC1701L	WSPROM.EXE
XILINX	XC1702L	WSPROM.EXE
XILINX	XC1704L	WSPROM.EXE
XILINX	XC17128D	WSPROM.EXE
XILINX	XC17128E	WSPROM.EXE
XILINX	XC17128L	WSPROM.EXE
XILINX	XC17128X	WSPROM.EXE
XILINX	XC1718D	WSPROM.EXE
XILINX	XC1718L	WSPROM.EXE
XILINX	XC17256D	WSPROM.EXE
XILINX	XC17256E	WSPROM.EXE
XILINX	XC17256EL	WSPROM.EXE
XILINX	XC17256L	WSPROM.EXE
XILINX	XC17256X	WSPROM.EXE
XILINX	XC1736A	WSPROM.EXE
XILINX	XC1736D	WSPROM.EXE
XILINX	XC1736E	WSPROM.EXE
XILINX	XC17512L	WSPROM.EXE
XILINX	XC1765D	WSPROM.EXE
XILINX	XC1765E	WSPROM.EXE
XILINX	XC1765L	WSPROM.EXE
XILINX	XC1765X	WSPROM.EXE
XILINX	XC17S05	WSPROM.EXE
XILINX	XC17S05L	WSPROM.EXE
XILINX	XC17S05XL	WSPROM.EXE
XILINX	XC17S10	WSPROM.EXE
XILINX	XC17S100A	WSPROM.EXE
XILINX	XC17S100L	WSPROM.EXE
XILINX	XC17S100XL	WSPROM.EXE

XILINX	XC17S10L	WSPROM.EXE
XILINX	XC17S10XL	WSPROM.EXE
XILINX	XC17S150A	WSPROM.EXE
XILINX	XC17S150L	WSPROM.EXE
XILINX	XC17S150XL	WSPROM.EXE
XILINX	XC17S15A	WSPROM.EXE
XILINX	XC17S20	WSPROM.EXE
XILINX	XC17S200A	WSPROM.EXE
XILINX	XC17S20L	WSPROM.EXE
XILINX	XC17S20XL	WSPROM.EXE
XILINX	XC17S30	WSPROM.EXE
XILINX	XC17S300A	WSPROM.EXE
XILINX	XC17S30A	WSPROM.EXE
XILINX	XC17S30L	WSPROM.EXE
XILINX	XC17S30XL	WSPROM.EXE
XILINX	XC17S40	WSPROM.EXE
XILINX	XC17S40L	WSPROM.EXE
XILINX	XC17S40XL	WSPROM.EXE
XILINX	XC17S50A	WSPROM.EXE
XILINX	XC17S50L	WSPROM.EXE
XILINX	XC17S50XL	WSPROM.EXE
XILINX	XC17V01	WSPROM.EXE
XILINX	XC17V04	WSPROM.EXE
XILINX	XC17V08	WSPROM.EXE
XILINX	XC17V16	WSPROM.EXE
XILINX	XC18V01 (PLCC20)	WABPP.EXE ADP-XC18XX-PL20
XILINX	XC18V01 (PLCC44)	WABPP.EXE ADP-XC18XX-PL44
XILINX	XC18V01 (SOP20)	WABPP.EXE ADP-XC18XX-SO20
XILINX	XC18V02 (PLCC44)	WABPP.EXE ADP-XC18XX-PL44
XILINX	XC18V02 (QFP44)	WABPP.EXE ADP-XC18XX-Q44
XILINX	XC18V04 (PLCC44)	WABPP.EXE ADP-XC18XX-PL44
XILINX	XC18V04 (QFP44)	WABPP.EXE ADP-XC18XX-Q44
XILINX	XC18V256 (PLCC20)	WABPP.EXE ADP-XC18XX-PL20
XILINX	XC18V256 (PLCC44)	WABPP.EXE ADP-XC18XX-PL44
XILINX	XC18V256 (SOP20)	WABPP.EXE ADP-XC18XX-SO20
XILINX	XC18V512 (PLCC20)	WABPP.EXE ADP-XC18XX-PL20
XILINX	XC18V512 (PLCC44)	WABPP.EXE ADP-XC18XX-PL44
XILINX	XC18V512 (SOP20)	WABPP.EXE ADP-XC18XX-SO20
XILINX	XCF01S	WABPP.EXE ADP-XCFXXS-VO20
XILINX	XCF02S	WABPP.EXE ADP-XCFXXS-VO20
XILINX	XCF04S	WABPP.EXE ADP-XCFXXS-VO20
XILINX	XQ1701L	WSPROM.EXE
XILINX	XQR1701L	WSPROM.EXE
XILINX	XC7236 (PLCC 44)	WAXC7236.EXE ADP-XC7236
XILINX	XC7236A (PLCC 44)	WAXC7236.EXE ADP-XC7236
XILINX	XC7272 (PLCC 68)	WAXC7236.EXE ADP-XC7272-PL68
XILINX	XC7272 (PLCC 84)	WAXC7236.EXE ADP-XC7272-PL84
XILINX	XC7272A (PLCC 68)	WAXC7236.EXE ADP-XC7272-PL68
XILINX	XC7272A (PLCC 84)	WAXC7236.EXE ADP-XC7272-PL84
XILINX	XC73108 (PGA 144)	WAXC7236.EXE ADP-XC73108-PG
XILINX	XC73108 (PLCC 84)	WAXC7236.EXE ADP-XC73108-PL84
XILINX	XC73108 (QFP 100)	WAXC7236.EXE ADP-XC73108-Q100
XILINX	XC73108 (QFP 160)	WAXC7236.EXE ADP-XC73108-Q160
XILINX	XC7318 (PLCC 44)	WAXC7236.EXE ADP-XC7354-PL44
XILINX	XC7318A (PLCC 44)	WAXC7236.EXE ADP-XC7354-PL44
XILINX	XC7336 (PLCC 44)	WAXC7236.EXE ADP-XC7354-PL44
XILINX	XC7336 (VQFP 44)	WAXC7236.EXE ADP-XC7336-Q
XILINX	XC7336A (PLCC 44)	WAXC7236.EXE ADP-XC7354-PL44
XILINX	XC7336Q (QFP 44)	WAXC7236.EXE ADP-XC7336-Q
XILINX	XC7354 (PLCC 44)	WAXC7236.EXE ADP-XC7354-PL44
XILINX	XC7354 (PLCC 68)	WAXC7236.EXE ADP-XC7354-PL68
XILINX	XC7372 (PLCC 68)	WAXC7236.EXE ADP-XC7372-PL68
XILINX	XC7372 (PLCC 84)	WAXC7236.EXE ADP-XC73108-PL84
XILINX	XC7372 (QFP 100)	WAXC7236.EXE ADP-XC73108-Q100

XILINX	XC95108 (PLCC 84)	WAXC9500.EXE ADP-XC73108-PL84
XILINX	XC95108 (PQFP 100)	WAXC9500.EXE ADP-XC73108-Q100
XILINX	XC95108 (PQFP 160)	WAXC9500.EXE ADP-XC73108-Q160
XILINX	XC95108 (TQFP 100)	WAXC9500.EXE ADP-XC95108-TQ
XILINX	XC95108F (PLCC 84)	WAXC9500.EXE ADP-XC73108-PL84
XILINX	XC95108F (PQFP 100)	WAXC9500.EXE ADP-XC73108-Q100
XILINX	XC95108F (PQFP 160)	WAXC9500.EXE ADP-XC73108-Q160
XILINX	XC95108F (TQFP 100)	WAXC9500.EXE ADP-XC95108-TQ
XILINX	XC95144 (PQFP 100)	WAXC9500.EXE ADP-XC73108-Q100
XILINX	XC95144 (PQFP 160)	WAXC9500.EXE ADP-XC73108-Q160
XILINX	XC95144 (TQFP 100)	WAXC9500.EXE ADP-XC95108-TQ
XILINX	XC95144XL (TQFP 100)	WAXC9500.EXE ADP-XC95108-TQ
XILINX	XC95144XL (TQFP 144)	WAXC9500.EXE ADP-XC95144XL-TQ
XILINX	XC95216 (PQFP 160)	WAXC9500.EXE ADP-XC95216-Q160
XILINX	XC95288 (QFP 208)	WAXC9500.EXE ADP-XC95288-Q208
XILINX	XC95288XL (PQFP 208)	WAXC9500.EXE ADP-XC95288-Q208
XILINX	XC95288XL (TQFP 144)	WAXC9500.EXE ADP-XC95144XL-TQ
XILINX	XC9536 (PLCC 44)	WAXC9500.EXE ADP-XC7354-PL44
XILINX	XC9536 (QFP 44)	WAXC9500.EXE ADP-XC7336-Q
XILINX	XC9536F (PLCC 44)	WAXC9500.EXE ADP-XC7354-PL44
XILINX	XC9536F (QFP 44)	WAXC9500.EXE ADP-XC7336-Q
XILINX	XC9536XL (CSP 48)	WAXC9500.EXE ADP-XC9536XL-
BG48/-BG48V2		
XILINX	XC9536XL (PLCC 44)	WAXC9500.EXE ADP-XC7354-PL44
XILINX	XC9536XL (VQFP 44)	WAXC9500.EXE ADP-XC7336-Q
XILINX	XC9536XL (VQFP 64)	WAXC9500.EXE ADP-XC9536XL-VQ
XILINX	XC9572 (PLCC 44)	WAXC9500.EXE ADP-XC9572-PL44
XILINX	XC9572 (PLCC 84)	WAXC9500.EXE ADP-XC9572-PL84
XILINX	XC9572 (PQFP 100)	WAXC9500.EXE ADP-XC9572-PQ
XILINX	XC9572 (TQFP 100)	WAXC9500.EXE ADP-XC9572-TQ
XILINX	XC9572F (PLCC 44)	WAXC9500.EXE ADP-XC9572-PL44
XILINX	XC9572F (PLCC 84)	WAXC9500.EXE ADP-XC9572-PL84
XILINX	XC9572F (PQFP 100)	WAXC9500.EXE ADP-XC9572-PQ
XILINX	XC9572F (TQFP 100)	WAXC9500.EXE ADP-XC9572-TQ
XILINX	XC9572XL (PLCC 44)	WAXC9500.EXE ADP-XC9572-PL44
XILINX	XC9572XL (TQFP 100)	WAXC9500.EXE ADP-XC9572-TQ
XILINX	XC9572XL (VQFP 44)	WAXC9500.EXE ADP-XC9572XL-
VQ44		
XILINX	XC9572XL (VQFP 64)	WAXC9500.EXE ADP-XC9572XL-VQ
XILINX	XC9572XV (TQFP 100)	WAXC9500.EXE ADP-XC9572-TQ
XILINX	XCR3032XL (PLCC44)	WAXPLA3.EXE ADP-XPLA3-PL44
XILINX	XCR3032XL (VQFP44)	WAXPLA3.EXE ADP-XPLA3-VQ44
XILINX	XCR3064XL (PLCC44)	WAXPLA3.EXE ADP-XPLA3-PL44
XILINX	XCR3064XL (VQFP100)	WAXPLA3.EXE ADP-XPLA3-VQ100
XILINX	XCR3064XL (VQFP44)	WAXPLA3.EXE ADP-XPLA3-VQ44
XILINX	XCR3128XL (TQFP144)	WAXPLA3.EXE ADP-XPLA3-TQ144
XILINX	XCR3128XL (VQFP100)	WAXPLA3.EXE ADP-XPLA3-VQ100
YMC	Y24LC02	WSPROM.EXE
YMC	Y25F05	WSPROM.EXE
YMC	Y25F10	WSPROM.EXE
YMC	Y93LC46 (128*8)	WSPROM.EXE
YMC	Y93LC46 (64*16)	WSPROM.EXE
YMC	Y93LC66 (256*16)	WSPROM.EXE
YMC	Y93LC66 (512*8)	WSPROM.EXE
ZILOG	Z86733	WPGMZ8.EXE
ZILOG	Z86743	WPGMZ8.EXE
ZILOG	Z86D73	WPGMZ8.EXE
ZILOG	Z86D86	WPGMZ8.EXE
ZILOG	Z86D991	WPGMZ8.EXE
ZILOG	Z86E02	WPGMZ8.EXE
ZILOG	Z86E02 1925	WPGMZ8.EXE
ZILOG	Z86E03	WPGMZ8.EXE
ZILOG	Z86E0412PEC	WAPGMZ8.EXE ADP-Z86E0X
ZILOG	Z86E0412PSC 1866	WAPGMZ8.EXE ADP-Z86E0X

ZILOG	Z86E0412PSC	1903	WAPGMZ8.EXE	ADP-Z86E0X
ZILOG	Z86E0412PSC	2004	WAPGMZ8.EXE	ADP-Z86E0X
ZILOG	Z86E0412SEC		WAPGMZ8.EXE	ADP-Z86E0X-S
ZILOG	Z86E0412SSC	1866	WAPGMZ8.EXE	ADP-Z86E0X-S
ZILOG	Z86E0412SSC	1903	WAPGMZ8.EXE	ADP-Z86E0X-S
ZILOG	Z86E0412SSC	2004	WAPGMZ8.EXE	ADP-Z86E0X-S
ZILOG	Z86E06		WPGMZ8.EXE	
ZILOG	Z86E0812HSC	1866	WAPGMZ8.EXE	ADP-Z86E0X-SS
ZILOG	Z86E0812PEC		WAPGMZ8.EXE	ADP-Z86E0X
ZILOG	Z86E0812PEC	1903	WAPGMZ8.EXE	ADP-Z86E0X
ZILOG	Z86E0812PSC	1866	WAPGMZ8.EXE	ADP-Z86E0X
ZILOG	Z86E0812PSC	1903	WAPGMZ8.EXE	ADP-Z86E0X
ZILOG	Z86E0812SEC		WAPGMZ8.EXE	ADP-Z86E0X-S
ZILOG	Z86E0812SSC	1866	WAPGMZ8.EXE	ADP-Z86E0X-S
ZILOG	Z86E132		WPGMZ8.EXE	
ZILOG	Z86E133		WPGMZ8.EXE	
ZILOG	Z86E134		WPGMZ8.EXE	
ZILOG	Z86E135		WPGMZ8.EXE	
ZILOG	Z86E136		WPGMZ8.EXE	
ZILOG	Z86E142		WPGMZ8.EXE	
ZILOG	Z86E143		WPGMZ8.EXE	
ZILOG	Z86E144		WPGMZ8.EXE	
ZILOG	Z86E145		WPGMZ8.EXE	
ZILOG	Z86E146		WPGMZ8.EXE	ADP-Z86E146-Q44
ZILOG	Z86E21		WPGMZ8.EXE	
ZILOG	Z86E23		WPGMZ8.EXE	
ZILOG	Z86E30		WPGMZ8.EXE	
ZILOG	Z86E30	1873	WAPGMZ8.EXE	ADP-Z86E30/-PL/-
S				
ZILOG	Z86E30 (NEW)		WPGMZ8.EXE	
ZILOG	Z86E31		WPGMZ8.EXE	
ZILOG	Z86E31	1873	WAPGMZ8.EXE	ADP-Z86E30/-PL/-
S				
ZILOG	Z86E33		WPGMZ8.EXE	
ZILOG	Z86E34		WPGMZ8.EXE	
ZILOG	Z86E40		WPGMZ8.EXE	
ZILOG	Z86E40	1873	WPGMZ8.EXE	
ZILOG	Z86E40 (PLCC)		WPGMZ8.EXE	
ZILOG	Z86E4016FSC		WAPGMZ8.EXE	ADP-Z86E40-Q44
ZILOG	Z86E43		WPGMZ8.EXE	
ZILOG	Z86E44		WPGMZ8.EXE	
ZILOG	Z86E61		WAPGMZ8.EXE	ADP-Z86E6X/-PL
ZILOG	Z86E63		WAPGMZ8.EXE	ADP-Z86E6X/-PL
ZILOG	Z86E72		WPGMZ8.EXE	
ZILOG	Z86E73		WPGMZ8.EXE	
ZILOG	Z86E83		WPGMZ8.EXE	
ZILOG	Z89371		WAMPU2.EXE	ADP-Z89371/-PL
ZILOG	Z8E000		WAPGMZ8.EXE	ADP-Z8E001
ZILOG	Z8E001		WAPGMZ8.EXE	ADP-Z8E001
ZILOG	Z8F6401PM		WAZ8F.EXE	ADP-Z8F6401PM
ZILOG	Z90231		WAPGMZ8.EXE	ADP-Z90259-SD
ZILOG	Z90231 (eZVision)		WAPGMZ8.EXE	ADP-Z90259-SD
ZILOG	Z90241		WAPGMZ8.EXE	ADP-Z90241-SD
ZILOG	Z90251		WAPGMZ8.EXE	ADP-Z90259-SD
ZILOG	Z90251 (eZVision)		WAPGMZ8.EXE	ADP-Z90259-SD
ZILOG	Z90351		WAPGMZ8.EXE	ADP-Z90351-SD
ZILOG	Z90361		WAPGMZ8.EXE	ADP-Z90361-SD
ZILOG	ZGP323H/LSP2004		WZGP51.EXE	ADP-ZGP323-DIP40
ZILOG	ZGP323H/LSP2004G		WZGP51.EXE	ADP-ZGP323-DIP40
ZILOG	ZGP323H/LSP2008		WZGP51.EXE	ADP-ZGP323-DIP40
ZILOG	ZGP323H/LSP2008G		WZGP51.EXE	ADP-ZGP323-DIP40
ZILOG	ZGP323H/LSP2016		WZGP51.EXE	ADP-ZGP323-DIP40
ZILOG	ZGP323H/LSP2032		WZGP51.EXE	ADP-ZGP323-DIP40
ZILOG	ZGP323H/LSP2032G		WZGP51.EXE	ADP-ZGP323-DIP40

ZILOG	ZGP323H/LSP4004
ZILOG	ZGP323H/LSP4004G
ZILOG	ZGP323H/LSP4008
ZILOG	ZGP323H/LSP4008G
ZILOG	ZGP323H/LSP4016
ZILOG	ZGP323H/LSP4016G
ZILOG	ZGP323H/LSP4032
ZILOG	ZGP323H/LSP4032G
ZILOG	ZGP323HSP2016G
ZWAVE	ZW0102
ZWAVE	ZW0201

WZGP51.EXE	ADP-ZGP323-DIP40
WZGP51.EXE	ADP-ZGP323-DIP40
WZGP51.EXE	ADP-ZGP323-DIP40
WZGP51.EXE	ADP-ZGP323-DIP40
WZGP51.EXE	ADP-ZGP323-DIP40
WZGP51.EXE	ADP-ZGP323-DIP40
WZGP51.EXE	ADP-ZGP323-DIP40
WZGP51.EXE	ADP-ZGP323-DIP40
WZGP51.EXE	ADP-ZGP323-DIP40
WASIG.EXE	ADP-ZW0102-Q
WASIG.EXE	ADP-ZW0201-QFN