

# CONNECTION MANUAL FOR PCPA SERIES PRINTERS



All rights reserved. The reproduction of this manual, either totally or partially, in any form whatsoever, whether it be on paper or through computer processes, is strictly prohibited. Custom Engineering s.r.l. and the resource teams employed in the making of this manual will not be held responsible for any problems arising as a result of improper use of this manual, as they guarantee that the information contained in it has been subjected to careful inspection.

Any suggestions regarding errors in its contents or possible improvements will, nonetheless, be greatly appreciated. The products are continuously checked and improved. For this reason Custom Engineering s.r.l. reserves the right to modify the information contained in this manual without prior notice.

COD. DOME-PCPA

Revision 1.10

Copyright © 1998 Custom Engineering s.r.l. – Italy

Custom Engineering

Str. Berettine 2 - 43010 Fontevivo (PARMA) - Italy

Tel. : +39 0521-680111 - Fax : +39 0521-610701

[http: www.custom.it](http://www.custom.it) Email : [support@custom.it](mailto:support@custom.it)

 
## GENERAL INFORMATION REGARDING SAFETY

- Read and keep the following instructions.
- Observe all warnings and follow all instructions attached to the printer.
- Before cleaning the printer, disconnect the feed cable.
- Clean the printer with a damp cloth. Do not use liquid or spray products.
- Do not operate the printer near to water.
- Do not place the printer on unsteady surfaces. It could fall and get seriously damaged.
- Use the type of electricity supply marked on the printer label. In the event of uncertainty, contact the seller.
- Position the printer in such a way as to ensure that the cables connected to it will not be damaged.
- Ensure that the maximum absorbed current of the printer does not exceed the maximum acceptable current for the type of feed cable used.
- Do not put objects of any kind inside the printer as they could cause a short circuit or damage parts which could affect its performance.
- Do not spill liquids on the printer.
- Do not carry out technical operations on the printer with the exception of the scheduled maintenance operations specifically indicated in the user's manual.
- Disconnect the printer from the electricity supply and have it repaired by a specialized technician should any of the following conditions occur:
  - A. The feed connector has been damaged.
  - B. Liquid has penetrated to the inside of the printer;
  - C. The printer has been exposed to rain or water;
  - D. The printer is not operating normally despite the instructions in the user's manual having been followed.
  - E. The printer has been dropped and its case damaged.
  - F. The performance of the printer is poor.
  - G. The printer does not work.


## DESCRIPTION

The reference manual for the printer is the one describing the **PT285** and **P190** models.  
To be more precise: for **PCPA285** printers = **PT285** and for **PCPA190** printers = **P190**.

The basic difference between the two is that of the inter-connection between the printer and the outside world. For the PCPA series, this link consists of a circular screw-down connector with the following pin pattern :

| PIN No.   | SIGNAL | DESCRIPTION                                     |
|---|--------|---|
| 1   | GND    | SIGNAL GROUND                                   |
| 2   | TXD    | TRANSMISSION OF DATA FROM PRINTER TO HOST       |
| 3   | RXD    | RECEIVING OF DATA FROM HOST TO PRINTER          |
| 4   | DTR    | SIGNAL INDICATING THAT PRINTER IS ON            |
| 5   | CTS    | SIGNAL INDICATING PRINTER READY TO RECEIVE DATA |
| 6   | VDC    | PRINTER SUPPLY VOLTAGE 9 - 40 Vdc               |
|  | GND    | PRINTER POWER SUPPLY GROUND                     |

CONNECTOR INSTALLED IN PRINTER (MALE) :

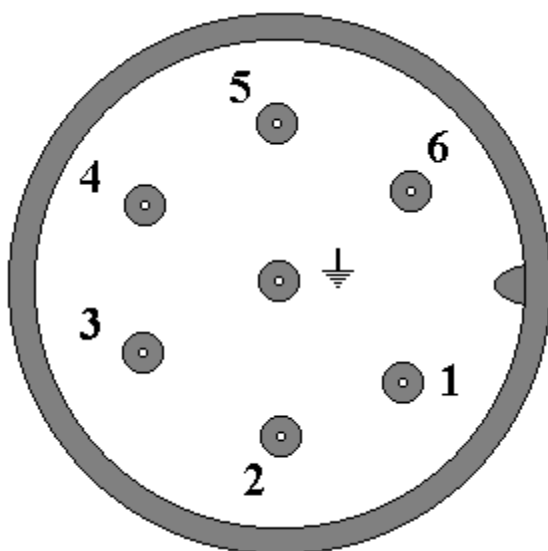

Connectors compatible with printer :

HIRSCHMANN Mod. CA 6 LD 09 ZS  
AMPHENOL Mod. T 3105-000  
AMPHENOL Mod. T 3105-001

**Power supply characteristics of the PCPA printer series:**

|                 |                     |
|-----------------|---------------------|
| MINIMUM VDC     | 9 Vdc               |
| MAXIMUM VDC     | 40 Vdc              |
| ABSORPTION 9 V  | 1,8 A WHEN PRINTING |
| ABSORBPTION 30V | 0,8 A WHEN PRINTING |

**Environmental conditions**

|                               |                         |
|-------------------------------|-------------------------|
| Operating temperature         | 0°C - +50°C             |
| Operating humidity            | 35% - 85%               |
| Storage temperature /humidity | -20°C - +70°C / 10%-90% |

POWER MUST BE SUPPLIED TO THE PRINTER BETWEEN PIN 6 AND THE PIN MARKED WITH THE SYMBOL  .

**DO NOT** SUPPLY POWER TO THE PRINTER THROUGH THE SIGNAL GROUND ON PIN N°1

To change the transmission baud rate, open the printer by loosening the two screws inside the paper changing panel. Having thus gained access to the back of the printer where switches 1-8 are located, consult the user's manual for the PT285 - P190 models for the correct setting of these switches.