

PANASONIC KX-T4400 , KX-T4400C Quick Reference Guide

Panasonic

CORDLESS TELEPHONE ANSWERING SYSTEM
KX-T4400 (For U.S.A.)
MODEL NO. KX-T4400C (For CANADA)

Quick Reference Guide

Please read the Operating Instructions for details.


—Keep this leaflet for your next use.

Check the accessories:


- | | |
|--|--|
| <input type="checkbox"/> Telephone Line Cord one | <input type="checkbox"/> Incoming Message Tape (MC-30) one |
| <input type="checkbox"/> AC Adaptor one | <input type="checkbox"/> Wall Mounting Adaptor one |
| <input type="checkbox"/> Greeting Message Tape (MC-10) one | |

How to Set Up the Unit


1 Insert the micro cassette tapes before plugging in the AC adaptor.

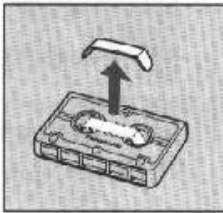

Remove the stopper.

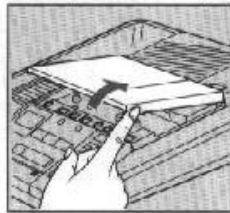


Open the cassette panel.

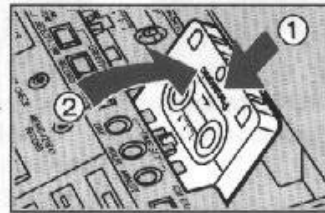

Insert the cassette tapes with the full reel of each tape to the left.
Greeting tape ↗ left side
Incoming tape ↘ right side


2 Connect the unit as shown.

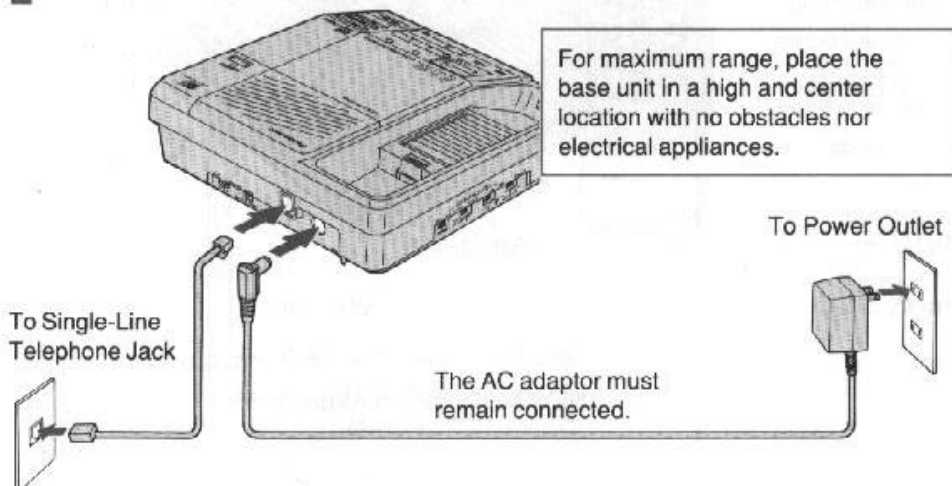

How to Operate the Unit

Charge the portable handset battery before initial use.


The battery is beneath this cover.

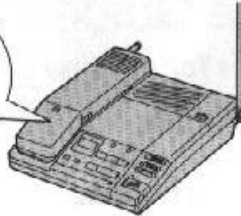


Place the portable handset on the base unit for about 10 hours.

Recharge is necessary when "+[]" flashes or a beep sounds every 15 seconds during a conversation.


Extend antennas fully during use.

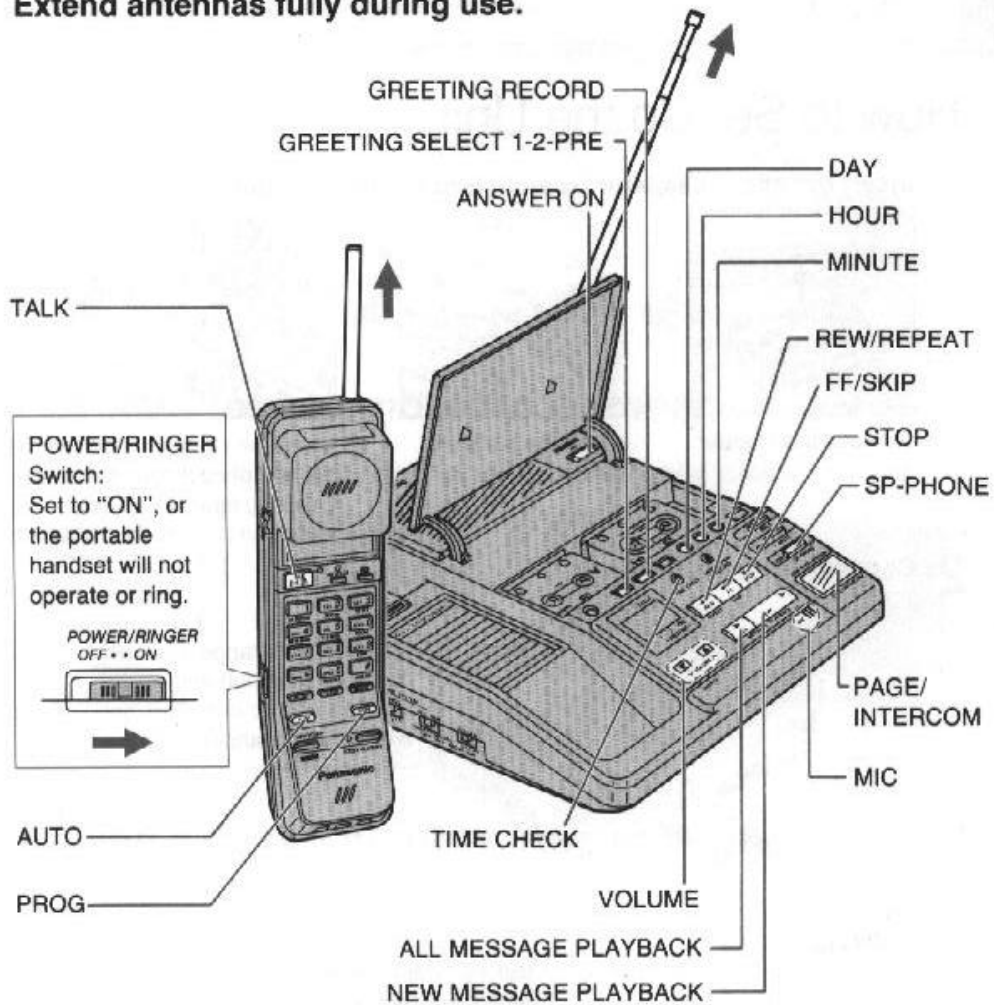

Time and day adjustment

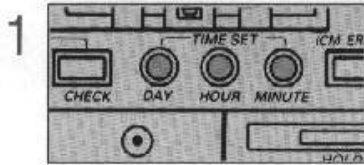

1 Press **DAY** to adjust the day.
Press **HOUR** to adjust the hour.
Press **MINUTE** to adjust the minute.

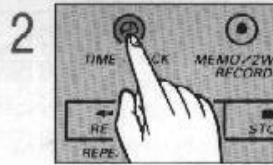


2 To check the time and day, press **TIME CHECK**.

Recording a greeting message

First greeting is a short message and you can record for up to 30 seconds.
Second greeting is an extended message and you can leave any kind of messages up to the tape end.



1 Press **GREETING SELECT 1-2-PRE** to select greeting message.

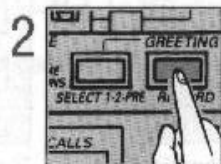

2 Press **GREETING RECORD** then release it.



3 Speak into **MIC** (microphone) after a long beep.



4 Press **STOP** to finish recording.

Automatic answering operation



Press **ANSWER ON** to turn on the answering system.

—The **ANSWER ON** indicator light is on, and the unit is now ready to answer the calls.

Listening to messages




Press **NEW MESSAGE PLAYBACK** to play back only new messages.

OR




Press **ALL MESSAGE PLAYBACK** to play back all the messages.

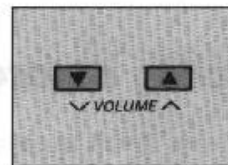


To increase the volume, press **▲**. To decrease, press **▼**. (Volume levels are 0 to 8.)

Making calls

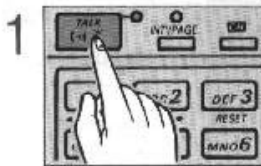

Press **TALK** to get dial tone.

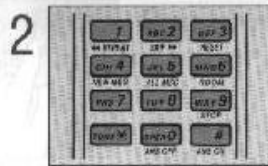

Dial a phone number.



When the conversation is over, press **TALK** or place the portable handset on the base unit.

—If noise interferes your conversation, press **CH** to select next available channel (0 to 9).

Answering calls

With the portable handset




If the portable handset is off the base unit, press **TALK**.

OR



If the portable handset is on the base unit, just lift it.

With the base unit

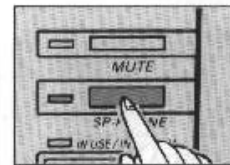


Press **SP-PHONE**, then speak into **MIC** (microphone).

Storing phone numbers in memory


The dialing buttons (0 to 9) function as memory stations for automatic dialing.




Press **PROG**.

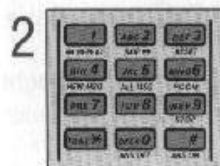

Enter a phone number to be stored up to 16 digits.

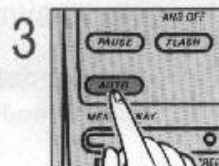

Press **AUTO**.

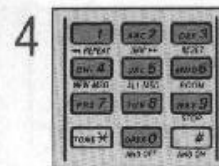

Press one of the dialing buttons to select the memory station.

Dialing a stored number from memory

1. Press **TALK** to get dial tone.
2. Press **AUTO**.
3. Press the station number where the phone number is stored.
The stored number is dialed automatically.